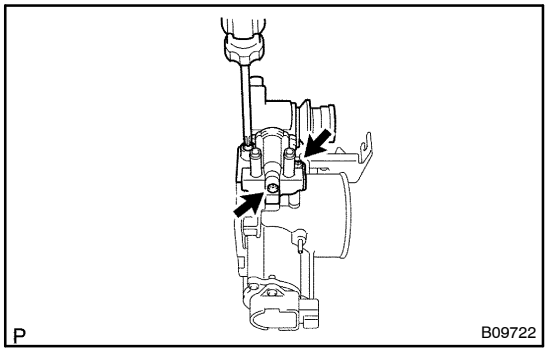


FI0R0–01

INSTALLATION

1. INSTALL ISC VALVE

Install a new gasket and the ISC valve with the 3 screws.

2. INSTALL THROTTLE BODY (See page FI–31)