
FI0R8–01

INSPECTION

1. REMOVE FUEL TANK SELECT RELAY

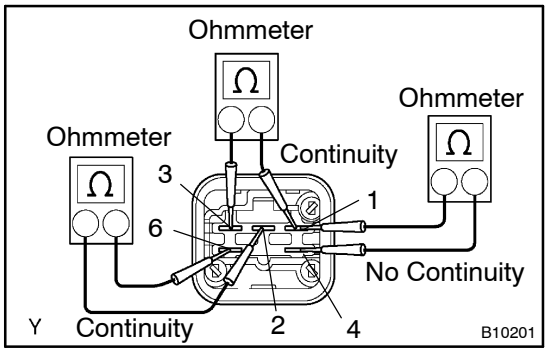

2. INSPECT FUEL TANK SELECT RELAY

(a) Inspect the relay continuity.

(1) Using an ohmmeter, check that there is continuity between terminals 2 and 6.


If there is no continuity, replace the relay.

(2) Check that there is continuity between terminals 1 and 3.

If there is no continuity, replace the relay.

(3) Check that thee is no continuity between terminals 1 and 4.

If there is continuity, replace the relay.

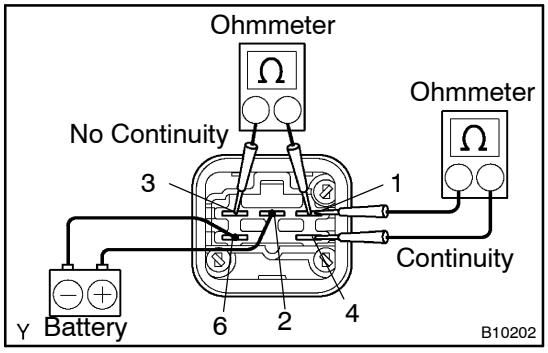

(b) Inspect the relay operation.

(1) Apply battery voltage across terminals 2 and 6.

(2) Using an ohmmeter, check that there is no continuity between the 1 and 3.

If there is continuity, replace the relay.

(3) Check that there is continuity between terminals 1 and 4.

If there is no continuity, replace the relay.

3. REINSTALL FUEL TANK SELECT RELAY