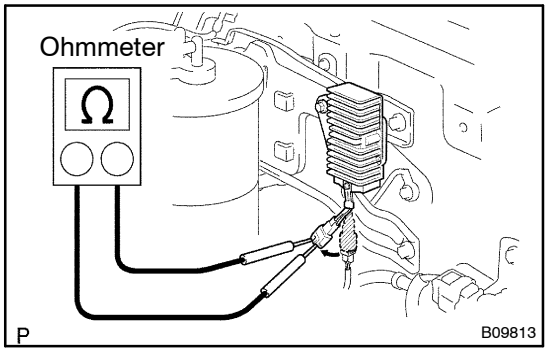


FI0RC–01

INSPECTION

1. DISCONNECT FUEL PUMP RESISTOR CONNECTOR

2. INSPECT FUEL PUMP RESISTOR

Using an ohmmeter, measure the resistance between the terminals.

Resistance: 0.71 – 0.75 Ω at 20°C (68°F)

If the resistance is not as specified, replace the resistor.

3. RECONNECT FUEL PUMP RESISTOR CONNECTOR