
IG0FK–01

REPLACEMENT

1. DISCONNECT HIGH–TENSION CORDS FROM IGNITION COILS

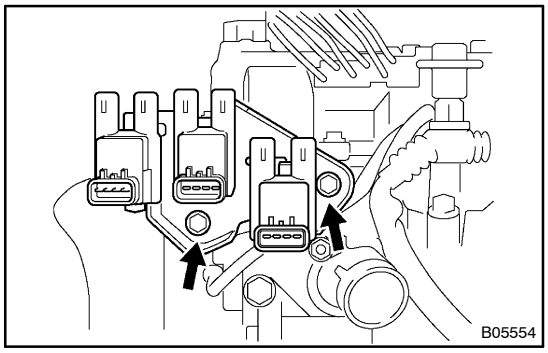


2. REMOVE IGNITION COILS AND BRACKET ASSEMBLY

(a) Disconnect the 3 ignition coil connectors.

(b) Remove the 2 bolts, the 3 ignition coils and bracket assembly.

3. REMOVE IGNITION COILS FROM BRACKET

Remove the 2 bolts and ignition coil. Remove the 3 ignition coils.

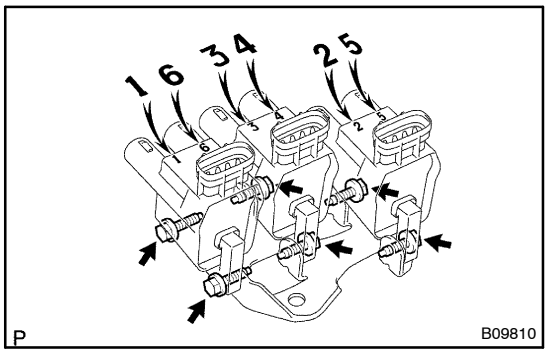

4. REINSTALL IGNITION COILS TO BRACKET

Install the ignition coil with the 2 bolts. Install the 3 ignition coils.

Torque: 9.8 N·m (100 kgf·cm, 87 in.·lbf)

NOTICE:

The installation positions of the ignition coils are different for No.1, No.2 and No.3.

5. REINSTALL IGNITION COILS AND BRACKET ASSEMBLY

(a) Install the 3 ignition coils and bracket assembly with the 2 bolts.

Torque: 19 N·m (194 kgf·cm, 14 ft·lbf)

(b) Connect the 3 ignition coil connectors.

6. RECONNECT HIGH–TENSION CORDS TO IGNITION COILS