

CH0AF–07

# REPLACEMENT


B05659


## 1. REPLACE FRONT BEARING

(a) Remove the 4 screws and bearing retainer.

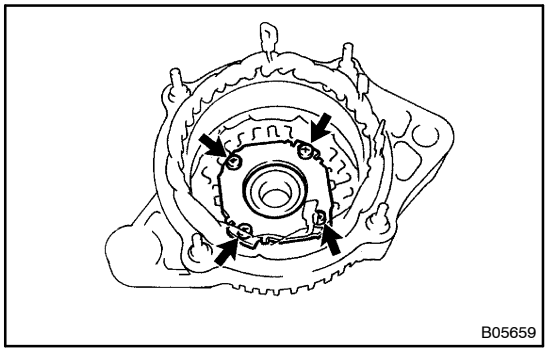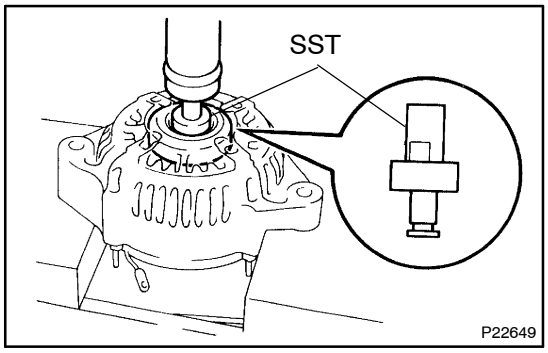

P22649


(b) Using SST and a press, press out the bearing.
SST 09950–60010 (09951–00260, 09952–06010)

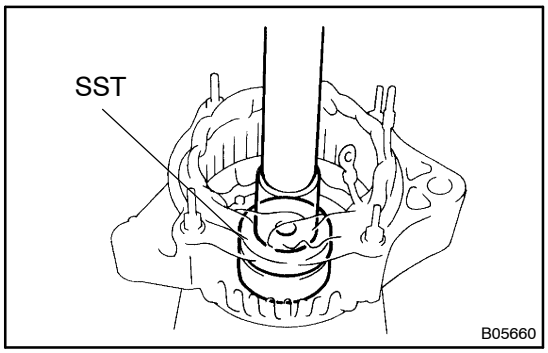

B05660

(c) Using SST and a press, press in a new bearing.
SST 09950–60010 (09951–00500)

(d) Install the bearing retainer with the 4 screws.
**Torque: 3.0 N·m (31 kgf·cm, 27 in.·lbf)**

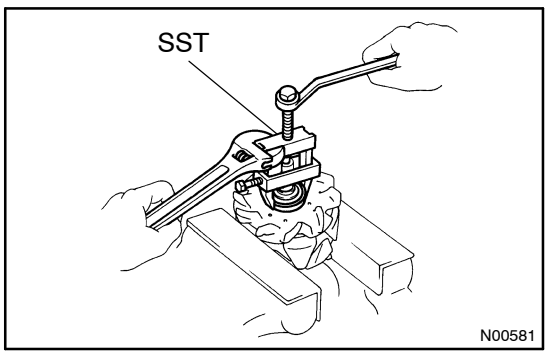


N00581

## 2. REPLACE REAR BEARING


(a) Using SST, remove the bearing cover (outside) and bearing.
SST 09820–00021

**NOTICE:**
**Be careful not to damage the fan.**


(b) Remove the bearing cover (inside).

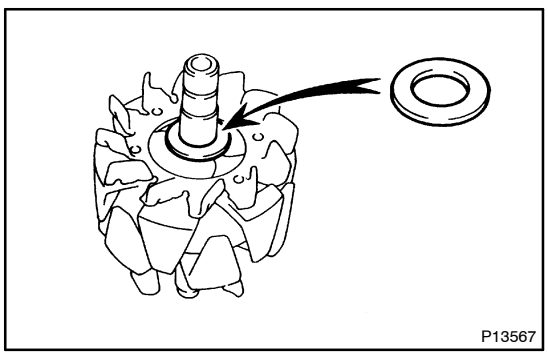
P13567

(c) Place the bearing cover (inside) on the rotor.

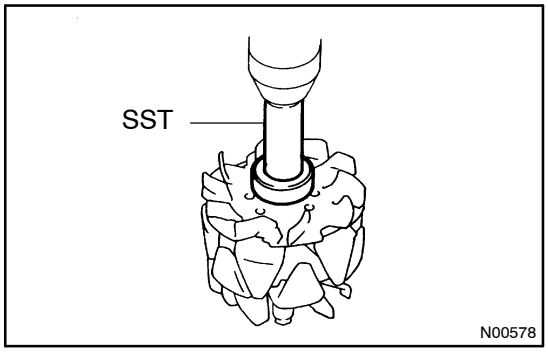


(d) Using SST and a press, press in a new bearing.
SST 09820–00031

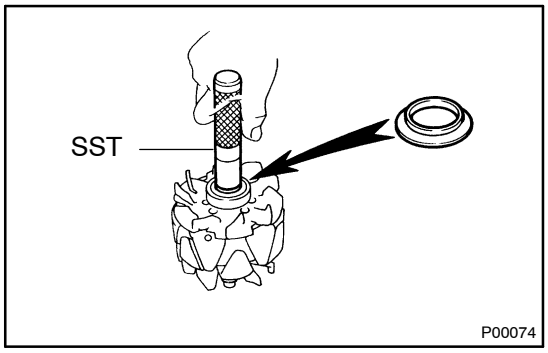


(e) Using SST, push in the bearing cover (outside).
SST 09285–76010