
ED05Q–01

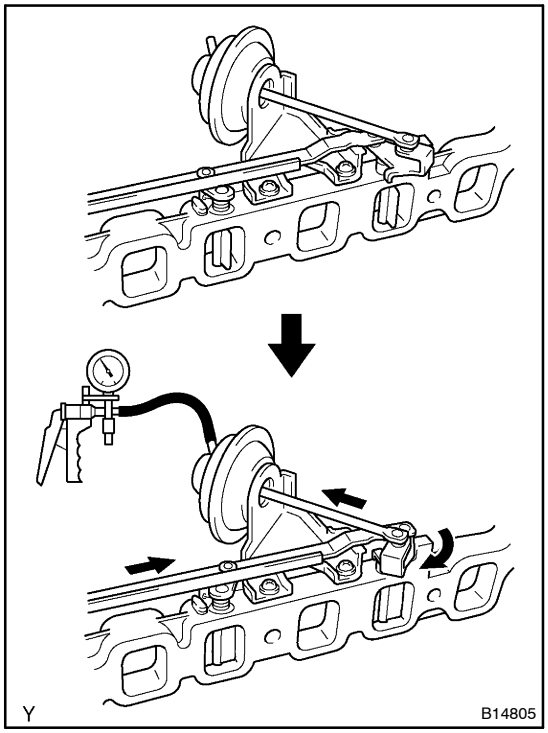

INSPECTION

INSPECT INTAKE AIR CONTROL VALVE

(a) Apply vacuum (less than 60 kPa (450 mmHg, 18 in.Hg) to the actuator, check that the actuator rod moves and close the valves.

(b) One minute after applying the vacuum in (a), check that the actuator rod does not return.

If the operation is not as specified, replace the intake air control valve.