TOYOTA Service Bulletin

Section :	Body Electrical
Ref. No. :	BE-0020
Date :	Jul., 2000
Page :	1 of 2

Area Application : Europe, General

Model Name : LAND CRUISER

Model Code : FZJ78, 79, HZJ71, 74, 78, 79


Subject : SUPPLEMENTAL FOR REPAIR MANUAL

(Rear Fog Light Switch)

This Service Bulletin is to inform you of the inspection procedure for rear fog light system due to the change of the rear fog light switch from July, 2000.

Production Effective :

Frame No.	Production Date
- - -	From July, 2000

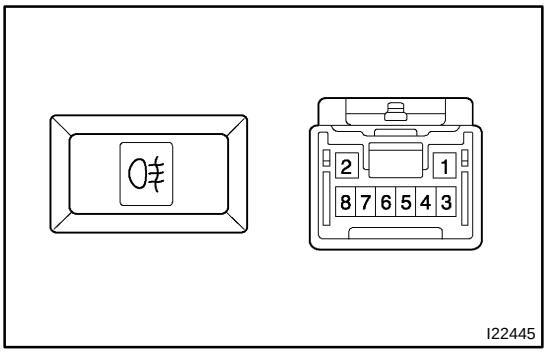

FOG LIGHT SYSTEM


INSPECTION

1. INSPECT REAR FOG LIGHT SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF	-	No continuity
ON	2 - 5	Continuity
Illumination circuit	2 - 8	Continuity

If continuity is not as specified, replace the switch.

Wire harness side:

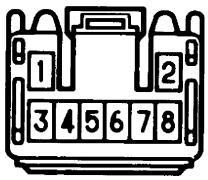

h-8-1-B

I01673

2. INSPECT REAR FOG LIGHT SWITCH CIRCUIT

Disconnect the connector from the switch and inspect the connector on the wire harness side.

Tester connection	Condition	Specified condition
1 - Ground	Constant	* Continuity
4 - Ground	Constant	Continuity
5 - Ground	Light control switch HEAD	Continuity
7 - Ground	Constant	Continuity
2 - Ground	Light control switch TAIL or HEAD	Battery voltage
3 - Ground	Constant	Battery voltage

*: There is resistance because this circuit is grounded through the bulb.

If circuit is not as specified, replace the wire harness.