(Cont. next page)

Headlight (RHD), Headlight Beam Level Control (RHD)

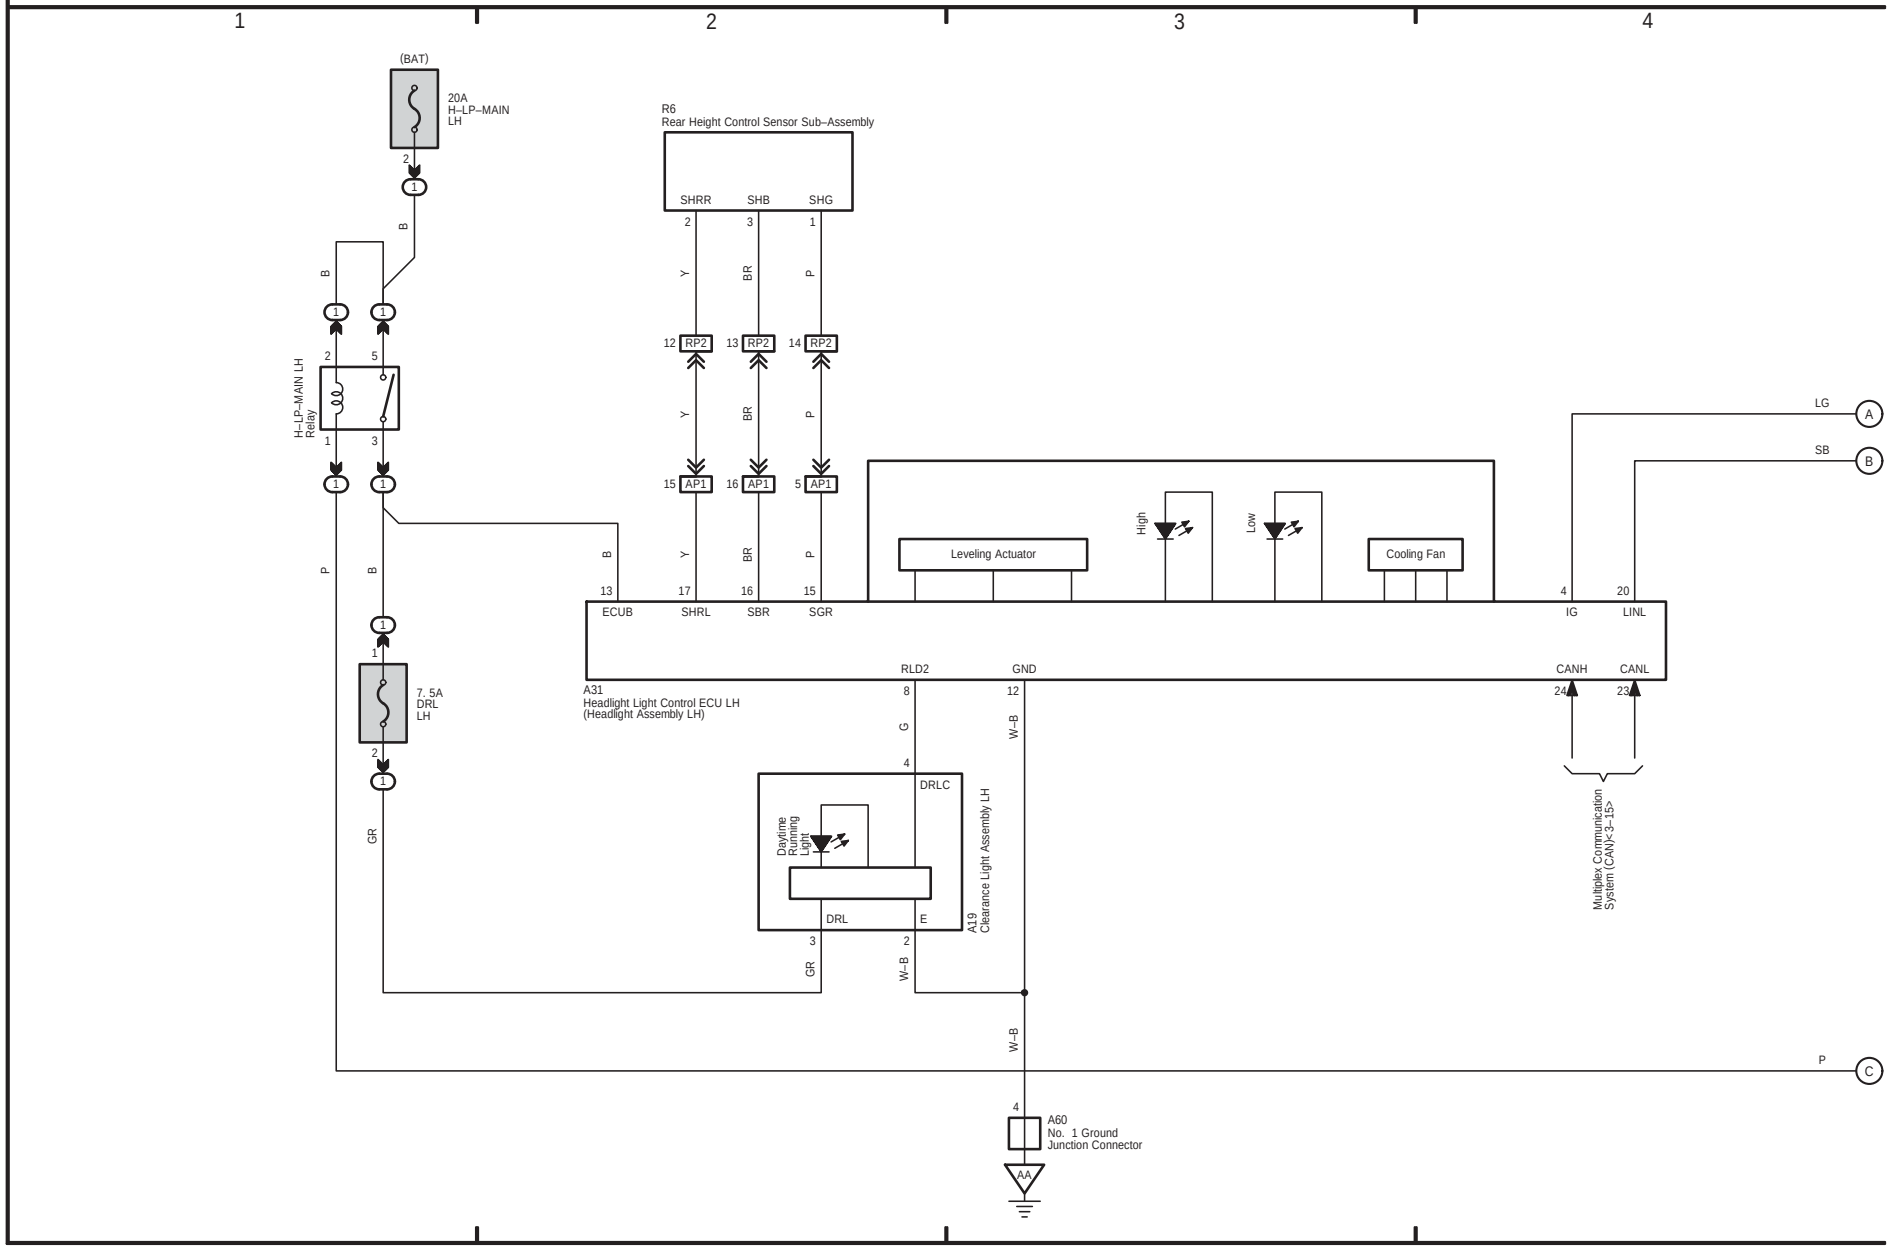

(Cont. next page)

Headlight (RHD), Headlight Beam Level Control (RHD)

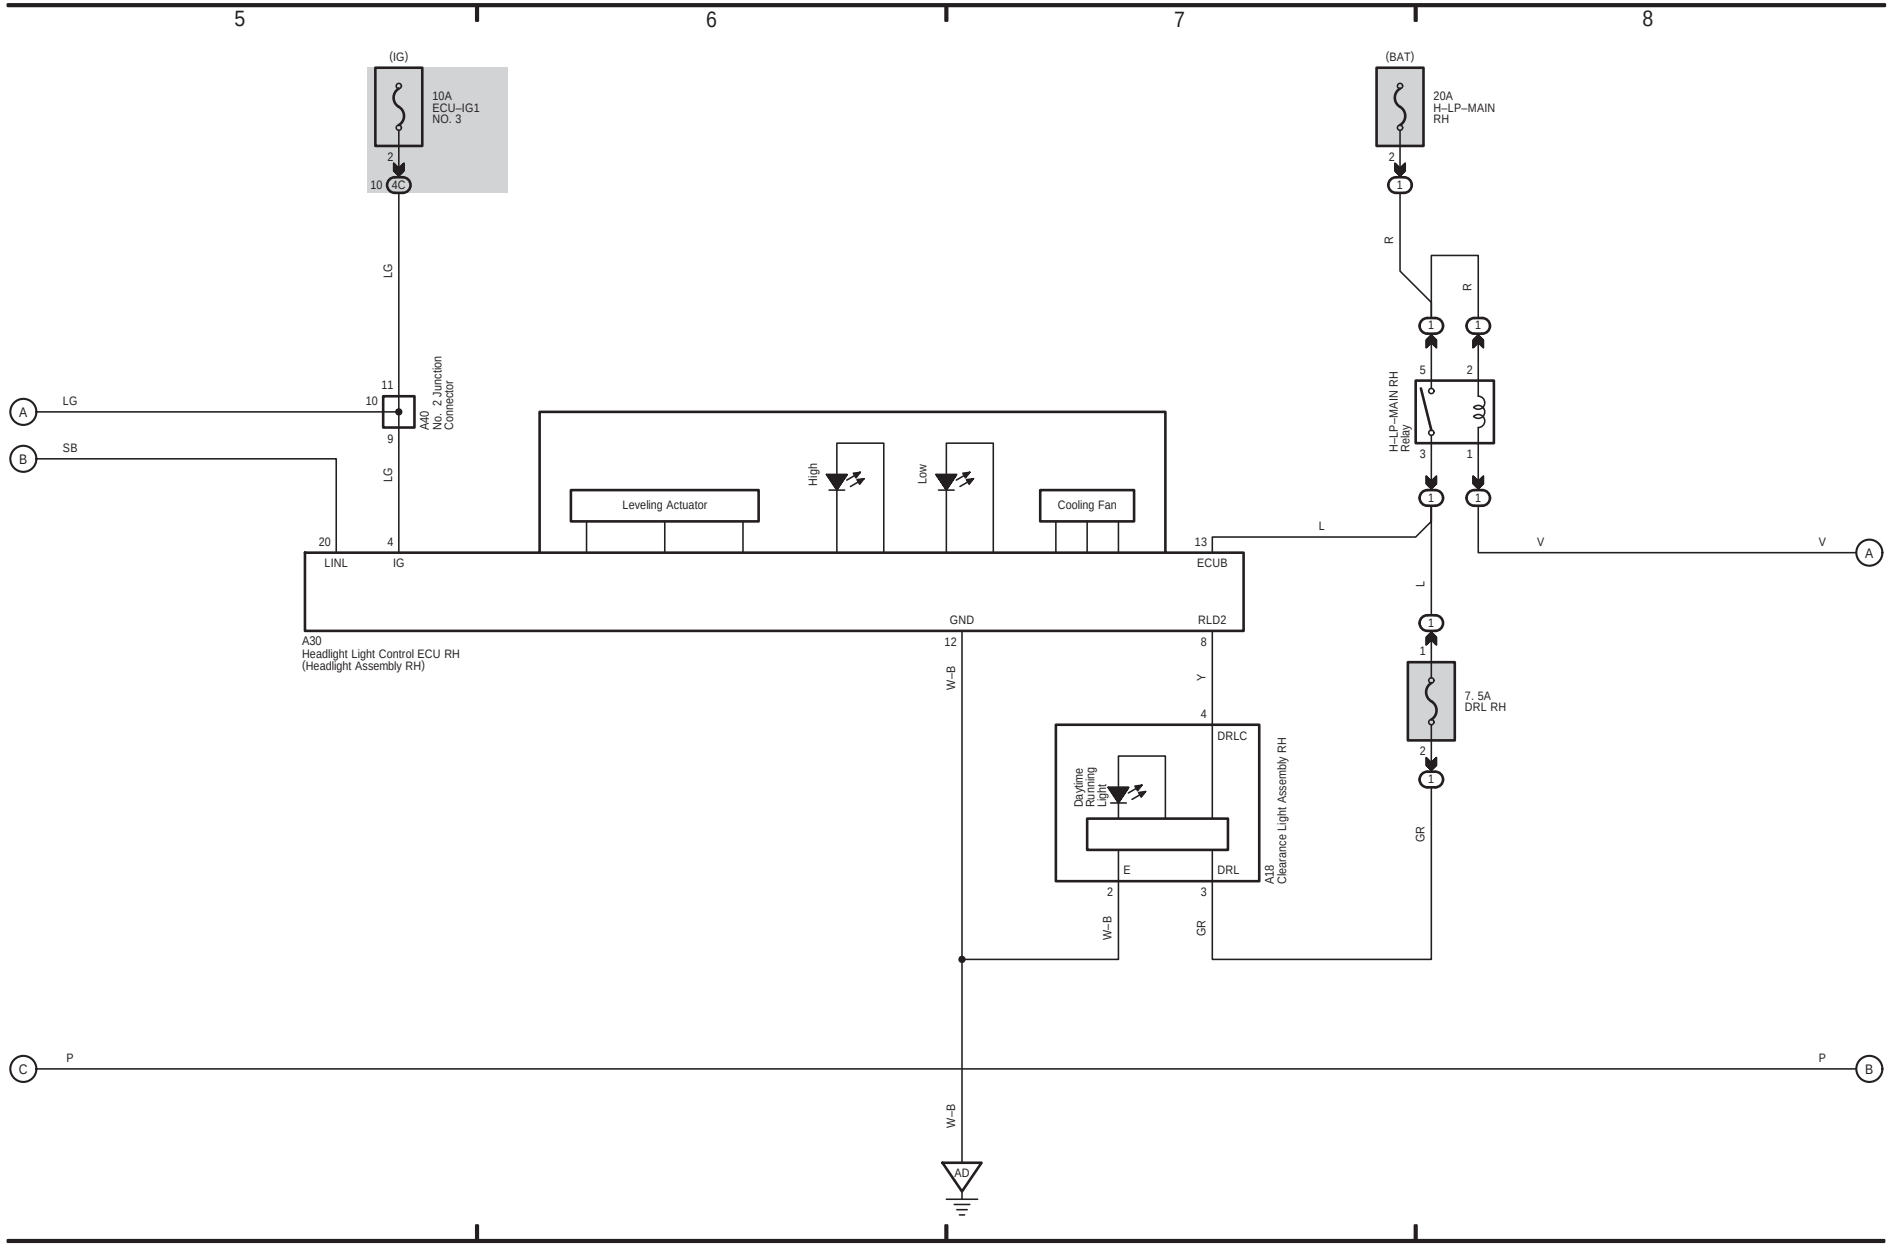

(Cont. next page)

Headlight (RHD), Headlight Beam Level Control (RHD)

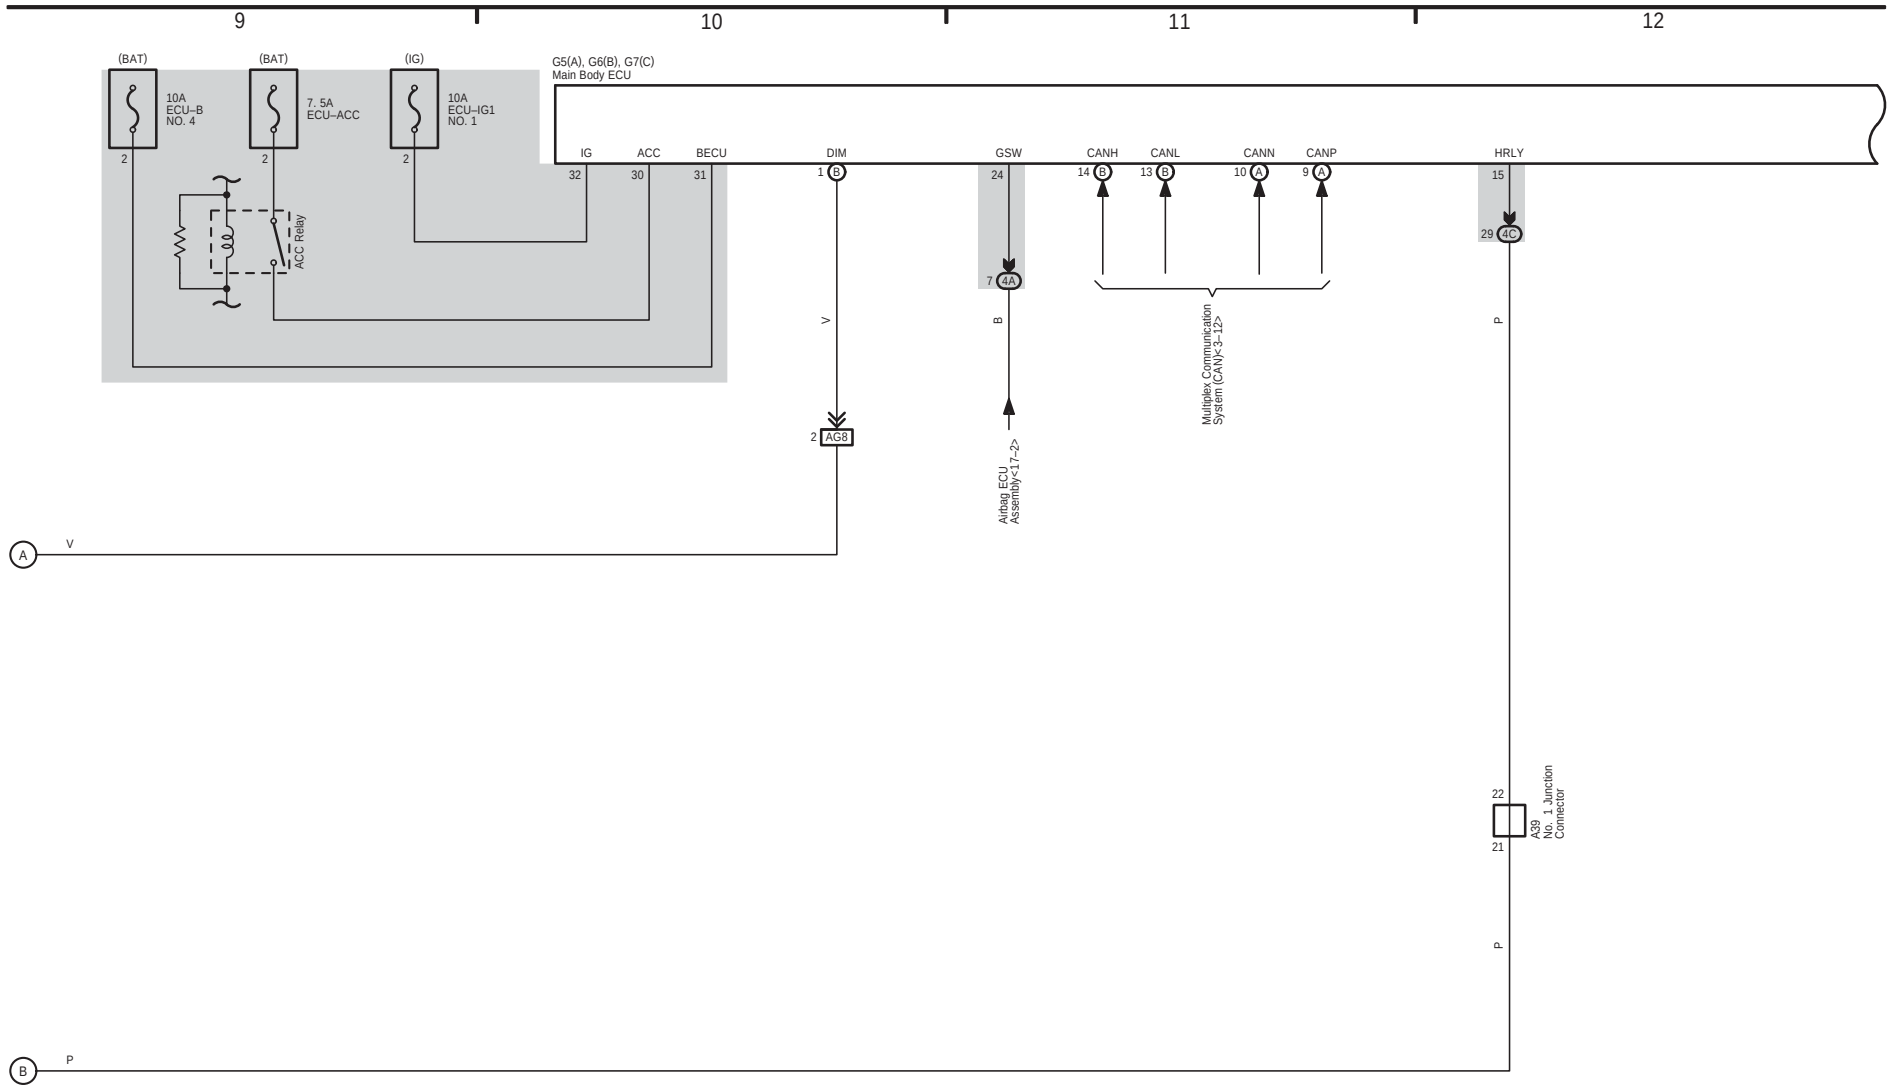

(Cont. next page)

Headlight (RHD), Headlight Beam Level Control (RHD)

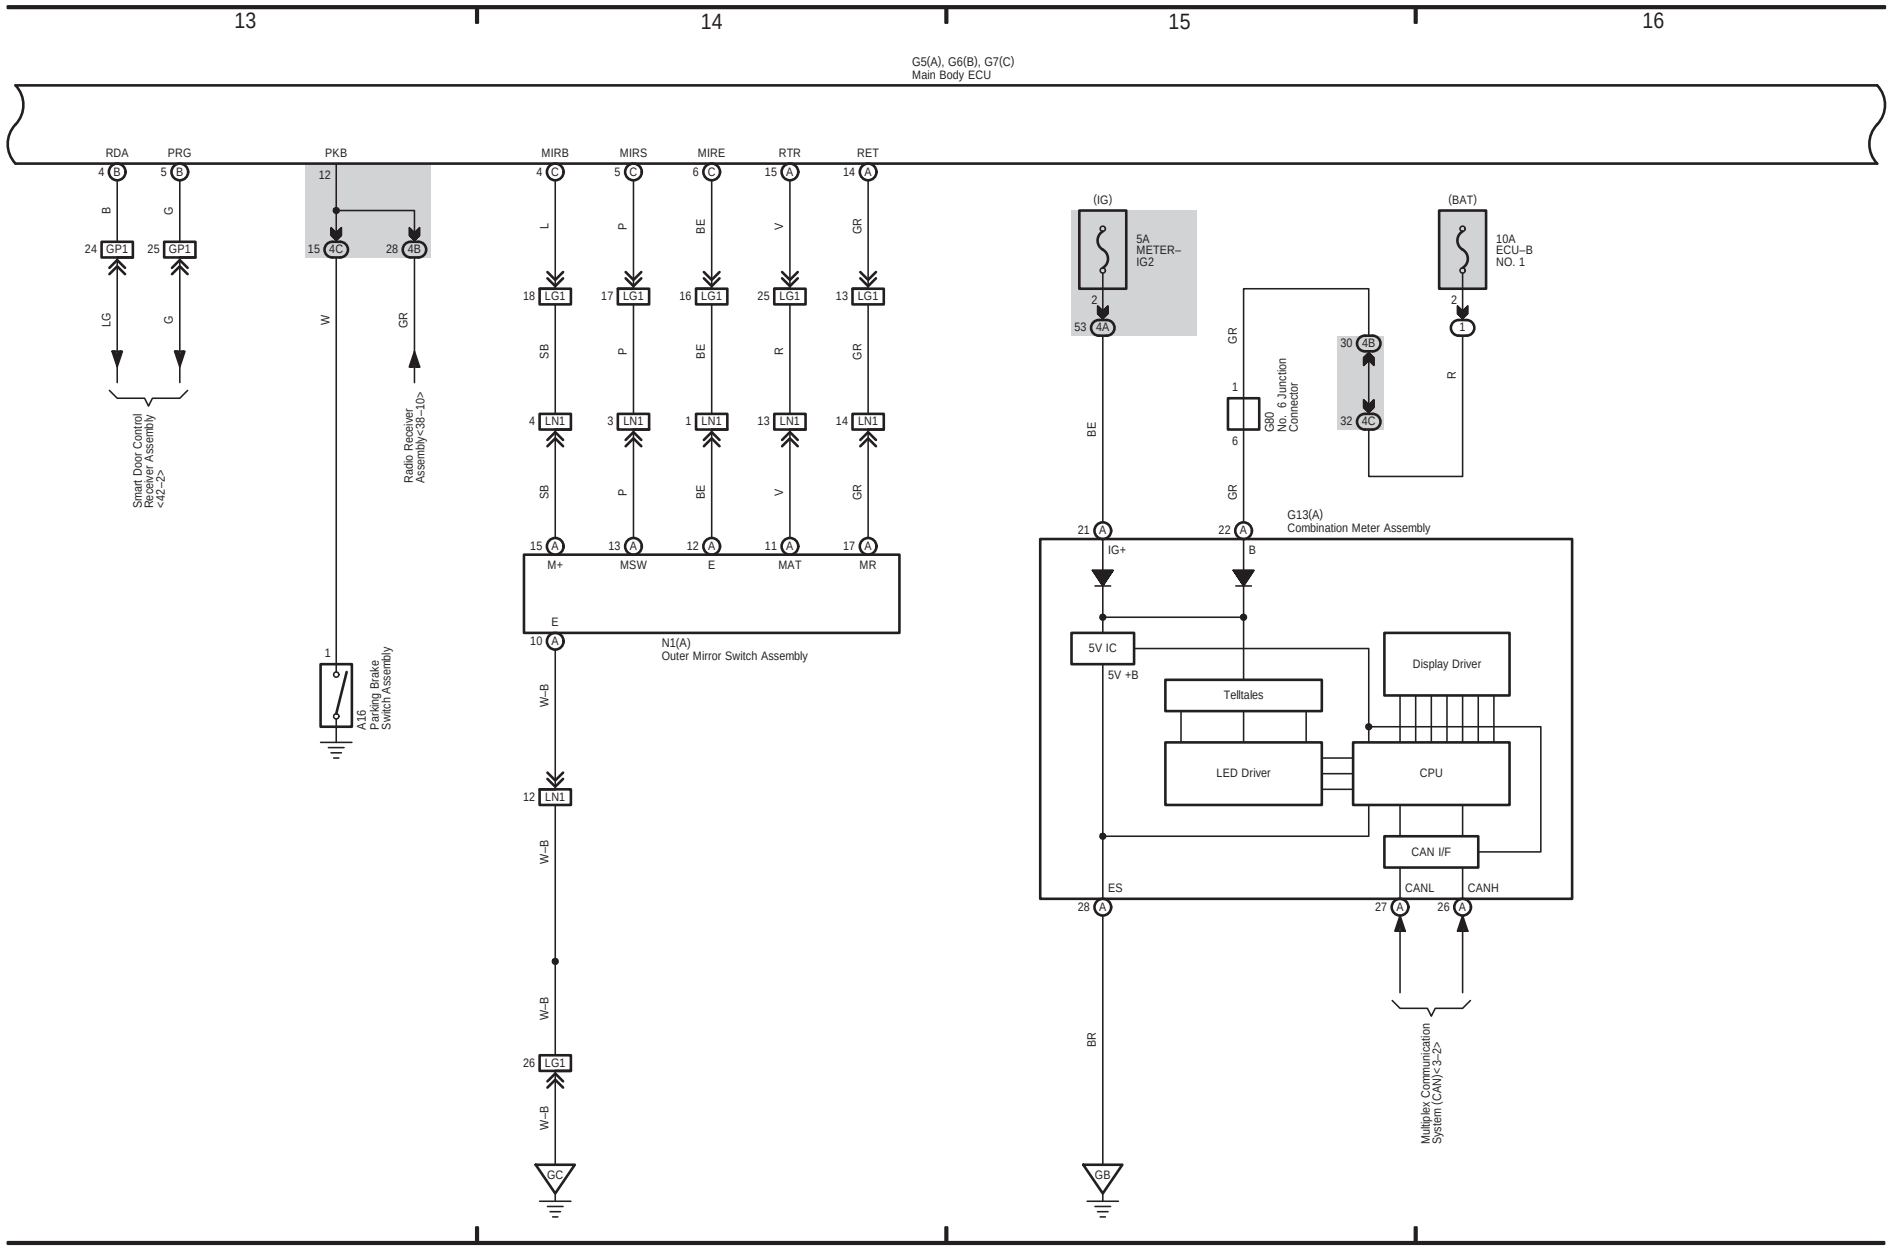

(Cont. next page)

Automatic Light Control (RHD),
Light Auto Turn Off System (RHD)

Rear Fog Light (RHD)

17 18 19 20

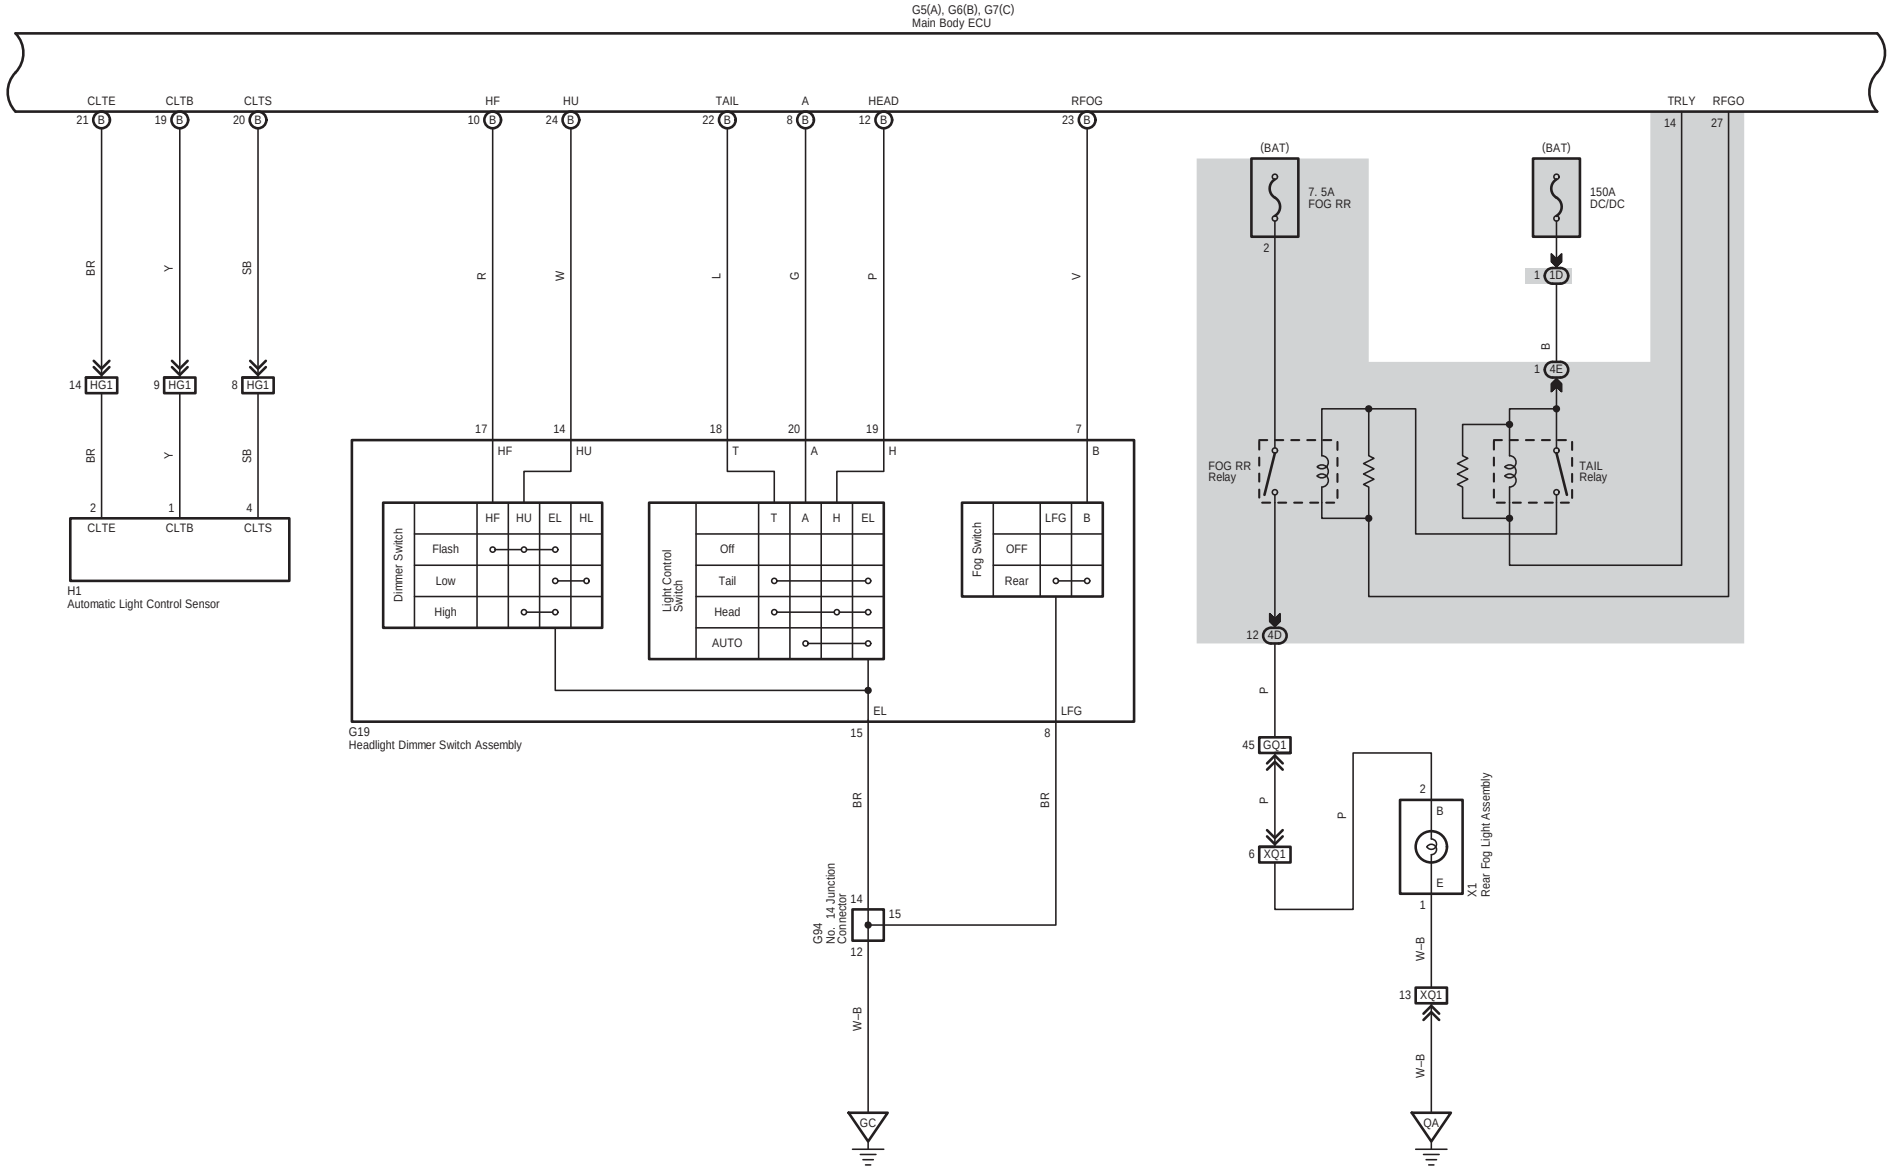

(Cont. next page)

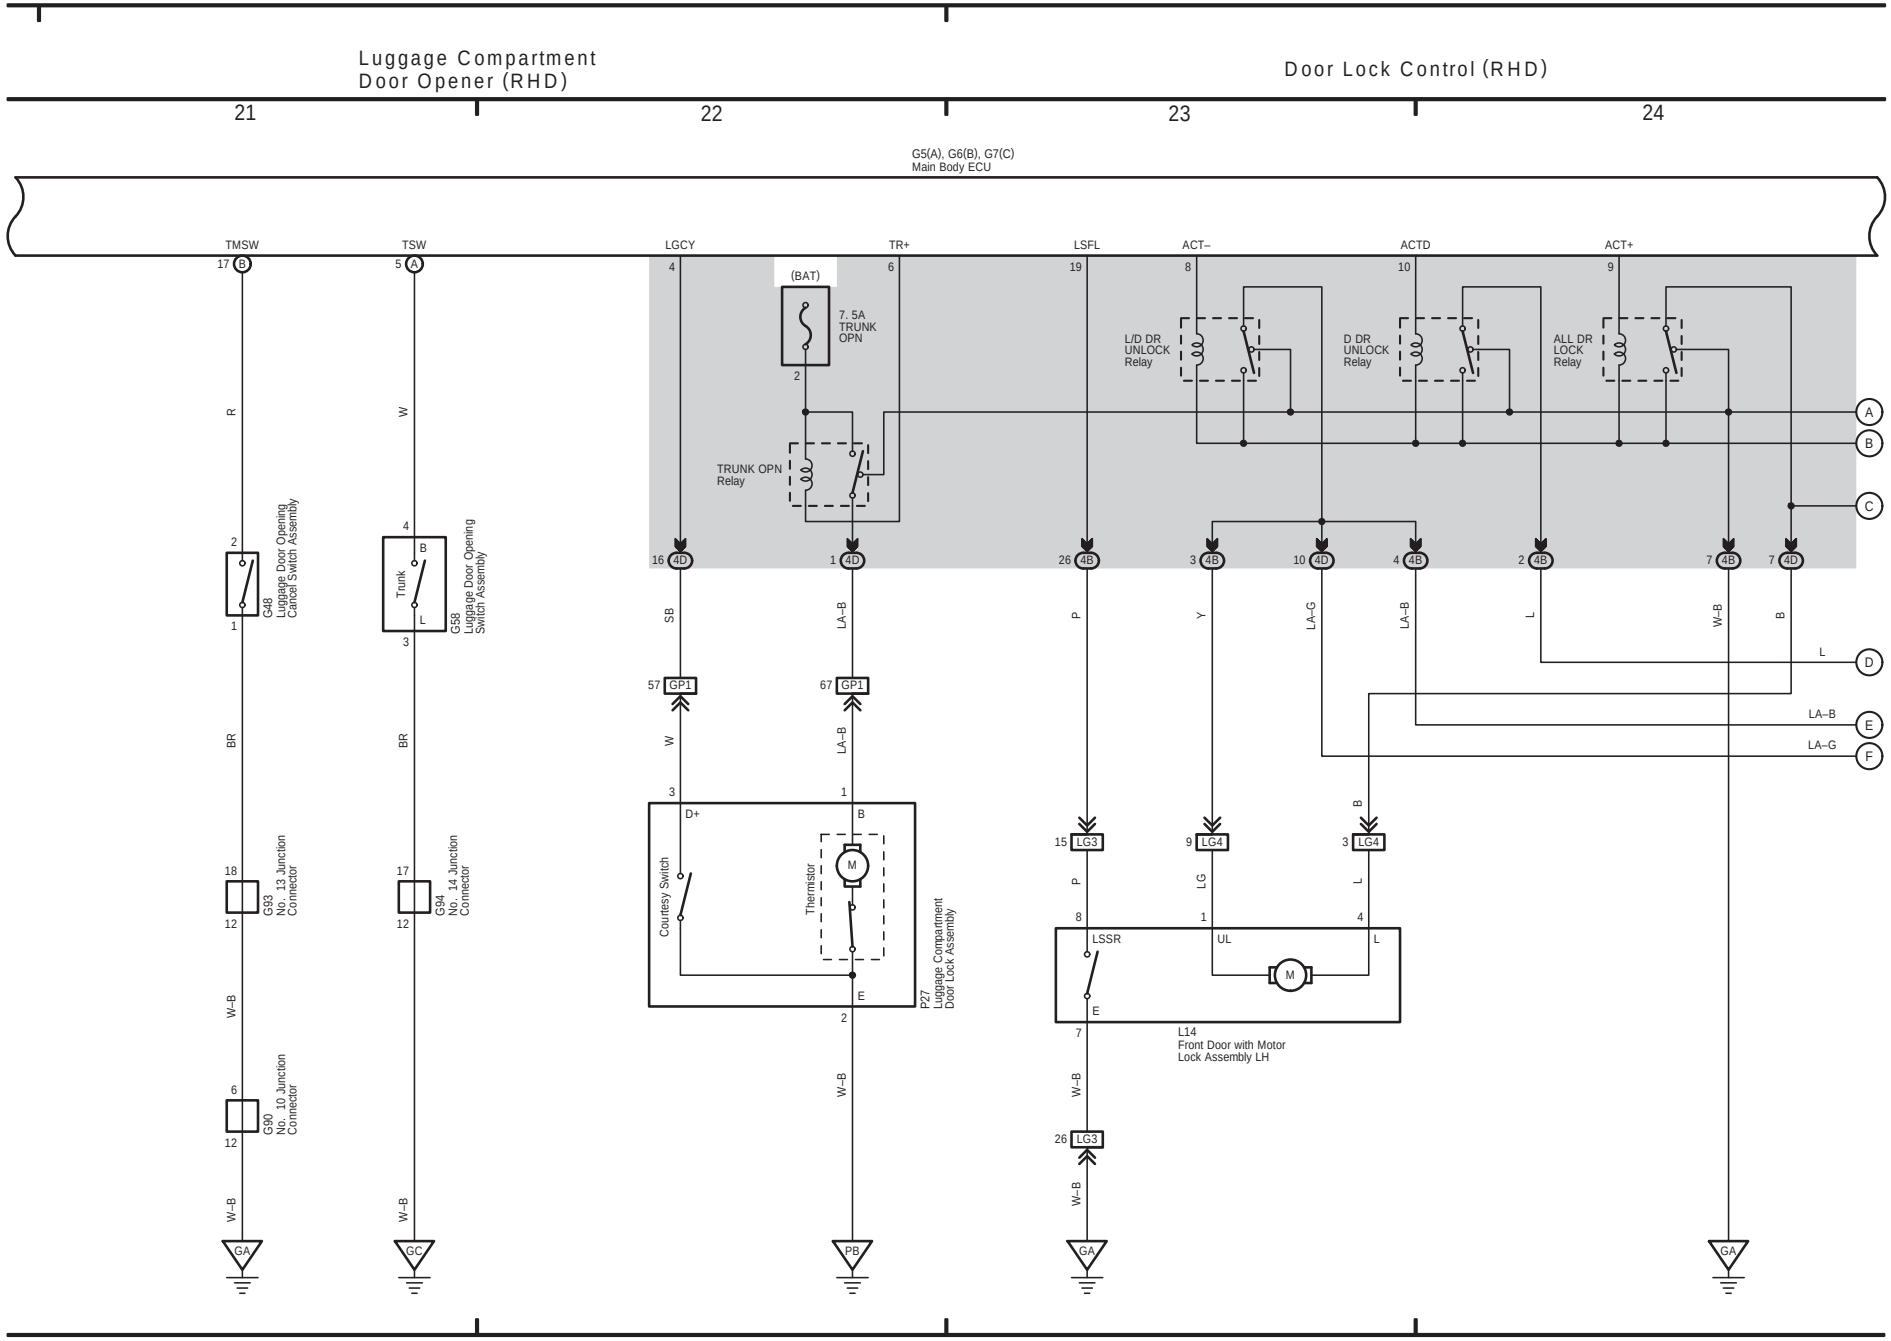

(Cont. next page)

Door Lock Control (RHD)

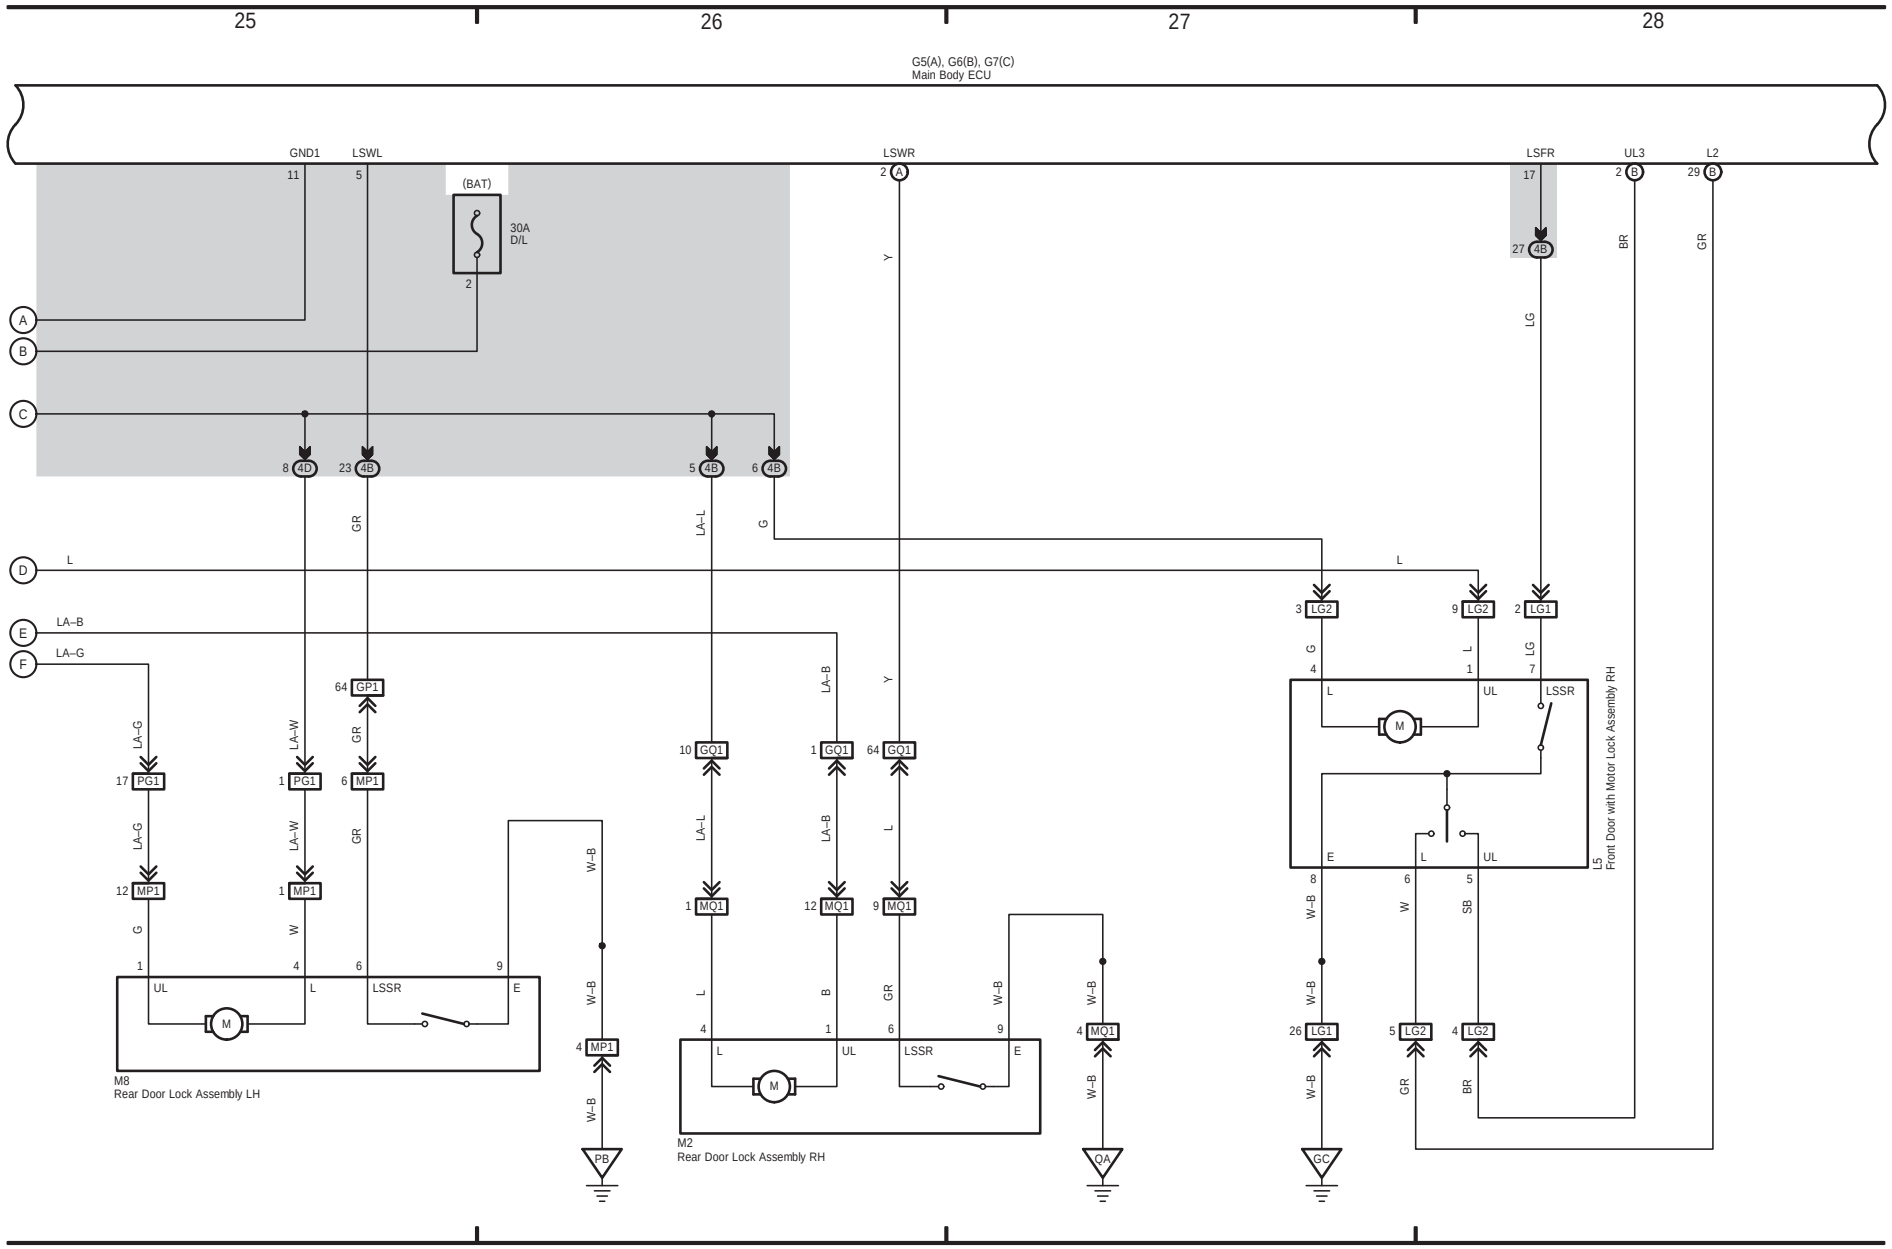

(Cont. next page)

Interior Light (RHD)

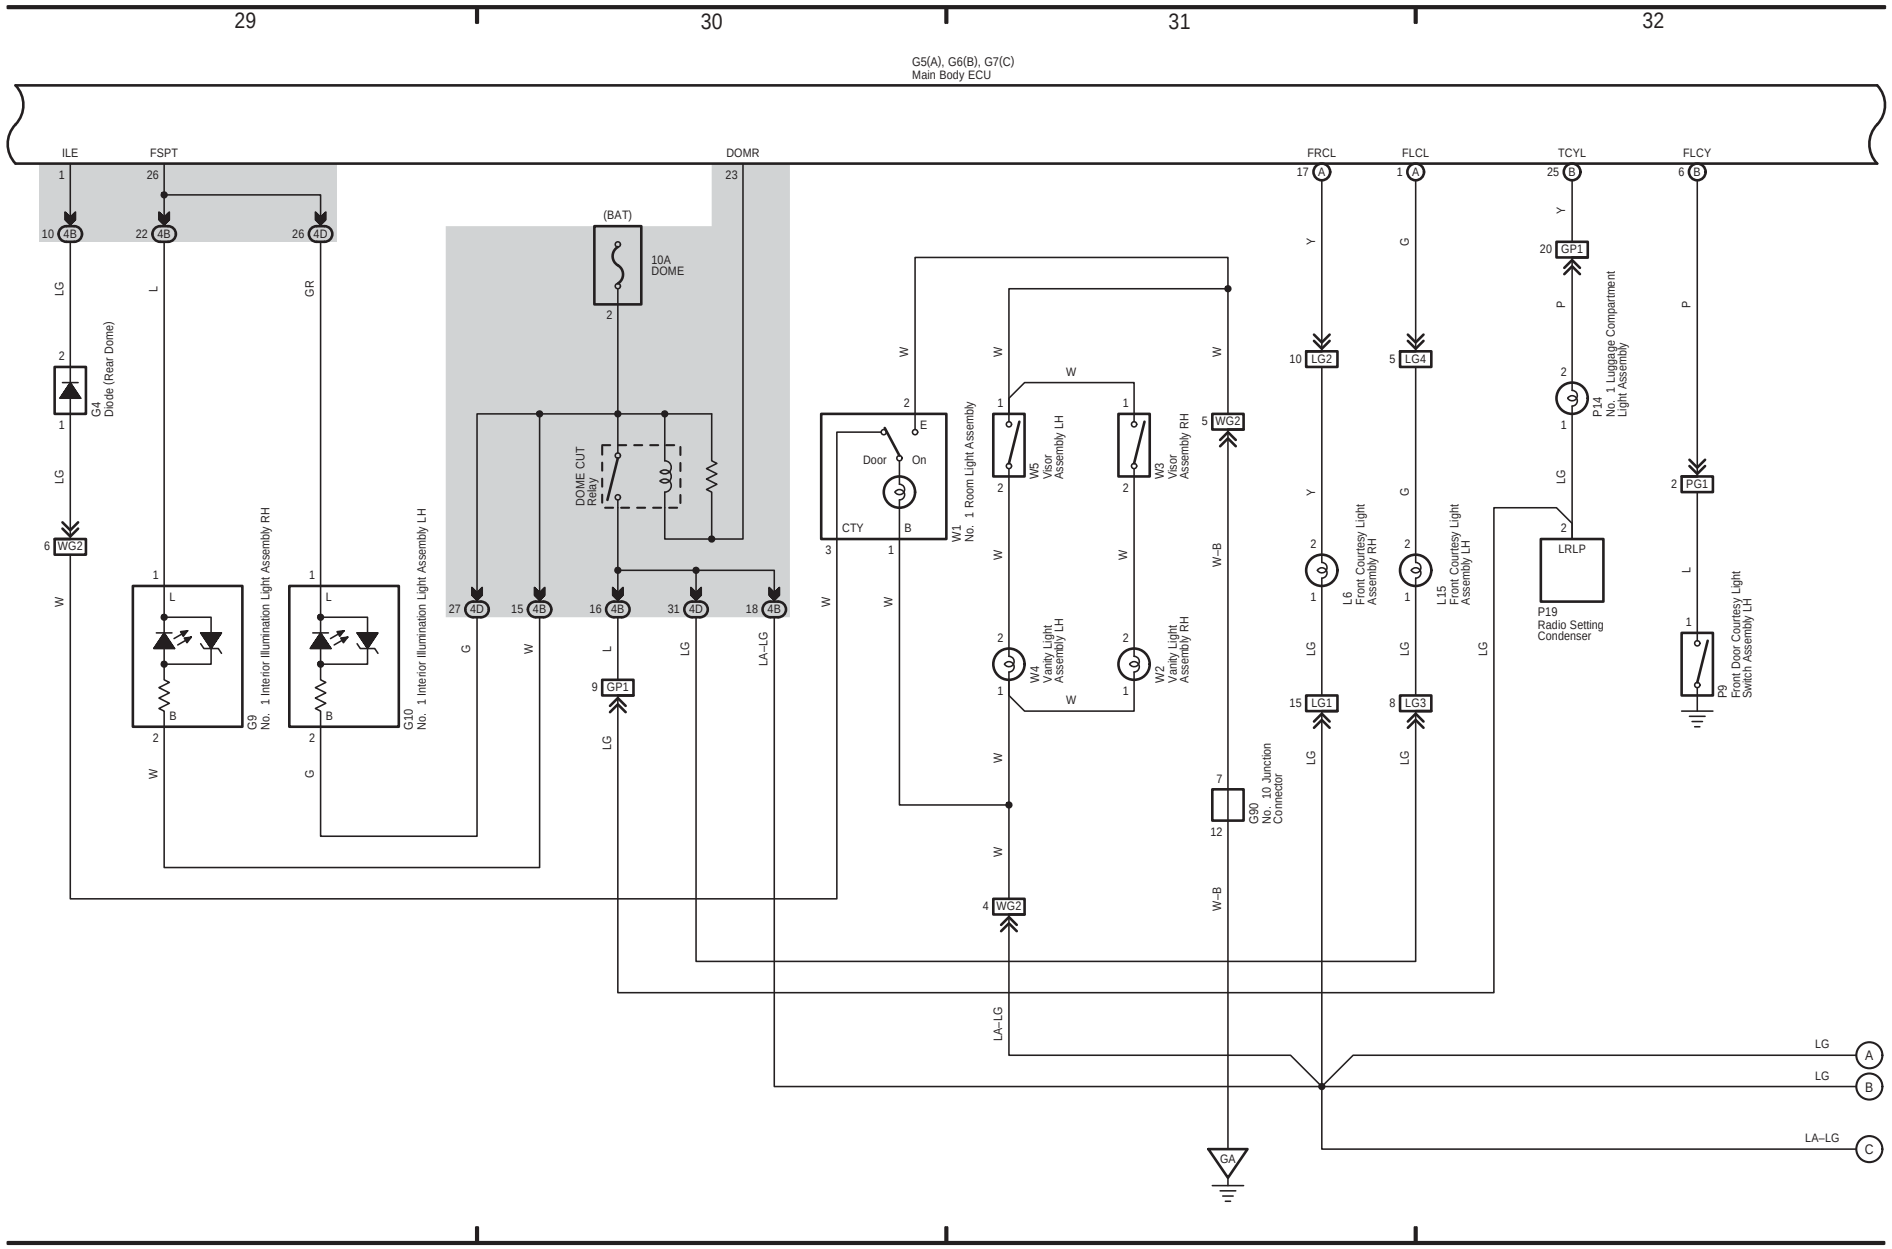

(Cont. next page)

Interior Light (RHD)

Theft Deterrent (RHD)

33 34 35 36

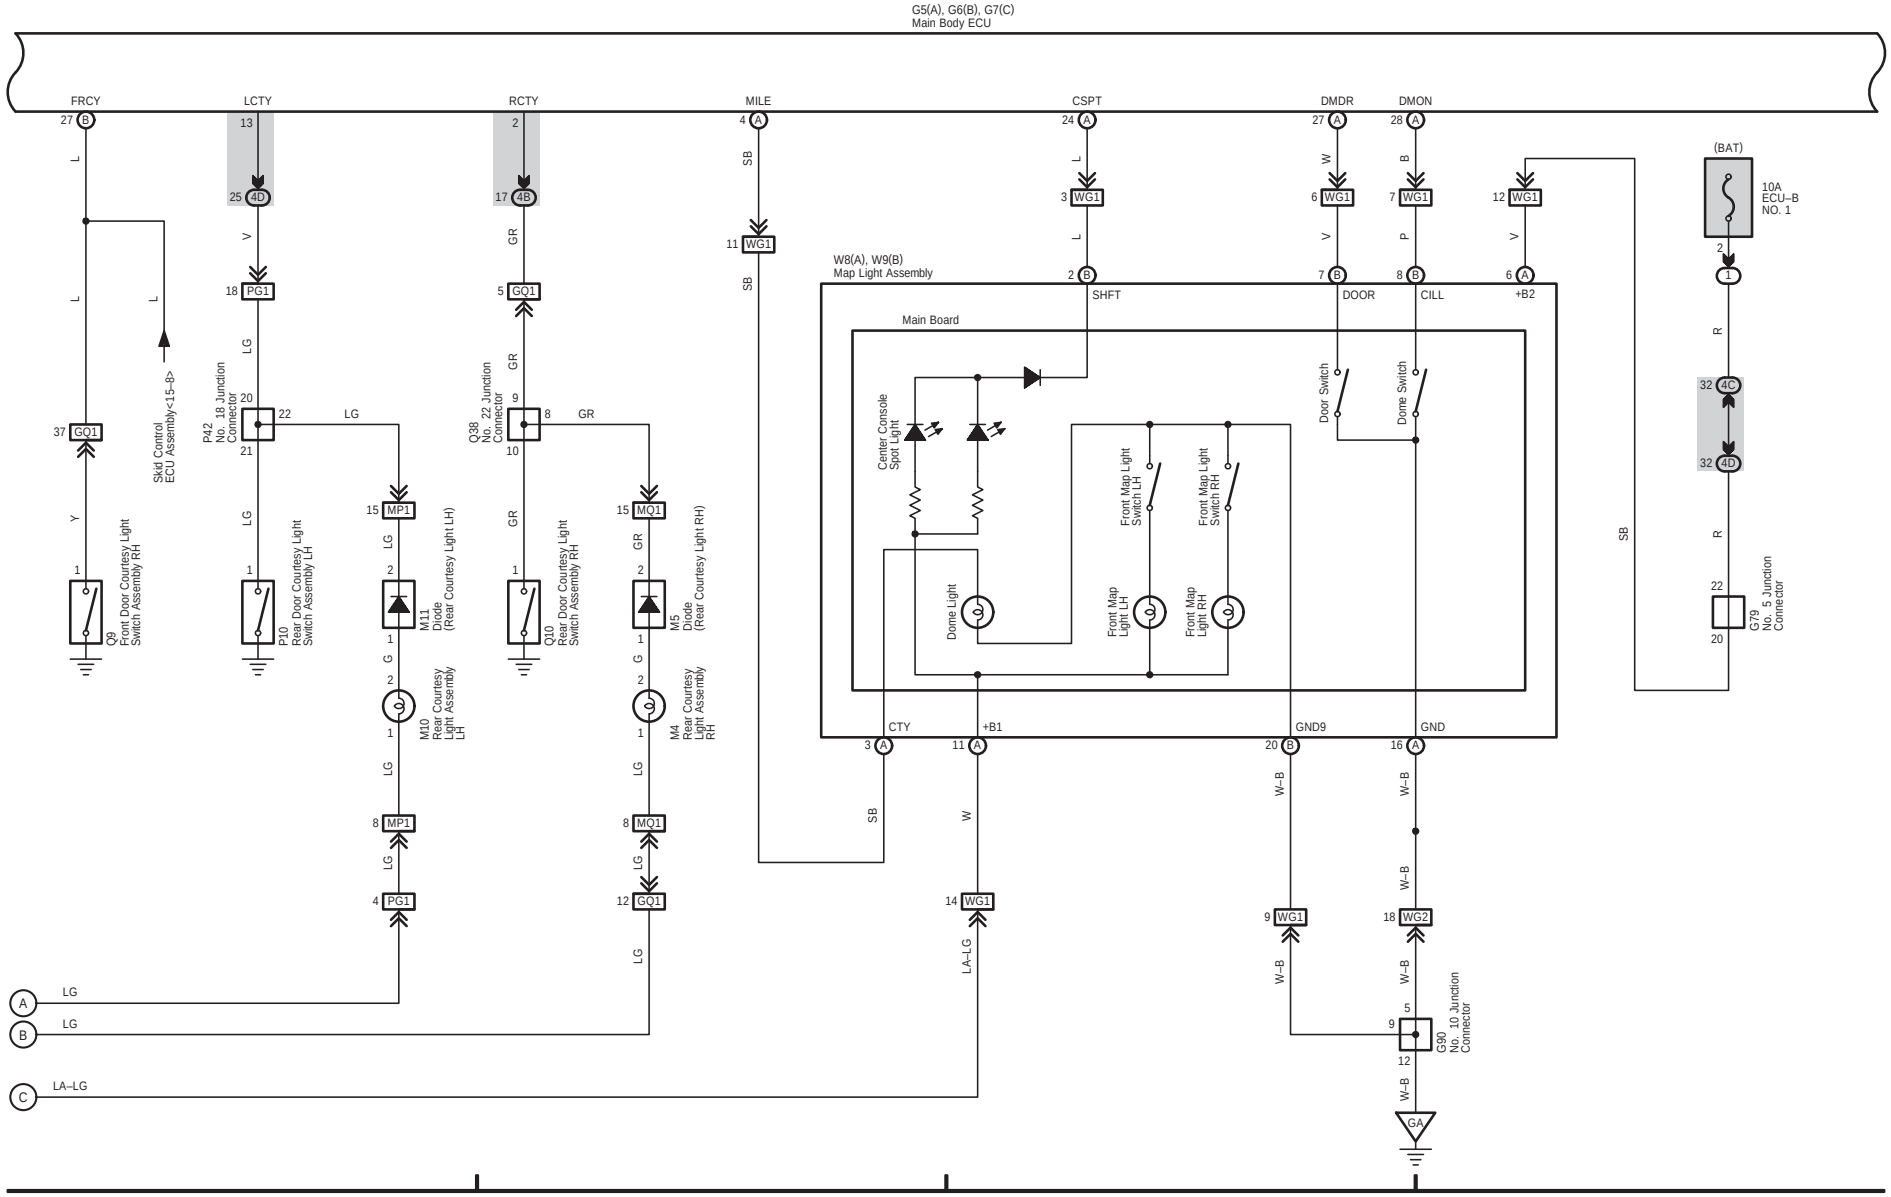

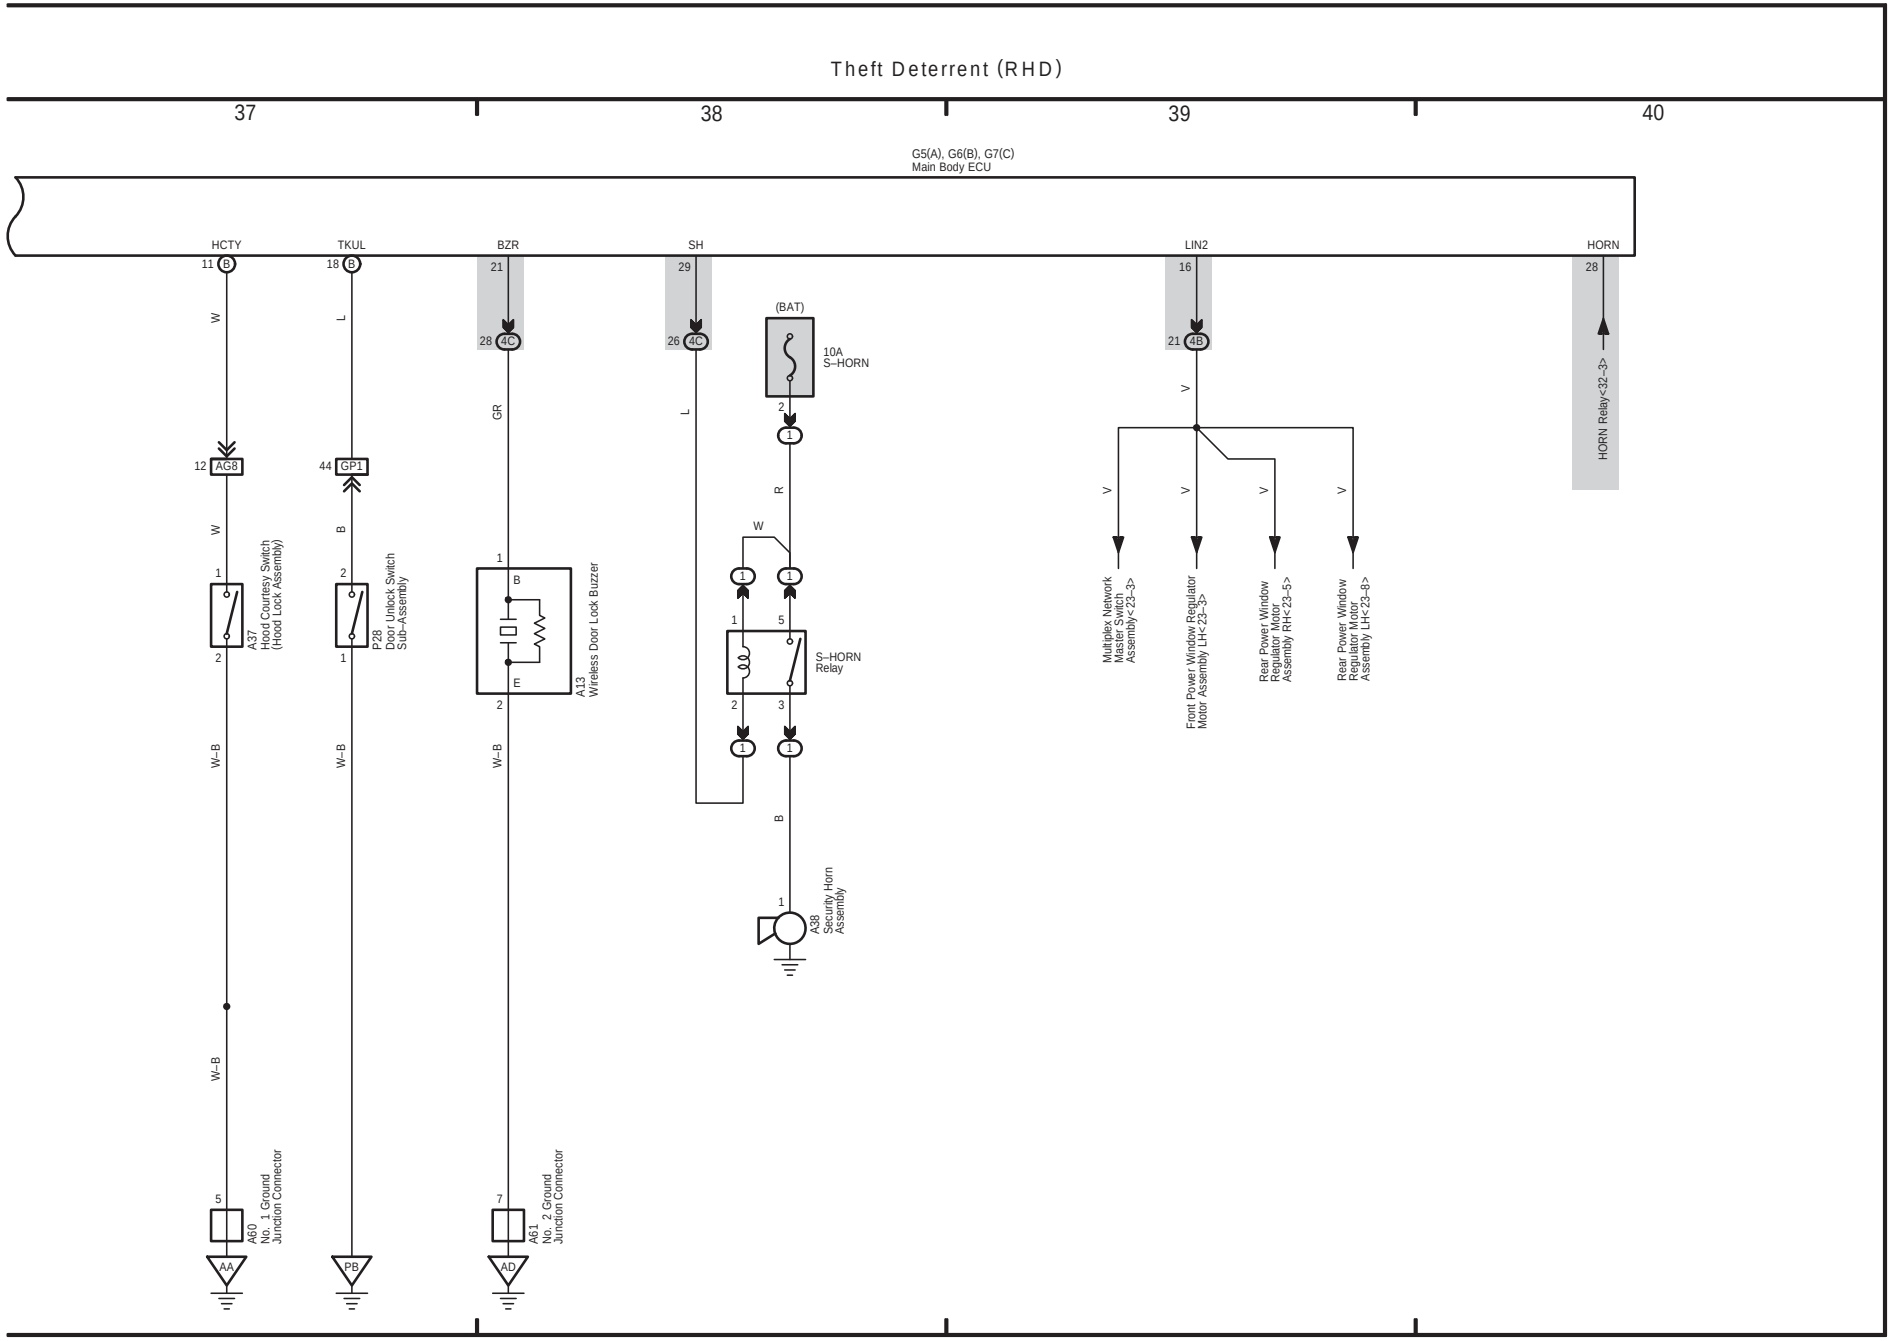
Theft Deterrent (RHD)
37
38
39
40
G5(A), G6(B), G7(C)
Main Body ECU
HCTY
TKUL
BZR
SH
LIN2
HORN
11 B
18 B
21
29
16
28
28 4C
26 4C
21 4B
(BAT)
10A
S–HORN
HORN Relay<32–3>
12 AG8
44 GP1
A37
Hood Courtesy Switch
(Hood Lock Assembly)
P28
Door Unlock Switch
Sub–Assembly
A13
Wireless Door Lock Buzzer
S–HORN
Relay
Multiplex Network
Master Switch
Assembly<23–3>
Front Power Window Regulator
Motor Assembly LH<23–3>
Rear Power Window
Regulator Motor
Assembly RH<23–5>
Rear Power Window
Regulator Motor
Assembly LH<23–8>
A38
Security Horn
Assembly
A60
No. 1 Ground
Junction Connector
A61
No. 2 Ground
Junction Connector
AA
PB
AD