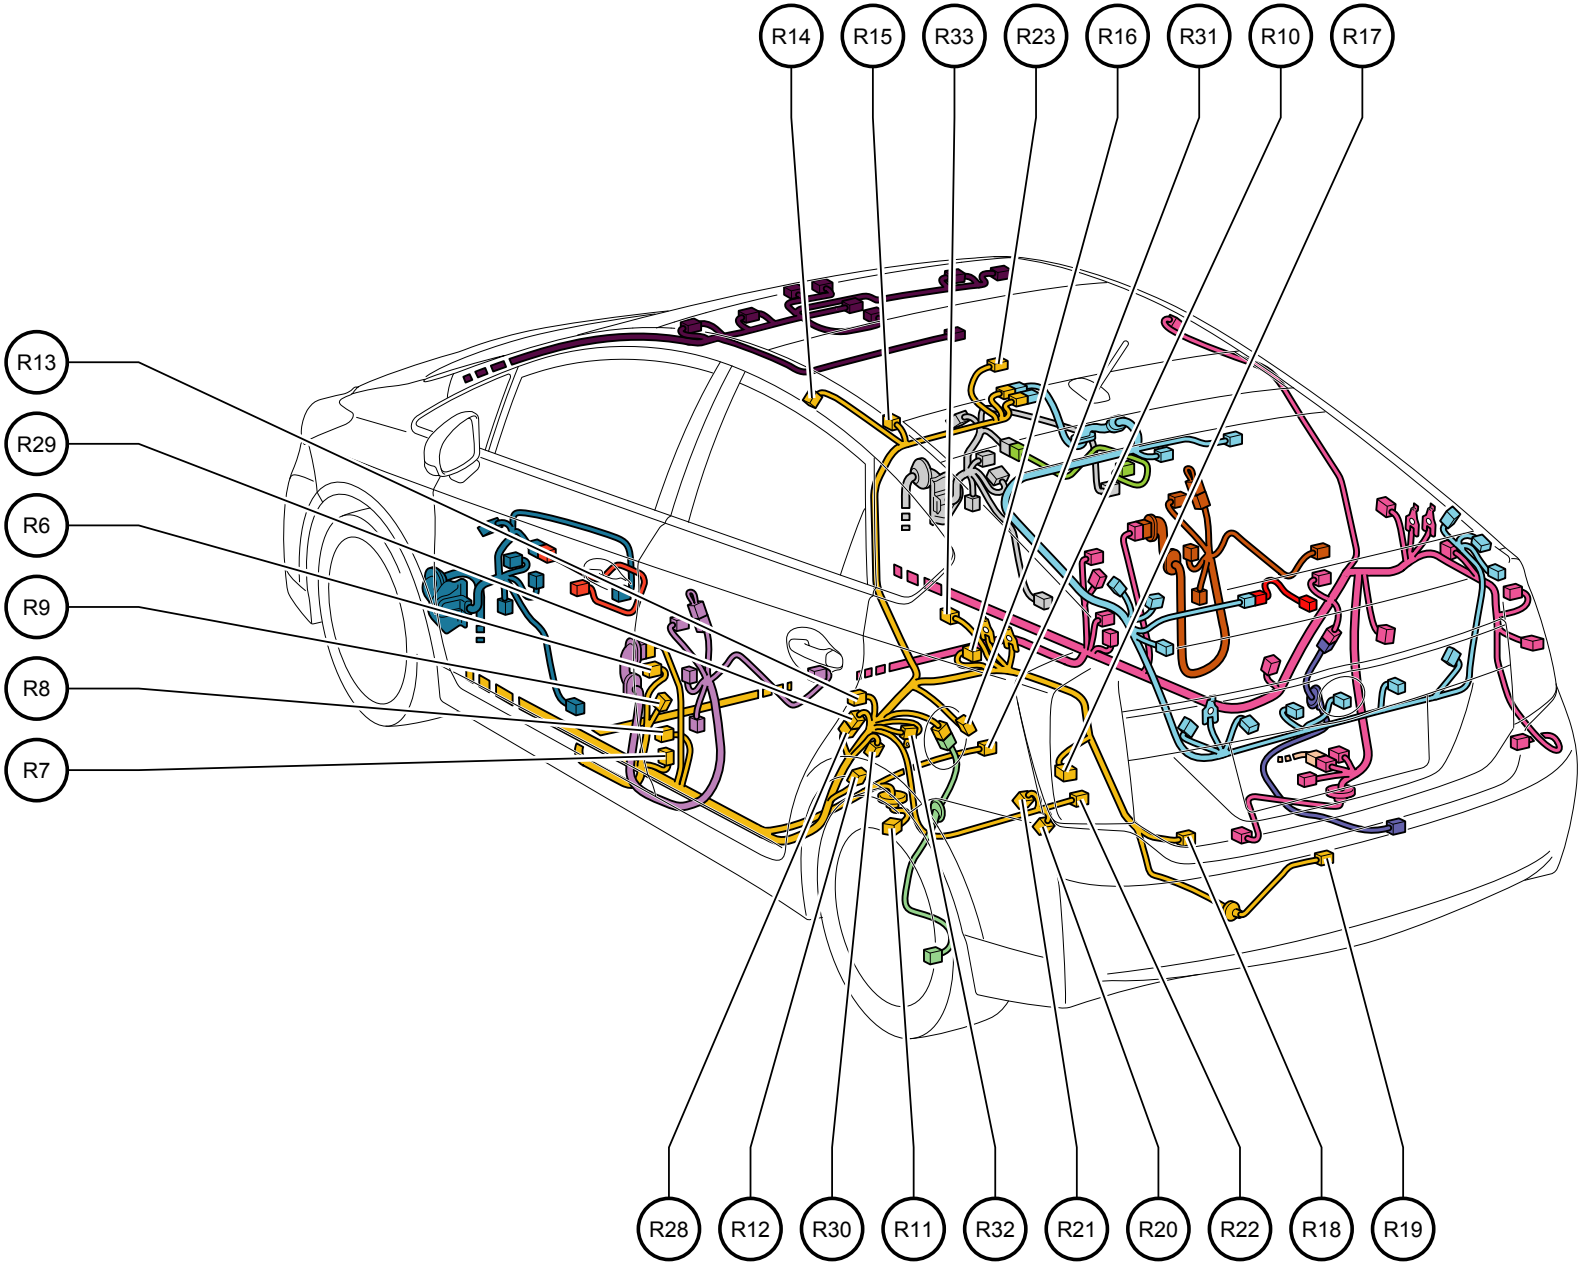
R14
R15
R33
R23
R16
R31
R10
R17
R13
R29
R6
R9
R8
R7
R28
R12
R30
R11
R32
R21
R20
R22
R18
R19

R 6 Front Door Courtesy Light Switch Assembly LH
R 7 Front Pretensioner LH
R 8 Front Pre-Crash Seat Belt Motor LH
R 9 Front Side Airbag Sensor Assembly LH
R 10 Rear Indoor Electrical Key Oscillator
R 11 Fuel Sender Gage Assembly
R 12 Rear Side Airbag Sensor Assembly LH
R 13 Rear Door Courtesy Light Switch Assembly LH
R 14 Curtain Shield Airbag Assembly Circuit LH
R 15 Noise Filter (Solar Ventilation System)
R 16 No. 2 Room Light Assembly
R 17 Rear Combination Light Assembly LH
R 18 Back Door Lock Assembly
R 19 Outside Luggage Electrical Key Antenna
R 20 Rear Seat Inner with Center Belt Assembly LH
R 21 Rear Seat Inner with Center Belt Assembly LH
R 22 Rear Seat Belt Assembly Inner RH
R 23 Sliding Roof Control ECU
R 28 Junction Connector
R 29 Junction Connector
R 30 Diode (Back Door Courtesy Light)
R 31 Junction Connector
R 32 Noise Filter (Rear Window Defogger)
R 33 Tire Pressure Warning ECU and Receiver (Tire Pressure Monitor Receiver Assembly)

R 6
Black

R 7
Yellow

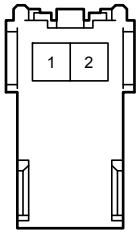

R 8
White



R 9
Yellow

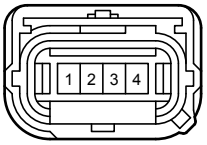

R 10
White

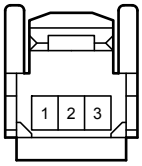

R 11
Dark Gray

R 12
Yellow

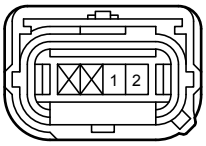

R 13
Black

R 14
Black

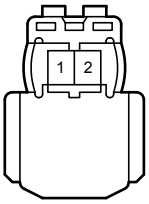

R 15
White



R 16
White



R 17
White



R 18
White



R 19
White



R 20
Black

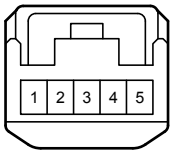

R 21
White

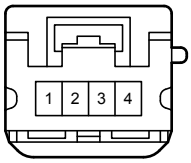

R 22
Gray

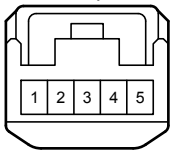

R 23
White

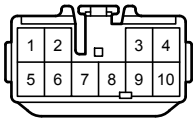

R 28
White

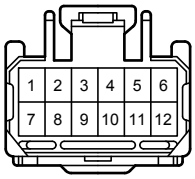

R 29
White

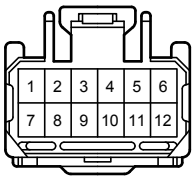

R 30
Black

R 31
White

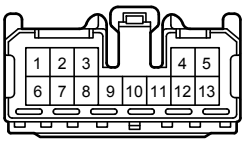

R 32
Black


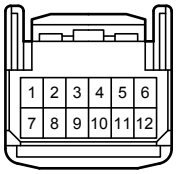
R 33
Black