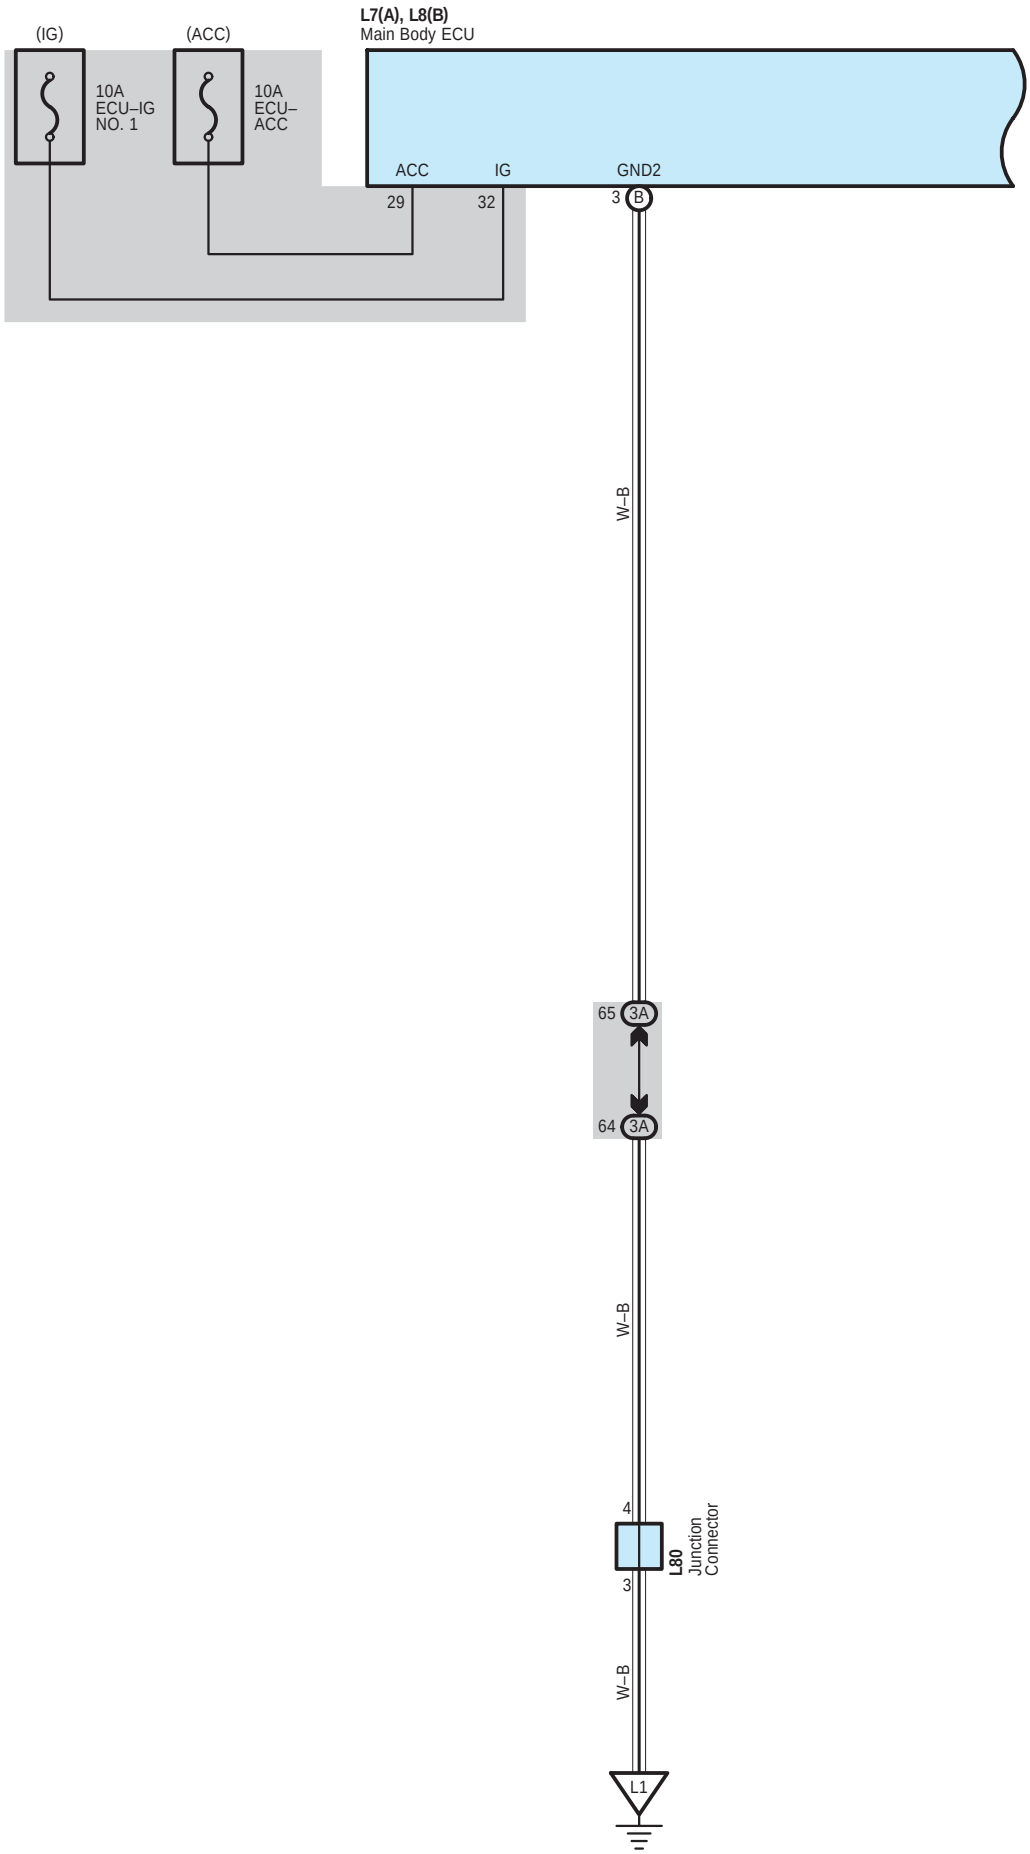
(IG)
(ACC)
10A
ECU–IG
NO. 1
10A
ECU–
ACC
L7(A), L8(B)
Main Body ECU
ACC
IG
GND2
29
32
3
B
W–B
65
3A
64
3A
W–B
4
3
L80
Junction
Connector
W–B
L1

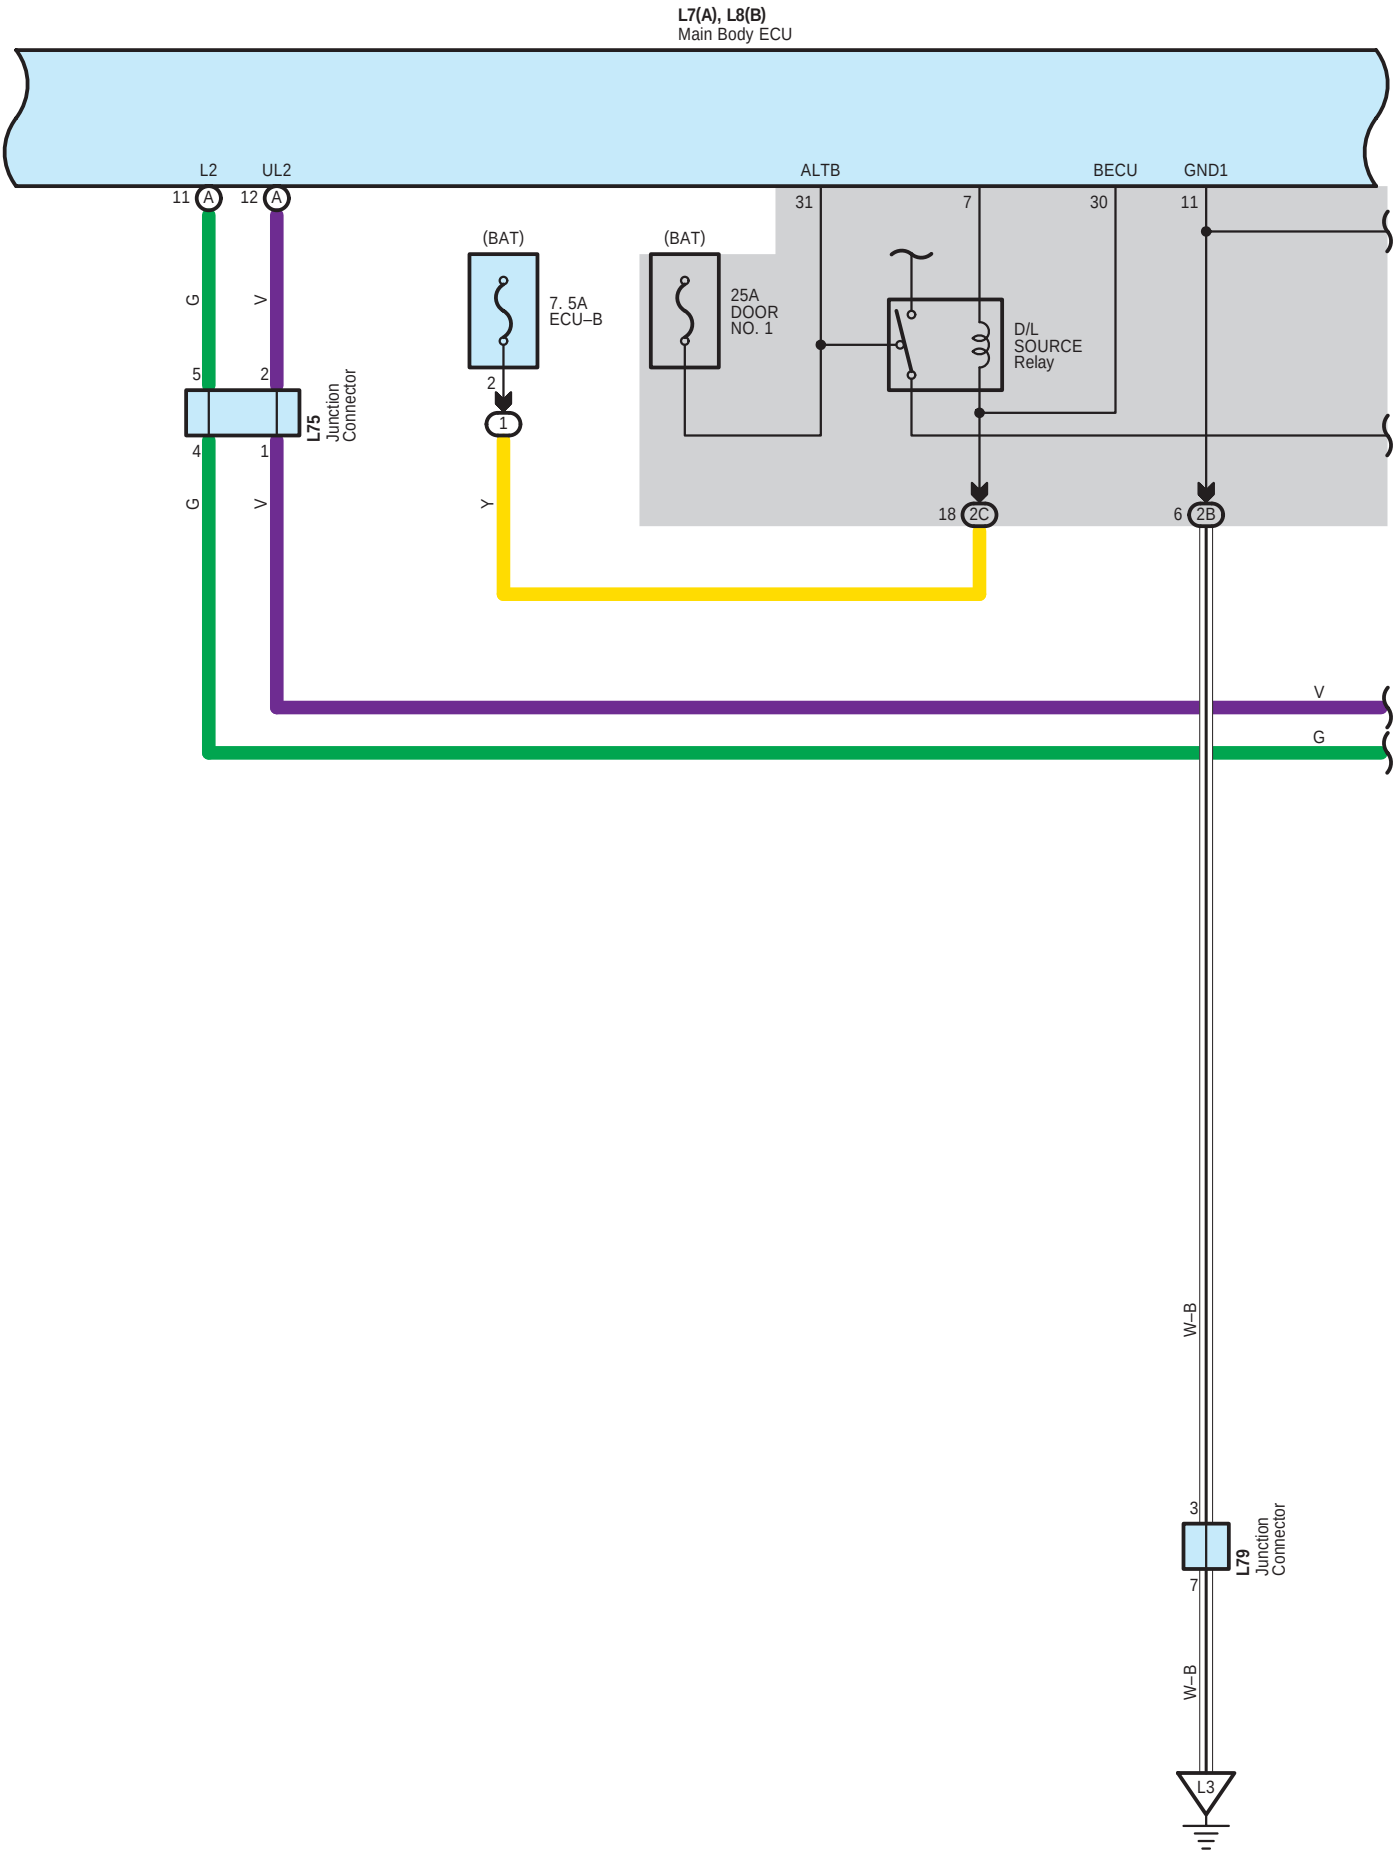
L7(A), L8(B)
Main Body ECU
L2
UL2
ALTB
BECU
GND1
11 A
12 A
31
7
30
11
(BAT)
(BAT)
7. 5A
ECU–B
25A
DOOR
NO. 1
D/L
SOURCE
Relay
G
V
5
2
L75
Junction
Connector
4
1
G
V
2
1
Y
18 2C
6 2B
V
G
W–B
3
L79
Junction
Connector
7
W–B
L3

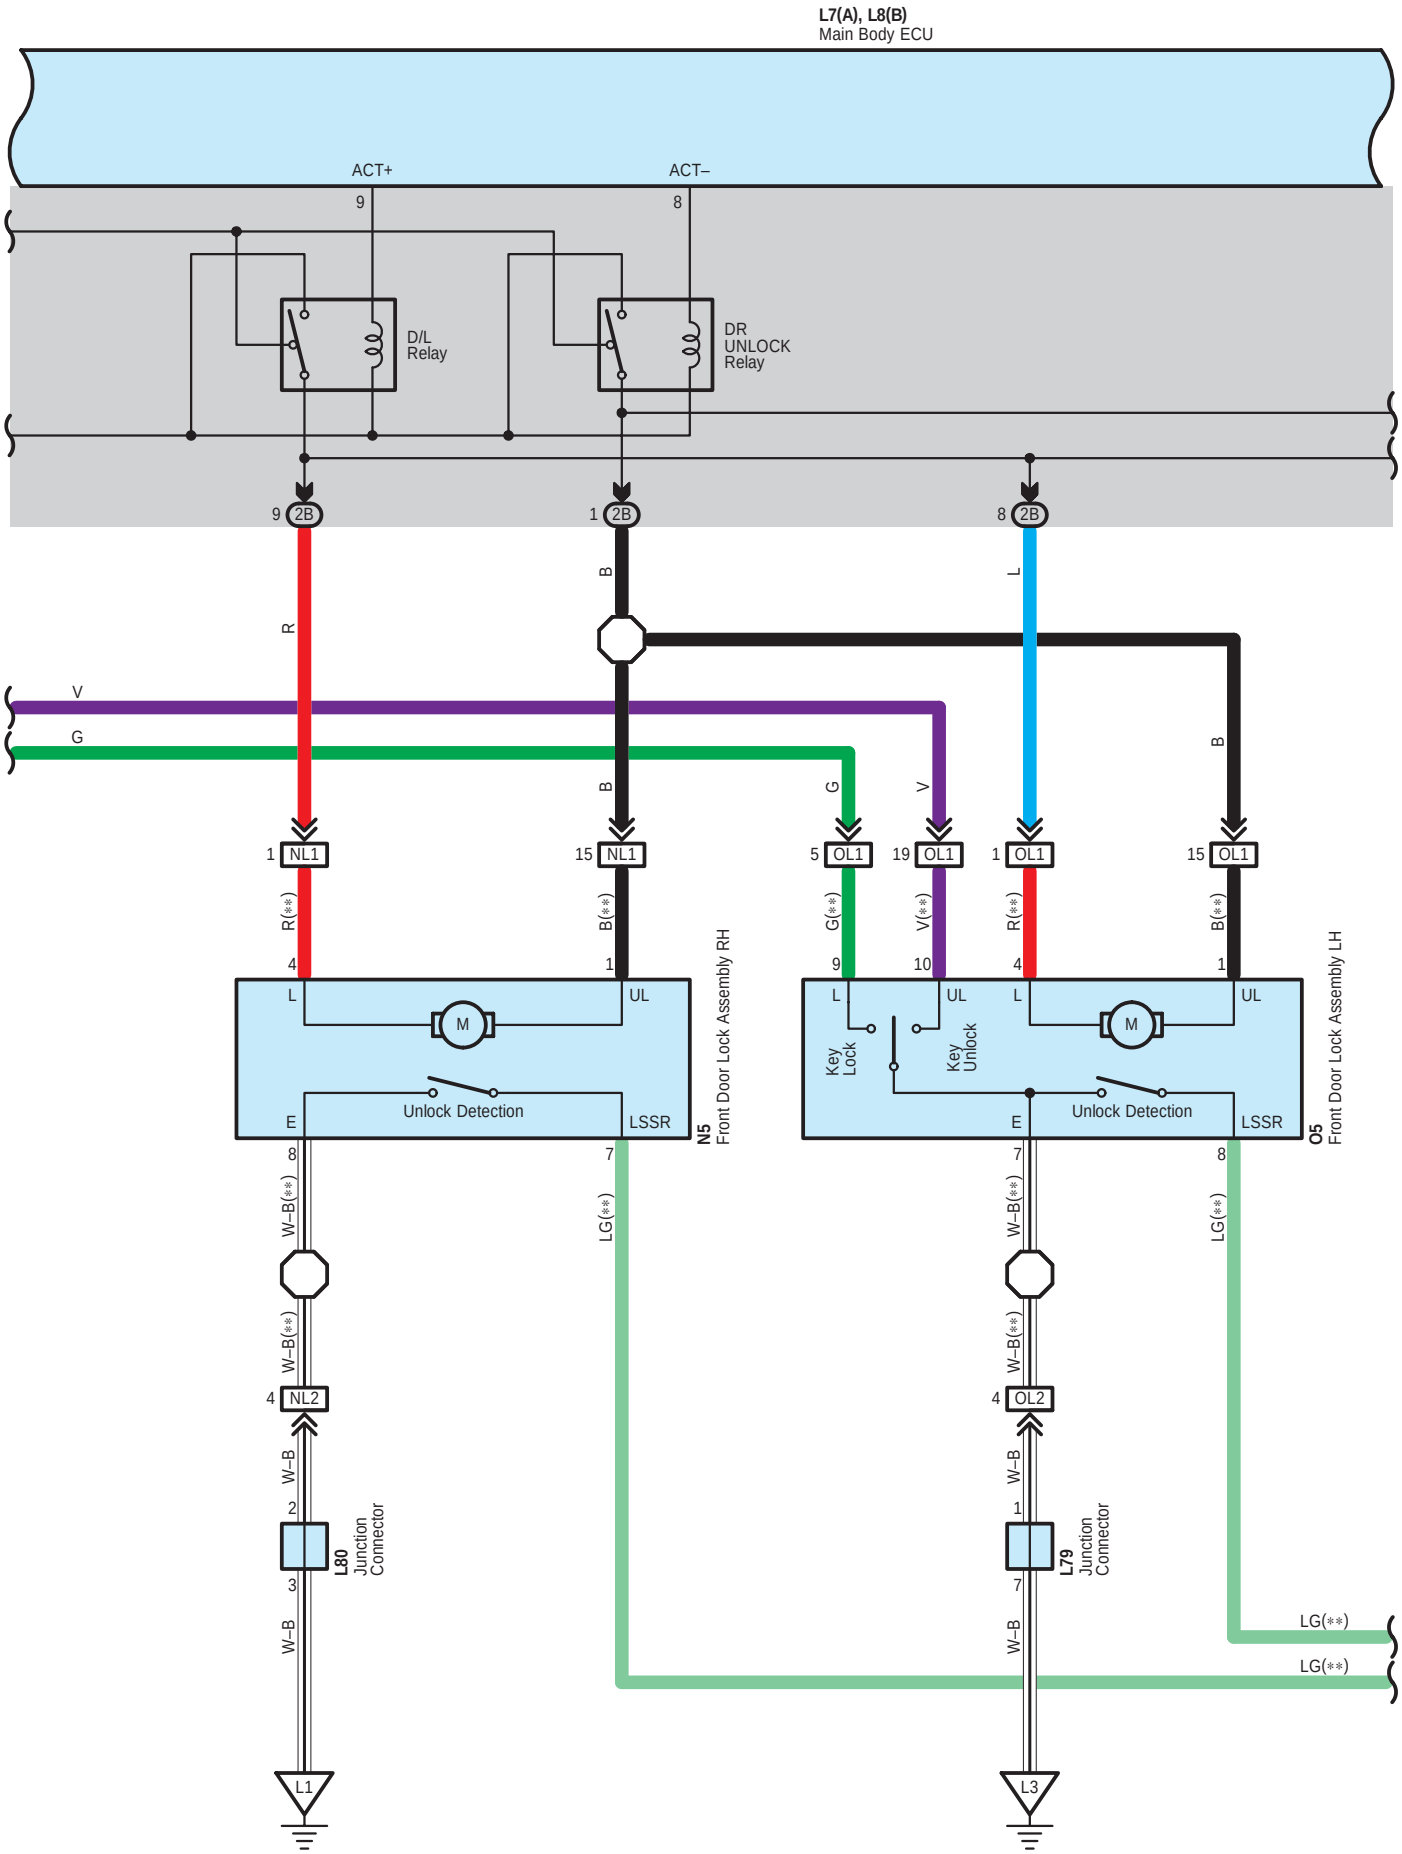
L7(A), L8(B)
Main Body ECU
ACT+
ACT–
9
8
D/L
Relay
DR
UNLOCK
Relay
9 2B
1 2B
8 2B
R
B
L
V
G
B
G
V
B
1 NL1
15 NL1
5 OL1
19 OL1
1 OL1
15 OL1
R(**)
B(**)
G(**)
V(**)
R(**)
B(**)
4
1
9
10
4
1
L
UL
M
Key
Lock
Key
Unlock
Unlock Detection
E
LSSR
N5
Front Door Lock Assembly RH
O5
Front Door Lock Assembly LH
8
7
W–B(**)
LG(**)
4 NL2
4 OL2
W–B
2
1
3
7
L80
Junction
Connector
L79
Junction
Connector
L1
L3

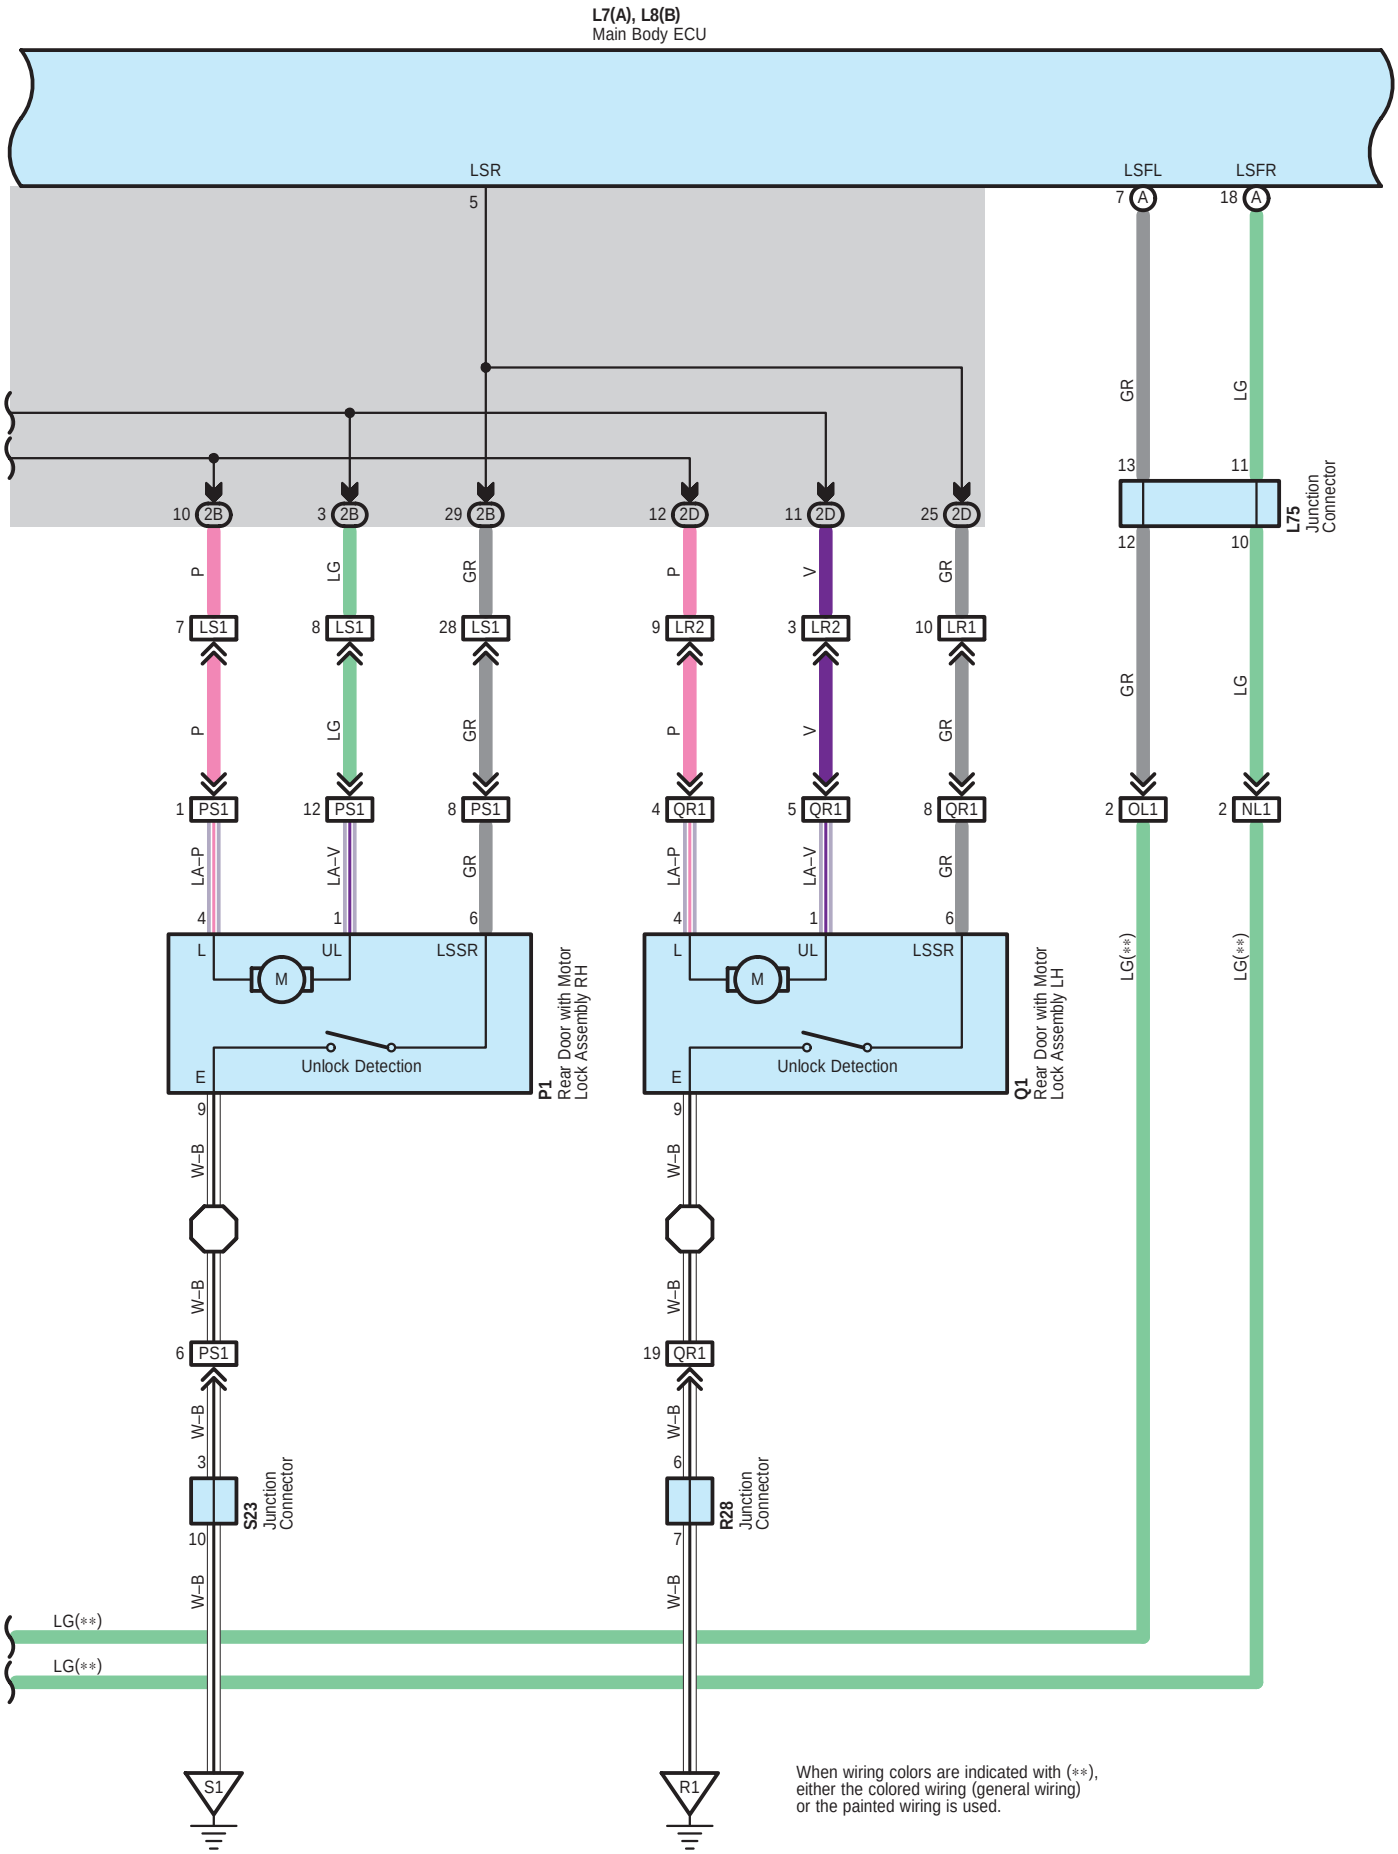
L7(A), L8(B)
Main Body ECU
LSR
5
LSFL
LSFR
7 A
18 A
GR
LG
13
11
L75
Junction Connector
12
10
10 2B
3 2B
29 2B
12 2D
11 2D
25 2D
P
LG
GR
P
V
GR
7 LS1
8 LS1
28 LS1
9 LR2
3 LR2
10 LR1
1 PS1
12 PS1
8 PS1
4 QR1
5 QR1
8 QR1
2 OL1
2 NL1
LA–P
LA–V
GR
4
1
6
L
UL
LSSR
M
Unlock Detection
E
P1
Rear Door with Motor Lock Assembly RH
Q1
Rear Door with Motor Lock Assembly LH
LG(**)
9
W–B
6 PS1
19 QR1
3
10
S23
Junction Connector
6
7
R28
Junction Connector
S1
R1
When wiring colors are indicated with (**), either the colored wiring (general wiring) or the painted wiring is used.

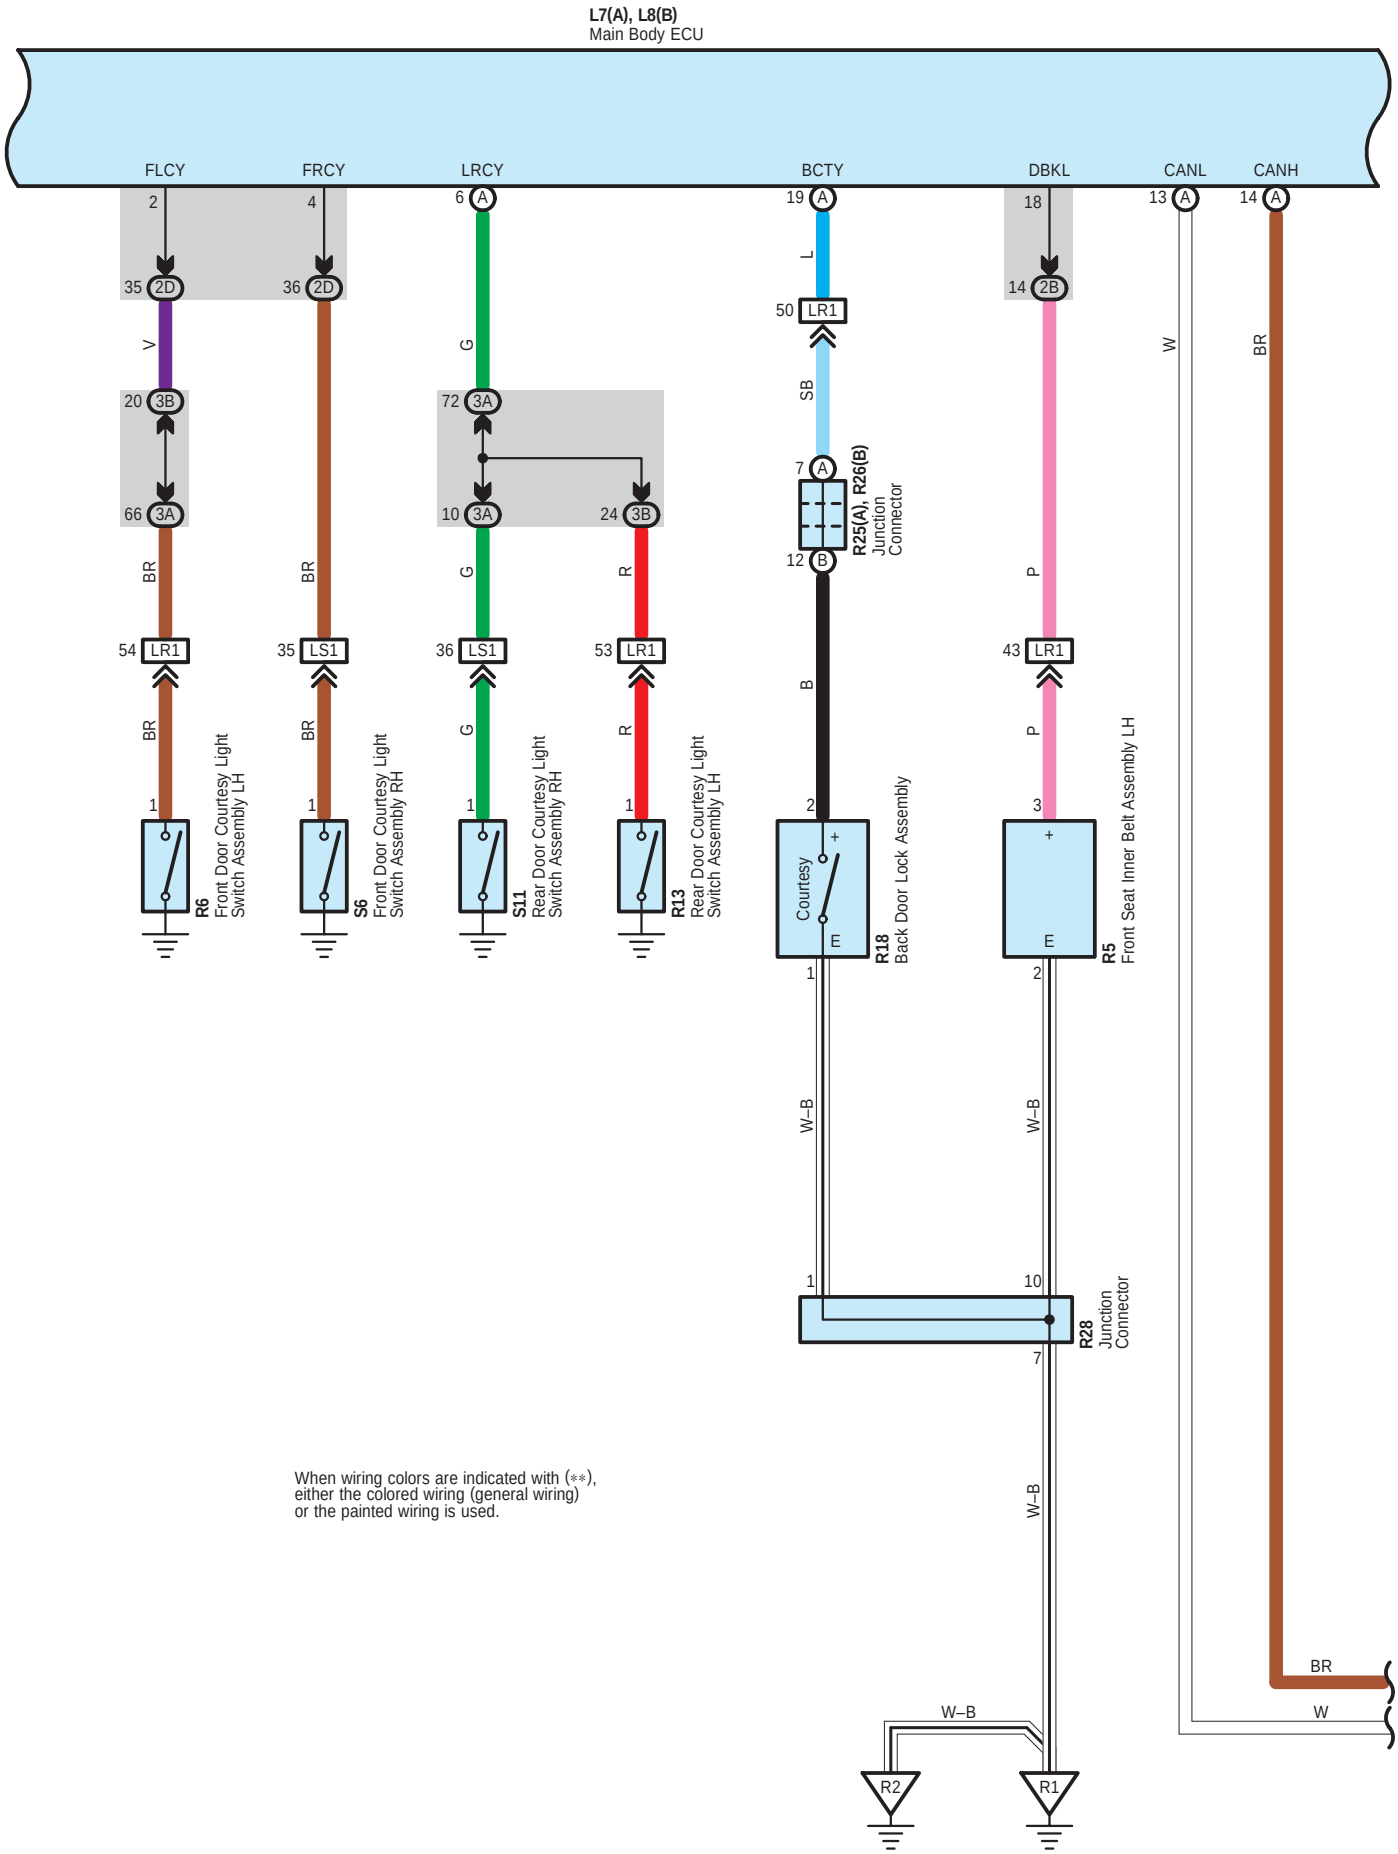

When wiring colors are indicated with (**), either the colored wiring (general wiring) or the painted wiring is used.

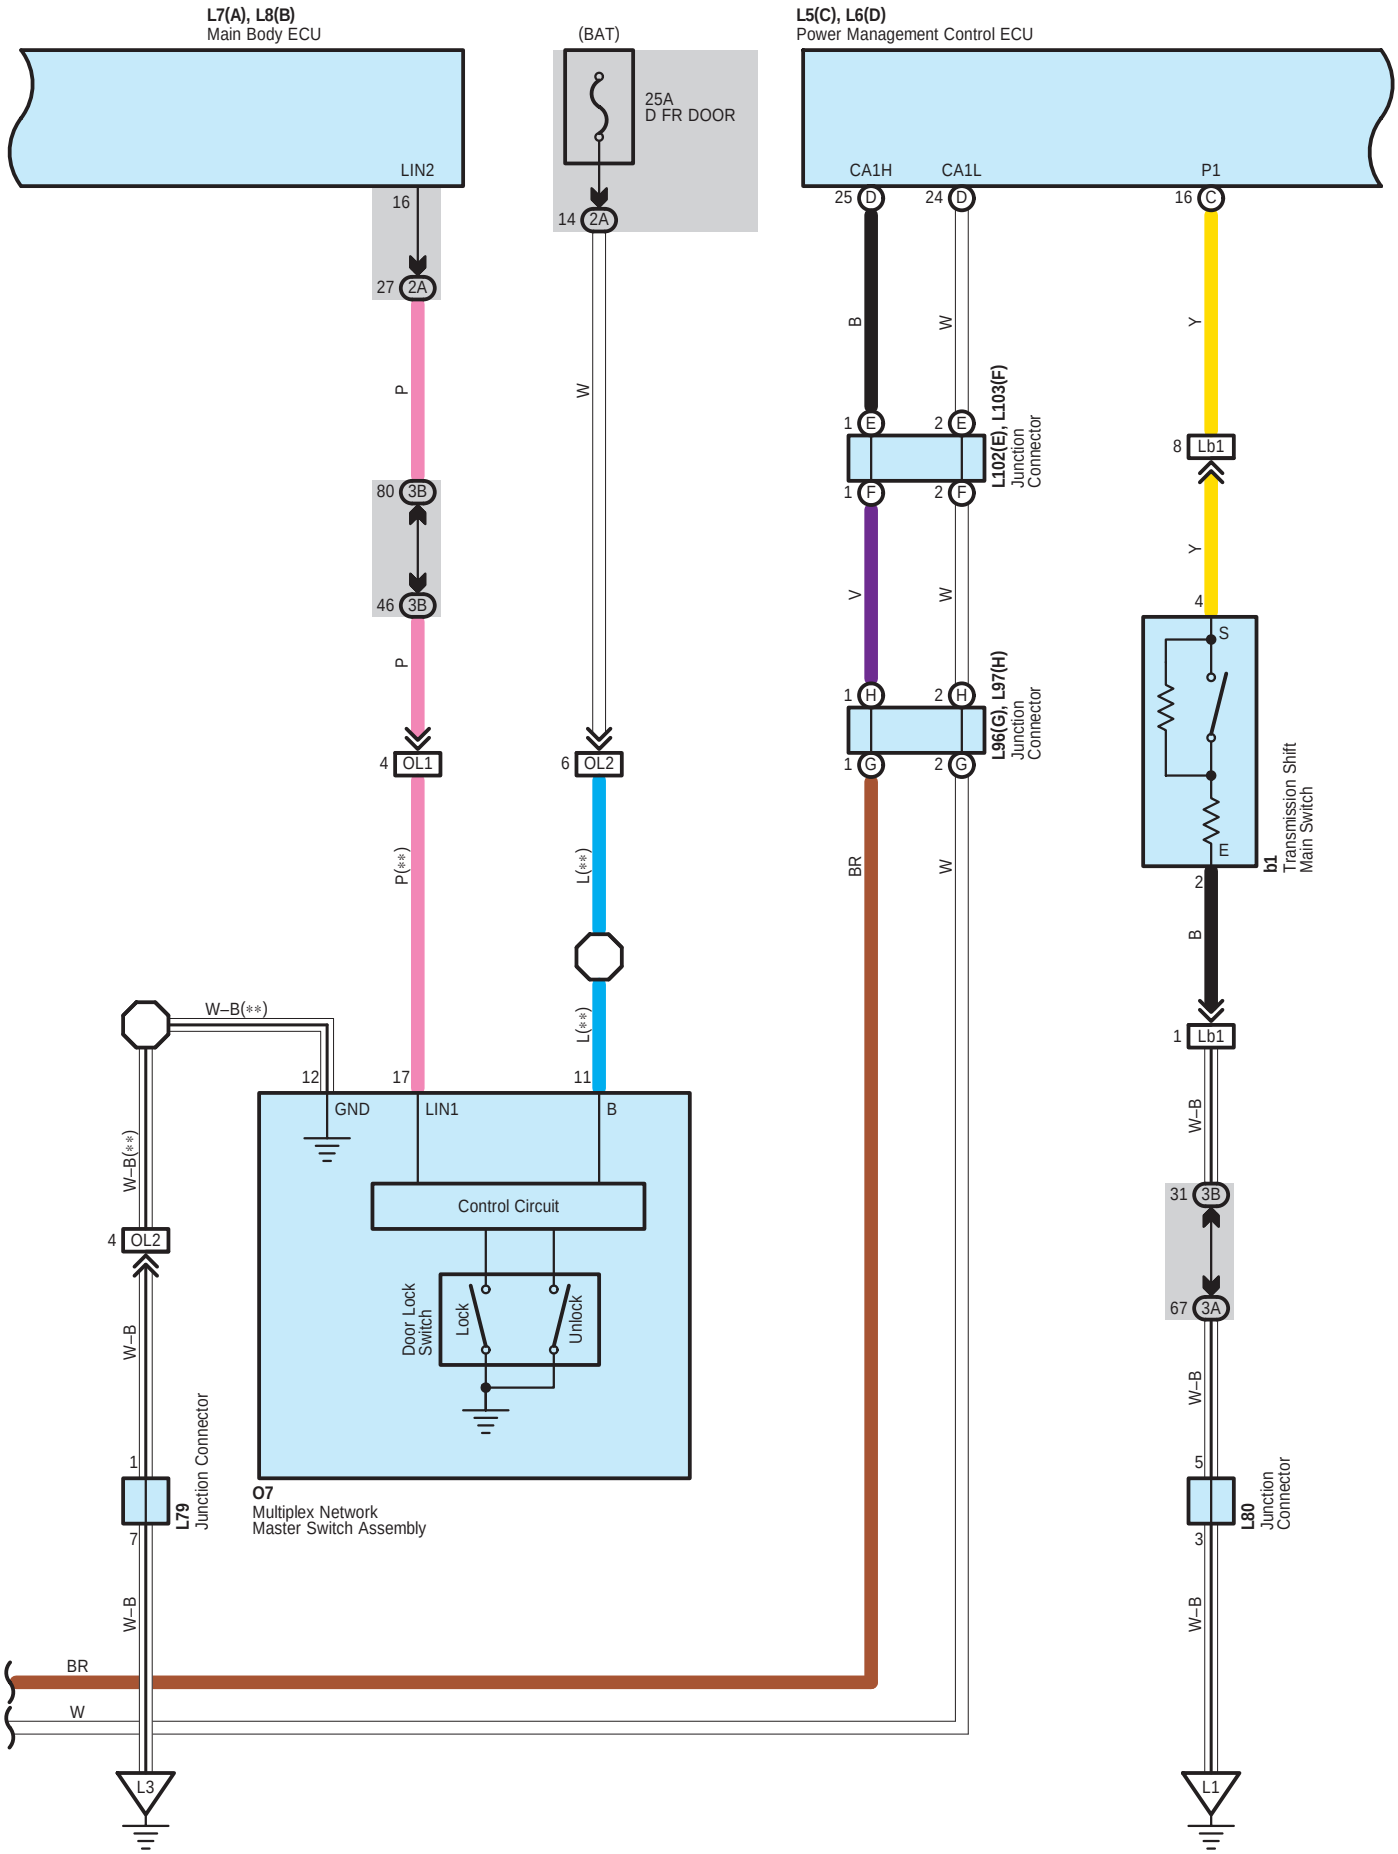
L7(A), L8(B)
Main Body ECU
LIN2
16
27 2A
P
80 3B
46 3B
P
4 OL1
P(**)
(BAT)
25A
D FR DOOR
14 2A
W
6 OL2
L(**)
L(**)
L5(C), L6(D)
Power Management Control ECU
CA1H
CA1L
P1
25 D
24 D
16 C
B
W
Y
1 E
2 E
1 F
2 F
L102(E), L103(F)
Junction
Connector
V
W
1 H
2 H
1 G
2 G
L96(G), L97(H)
Junction
Connector
BR
W
8 Lb1
Y
4
S
E
b1
Transmission Shift
Main Switch
2
B
1 Lb1
W–B
31 3B
67 3A
W–B
5
3
L80
Junction
Connector
W–B
W–B(**)
12
17
11
GND
LIN1
B
Control Circuit
Door Lock
Switch
Lock
Unlock
O7
Multiplex Network
Master Switch Assembly
W–B(**)
4 OL2
W–B
1
7
L79
Junction Connector
W–B
BR
W
L3
L1

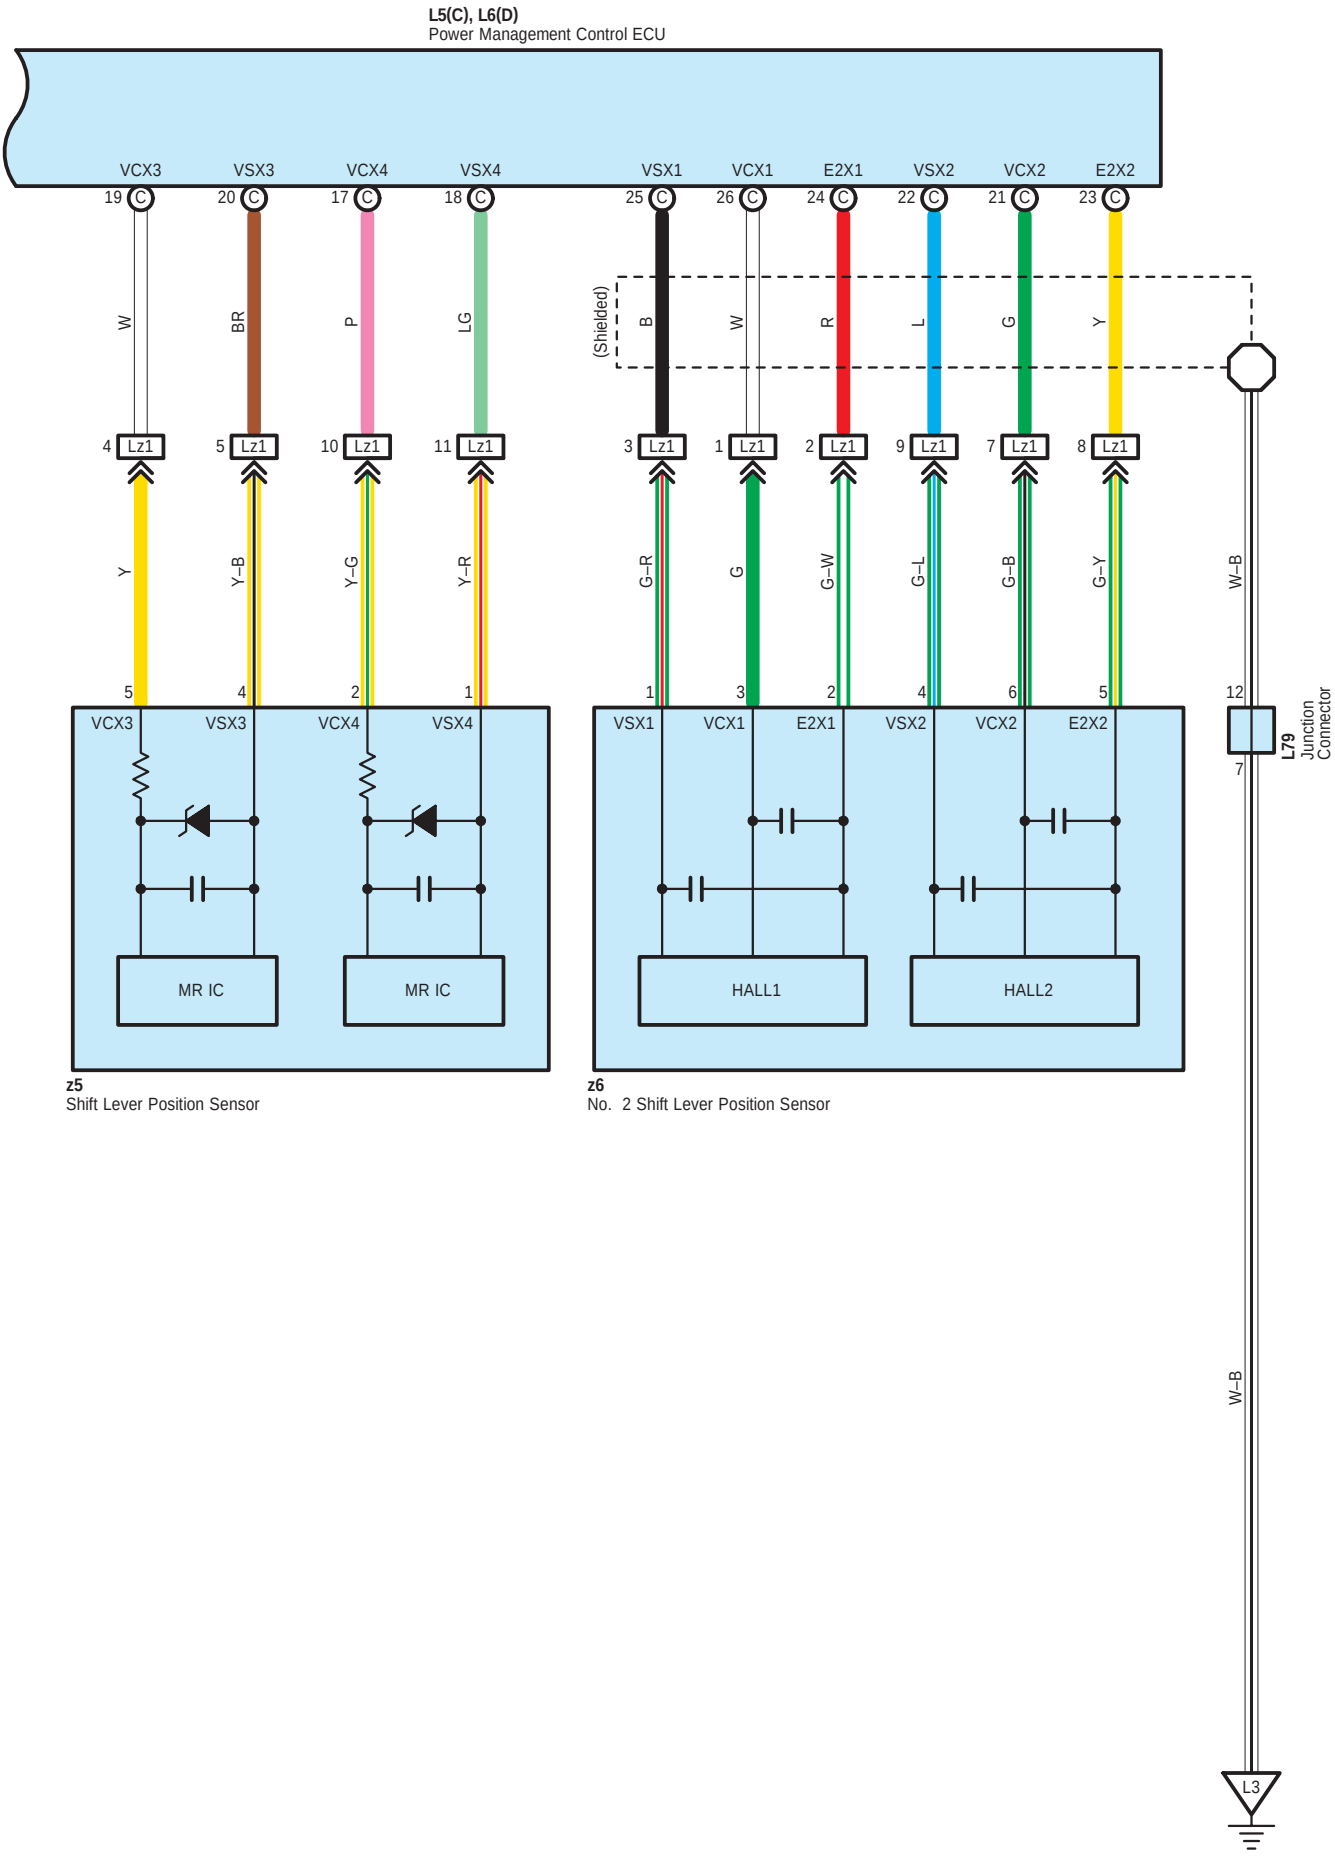

z5
Shift Lever Position Sensor

z6
No. 2 Shift Lever Position Sensor

L 5
Gray

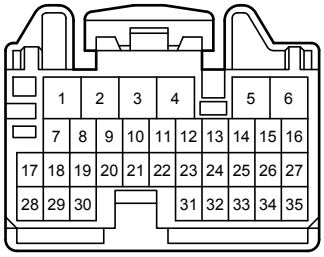

L 6
Gray

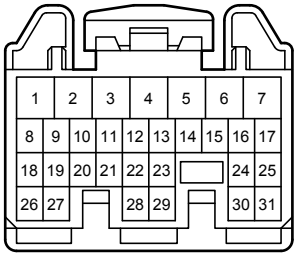

L 7
White

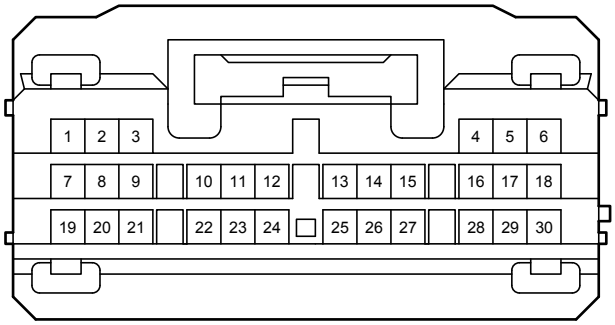

L 8
White

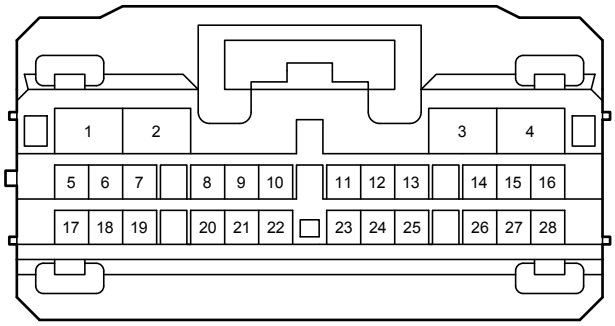

L 75
Black

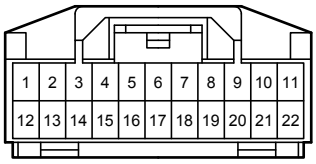

L 79
White

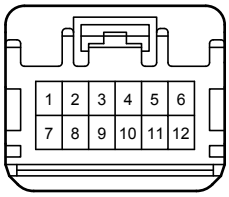

L 80
White

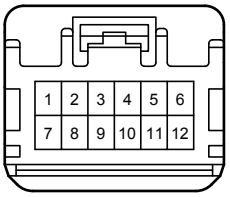

L 96
White



L 97
White



L102
White



L103
White



N 5
White

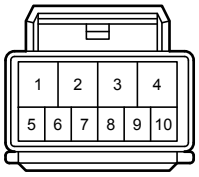

O 5
White

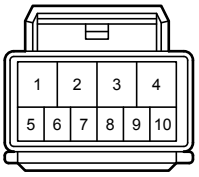

O 7
White

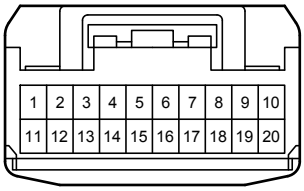

P 1
White

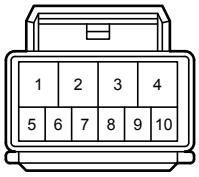

Q 1
White

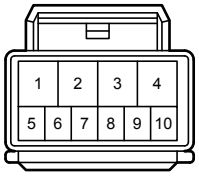

R 5
White

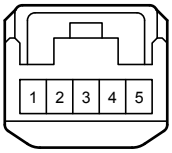

R 6
Black

R 13
Black

R 18
White



R 25
White

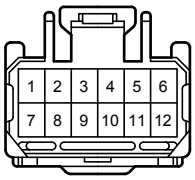

R 26
White

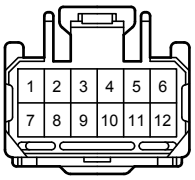

R 28
Black

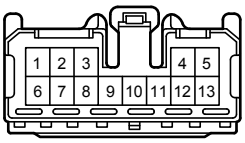

S 6
Black

S 11
Black

S 23
White

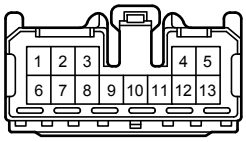

b 1
White

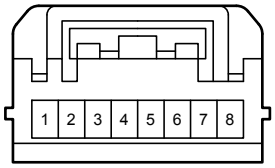

z 5
White

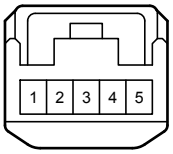

z 6
White

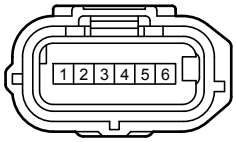

2A
White

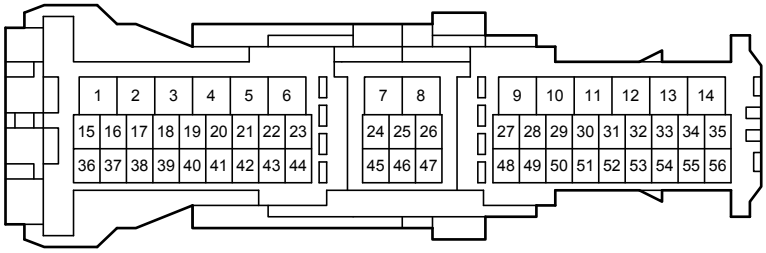

2B
White

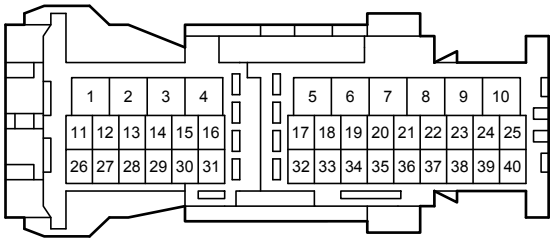

2C
White

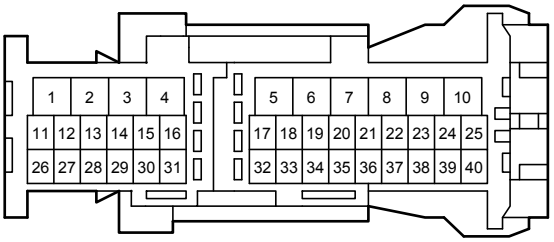

2D
White

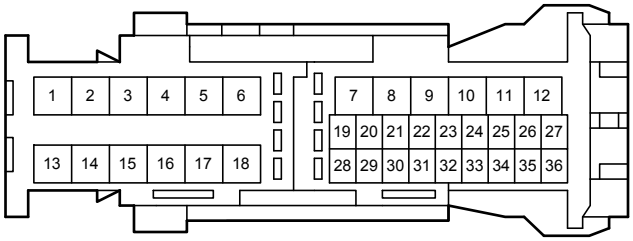

3A
White

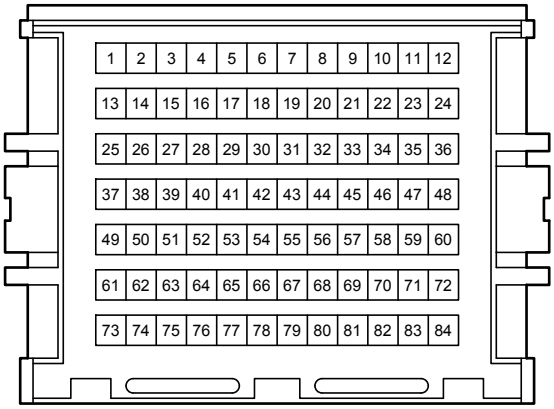

3B
White

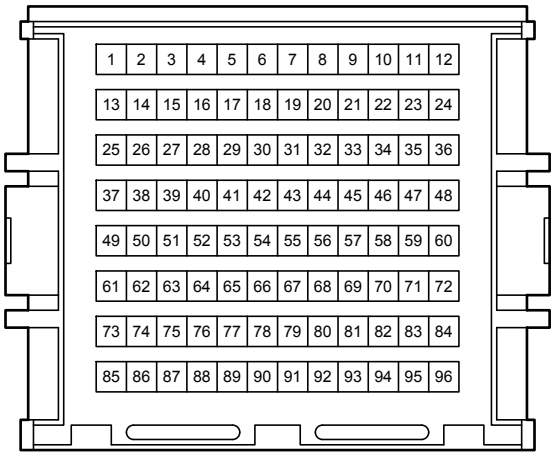

LR1
White

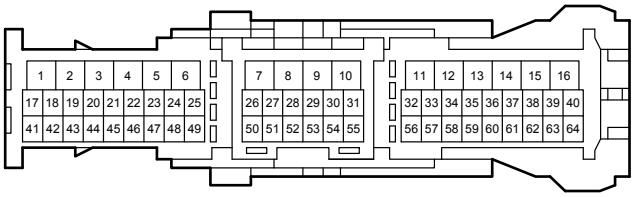

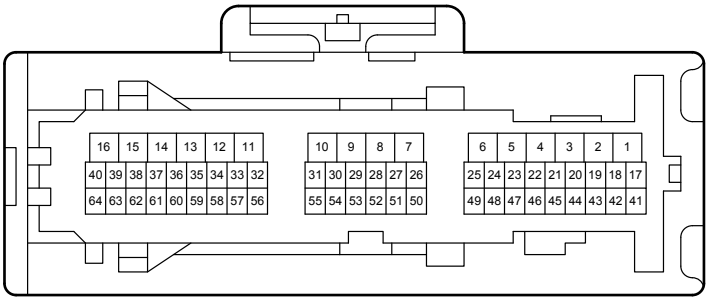

LR2
Black

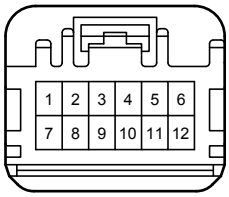

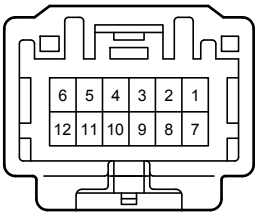

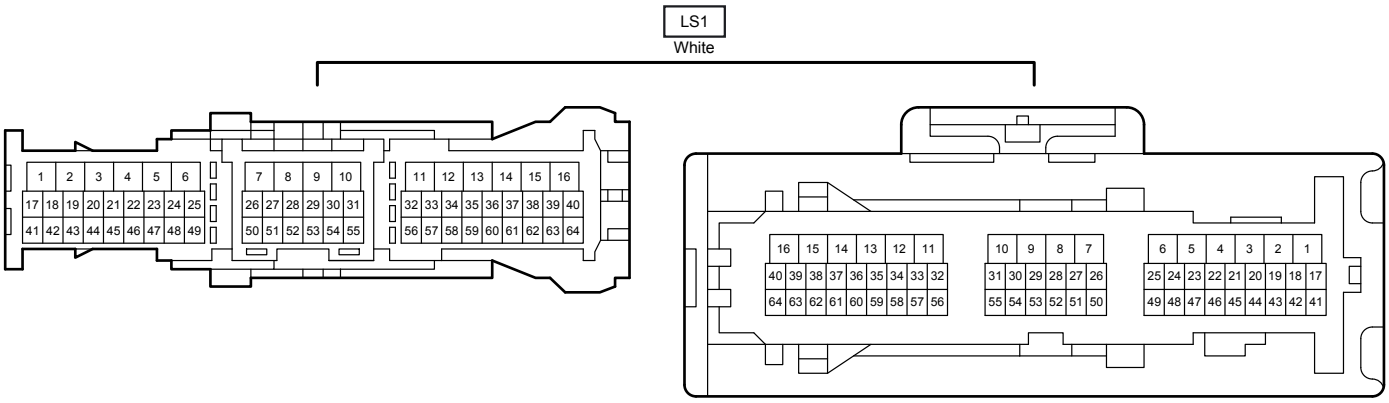
LS1
White

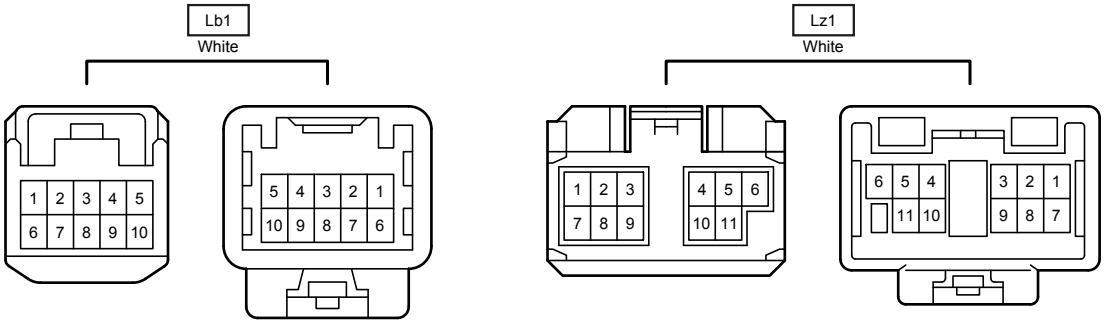
Lb1
White
Lz1
White

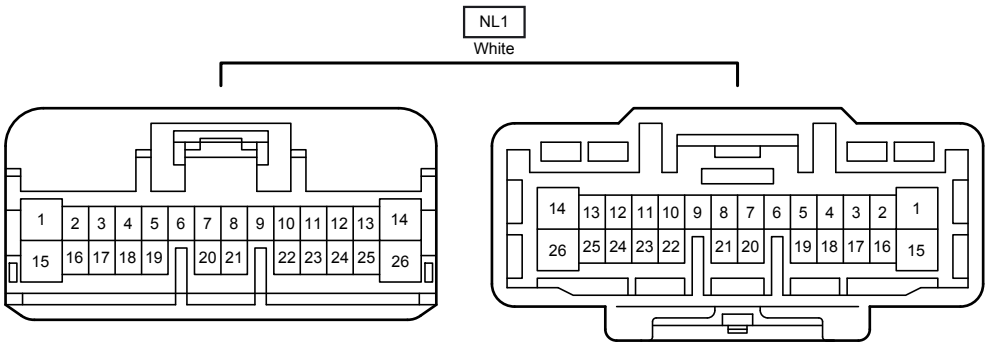
NL1
White

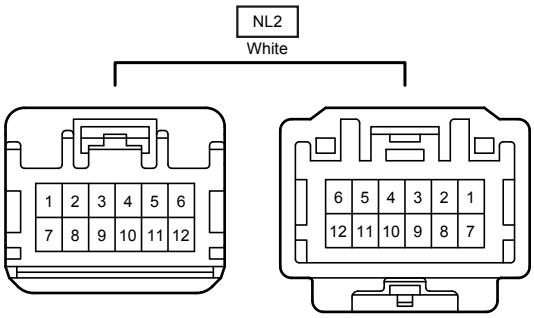
NL2
White

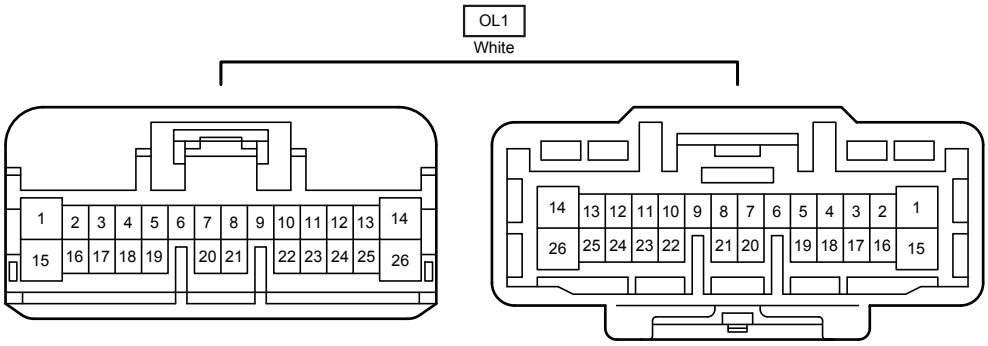
OL1
White

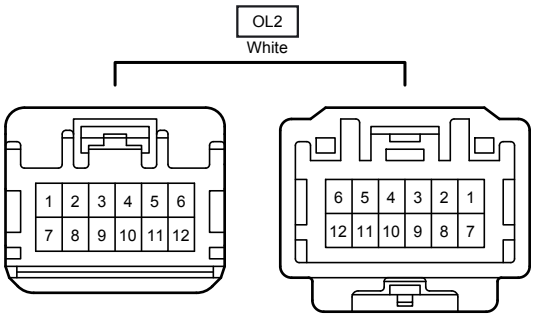
OL2
White
1 2 3 4 5 6
7 8 9 10 11 12
6 5 4 3 2 1
12 11 10 9 8 7

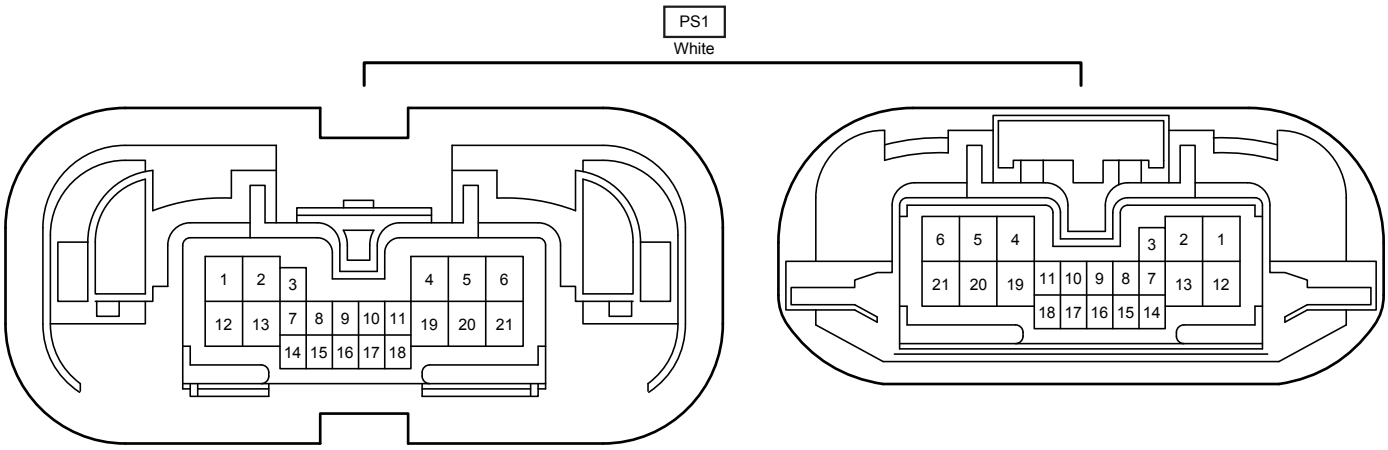
PS1
White
1 2 3 4 5 6
12 13 7 8 9 10 11 19 20 21
14 15 16 17 18
6 5 4 3 2 1
21 20 19 11 10 9 8 7 13 12
18 17 16 15 14

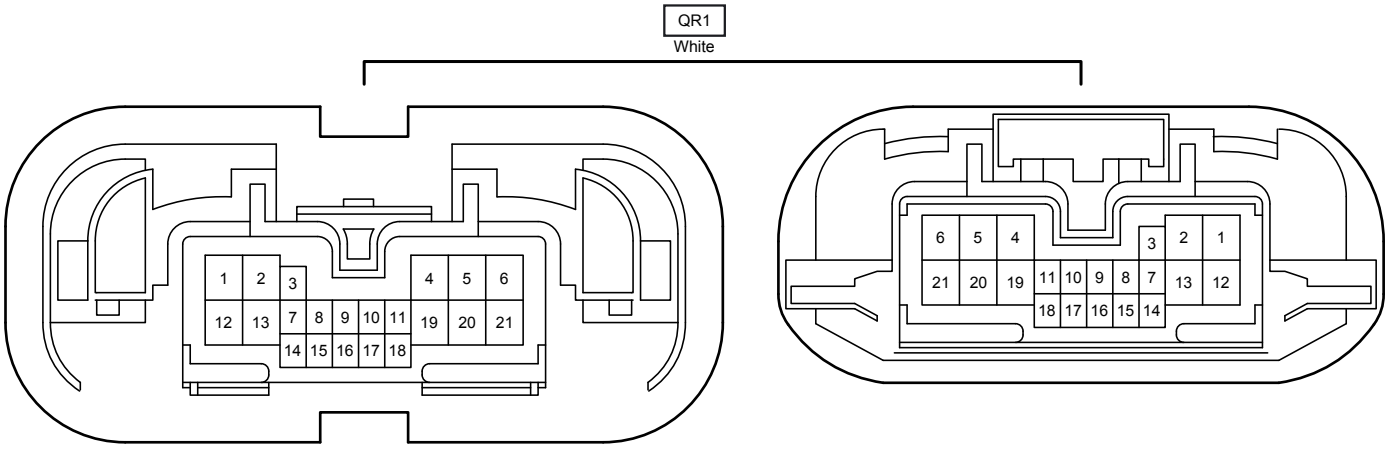
QR1
White
1 2 3 4 5 6
12 13 7 8 9 10 11 19 20 21
14 15 16 17 18
6 5 4 3 2 1
21 20 19 11 10 9 8 7 13 12
18 17 16 15 14