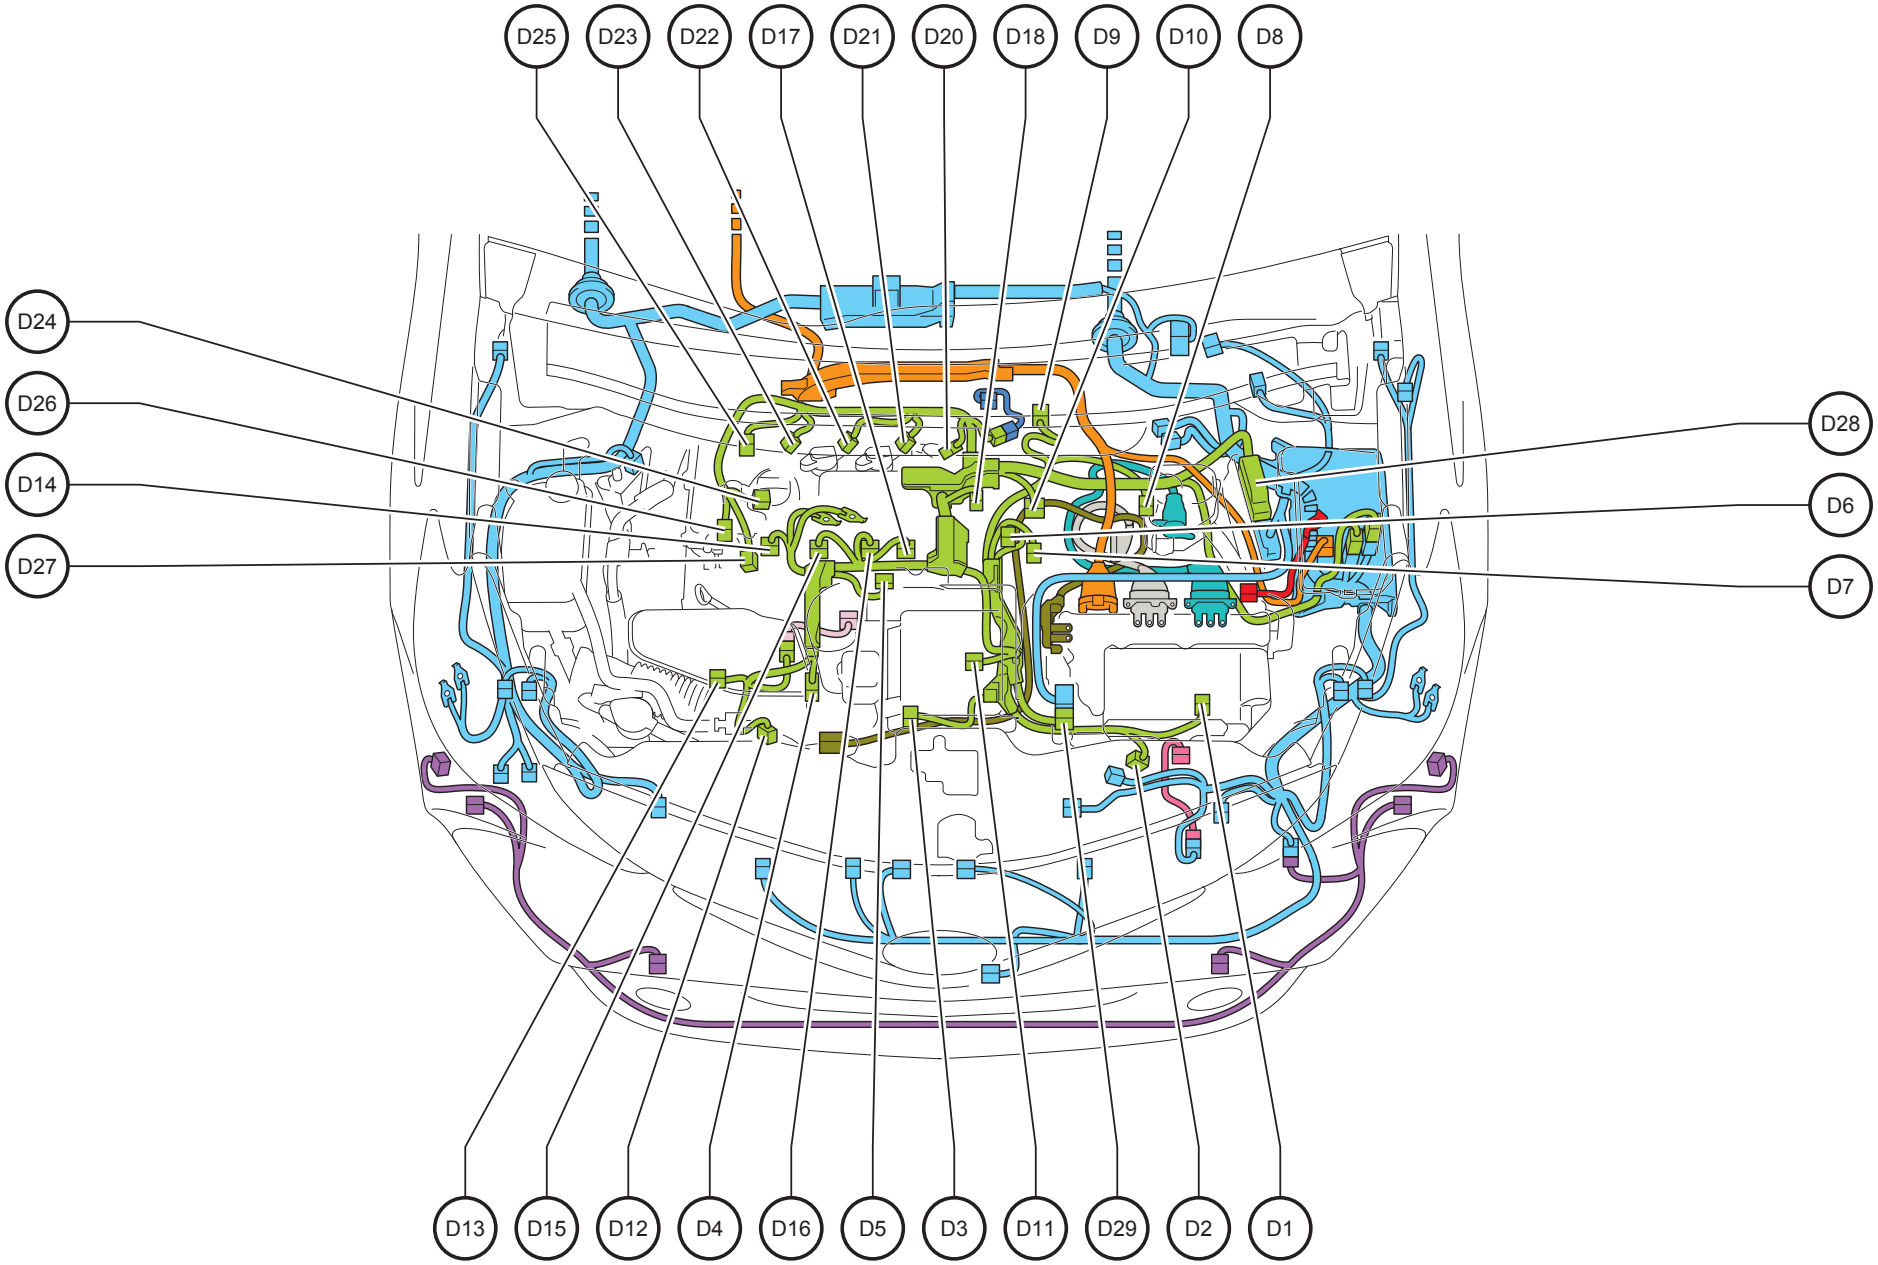
D25
D23
D22
D17
D21
D20
D18
D9
D10
D8
D24
D26
D14
D27
D28
D6
D7
D13
D15
D12
D4
D16
D5
D3
D11
D29
D2
D1

D 1 Hybrid Vehicle Transaxle Assembly
D 2 Shift Control Actuator Assembly
D 3 E.F.I. Vacuum Sensor Assembly
D 4 Throttle Body Assembly
D 5 Intake Mass Air Flow Meter Sub-Assembly
D 6 E.F.I. Engine Coolant Temperature Sensor
D 7 Hybrid Vehicle Transaxle Assembly
D 8 Hybrid Vehicle Transaxle Assembly
D 9 Oxygen Sensor (Bank 1 Sensor 2)
D 10 EGR Valve Assembly
D 11 Purge VSV
D 12 Compressor with Motor Assembly
D 13 Engine Water Pump Assembly
D 14 Fuel Injector Assembly No. 1
D 15 Fuel Injector Assembly No. 2
D 16 Fuel Injector Assembly No. 3
D 17 Fuel Injector Assembly No. 4
D 18 No. 1 Crank Position Sensor
D 20 Ignition Coil Assembly No. 4
D 21 Ignition Coil Assembly No. 3
D 22 Ignition Coil Assembly No. 2
D 23 Ignition Coil Assembly No. 1
D 24 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
D 25 Camshaft Timing Oil Control Valve Assembly
D 26 Engine Oil Pressure Switch Assembly
D 27 Crankshaft Position Sensor
D 28 ECM
D 29 Inverter with Converter Assembly

D 1
Black

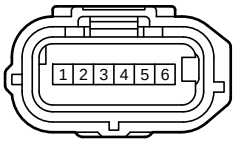

D 2
Black

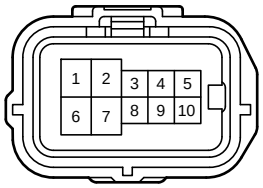

D 3
Black



D 4
Black

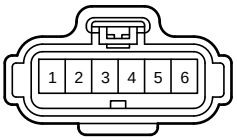

D 5
Black

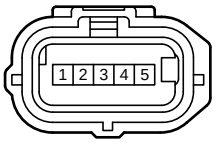

D 6
Black

D 7
Gray

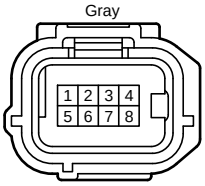

D 8
Black

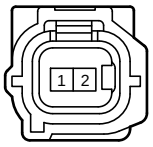

D 9
Gray

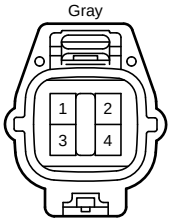

D 10
Black

D 11
Black

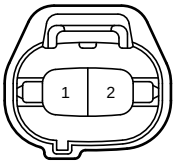

D 12
Black

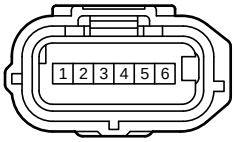

D 13
Black

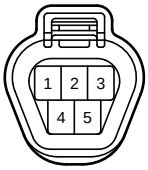

D 14
Black



D 15
Gray

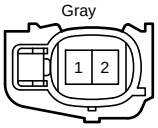

D 16
Black



D 17
Gray



D 18
Black

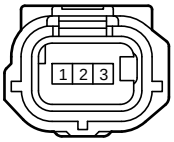

D 20
Gray

D 21
Black



D 22
Gray

D 23
Black



D 24
Dark Gray

D 25
Gray

D 26
Gray

D 27
Black

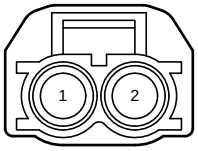

D 28
Black

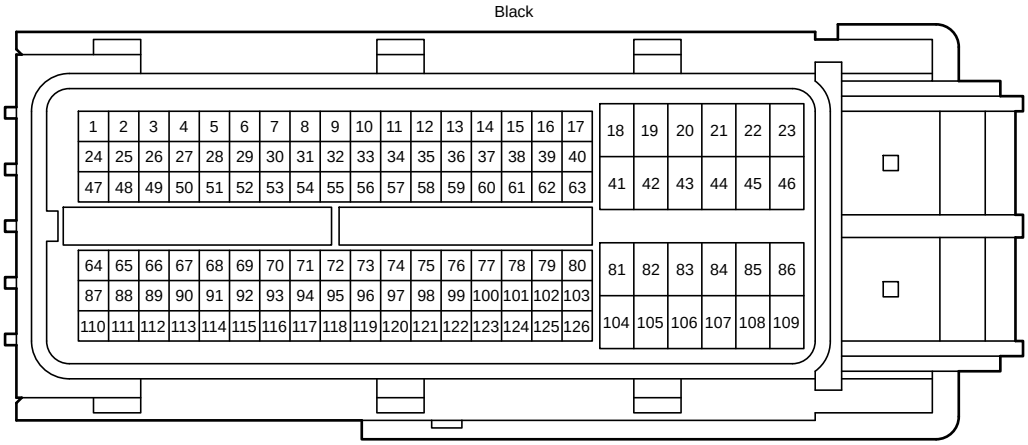
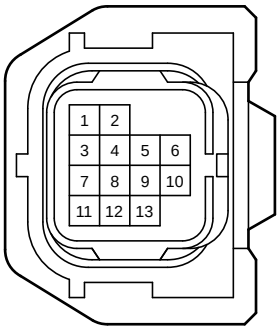
D 29
Black