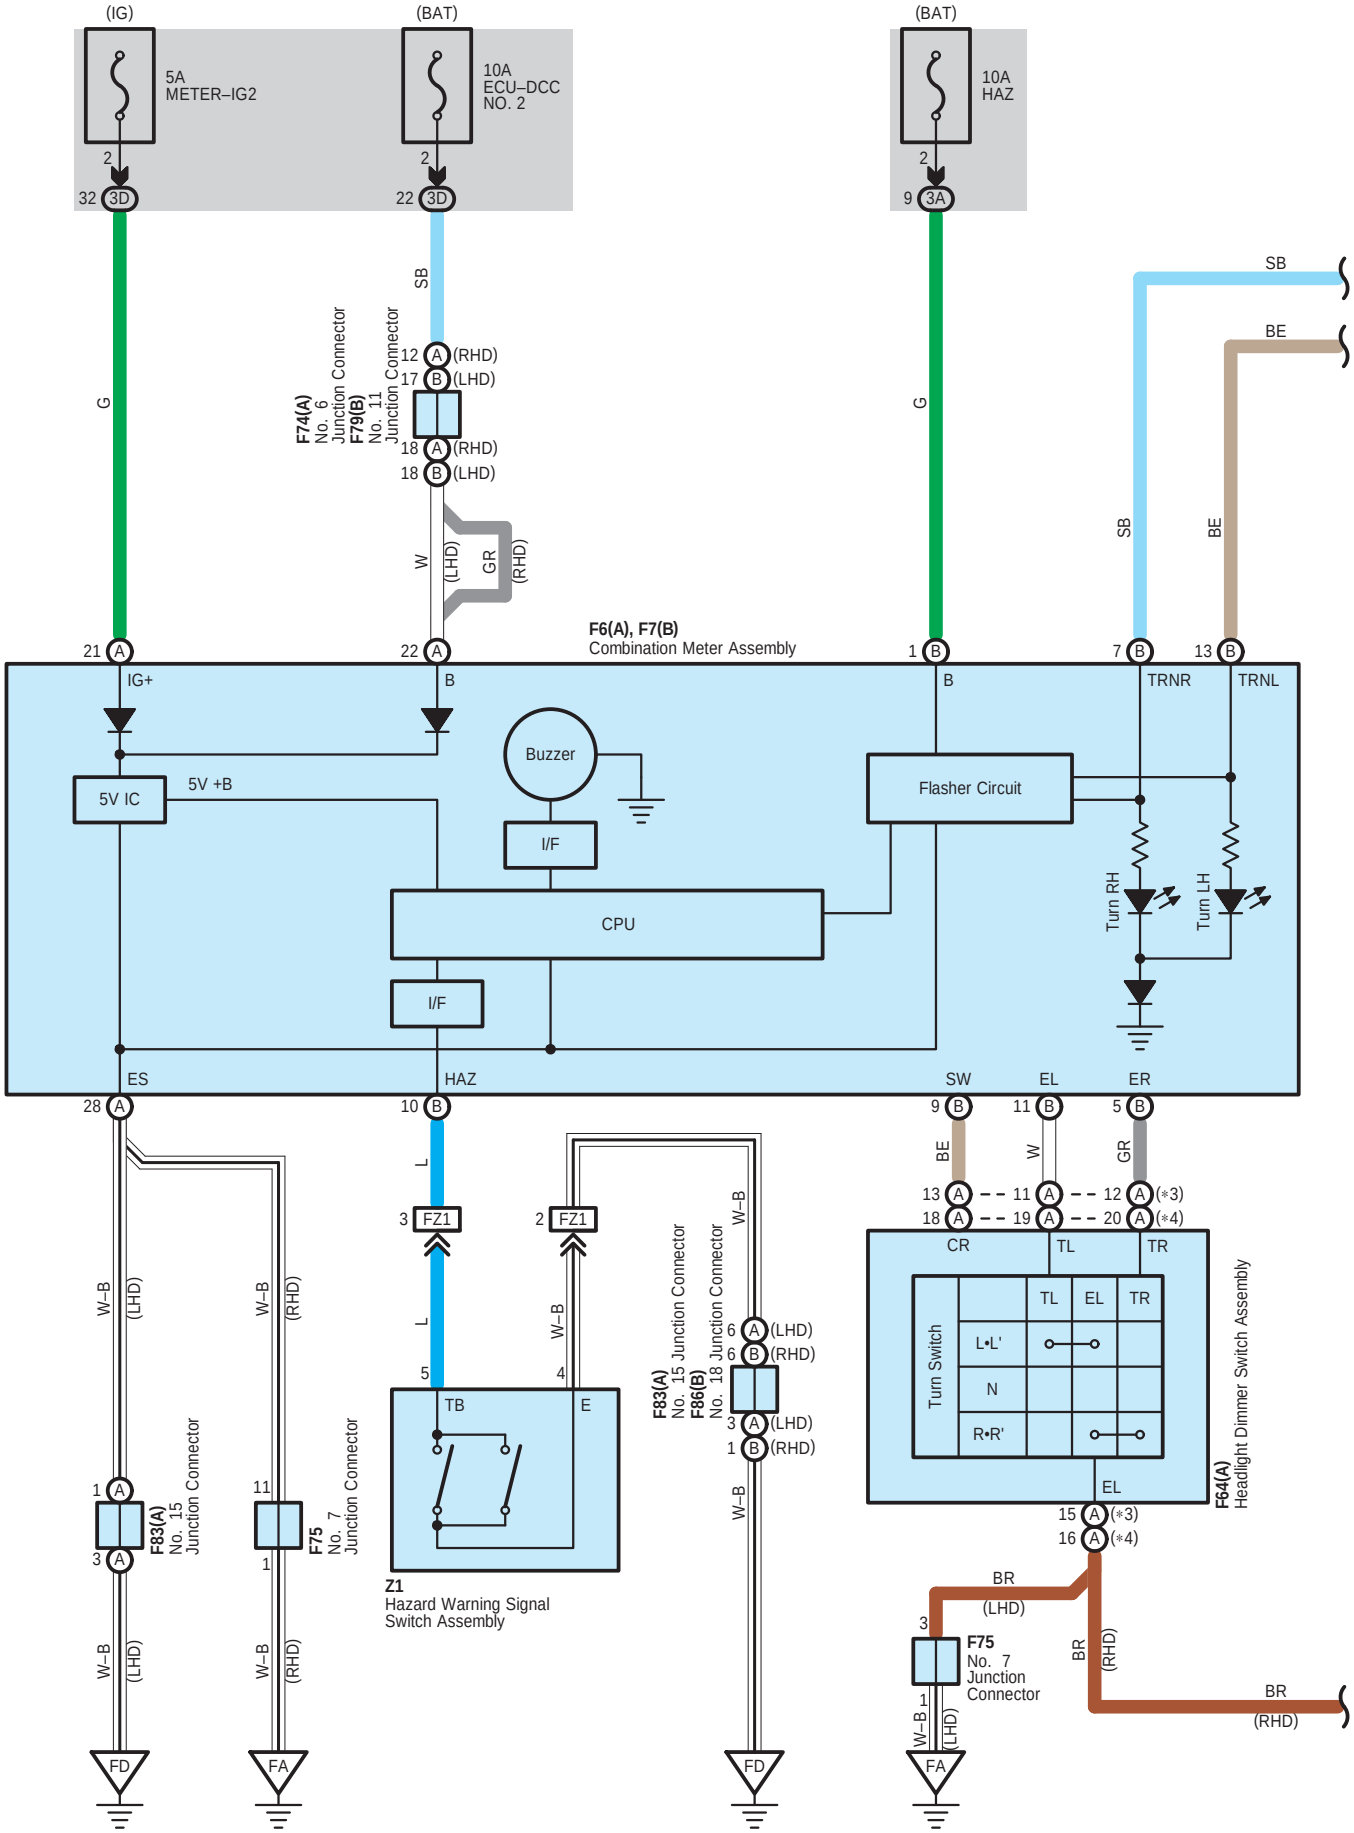
(IG)
5A
METER–IG2
(BAT)
10A
ECU–DCC
NO. 2
(BAT)
10A
HAZ
F74(A)
No. 6
Junction Connector
F79(B)
No. 11
Junction Connector
F6(A), F7(B)
Combination Meter Assembly
IG+
B
5V IC
5V +B
Buzzer
I/F
CPU
I/F
Flasher Circuit
TRNR
TRNL
Turn RH
Turn LH
ES
HAZ
SW
EL
ER
FZ1
TB
E
Z1
Hazard Warning Signal
Switch Assembly
F83(A)
No. 15
Junction Connector
F86(B)
No. 18
Junction Connector
F75
No. 7
Junction Connector
CR
TL
TR
Turn Switch
L•L'
N
R•R'
F64(A)
Headlight Dimmer Switch Assembly
FD
FA

∗ 3 : LHD, RHD U. K.
∗ 4 : RHD Except U. K.

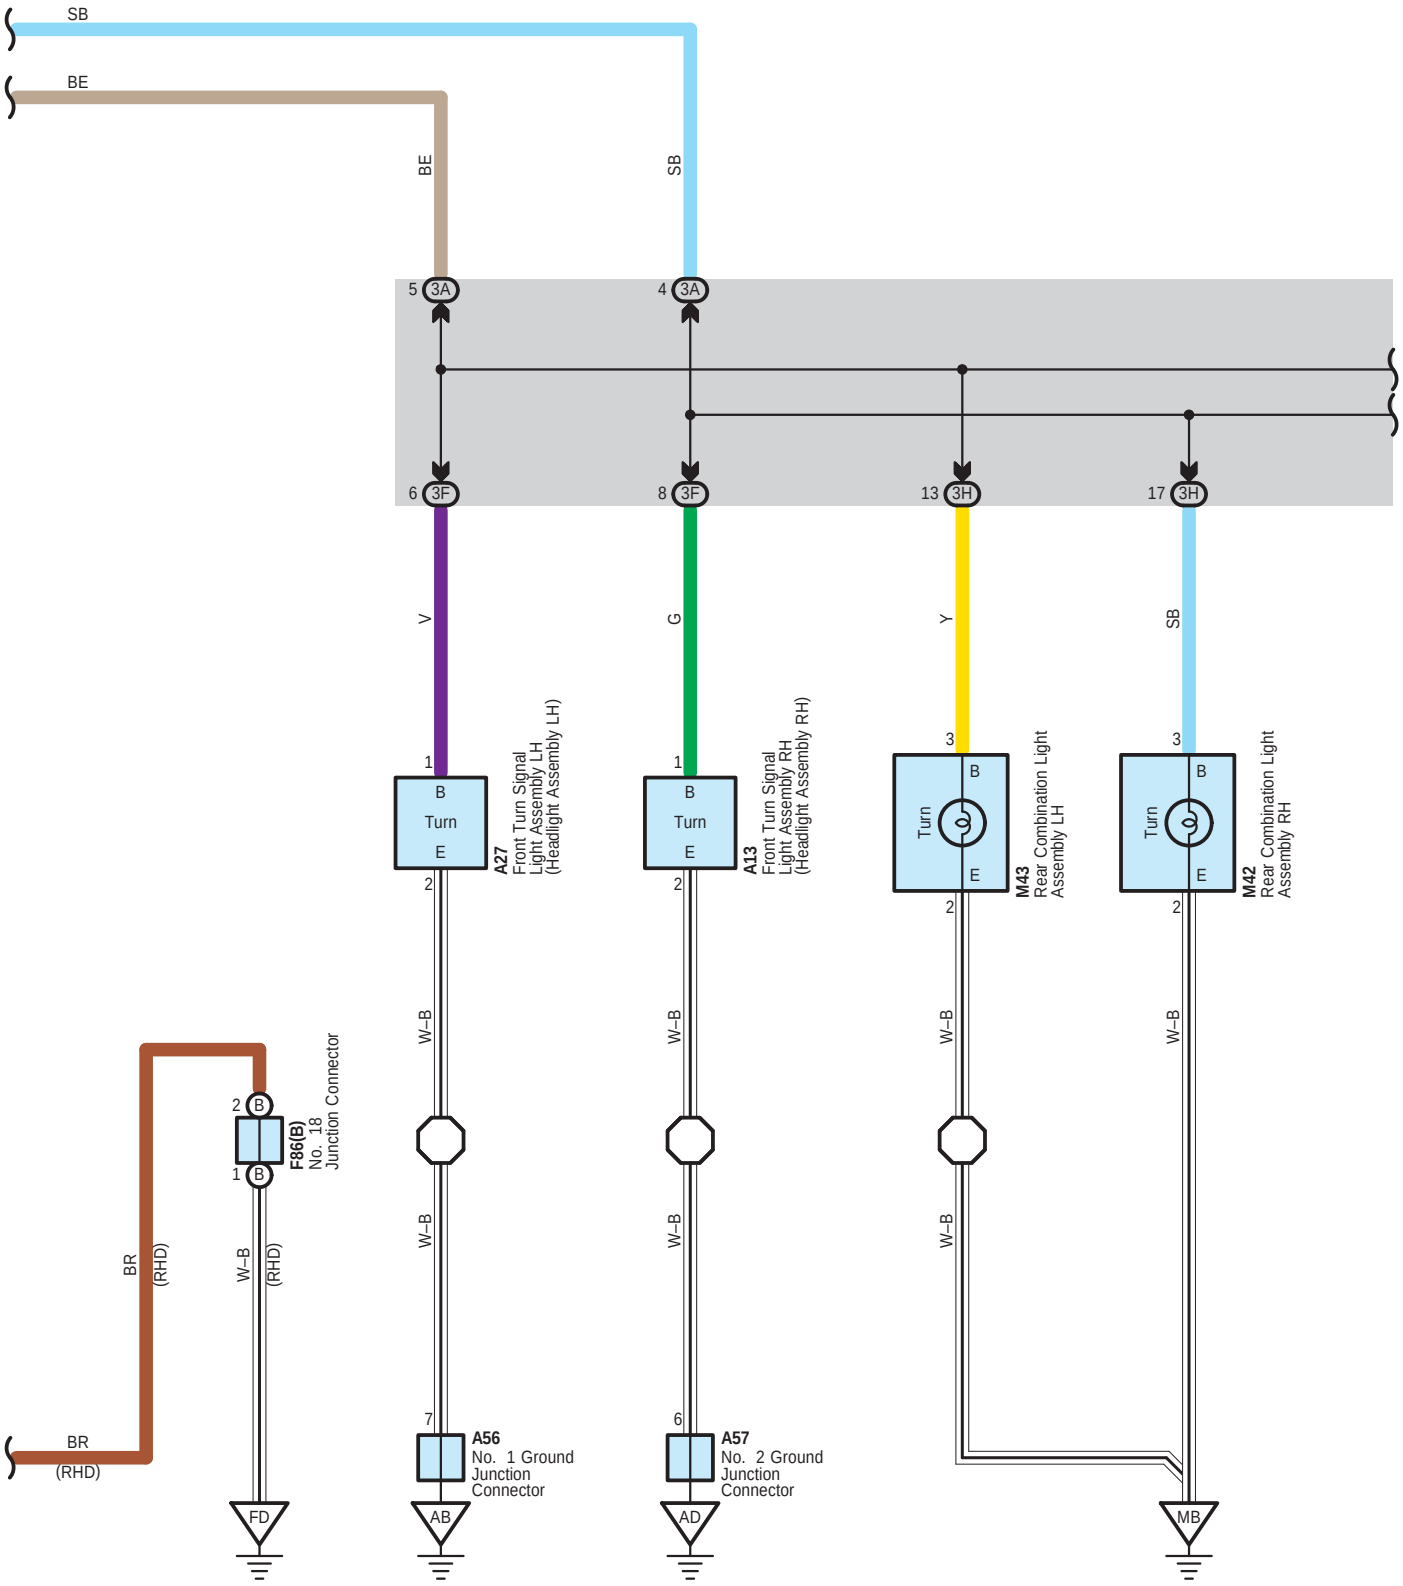

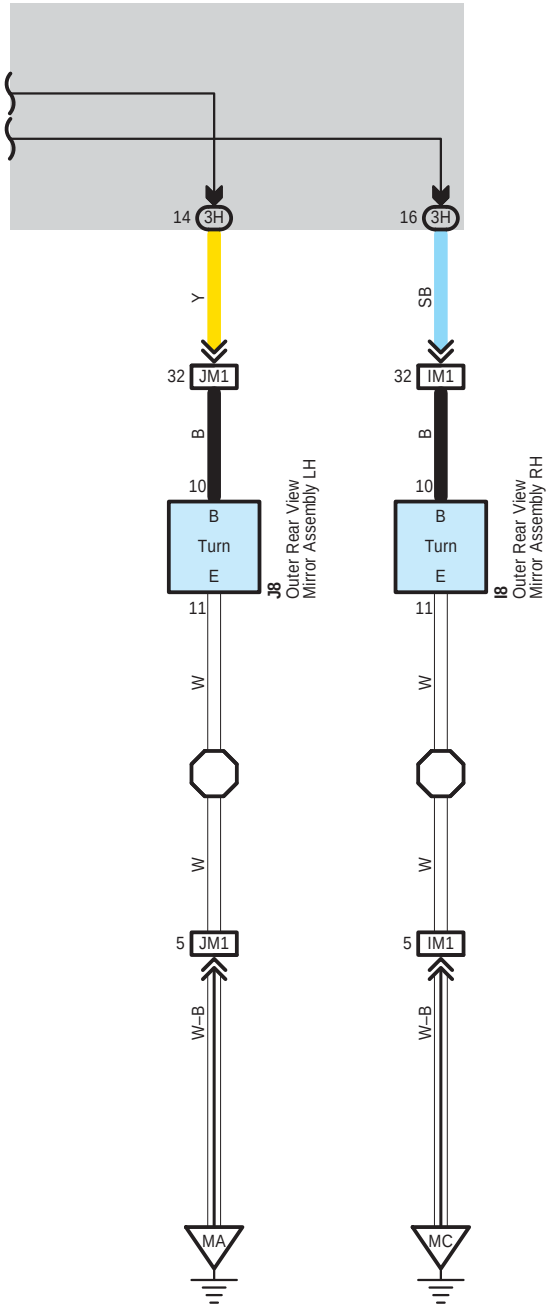
14
3H
16
3H
Y
SB
32
JM1
32
IM1
B
B
10
10
B
Turn
E
J8
Outer Rear View
Mirror Assembly LH
B
Turn
E
I8
Outer Rear View
Mirror Assembly RH
11
11
W
W
W
W
5
JM1
5
IM1
W–B
W–B
MA
MC

A13
Gray

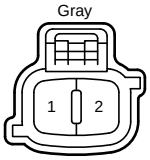

90980-11019

A27
Gray

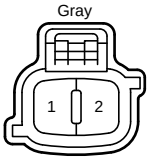

90980-11019

A56
Black

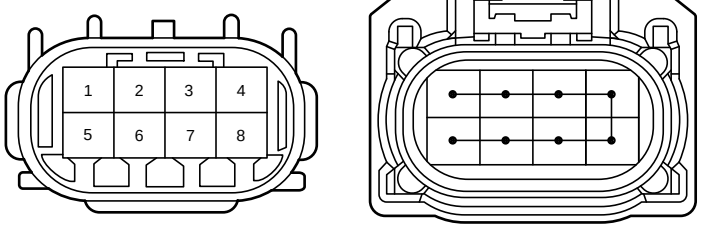

90980-12B56

A57
Black

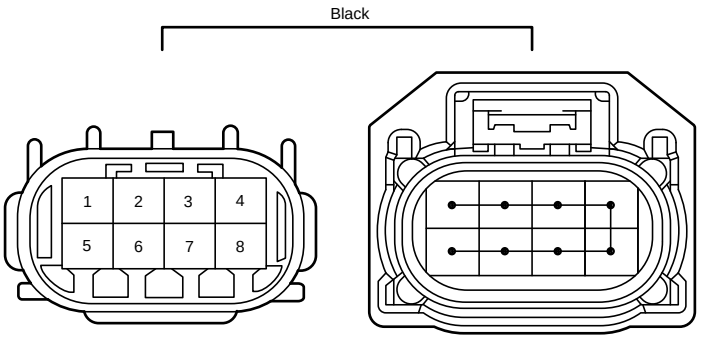

90980-12B56

F6
Black

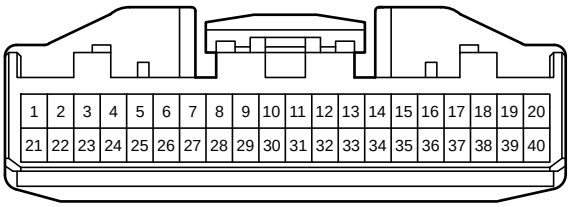

90980-12557

F7
Black

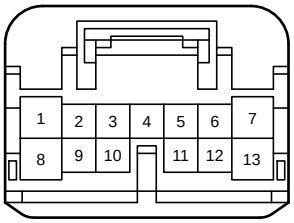

90980-12767

F64
White

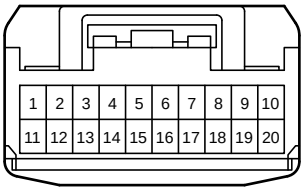

90980-12460

F74
Gray

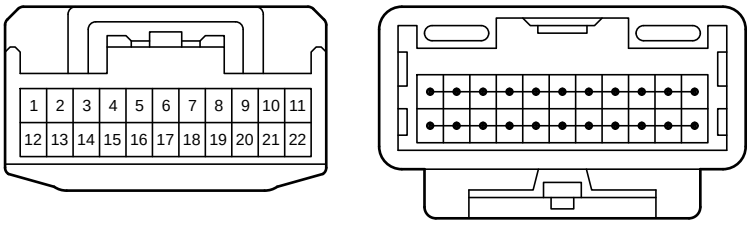

90980-12372
(RHD)

F74

White

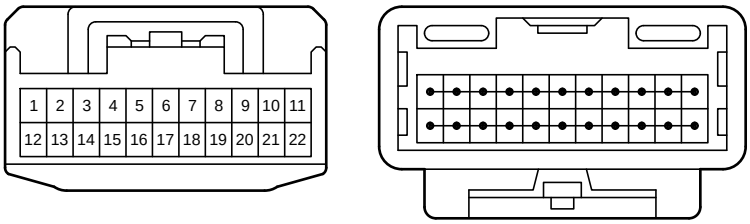

90980-12372
(LHD)

F75

Gray

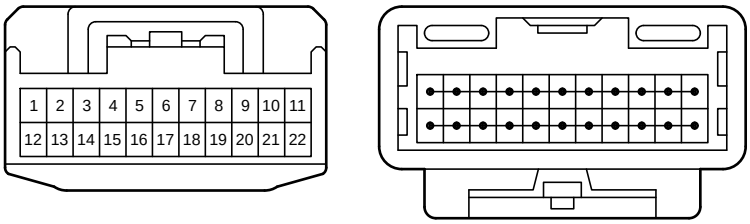

90980-12372

F79

White

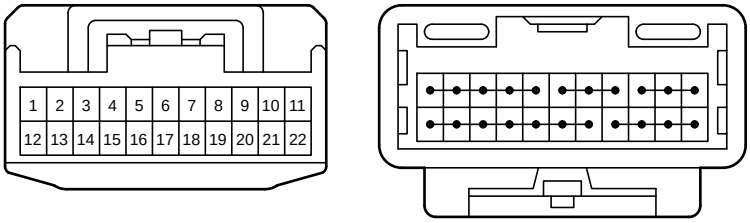

90980-12372

F83

Gray

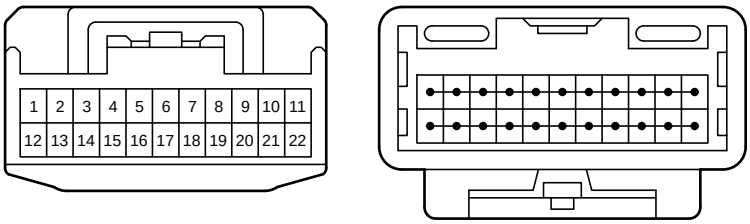

90980-12372

F86
Blue

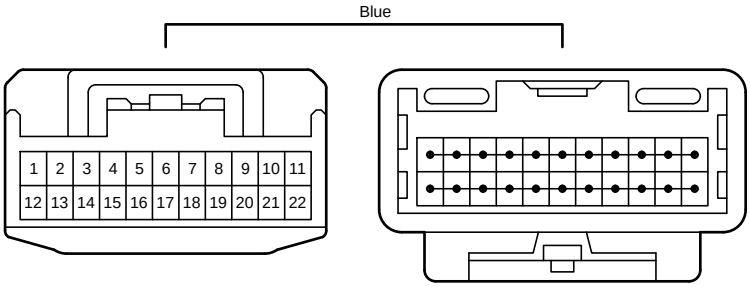

90980-12372

I8
White

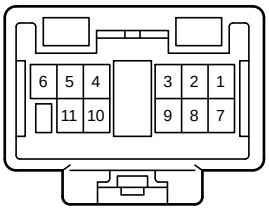

90980-12610

J8
White

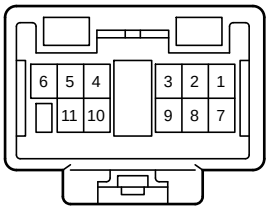

90980-12610

M42
White



90980-10794

M43
White



90980-10794

Z1
White

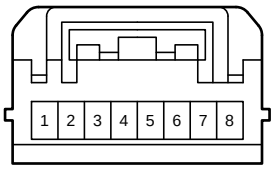

90980-12550

3A
White

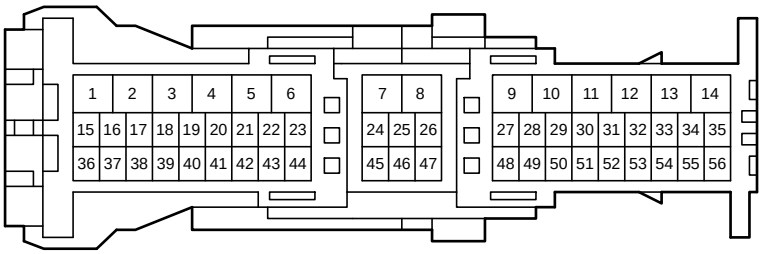

90980-12943

3D
White

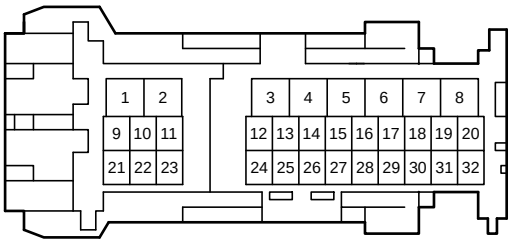

90980-12A48

3F
White

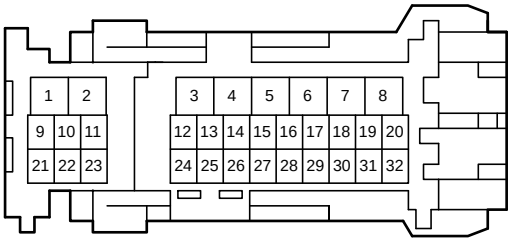

90980-12A47

3H
White

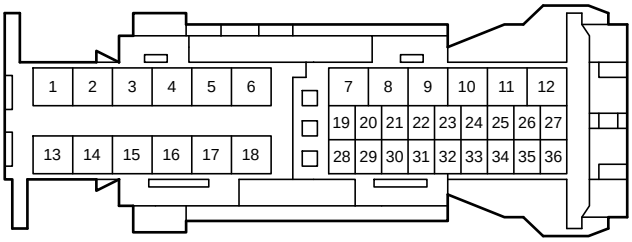

90980-12944

FZ1
White

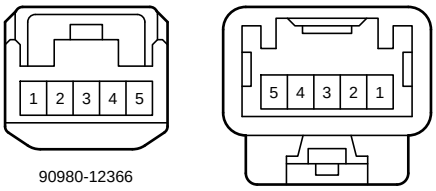

90980-12366

90980-12365

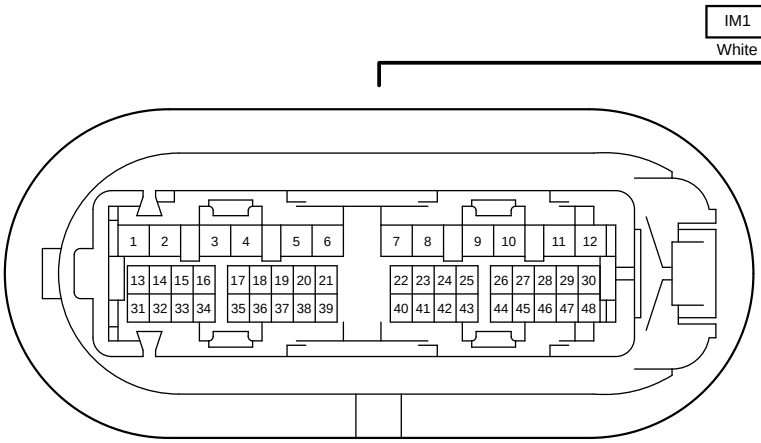

90980-12A09

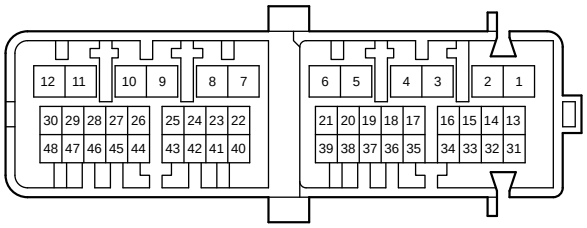

90980-12A06

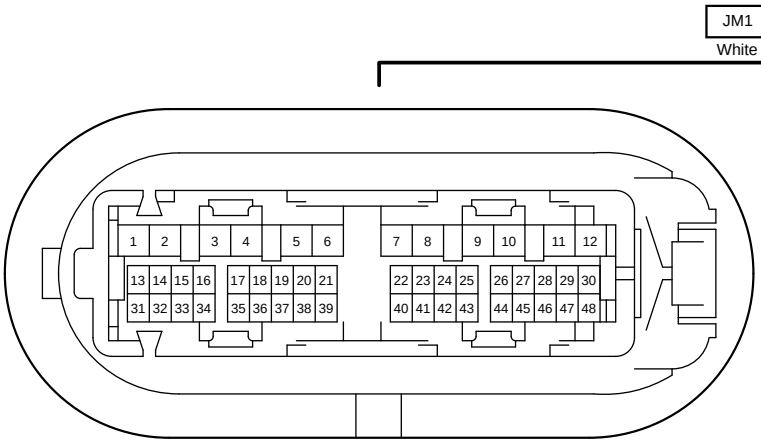

90980-12A09

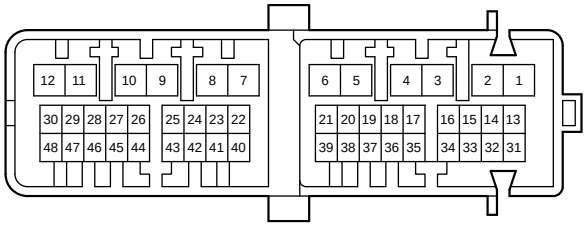

90980-12A06