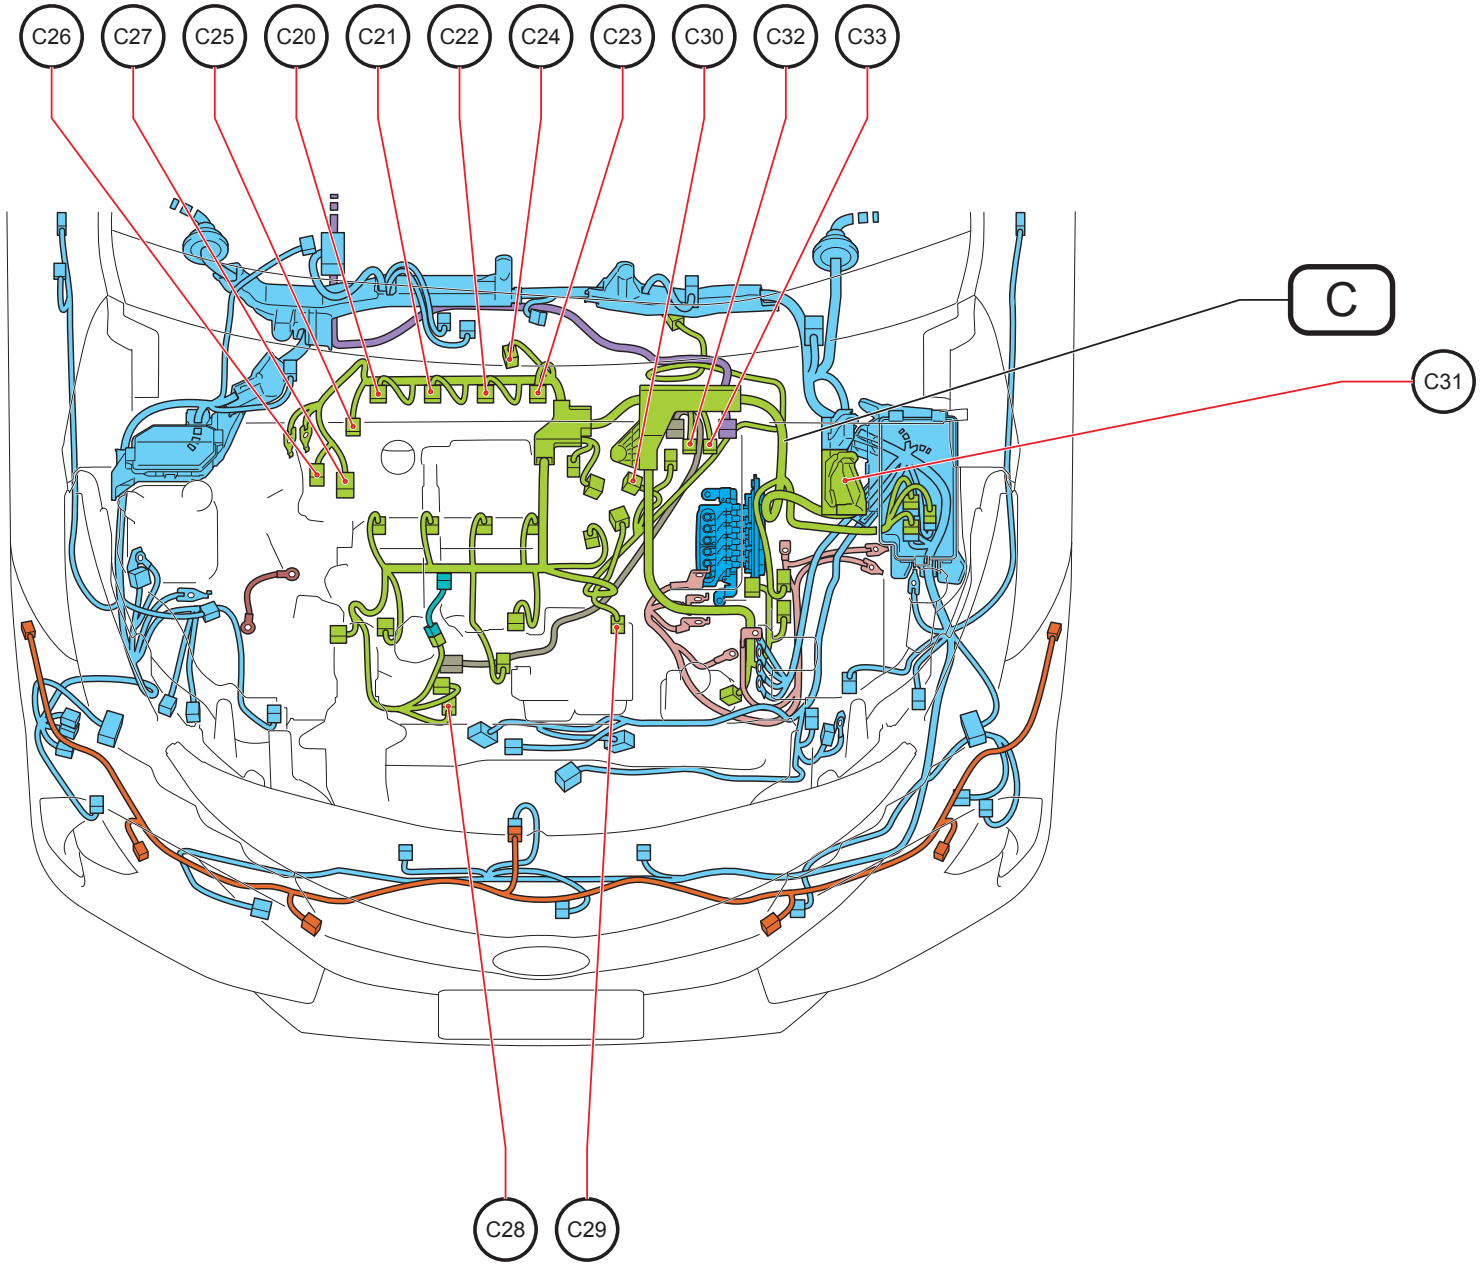
C26
C27
C25
C20
C21
C22
C24
C23
C30
C32
C33
C
C31
C28
C29

C20 Ignition Coil Assembly No. 1
C21 Ignition Coil Assembly No. 2
C22 Ignition Coil Assembly No. 3
C23 Ignition Coil Assembly No. 4
C24 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C25 Camshaft Timing Oil Control Valve Assembly
C26 Engine Oil Pressure Switch Assembly
C27 Crank Position Sensor
C28 Engine Oil Level Sensor
C29 Engine Coolant Temperature Sensor
C30 Water Valve
C31 ECM
C32 Inverter with Converter Assembly
C33 Inverter with Converter Assembly

C20
Black



90980-12A29

C21
Gray

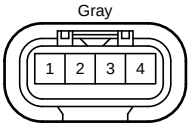

90980-12A29

C22
Black



90980-12A29

C23
Gray

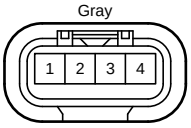

90980-12A29

C24
Gray

90980-10869

C25
Black

90980-11162

C26
Gray

90980-11363

C27
Black

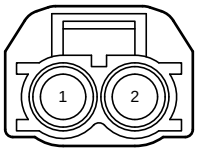

90980-12611

C28
Black

90980-11166

C29
Black

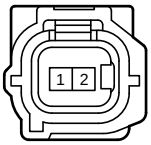

90980-12416

C30
Gray

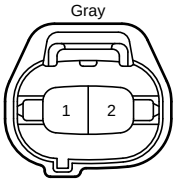

90980-11156

C31
Black

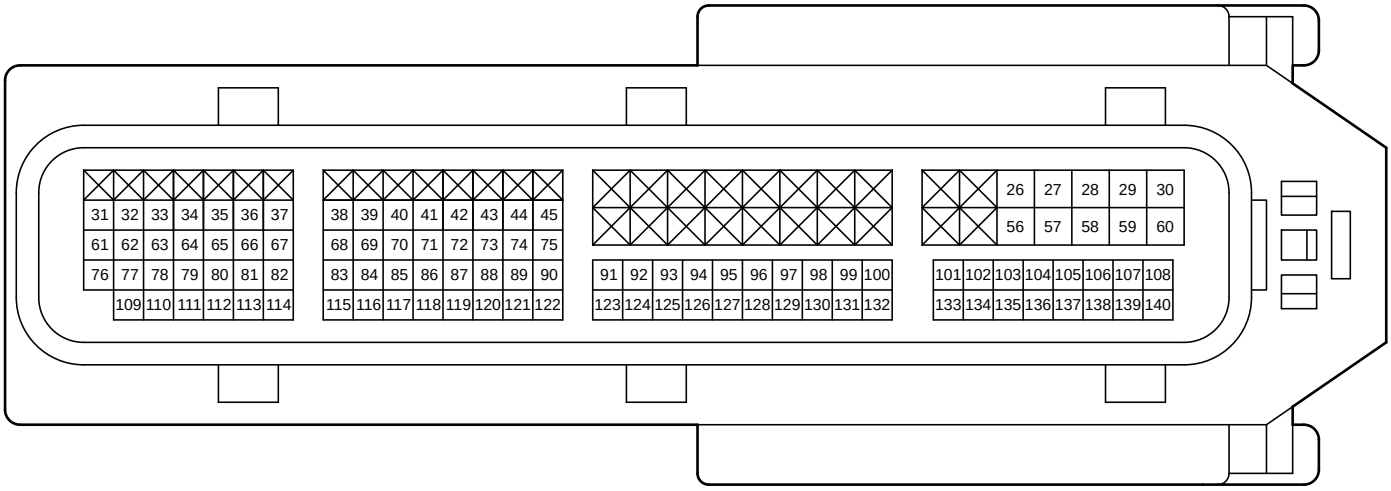

90980-12A39

C32

Black

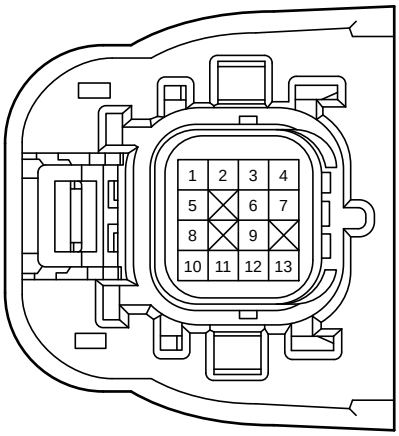

90980-12B85

C33

Black

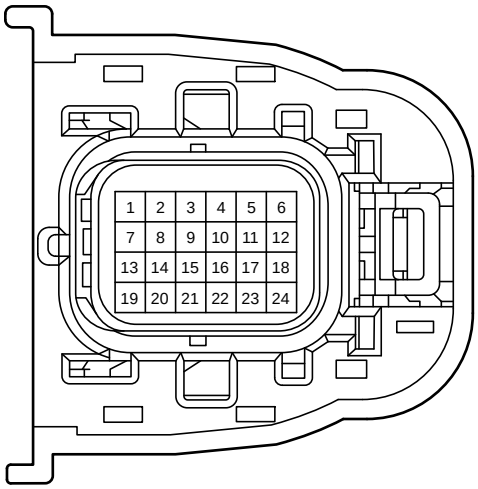

90980-12B86