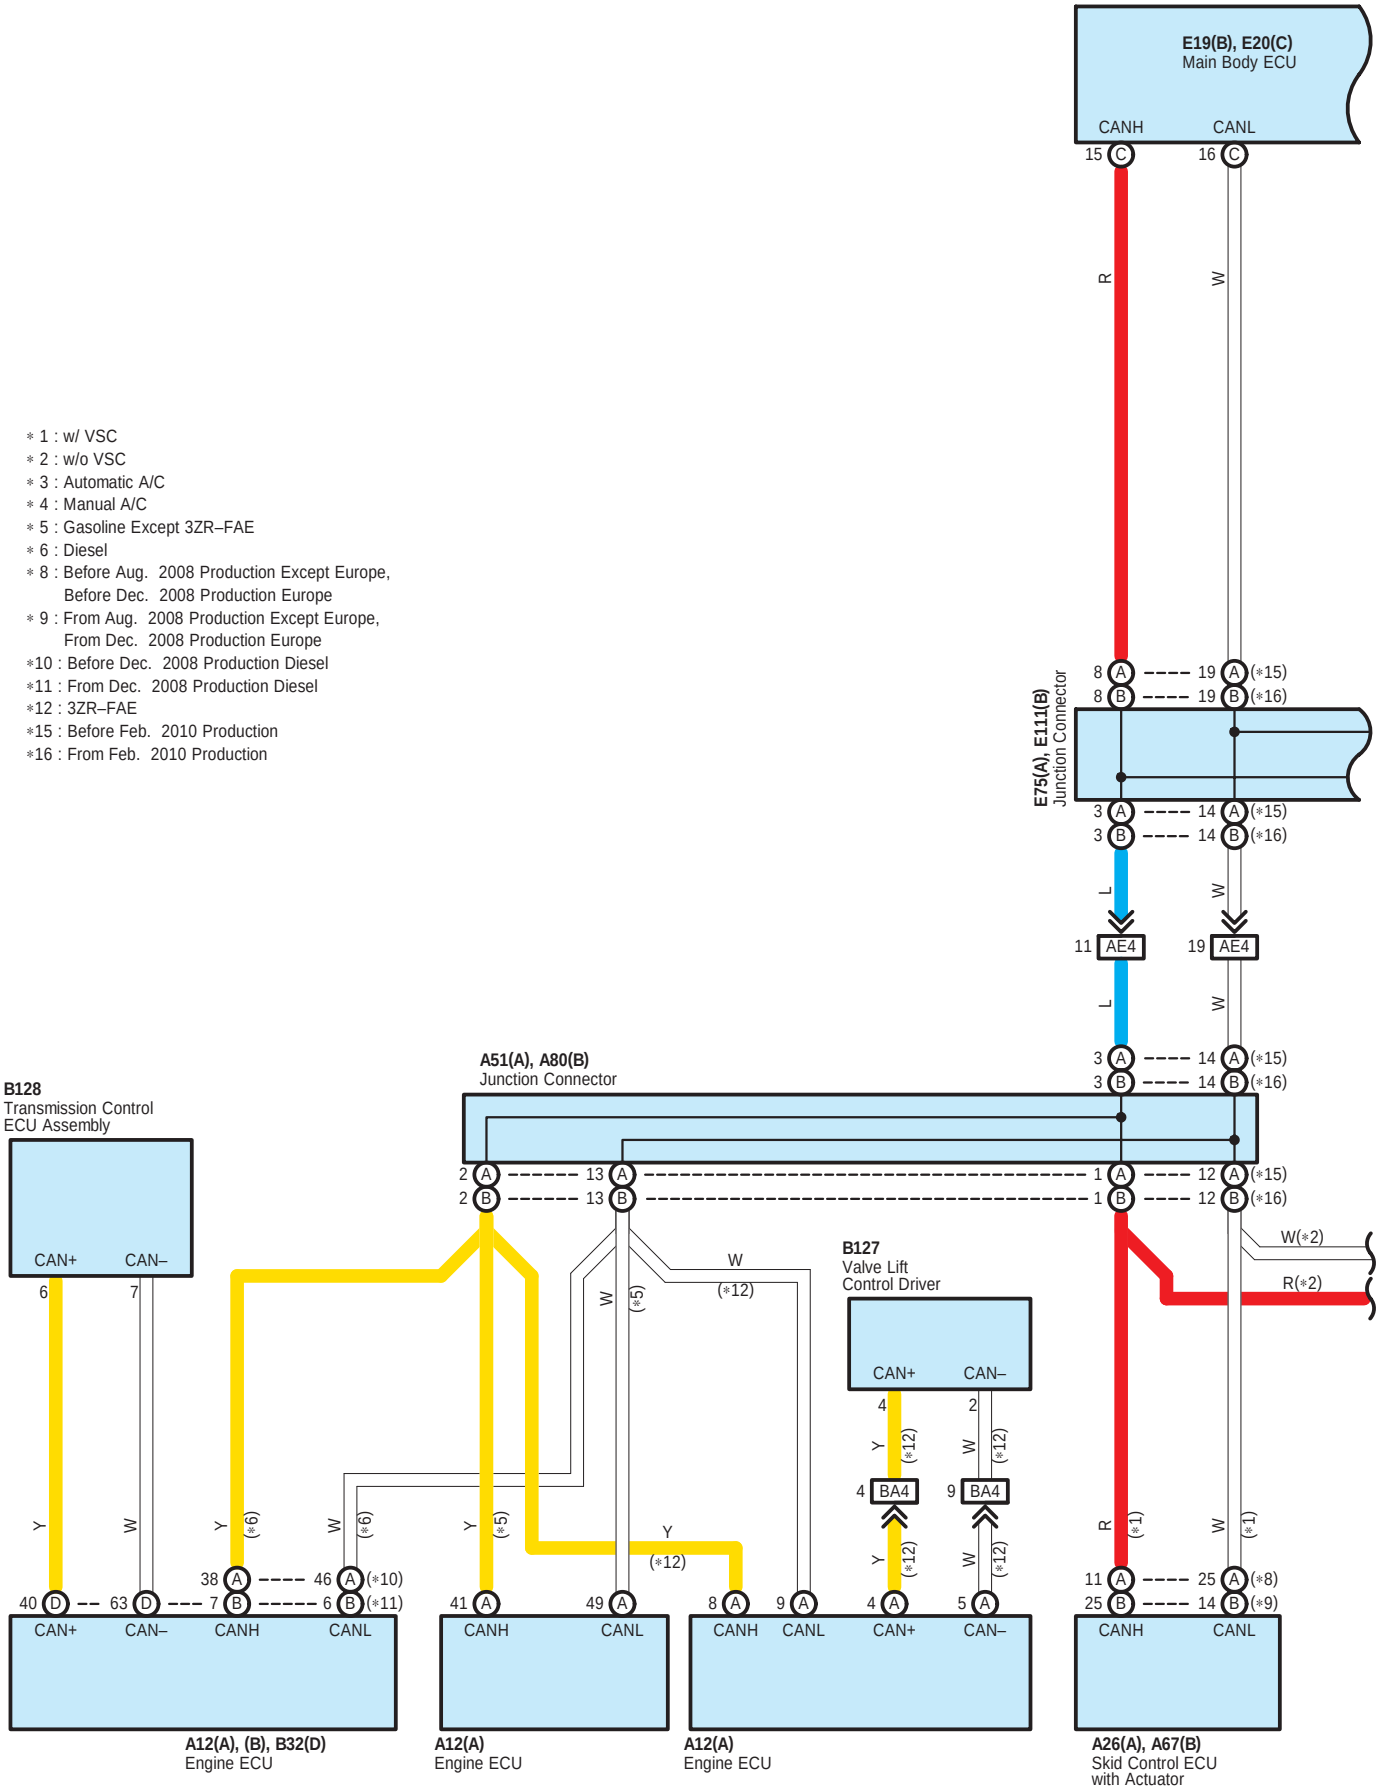
∗ 1 : w/ VSC
∗ 2 : w/o VSC
∗ 3 : Automatic A/C
∗ 4 : Manual A/C
∗ 5 : Gasoline Except 3ZR–FAE
∗ 6 : Diesel
∗ 8 : Before Aug. 2008 Production Except Europe, Before Dec. 2008 Production Europe
∗ 9 : From Aug. 2008 Production Except Europe, From Dec. 2008 Production Europe
∗10 : Before Dec. 2008 Production Diesel
∗11 : From Dec. 2008 Production Diesel
∗12 : 3ZR–FAE
∗15 : Before Feb. 2010 Production
∗16 : From Feb. 2010 Production
E19(B), E20(C)
Main Body ECU
CANH
CANL
E75(A), E111(B)
Junction Connector
AE4
A51(A), A80(B)
Junction Connector
B128
Transmission Control ECU Assembly
CAN+
CAN–
B127
Valve Lift Control Driver
BA4
W(∗2)
R(∗2)
A12(A), (B), B32(D)
Engine ECU
A12(A)
Engine ECU
A12(A)
Engine ECU
A26(A), A67(B)
Skid Control ECU with Actuator

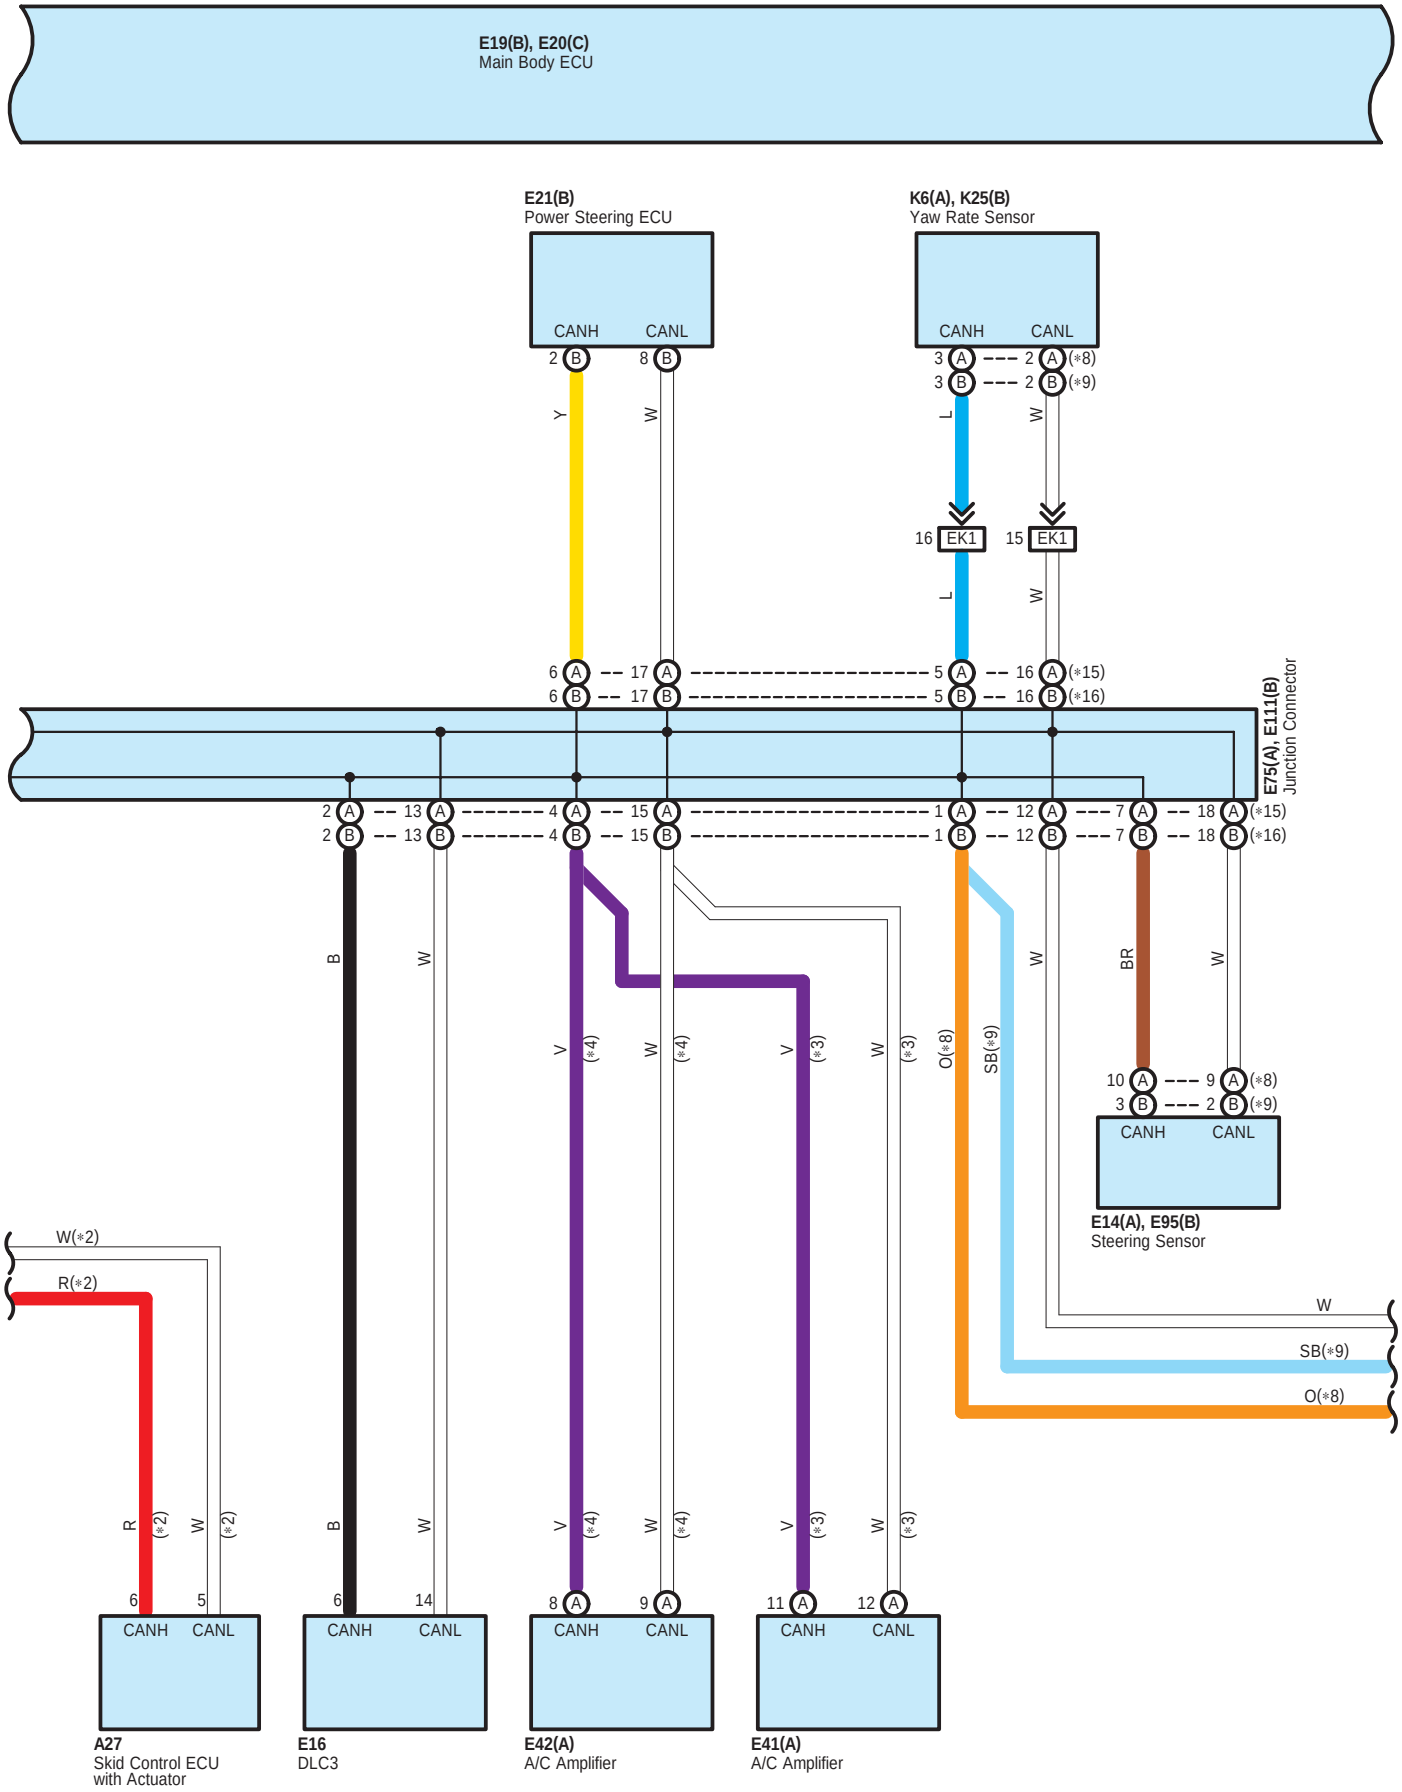
E19(B), E20(C)
Main Body ECU
E21(B)
Power Steering ECU
K6(A), K25(B)
Yaw Rate Sensor
CANH
CANL
EK1
E75(A), E111(B)
Junction Connector
E14(A), E95(B)
Steering Sensor
W(*2)
R(*2)
A27
Skid Control ECU
with Actuator
E16
DLC3
E42(A)
A/C Amplifier
E41(A)
A/C Amplifier

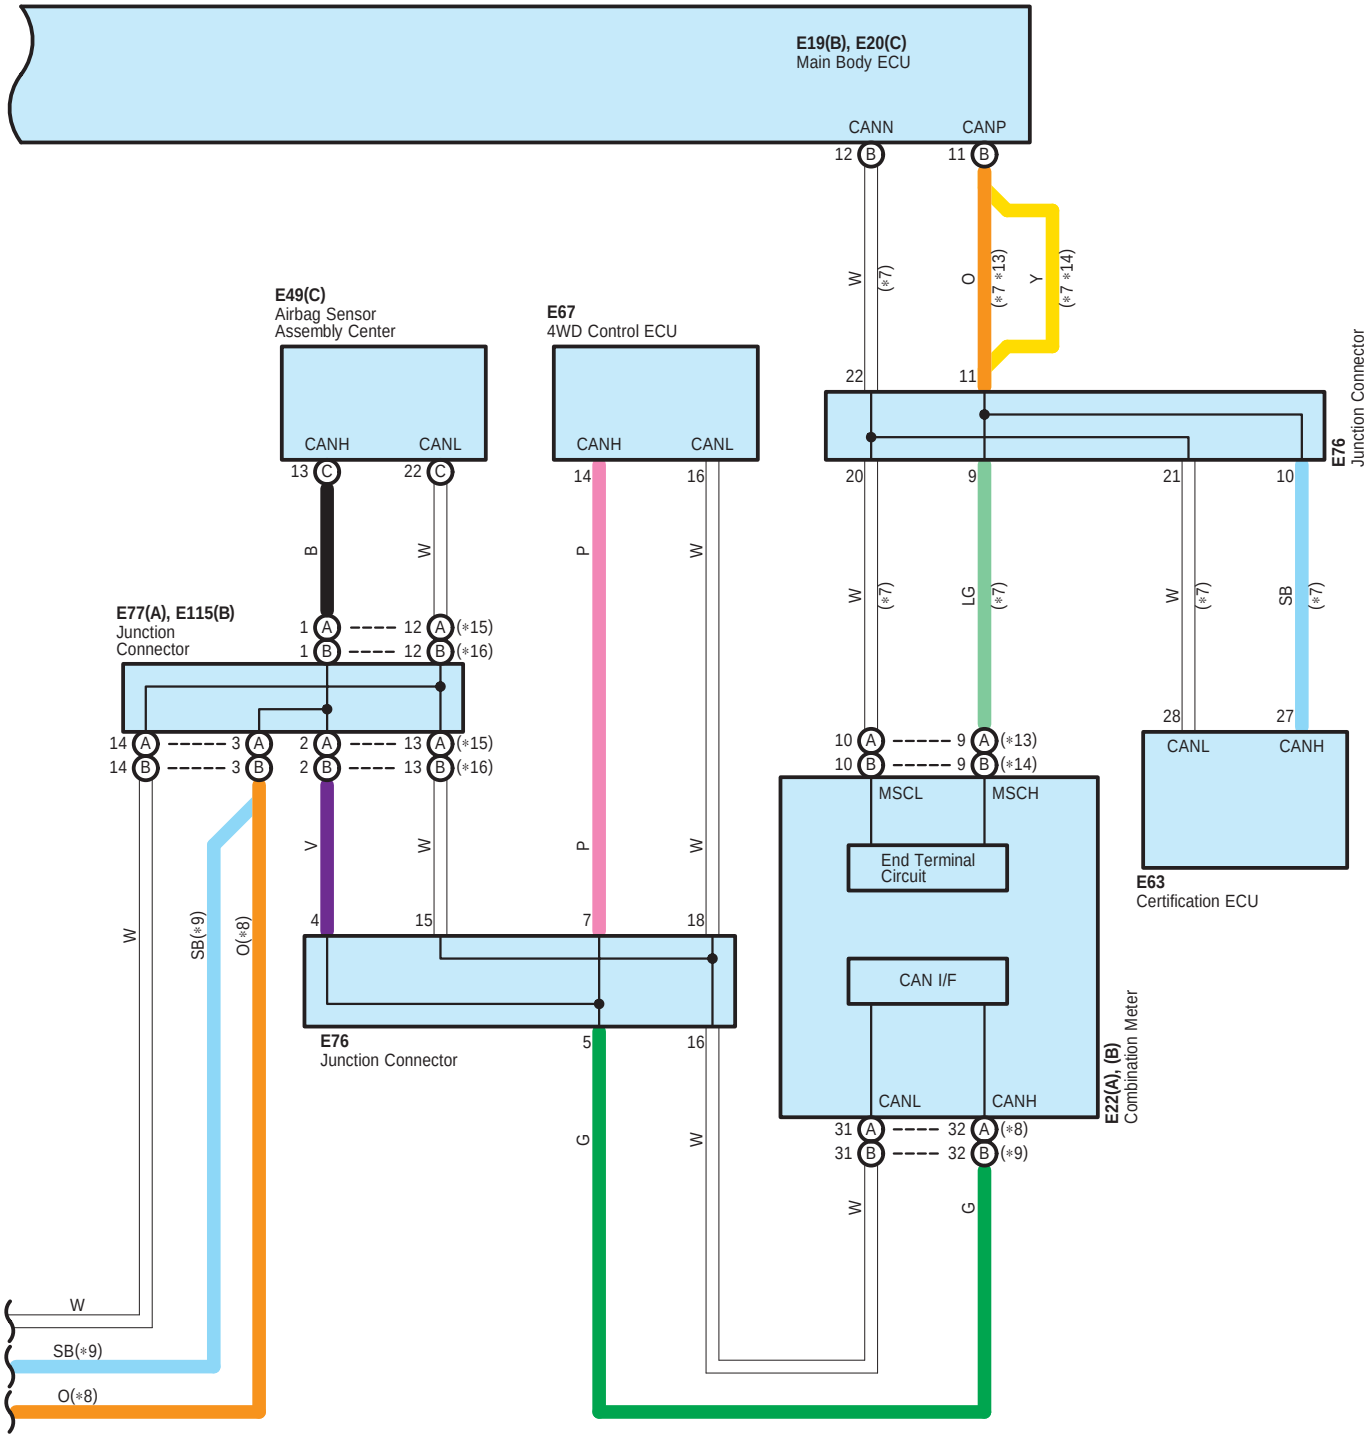

∗ 7 : w/ Entry & Start System
∗ 8 : Before Aug. 2008 Production Except Europe,
Before Dec. 2008 Production Europe
∗ 9 : From Aug. 2008 Production Except Europe,
From Dec. 2008 Production Europe
∗13 : Before Dec. 2008 Production Europe
∗14 : From Dec. 2008 Production Europe
∗15 : Before Feb. 2010 Production
∗16 : From Feb. 2010 Production

A 12
Black

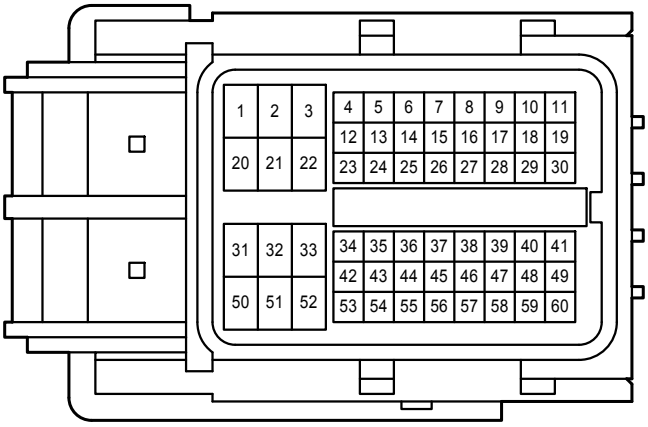

A 26
Black

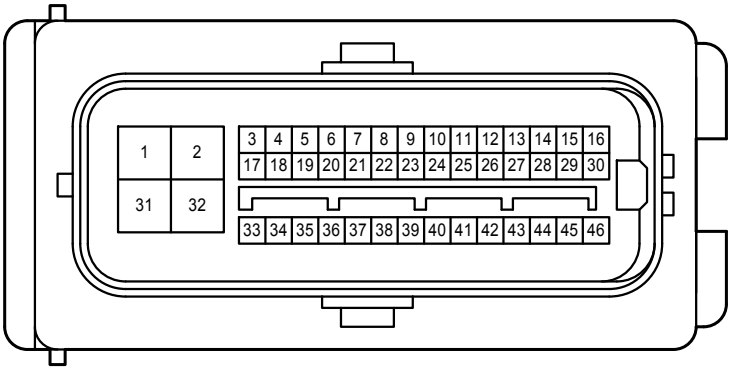

A 27
Black

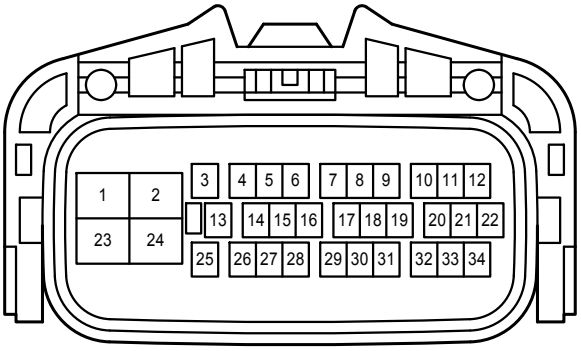

A 51
Gray

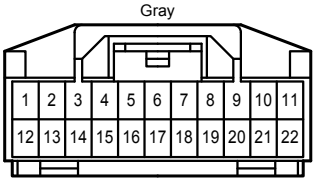

A 67
Black

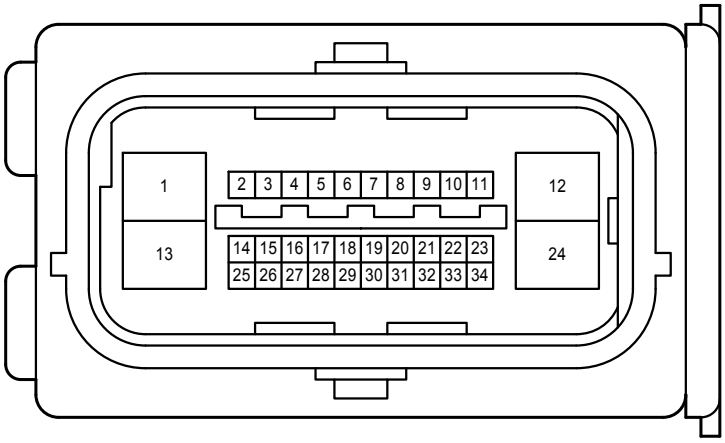

A 80
Gray

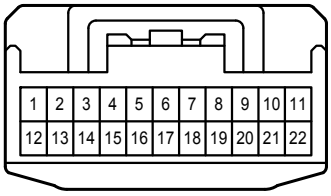

B 32
Black

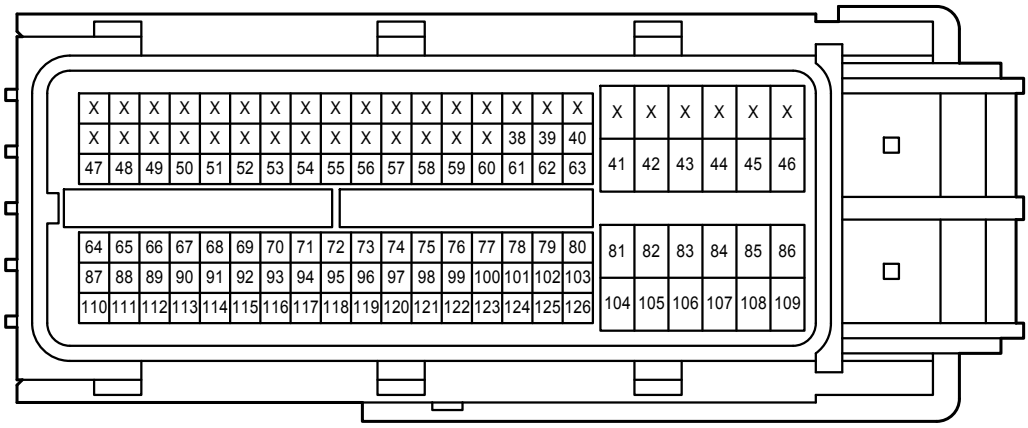

B127
Gray

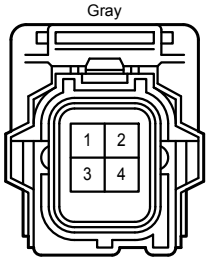

B128
Gray

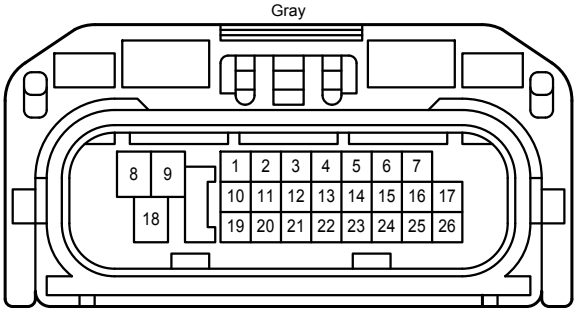

E 14
Gray

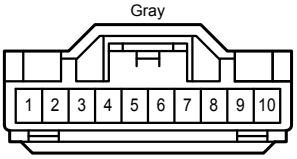

E 16
White

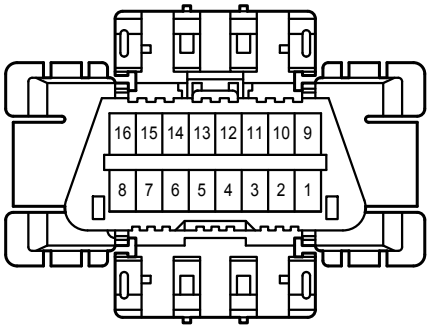

E 19
White

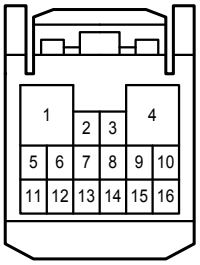

E 20
White

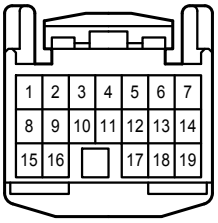

E 21
White

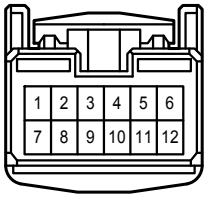

E 22
White

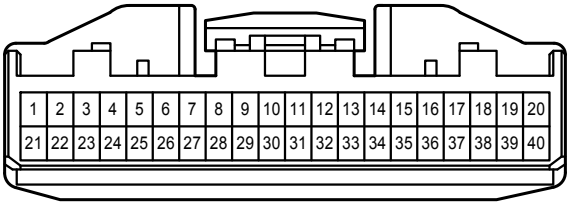

E 41
White

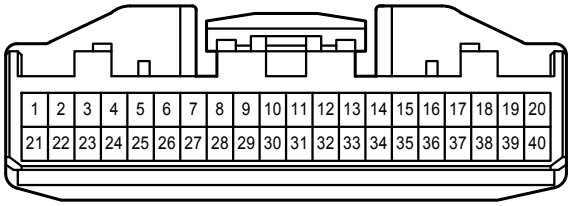

E 42
White

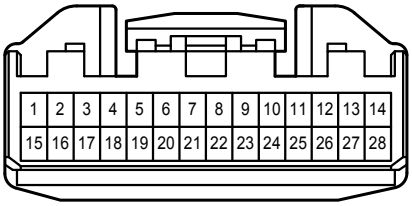

E 49
Yellow

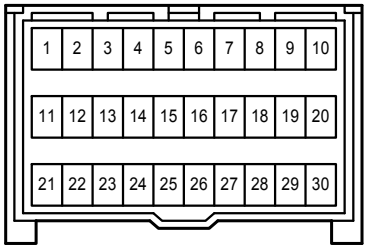

E 63
White

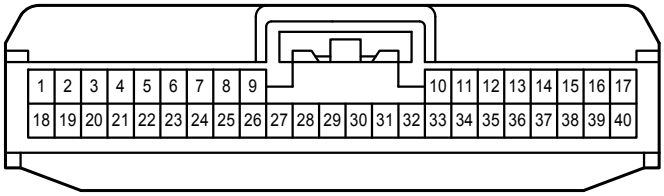

E 67
White

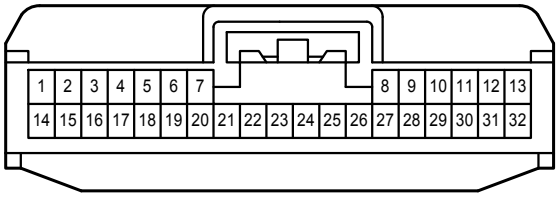

E 75
Gray

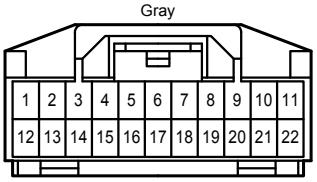

E 76
Black

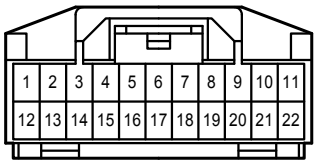

E 77
Gray

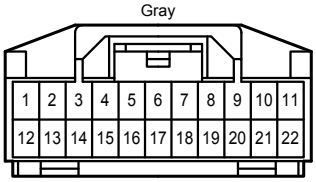

E 95
White

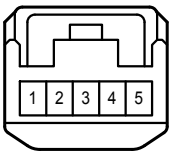

E111
Gray

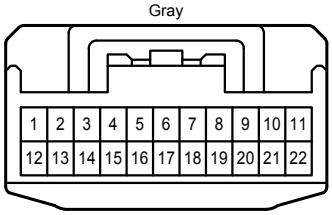

E115
Gray

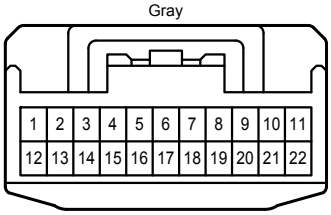

K 6
Black

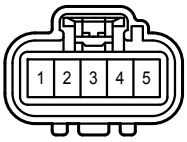

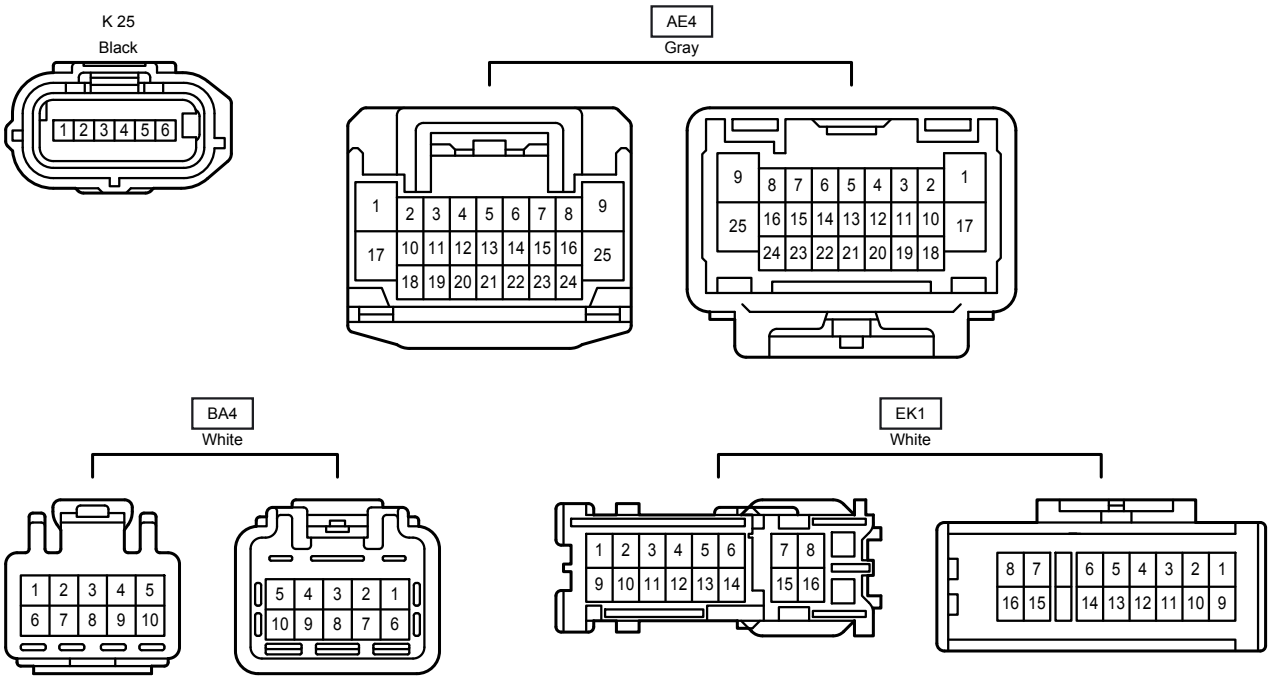
K 25
Black
1 2 3 4 5 6
AE4
Gray
1 2 3 4 5 6 7 8 9
17 10 11 12 13 14 15 16 25
18 19 20 21 22 23 24
9 8 7 6 5 4 3 2 1
25 16 15 14 13 12 11 10 17
24 23 22 21 20 19 18
BA4
White
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6
EK1
White
1 2 3 4 5 6 7 8
9 10 11 12 13 14 15 16
8 7 6 5 4 3 2 1
16 15 14 13 12 11 10 9