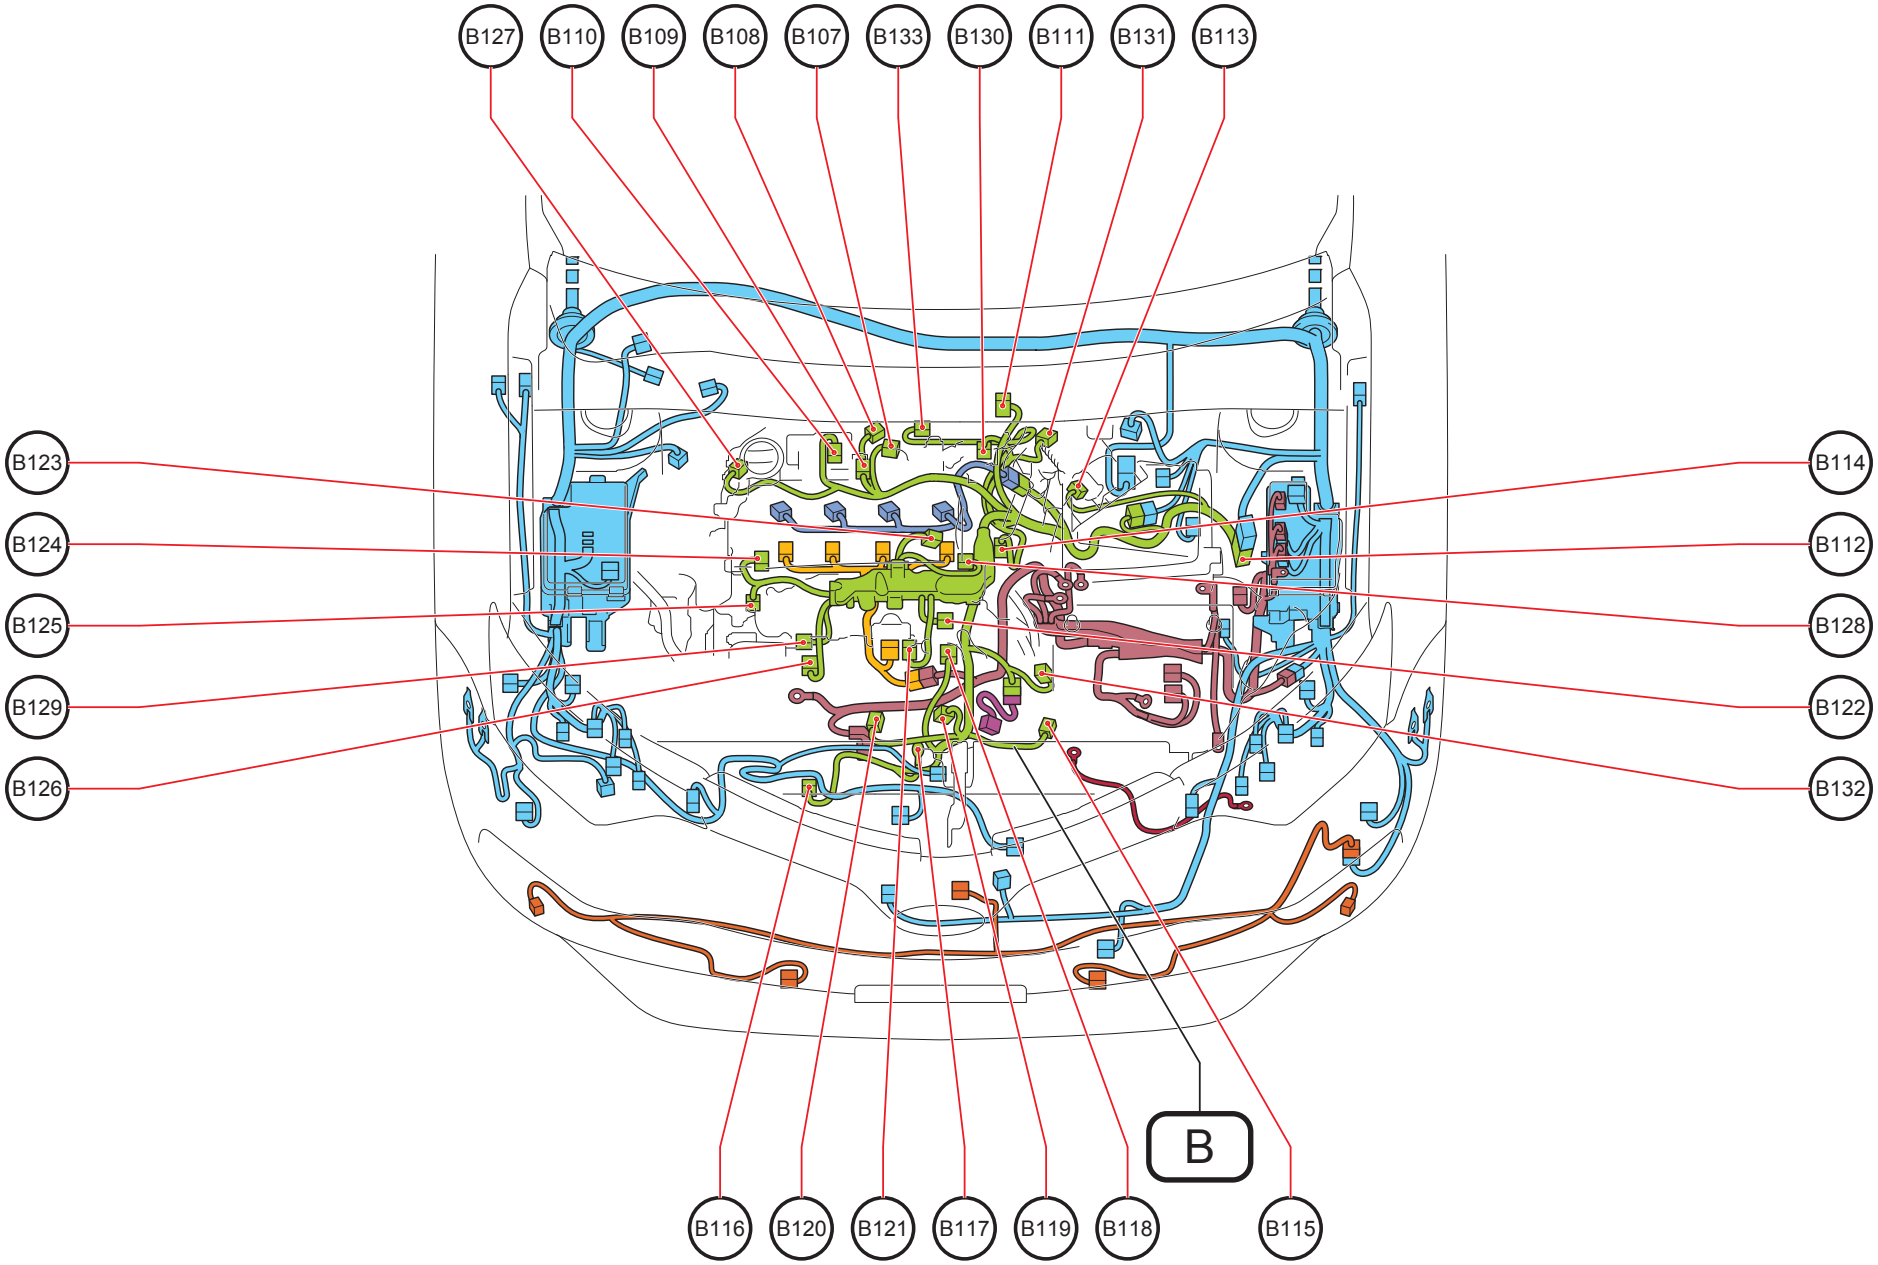
B127
B110
B109
B108
B107
B133
B130
B111
B131
B113
B123
B124
B125
B129
B126
B114
B112
B128
B122
B132
B
B116
B120
B121
B117
B119
B118
B115

B107 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
B108 Exhaust Gas Temperature Sensor
B109 VSV (EGR)
B110 No. 2 Exhaust Gas Temperature Sensor
B111 Turbocharger Sub-Assembly
B112 ECM
B113 Intake Mass Air Flow Meter Sub-Assembly
B114 Crank Position Sensor
B115 Intake Air Temperature Sensor
B116 Compressor with Pulley Assembly
B117 Starter Assembly
B118 Oil Pressure Switch
B119 Suction Control Valve
B120 Fuel Temperature Sensor
B121 Glow Plug Controller
B122 Turbo Pressure Sensor
B123 Cam Position Sensor
B124 Rail Pressure Sensor
B125 Diesel Engine Engine Coolant Temperature Sensor
B126 Generator Assembly
B127 Differential Pressure Sensor
B128 Fuel Pressure Control Valve
B129 Swirl Control Valve
B130 Exhaust Gas Pressure Sensor
B131 EGR Valve Assembly
B132 EGR Valve Temperature Sensor
B133 Air Fuel Ratio Sensor (Bank 1 Sensor 2)

B107
Black

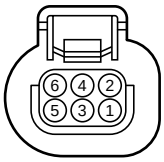

B108
Black

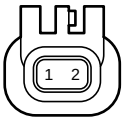

B109
Black

B110
Black

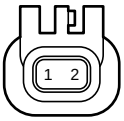

B111
Black



B112
Black

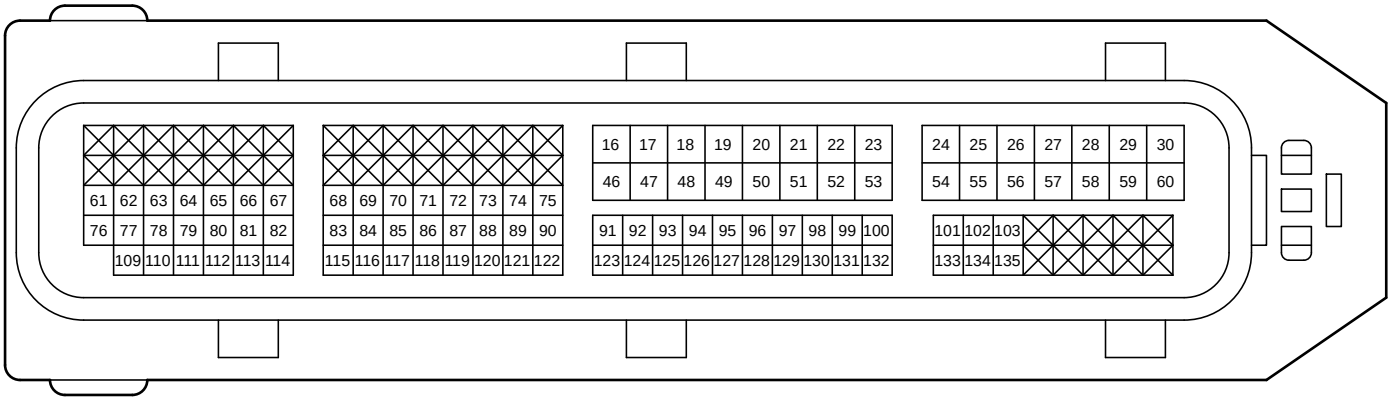

B113
Yellow



B114
Black

B115
Black

B116
Black

B117



B118
Black

B119
Black

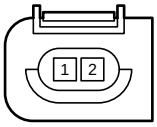

B120
Black

B121
Black

B122
Black

B123
Black

B124
Black

B125
Black

B126
Black

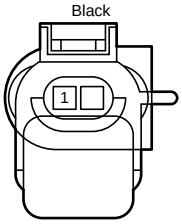

B127
Black

B128
Black

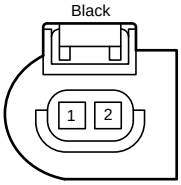

B129
Black

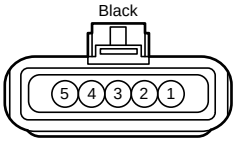

B130
Black

B131
Black

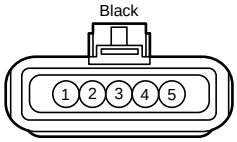

B132
Black

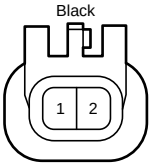
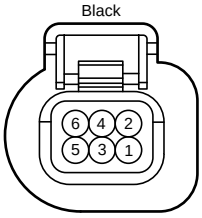
B133
Black