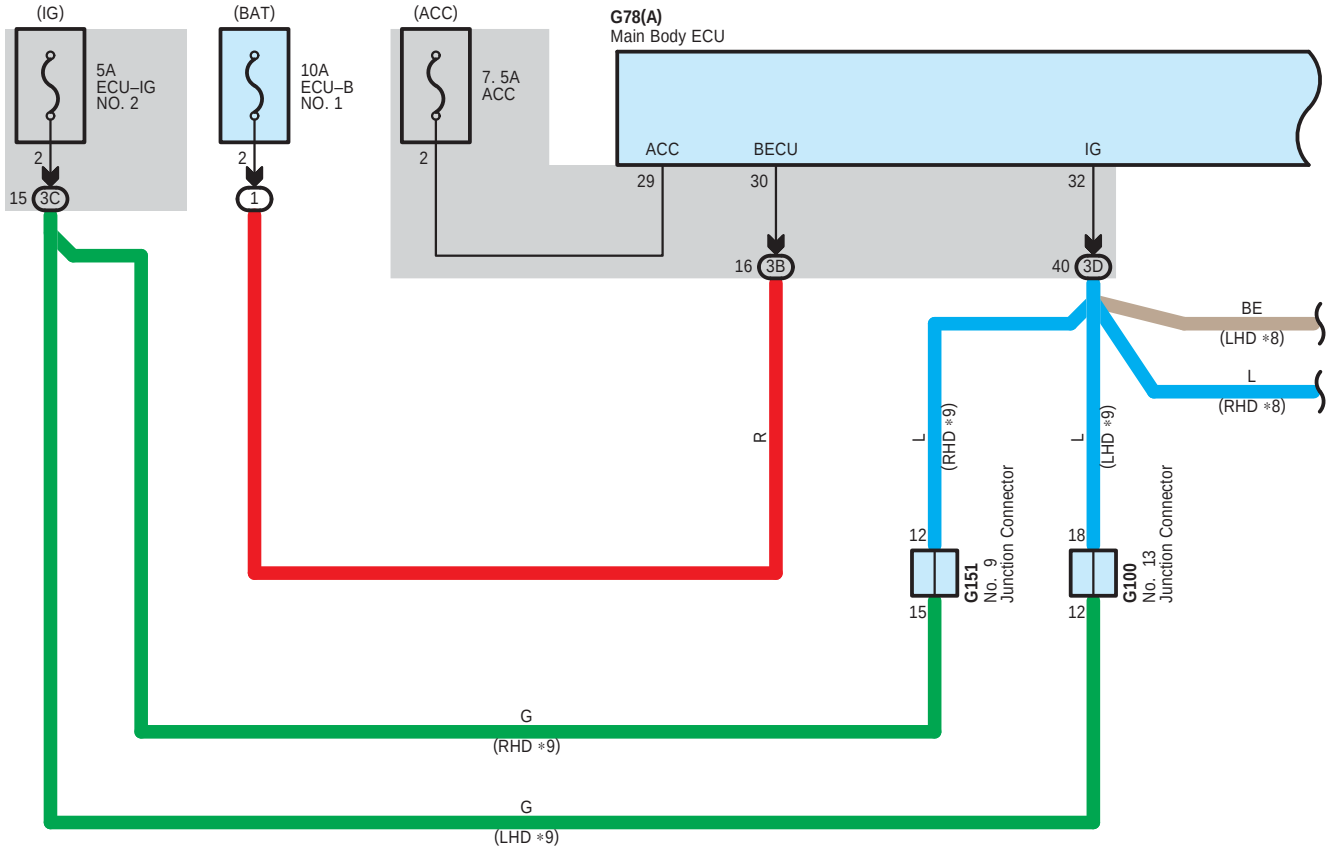

∗ 2 : w/ VSC
∗ 3 : w/o VSC
∗ 8 : w/ Stop & Start System
∗ 9 : w/o Stop & Start System
∗35 : w/ Power Seat
∗36 : w/o Power Seat

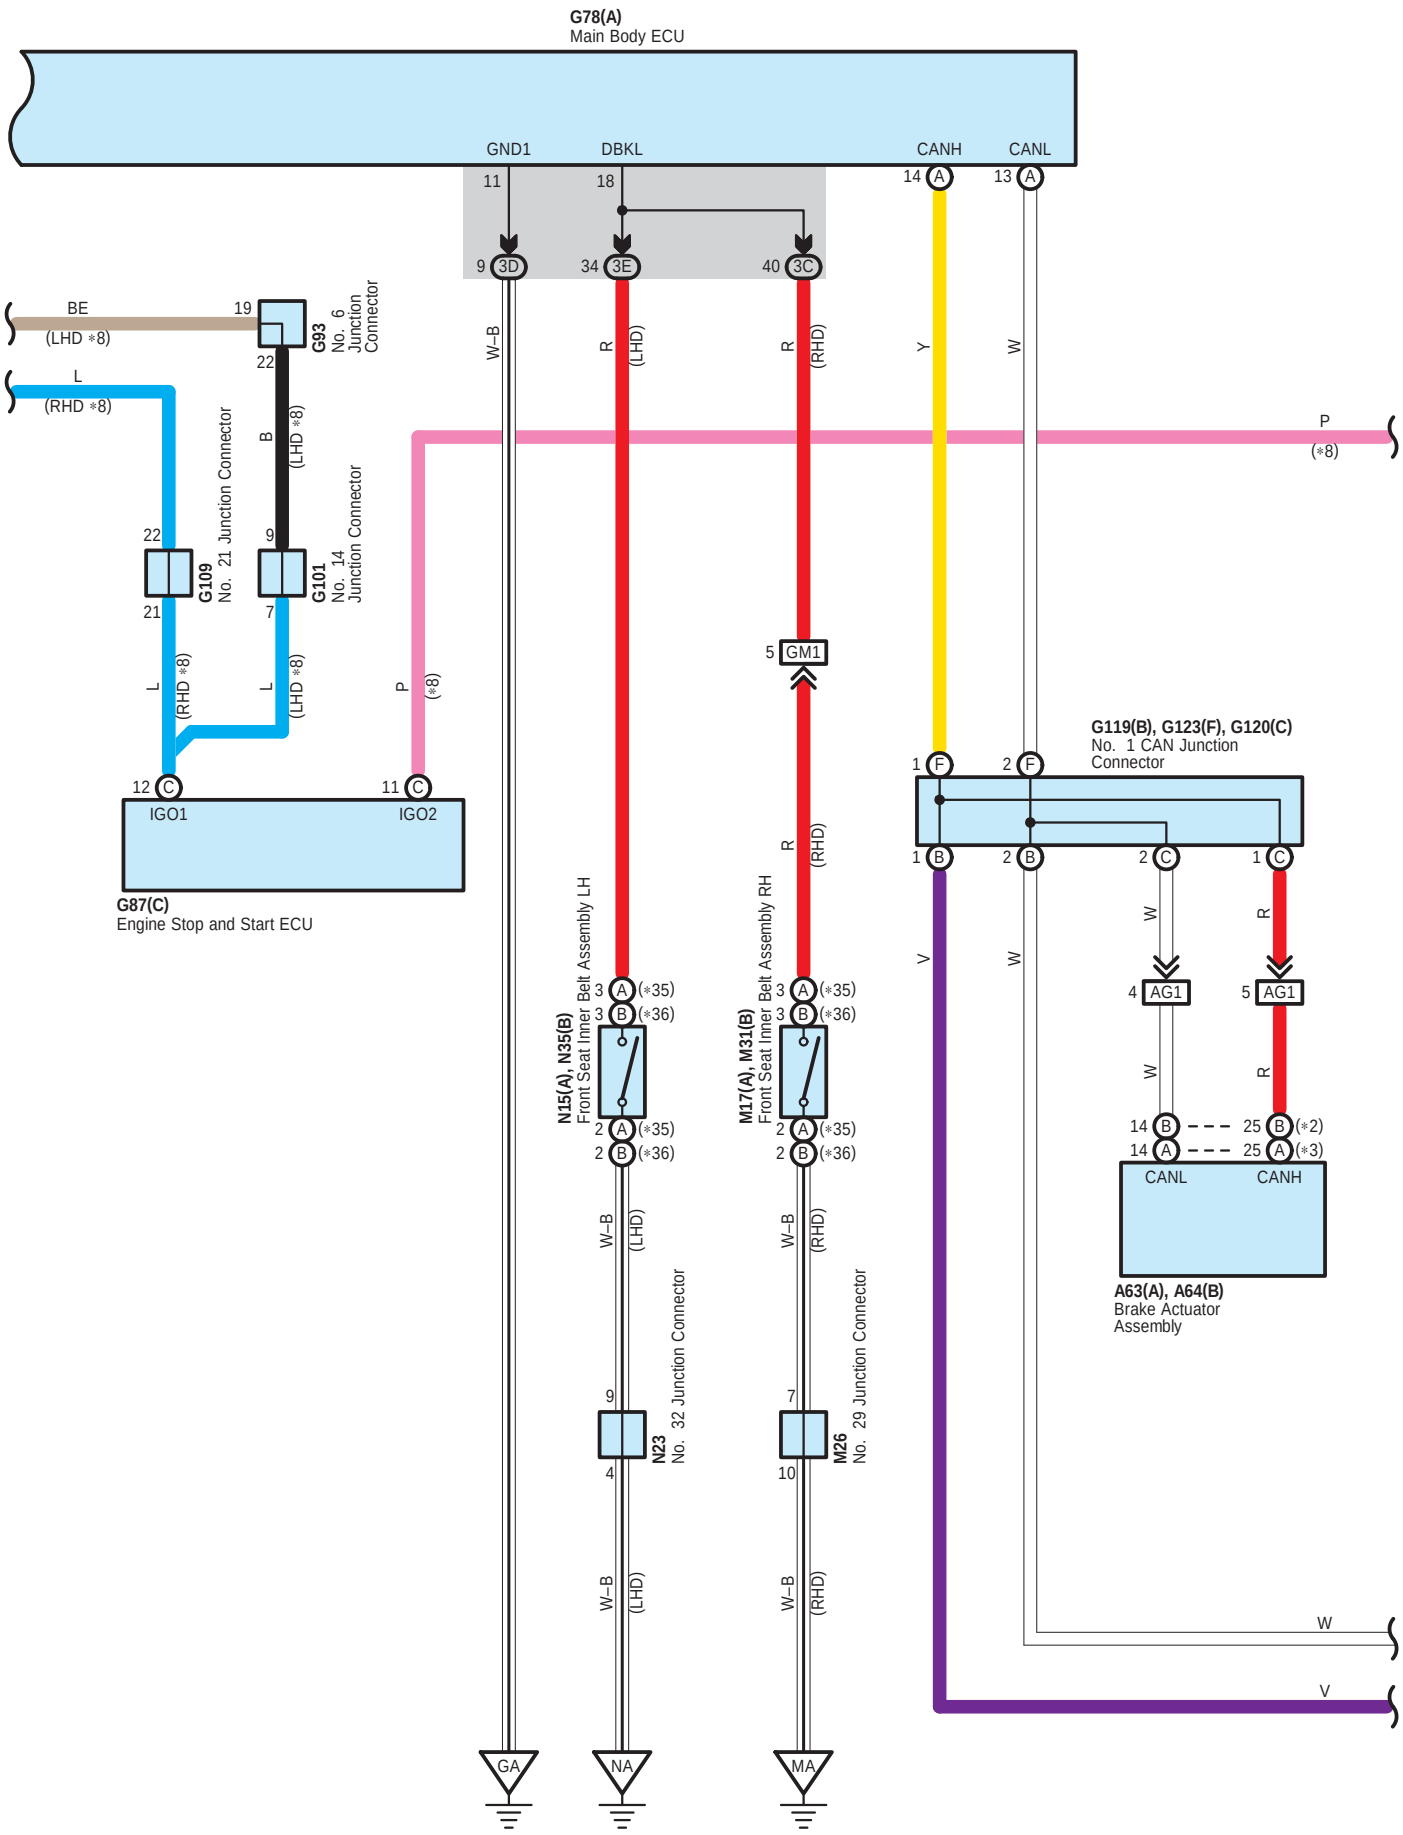
G78(A)
Main Body ECU
GND1
DBKL
CANH
CANL
11
18
14 A
13 A
9 3D
34 3E
40 3C
W–B
R (LHD)
R (RHD)
Y
W
BE
(LHD *8)
19
22
G93
No. 6 Junction Connector
L
(RHD *8)
B (LHD *8)
P
(*8)
22
21
G109
No. 21 Junction Connector
9
7
G101
No. 14 Junction Connector
L (RHD *8)
L (LHD *8)
P (*8)
5 GM1
12 C
IGO1
11 C
IGO2
G87(C)
Engine Stop and Start ECU
G119(B), G123(F), G120(C)
No. 1 CAN Junction Connector
1 F
2 F
1 B
2 B
2 C
1 C
V
W
W
R
4 AG1
5 AG1
W
R
14 B
14 A
25 B (*2)
25 A (*3)
CANL
CANH
A63(A), A64(B)
Brake Actuator Assembly
N15(A), N35(B)
Front Seat Inner Belt Assembly LH
M17(A), M31(B)
Front Seat Inner Belt Assembly RH
3 A (*35)
3 B (*36)
2 A (*35)
2 B (*36)
W–B (LHD)
W–B (RHD)
9
4
N23
No. 32 Junction Connector
7
10
M26
No. 29 Junction Connector
W–B (LHD)
W–B (RHD)
W
V
GA
NA
MA

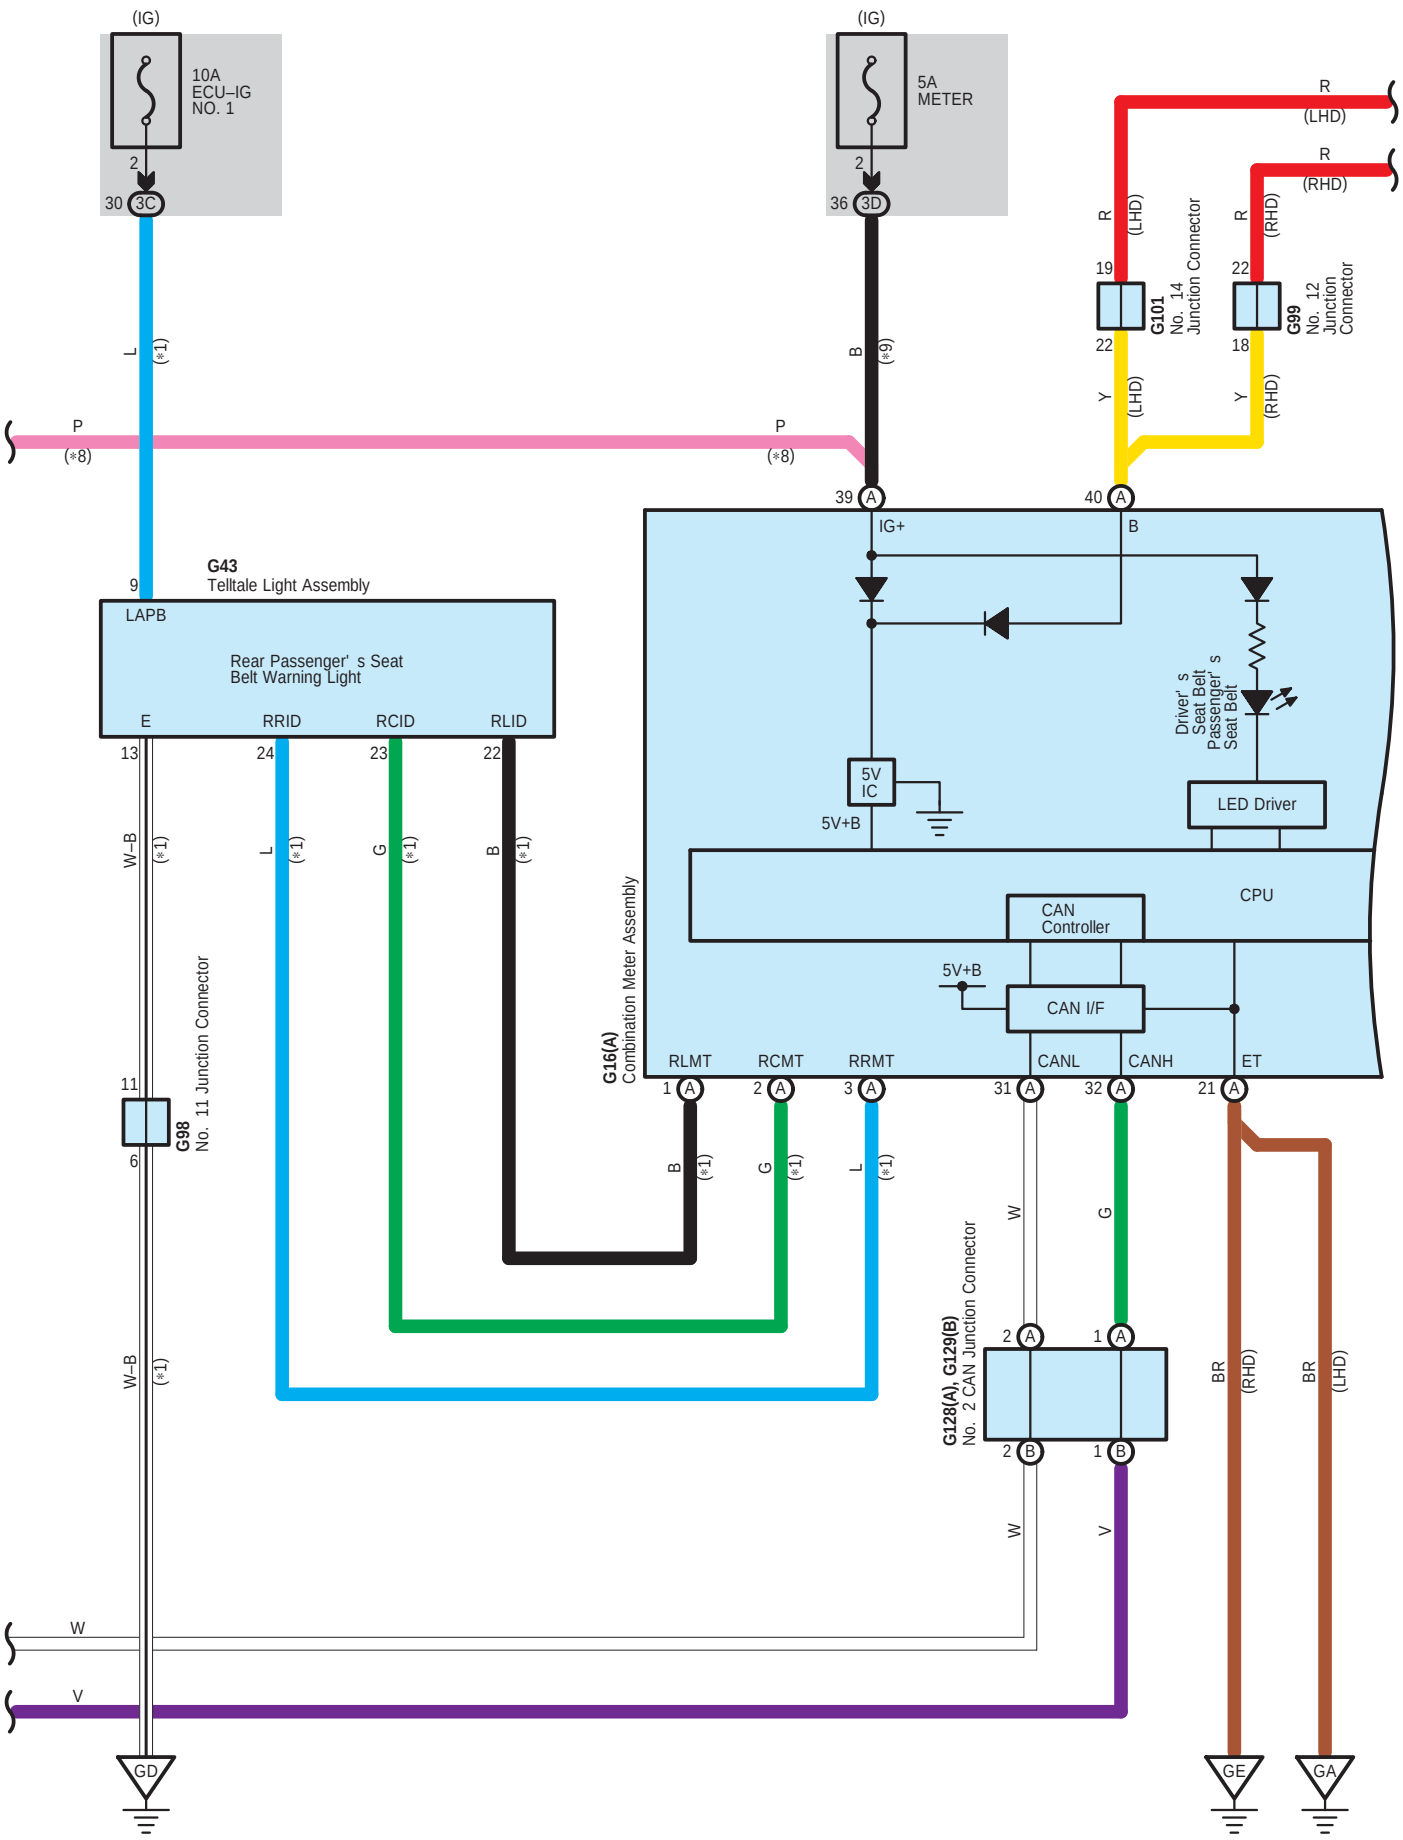
(IG)
10A
ECU–IG
NO. 1
2
30 3C
(IG)
5A
METER
2
36 3D
R
(LHD)
R
(RHD)
R (LHD)
R (RHD)
19
22
G101
No. 14
Junction Connector
G99
No. 12
Junction
Connector
22
18
Y (LHD)
Y (RHD)
L (*1)
B (*9)
P
(*8)
P
(*8)
39 A
40 A
IG+
B
G43
Telltale Light Assembly
9
LAPB
Rear Passenger' s Seat
Belt Warning Light
E
RRID
RCID
RLID
13
24
23
22
W–B (*1)
L (*1)
G (*1)
B (*1)
5V
IC
5V+B
Driver' s
Seat Belt
Passenger' s
Seat Belt
LED Driver
CPU
CAN
Controller
5V+B
CAN I/F
G16(A)
Combination Meter Assembly
RLMT
RCMT
RRMT
CANL
CANH
ET
1 A
2 A
3 A
31 A
32 A
21 A
11
6
G98
No. 11 Junction Connector
B (*1)
G (*1)
L (*1)
W
G
G128(A), G129(B)
No. 2 CAN Junction Connector
2 A
1 A
2 B
1 B
W–B (*1)
W
V
BR (RHD)
BR (LHD)
W
V
GD
GE
GA

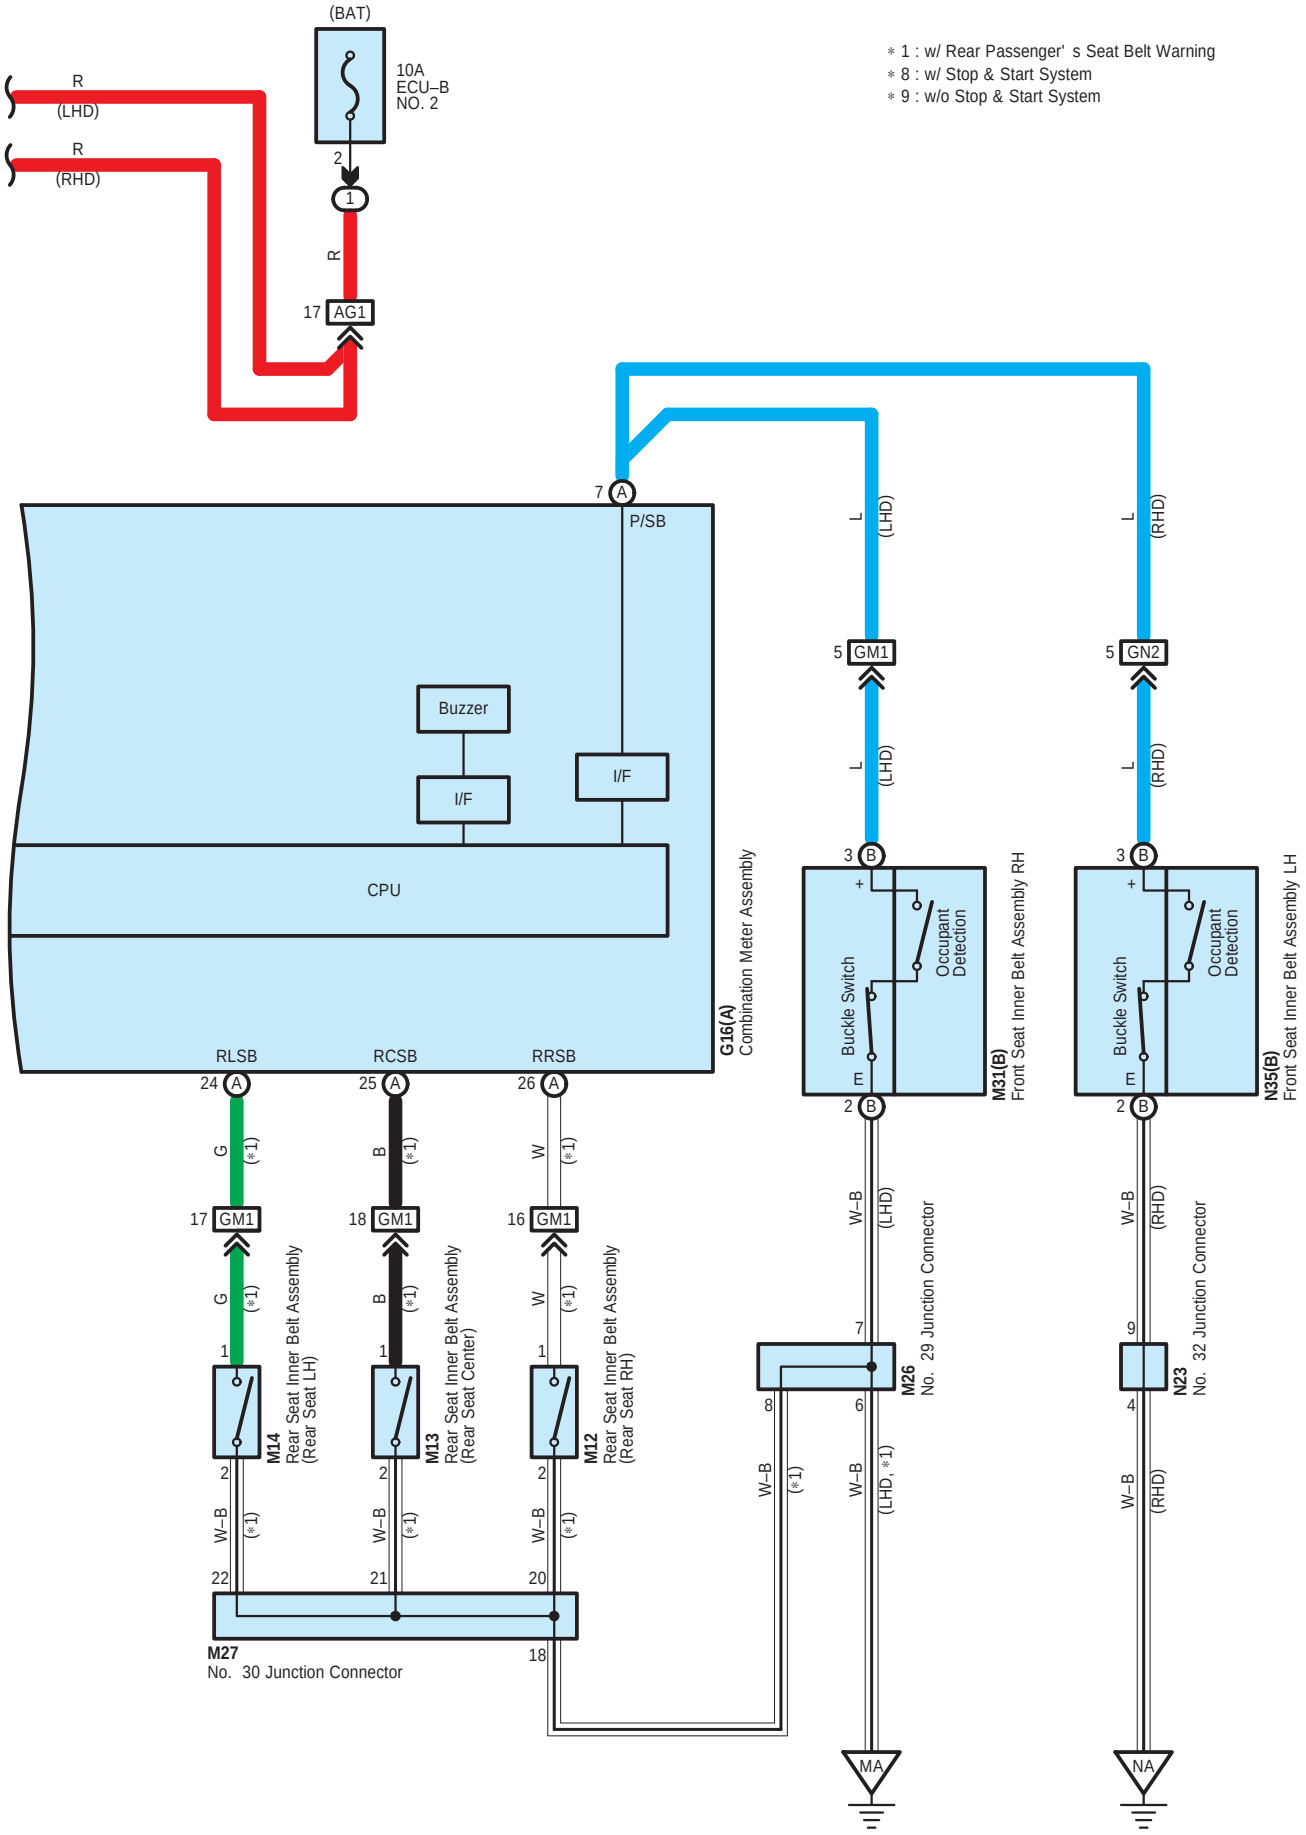
(BAT)
10A
ECU–B
NO. 2
R
(LHD)
R
(RHD)
2
1
R
17 AG1
∗1 : w/ Rear Passenger' s Seat Belt Warning
∗8 : w/ Stop & Start System
∗9 : w/o Stop & Start System
7 A
P/SB
Buzzer
I/F
I/F
CPU
G16(A)
Combination Meter Assembly
L (LHD)
L (RHD)
5 GM1
5 GN2
3 B
Buckle Switch
Occupant Detection
E
2 B
M31(B)
Front Seat Inner Belt Assembly RH
M35(B)
Front Seat Inner Belt Assembly LH
RLSB
RCSB
RRSB
24 A
25 A
26 A
G (∗1)
B (∗1)
W (∗1)
17 GM1
18 GM1
16 GM1
M14
Rear Seat Inner Belt Assembly
(Rear Seat LH)
M13
Rear Seat Inner Belt Assembly
(Rear Seat Center)
M12
Rear Seat Inner Belt Assembly
(Rear Seat RH)
W–B (∗1)
22
21
20
18
M27
No. 30 Junction Connector
W–B (LHD)
7
8
6
M26
No. 29 Junction Connector
W–B (LHD, ∗1)
W–B (RHD)
9
4
N23
No. 32 Junction Connector
MA
NA

A63
Gray

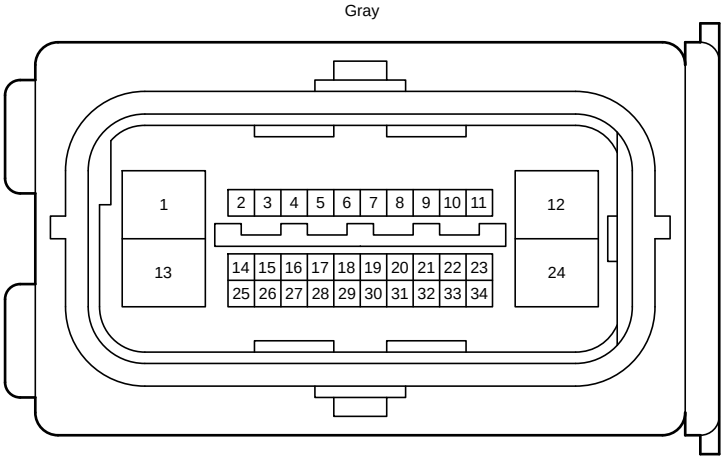

90980-12687

A64
Black

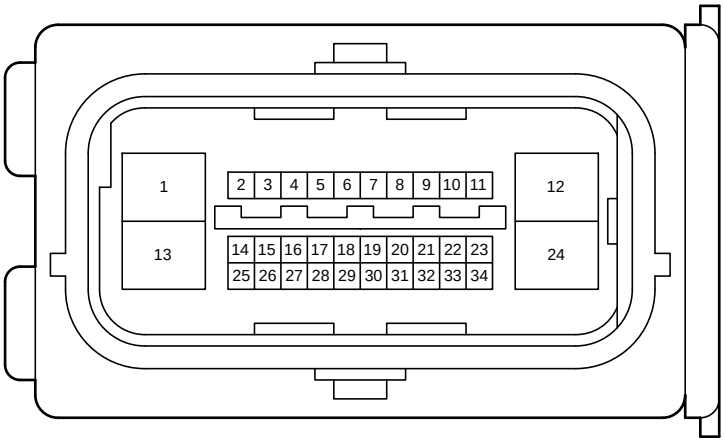

90980-12686

G16
Black

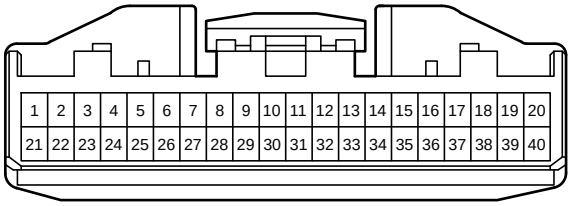

90980-12557

G43
Black

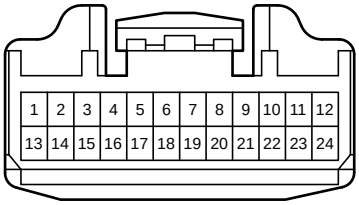

90980-12554

G78
White

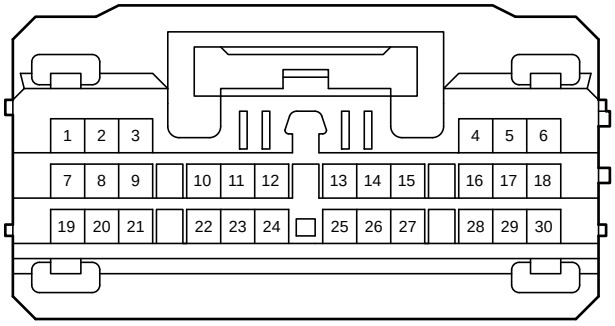

90980-12909

G87
Black

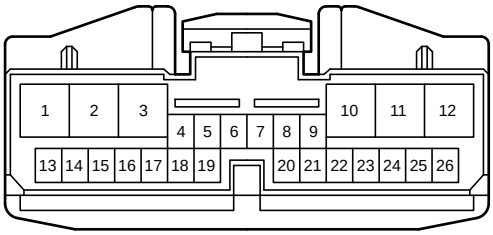

82824-12510

G93
White

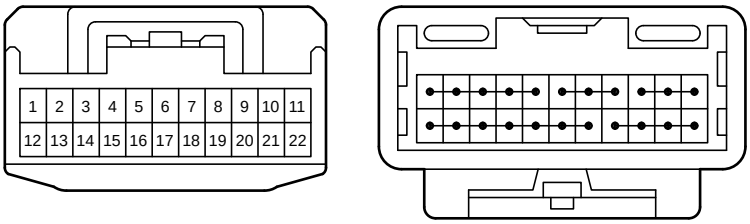

90980-12372

G98
Gray

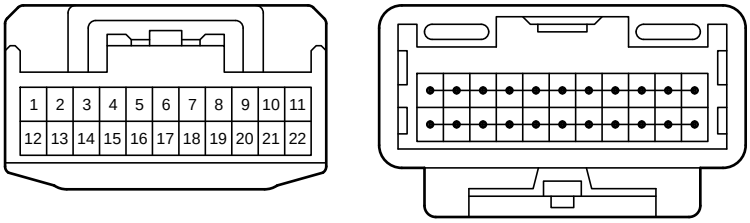

90980-12372

G99
White

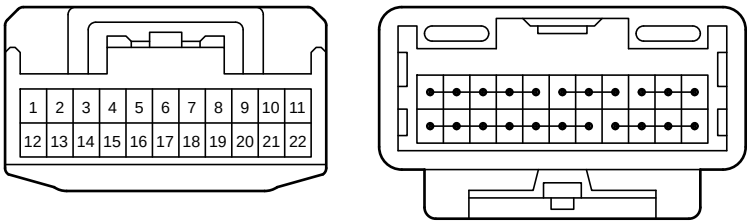

90980-12372

G100
Gray

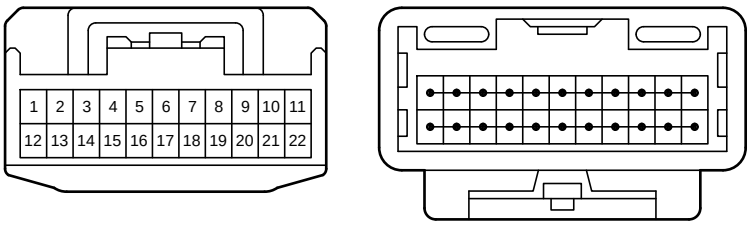

90980-12372

G101
White

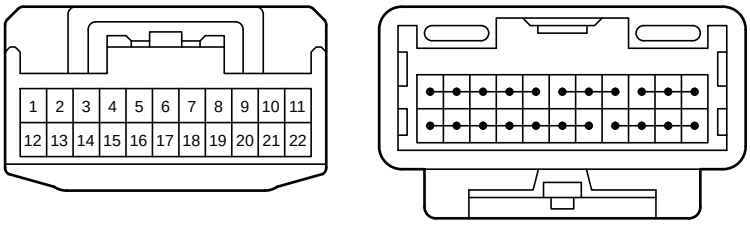

90980-12372

G109
White

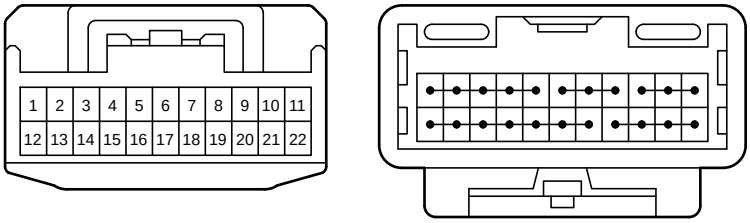

90980-12372

G119
White



90980-12827

G120
White



90980-12827

G123
White



90980-12827

G128
White



90980-12827

G129
White



90980-12827

G151
Gray

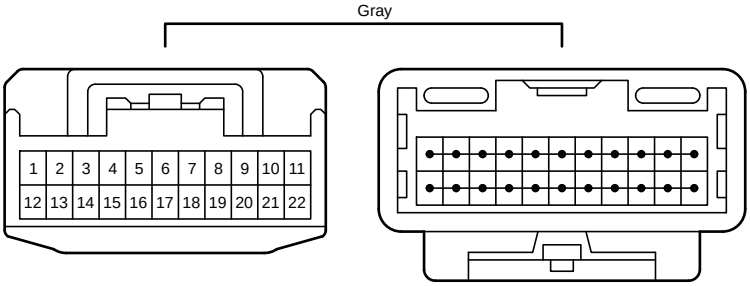

90980-12372

M12
Black



90980-10825

M13
White

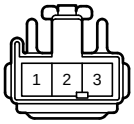

90980-10908

M14
Black



90980-10825

M17
White

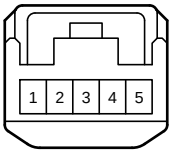

90980-12366

M26
Black

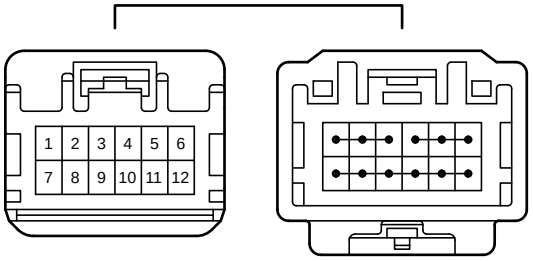

90980-12737

M27
White

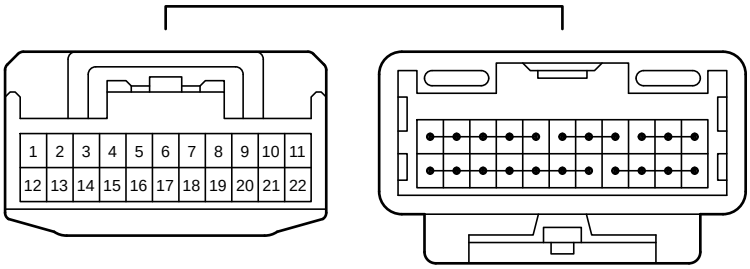

90980-12372

M31
White

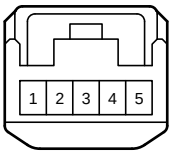

90980-12366

N15
White

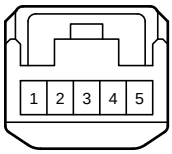

90980-12366

N23
White

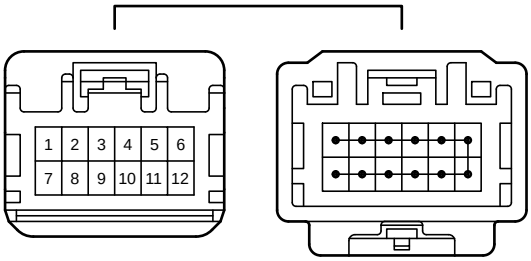

90980-12737

N35
White

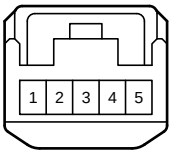

90980-12366

3B
White

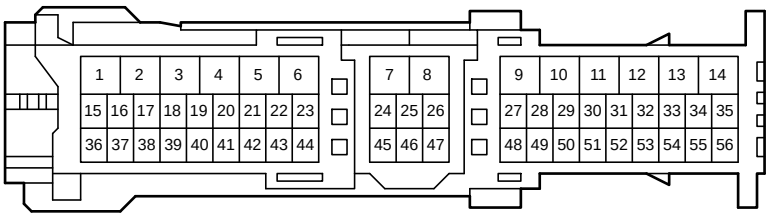

90980-12A15

3C
White

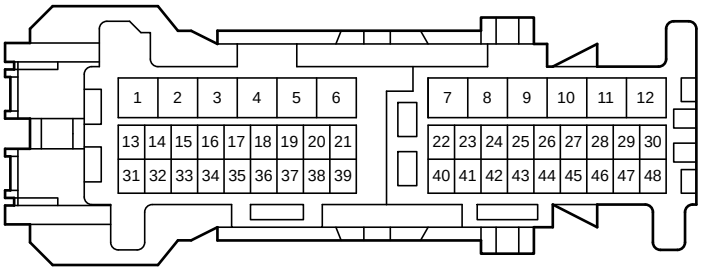

90980-12887

3D
White

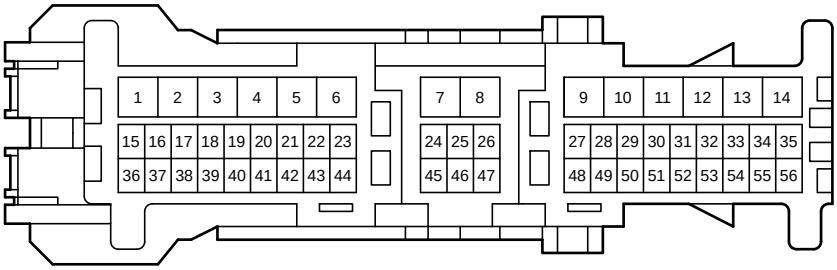

90980-12890

3E
White

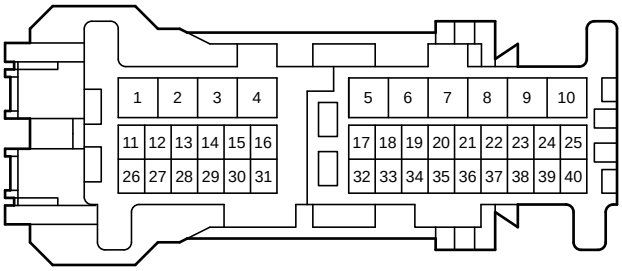

90980-12884

AG1
Blue

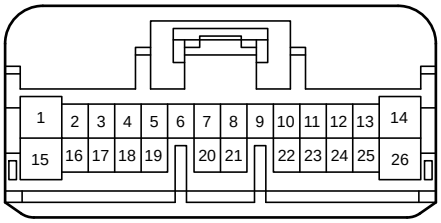

90980-12771

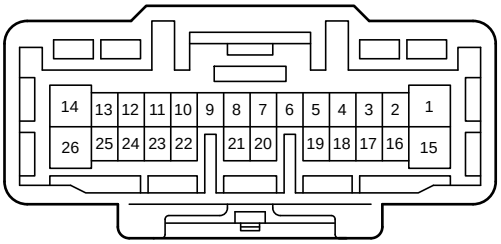

90980-12770

GM1
White

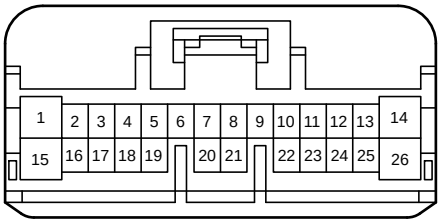

90980-12771

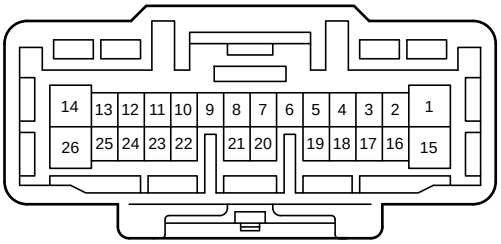

90980-12770

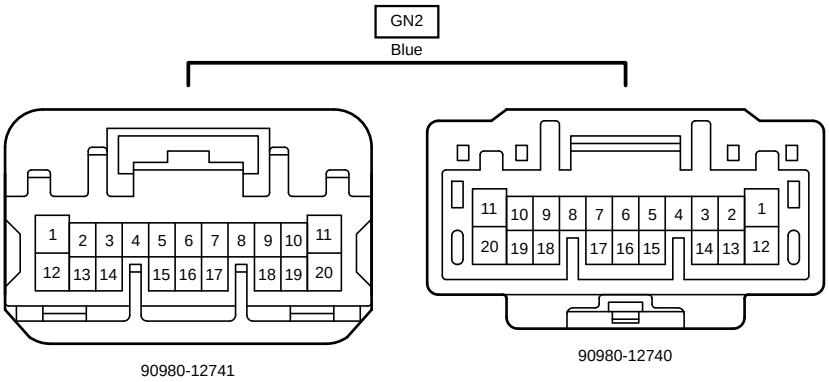
GN2
Blue
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20
90980-12741
11 10 9 8 7 6 5 4 3 2 1
20 19 18 17 16 15 14 13 12
90980-12740