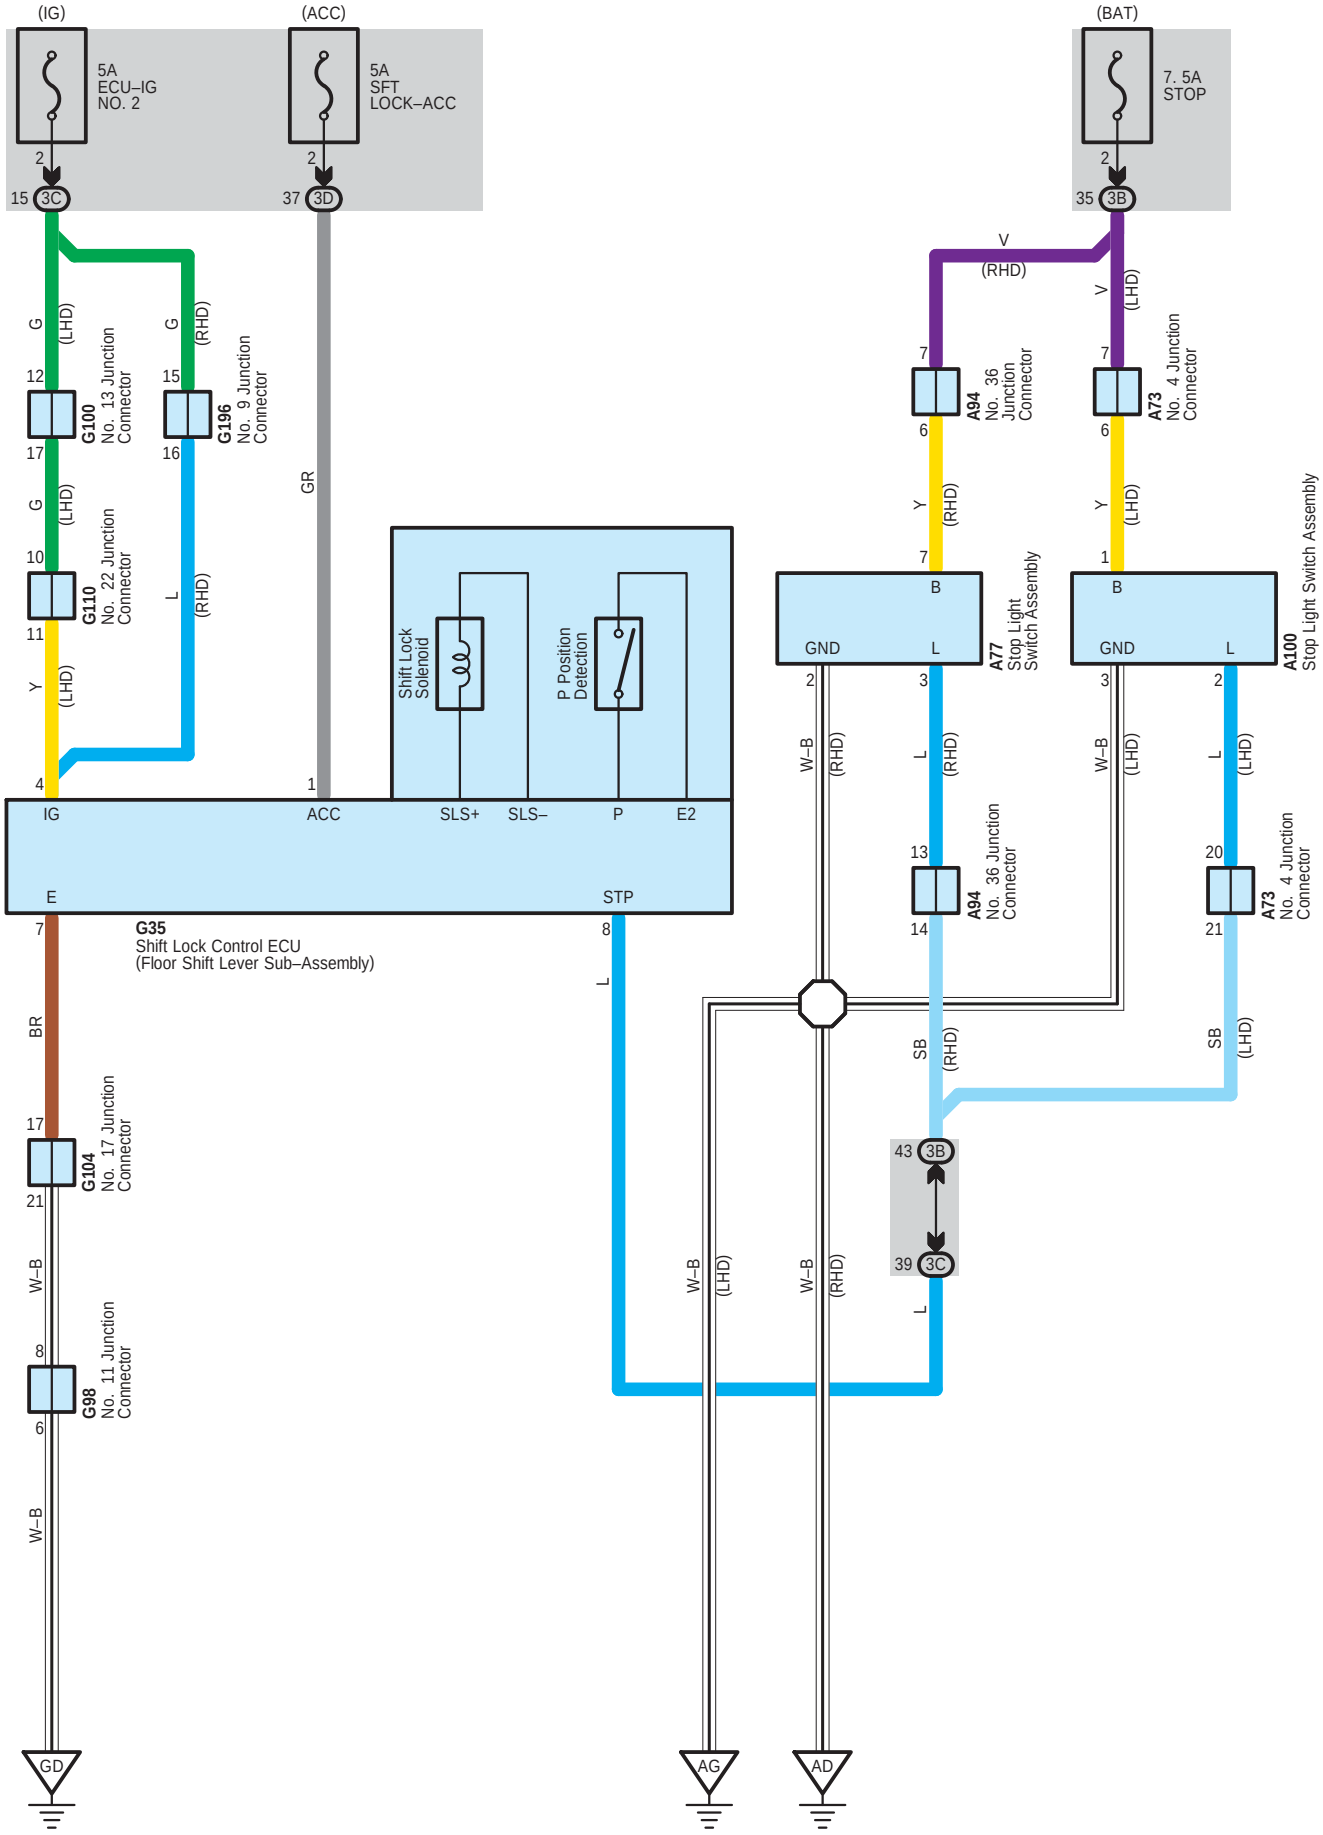
(IG)
5A
ECU–IG
NO. 2
(ACC)
5A
SFT
LOCK–ACC
(BAT)
7. 5A
STOP
15 3C
37 3D
35 3B
G (LHD)
G (RHD)
G100
No. 13 Junction
Connector
G196
No. 9 Junction
Connector
G (LHD)
G110
No. 22 Junction
Connector
Y (LHD)
L (RHD)
GR
V (RHD)
V (LHD)
A94
No. 36
Junction
Connector
A73
No. 4 Junction
Connector
Y (RHD)
Y (LHD)
A77
Stop Light
Switch Assembly
A100
Stop Light Switch Assembly
Shift Lock
Solenoid
P Position
Detection
IG
ACC
SLS+
SLS–
P
E2
E
STP
G35
Shift Lock Control ECU
(Floor Shift Lever Sub–Assembly)
GND
B
L
W–B (RHD)
L (RHD)
W–B (LHD)
L (LHD)
SB (RHD)
SB (LHD)
BR
G104
No. 17 Junction
Connector
W–B
G98
No. 11 Junction
Connector
43 3B
39 3C
GD
AG
AD

A73
Blue

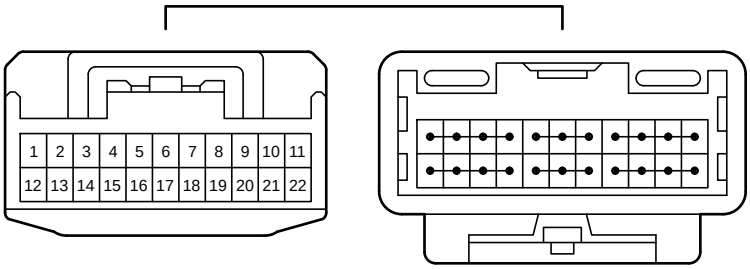

90980-12372

A77
Black

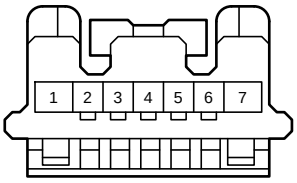

90980-12092

A94
Blue

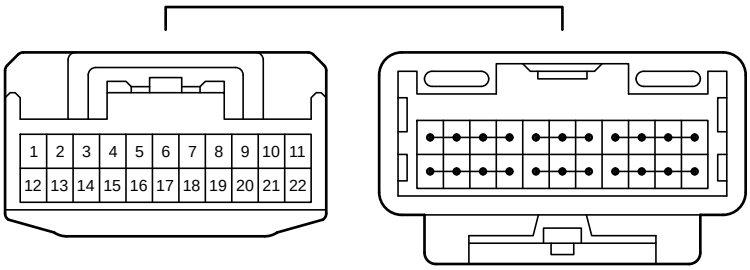

90980-12372

A100
White

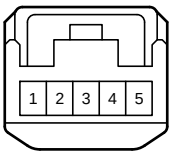

90980-12366

G35
White

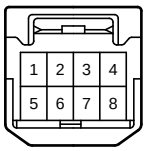

90980-12910

G98
Gray

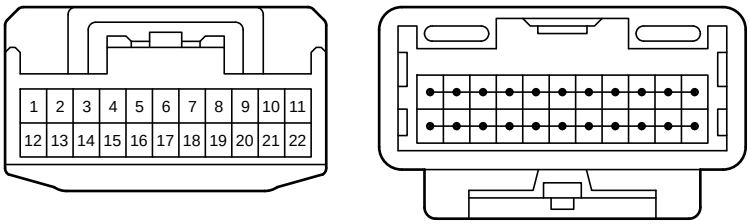

90980-12372

G100
Gray

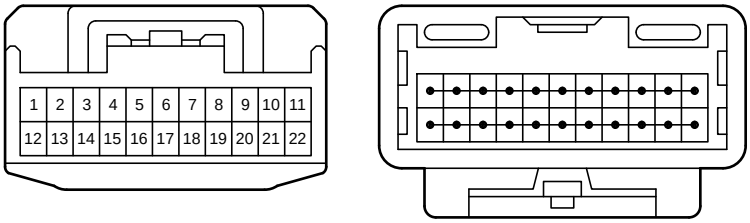

90980-12372

G104
Gray

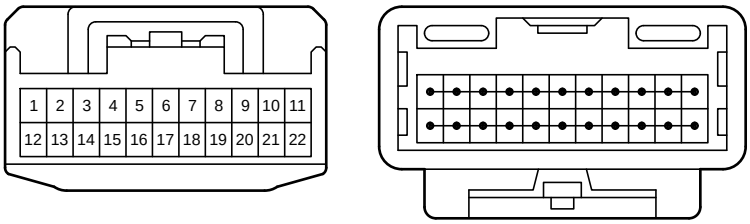

90980-12372

G110
Blue

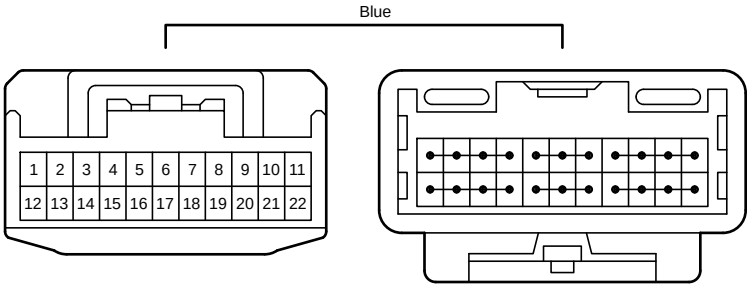

90980-12372

G196
Gray

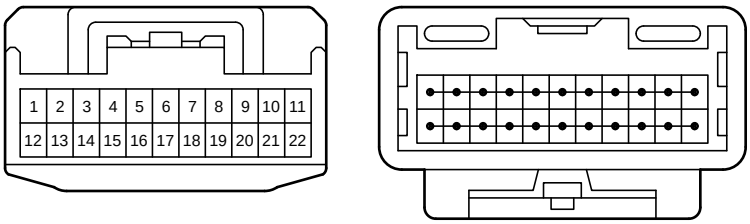

90980-12372

3B
White

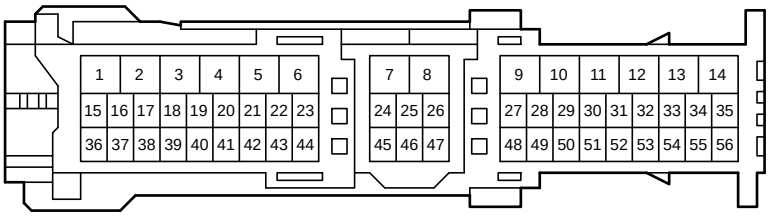

90980-12A15

3C
White

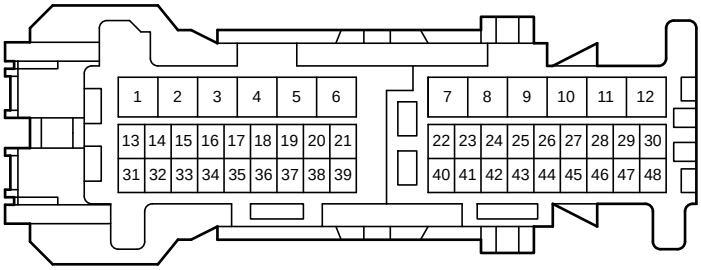

90980-12887

3D
White

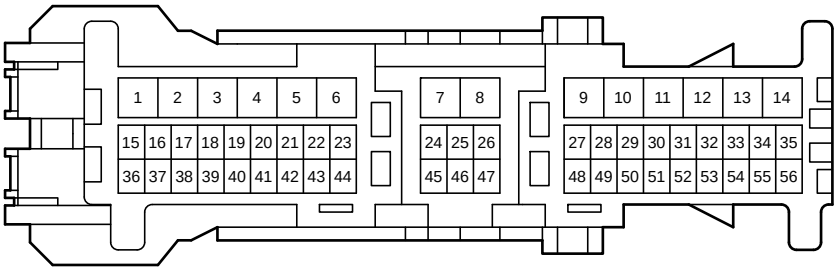

90980-12890