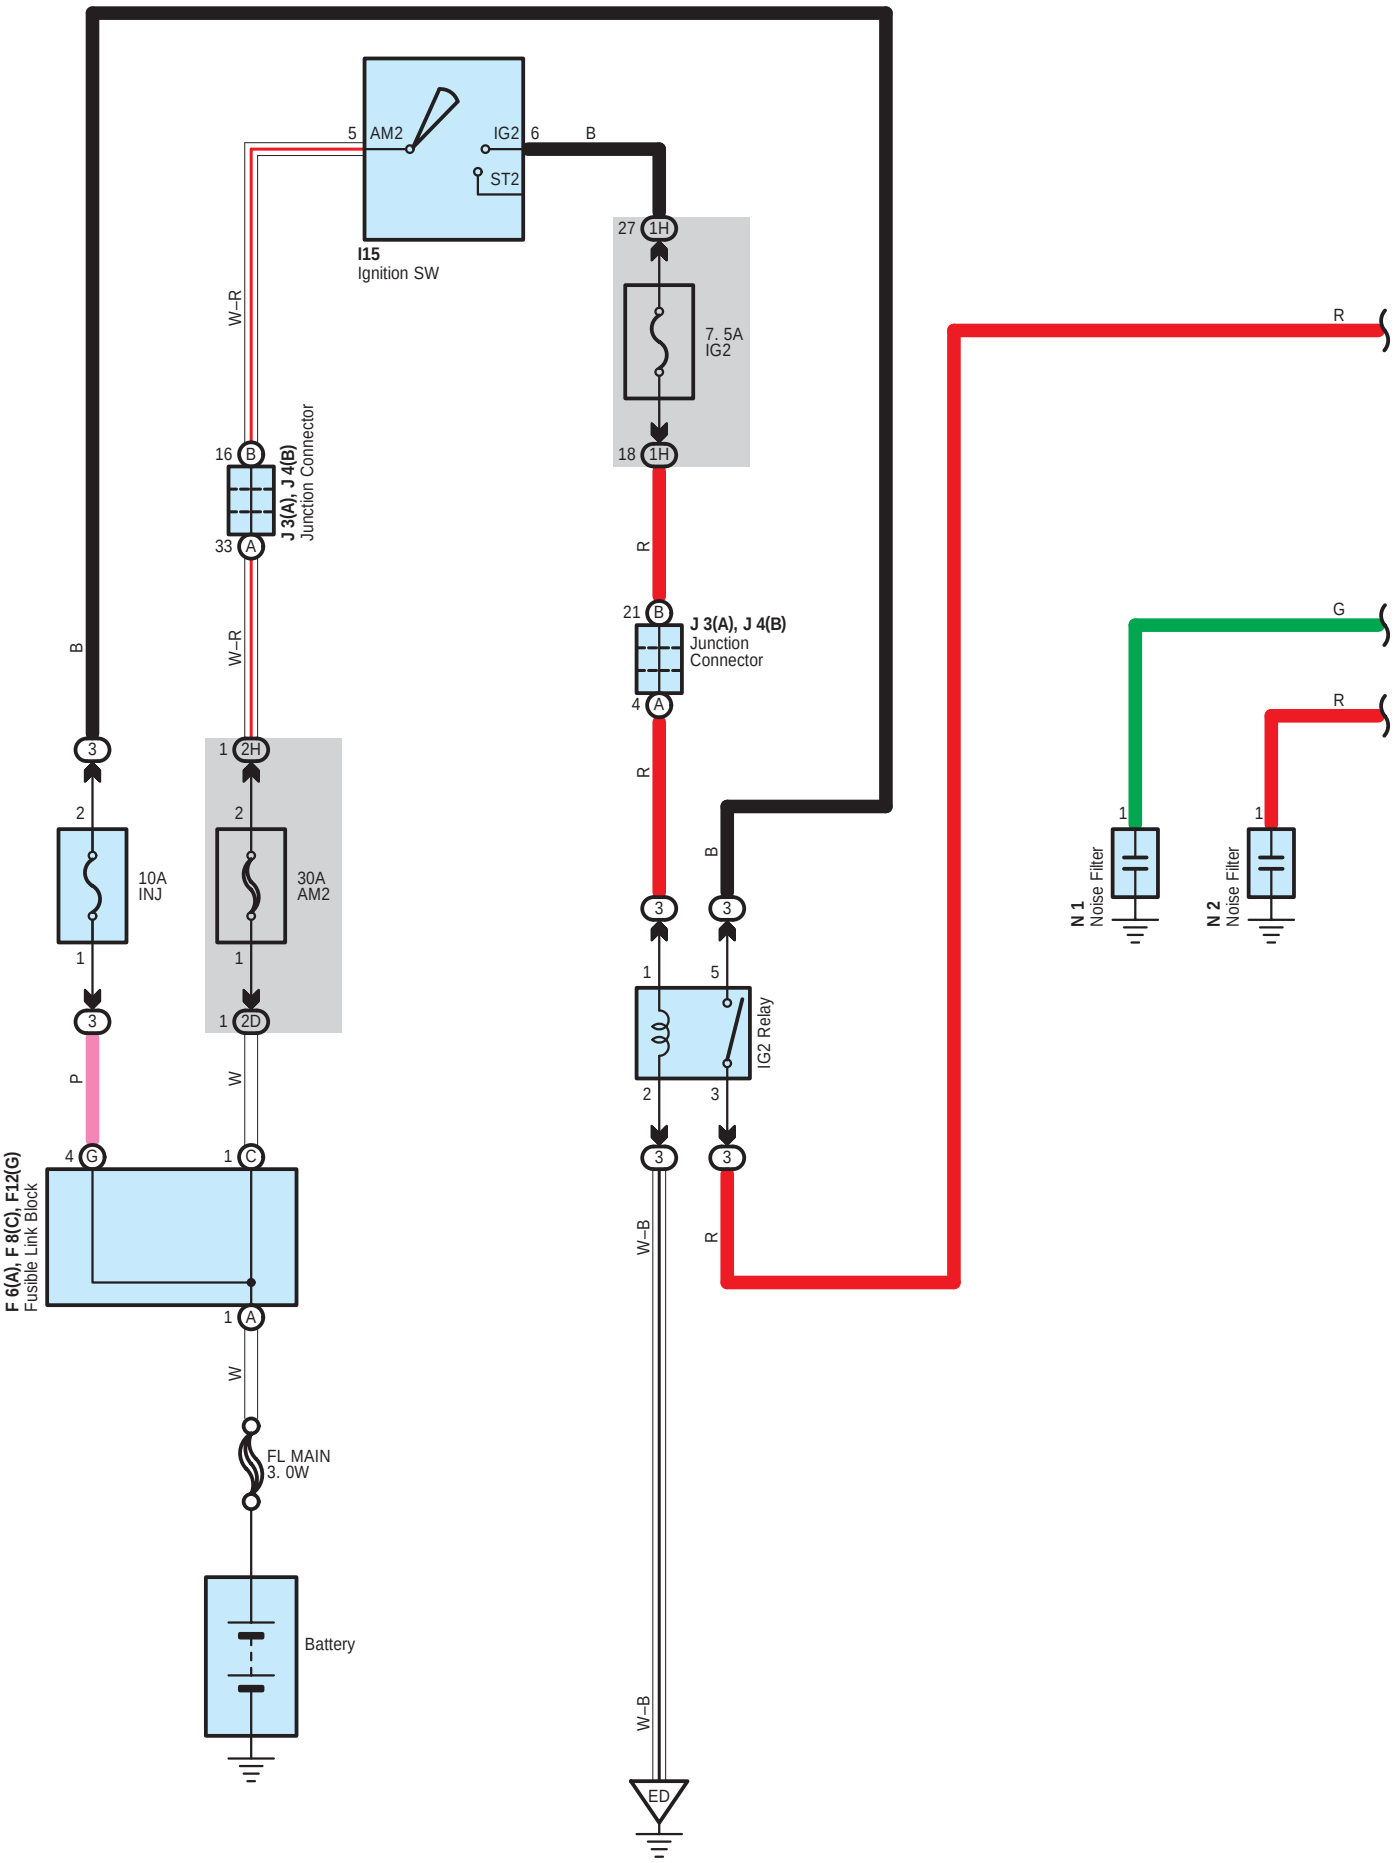
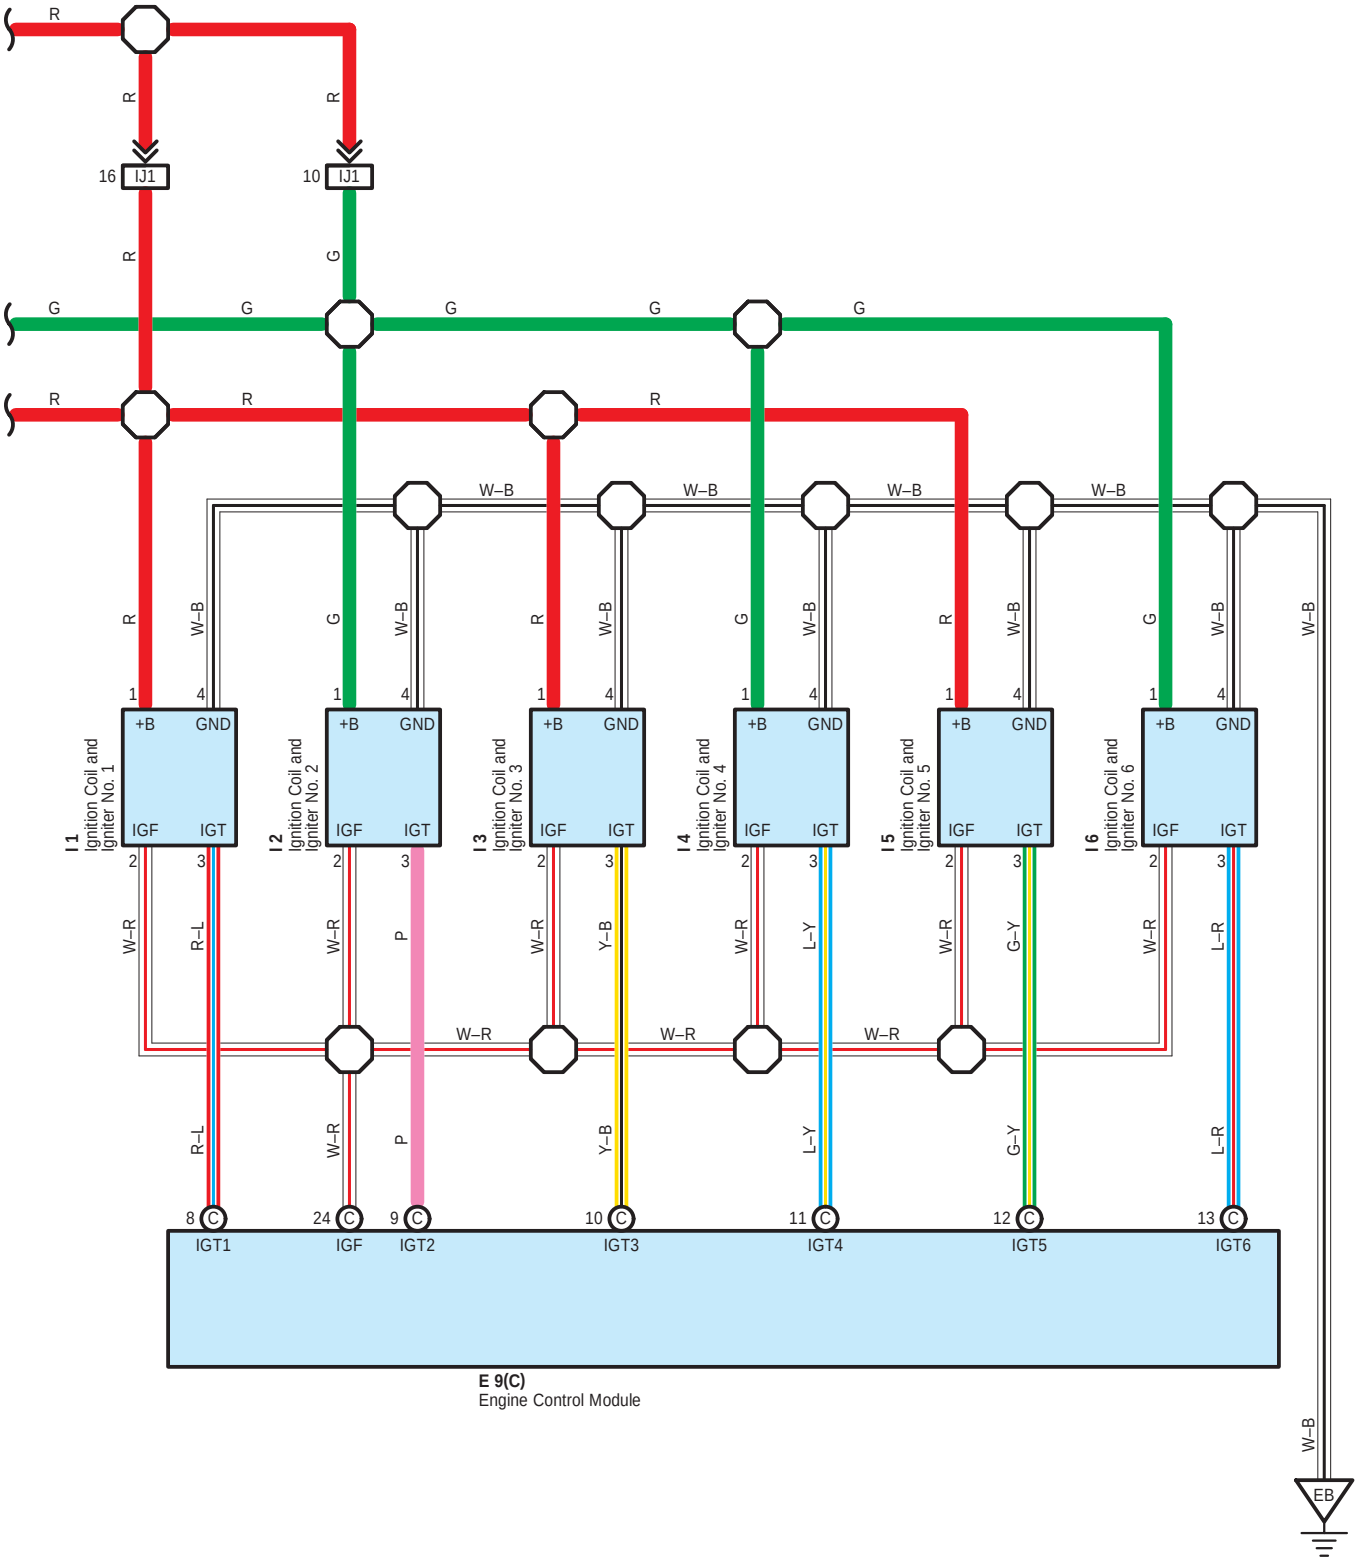

I15
Ignition SW
5 AM2
IG2 6
B
ST2
27 1H
7. 5A
IG2
18 1H
R
16 B
33 A
J 3(A), J 4(B)
Junction Connector
W–R
21 B
J 3(A), J 4(B)
Junction
Connector
4 A
B
3
2
10A
INJ
1
1 2H
30A
AM2
1 2D
P
W
4 G
1 C
F 6(A), F 8(C), F12(G)
Fusible Link Block
1 A
FL MAIN
3. 0W
Battery
1 5
IG2 Relay
2 3
W–B
ED
G
N 1
Noise Filter
N 2
Noise Filter


R
G
W–B
W–R
R–L
P
Y–B
L–Y
G–Y
L–R
16 IJ1
10 IJ1
I 1 Ignition Coil and Igniter No. 1
I 2 Ignition Coil and Igniter No. 2
I 3 Ignition Coil and Igniter No. 3
I 4 Ignition Coil and Igniter No. 4
I 5 Ignition Coil and Igniter No. 5
I 6 Ignition Coil and Igniter No. 6
+B
GND
IGF
IGT
8 C IGT1
24 C IGF
9 C IGT2
10 C IGT3
11 C IGT4
12 C IGT5
13 C IGT6
E 9(C)
Engine Control Module
EB

: Parts Location

Code		See Page	Code	See Page	Code		See Page
E9	C	39	I2	37	I15		39
F6	A	36	I3	37	J3	A	40
F8	C	36	I4	37	J4	B	40
F12	G	36	I5	37	N1		37
I1		37	I6	37	N2		37

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	26	R/B No.3 (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1H	30	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2D	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2H		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IJ1	53	Engine Wire and Engine Room Main Wire (Right Kick Panel)

: Ground Points

Code	See Page	Ground Points Location
EB	50	Rear Bank of Right Cylinder Head
ED	50	Front Side of the Left Fender Apron