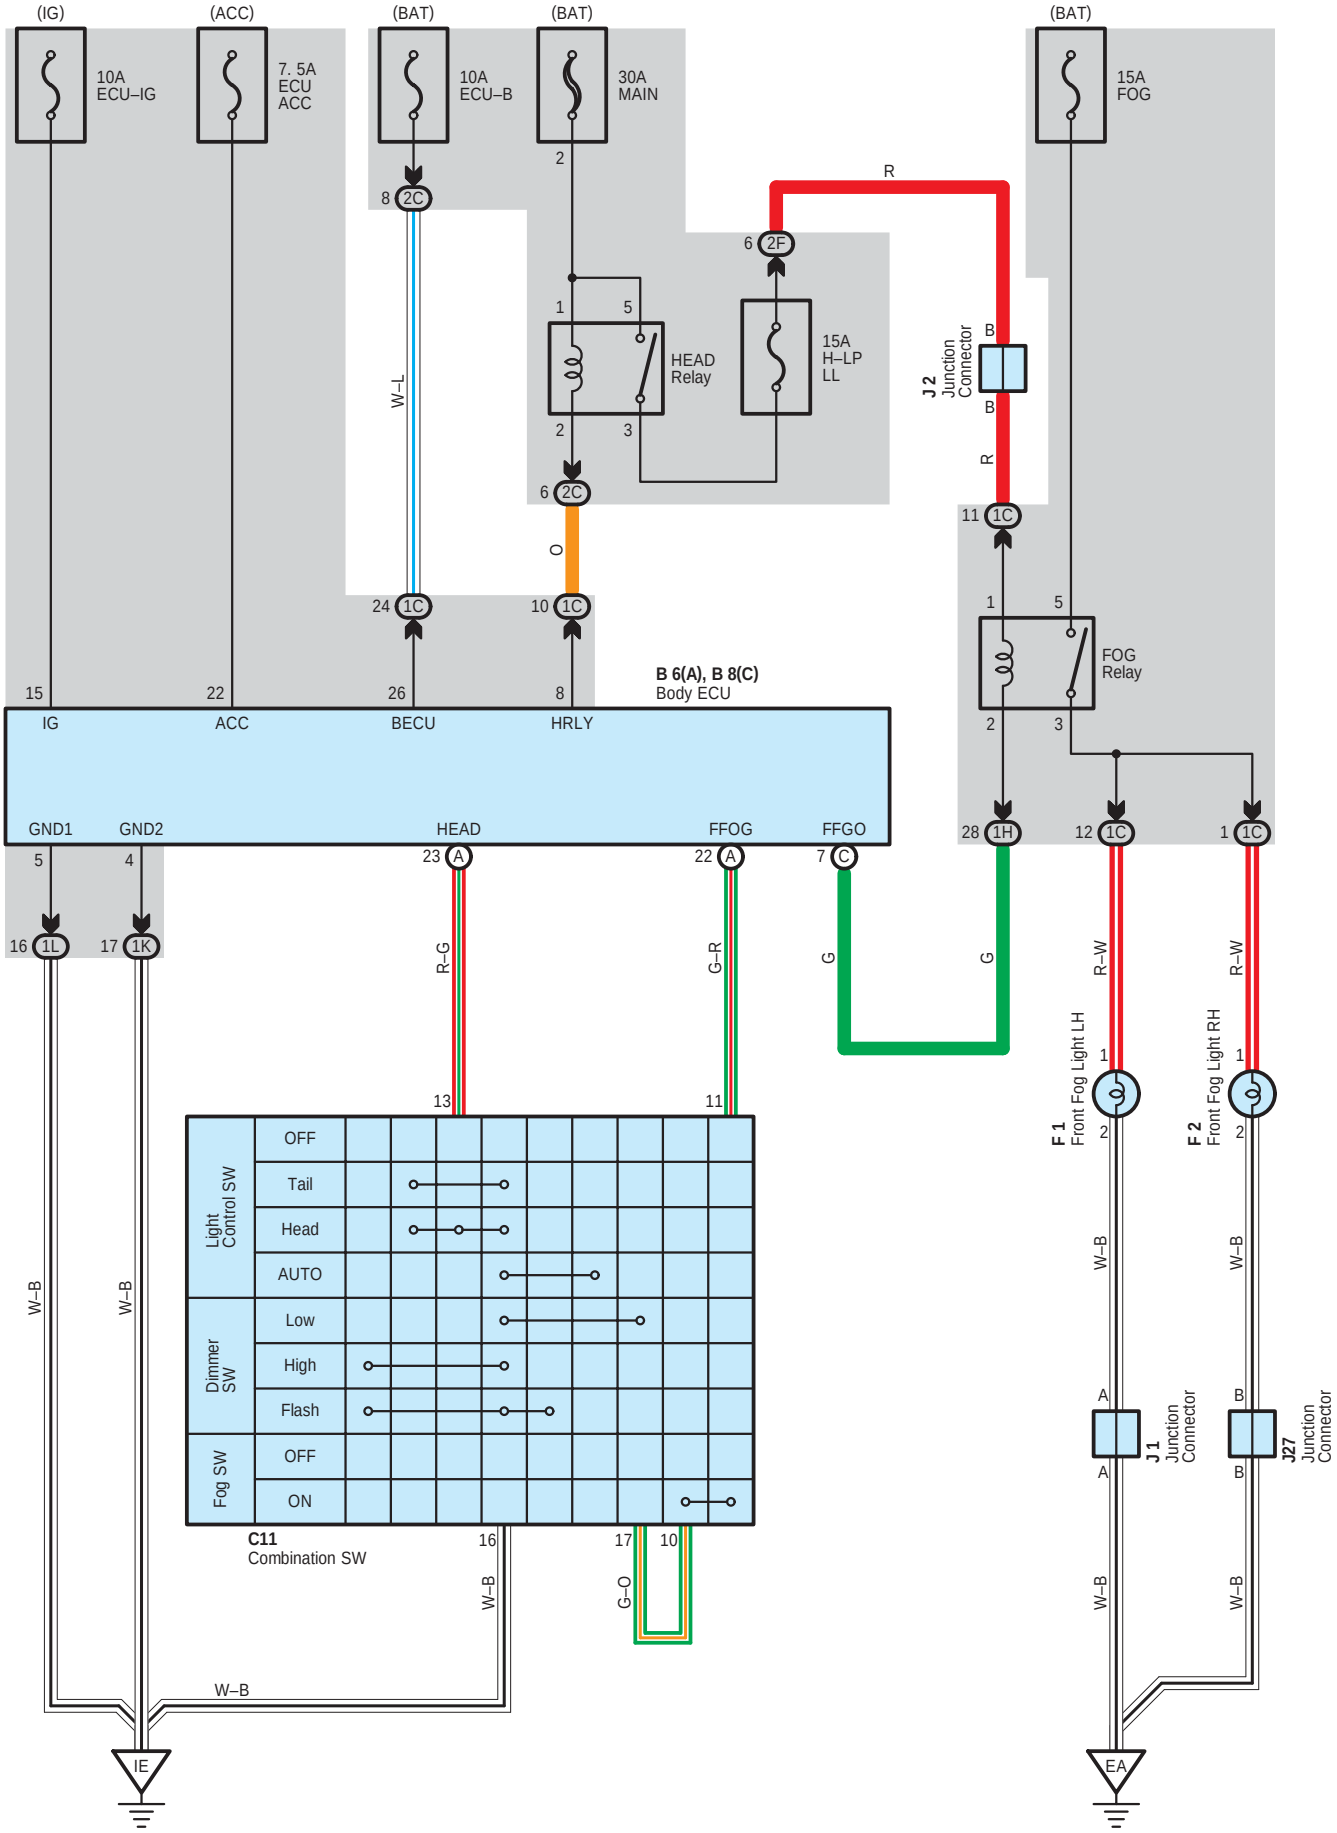

(IG)
(ACC)
(BAT)
(BAT)
(BAT)
10A ECU–IG
7. 5A ECU ACC
10A ECU–B
30A MAIN
15A FOG
HEAD Relay
15A H–LP LL
FOG Relay
J2 Junction Connector
B 6(A), B 8(C) Body ECU
IG
ACC
BECU
HRLY
GND1
GND2
HEAD
FFOG
FFGO
W–L
O
R
R–G
G–R
G
R–W
W–B
G–O
Light Control SW
Dimmer SW
Fog SW
OFF
Tail
Head
AUTO
Low
High
Flash
OFF
ON
C11 Combination SW
F1 Front Fog Light LH
F2 Front Fog Light RH
J1 Junction Connector
J27 Junction Connector
IE
EA

○ : **Parts Location**

Code		See Page	Code	See Page	Code	See Page
B6	A	38	F1	36	J2	37
B8	C	38	F2	36	J27	40
C11		39	J1	37		

⬭ : **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	31	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1H	30	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1K	31	
1L		
2C	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2F		

▽ : **Ground Points**

Code	See Page	Ground Points Location
EA	50	Front Side of the Right Fender Apron
IE	52	Left Kick Panel