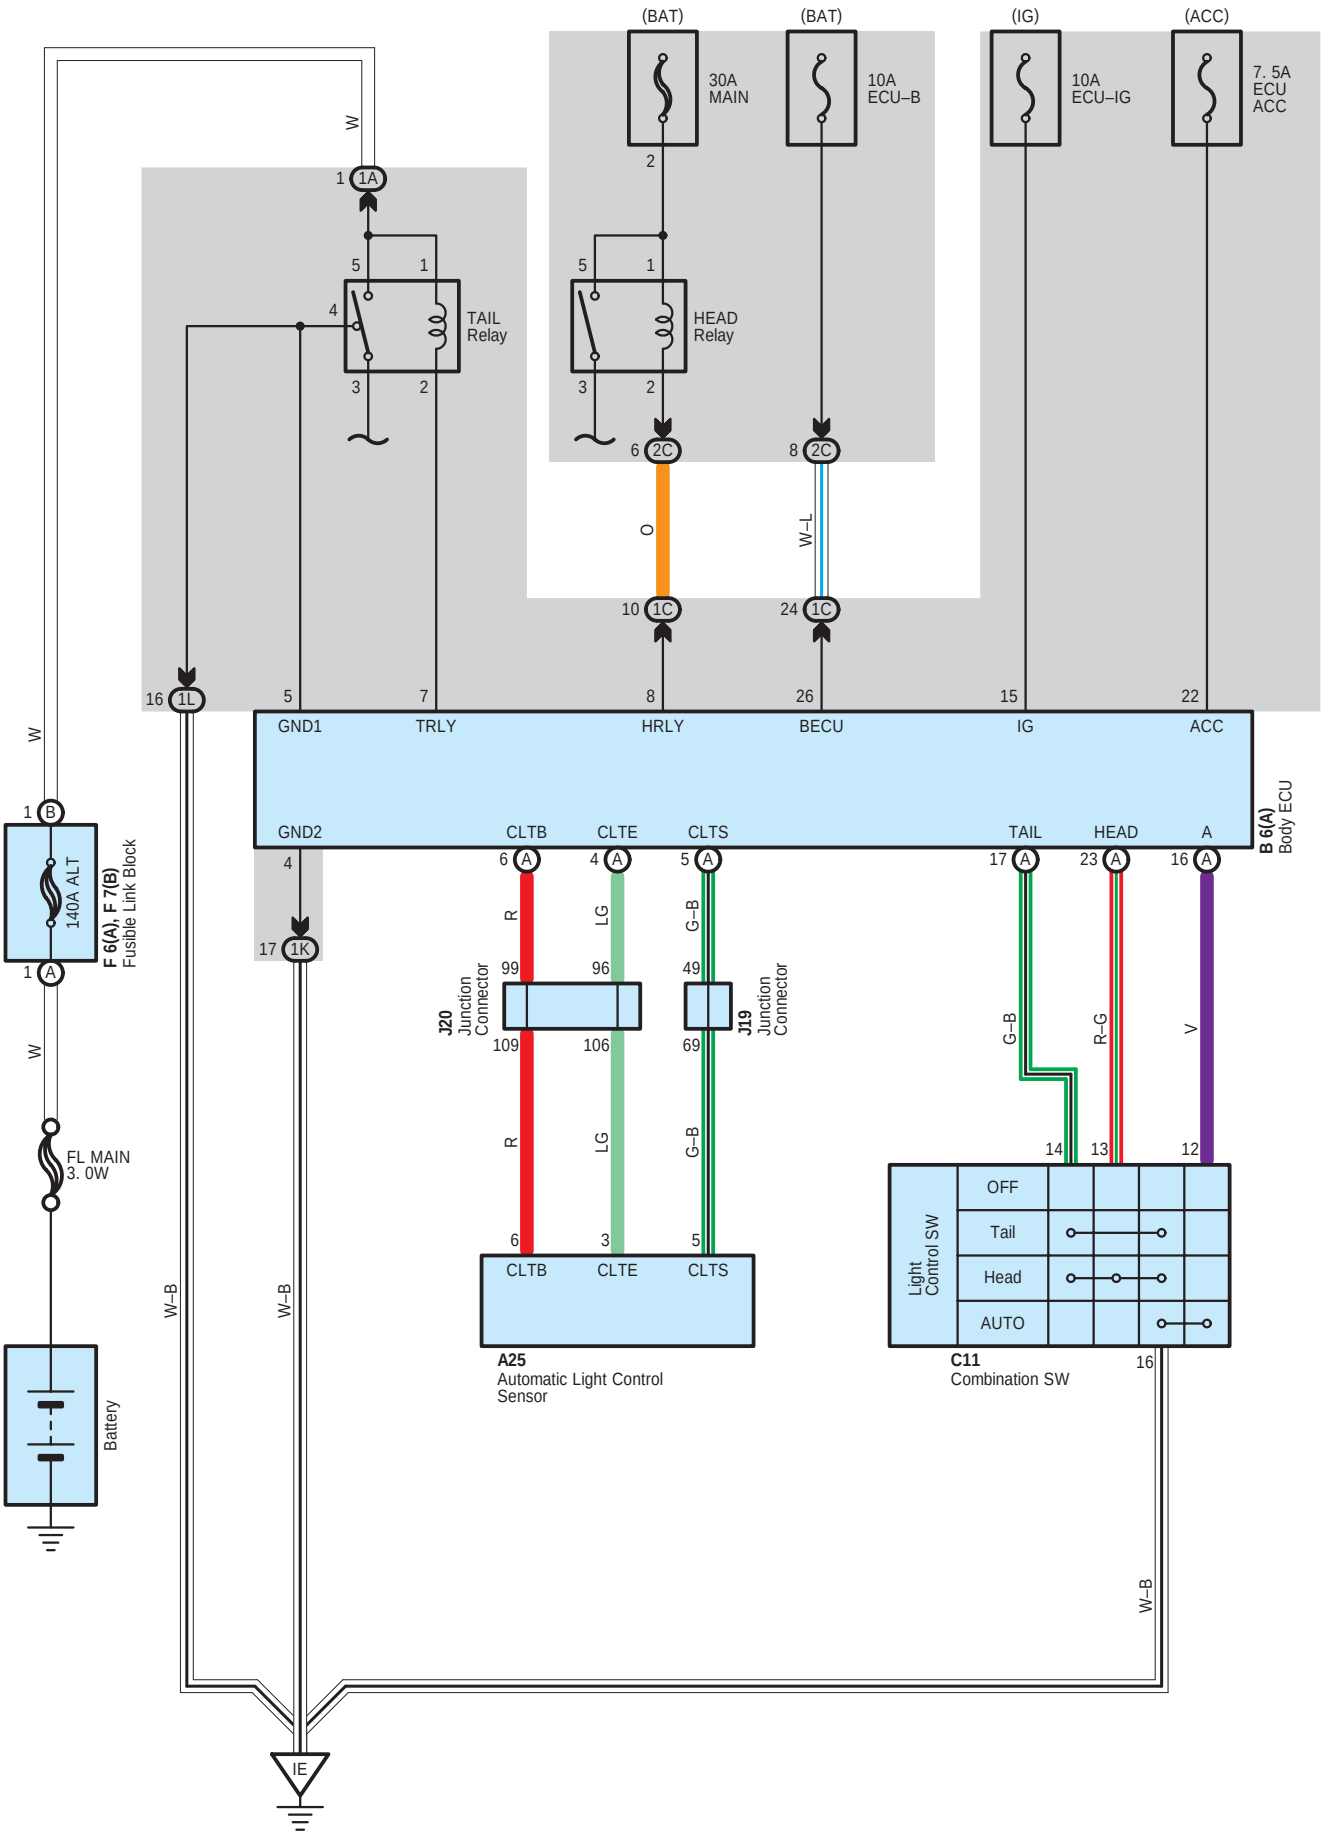

(BAT)
(BAT)
(IG)
(ACC)
30A MAIN
10A ECU–B
10A ECU–IG
7. 5A ECU ACC
TAIL Relay
HEAD Relay
W
O
W–L
GND1
TRLY
HRLY
BECU
IG
ACC
GND2
CLTB
CLTE
CLTS
TAIL
HEAD
A
B 6(A) Body ECU
F 6(A), F 7(B) Fusible Link Block
140A ALT
FL MAIN 3. 0W
Battery
J20 Junction Connector
J19 Junction Connector
R
LG
G–B
R–G
V
W–B
IE
A25 Automatic Light Control Sensor
C11 Combination SW
Light Control SW
OFF
Tail
Head
AUTO

: Parts Location

Code	See Page	Code	See Page	Code	See Page
A25	38	F6 A	36	J20	40
B6 A	38	F7 B	36		
C11	39	J19	40		

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	31	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1C		
1K	31	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1L		
2C	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)

: Ground Points

Code	See Page	Ground Points Location
IE	52	Left Kick Panel