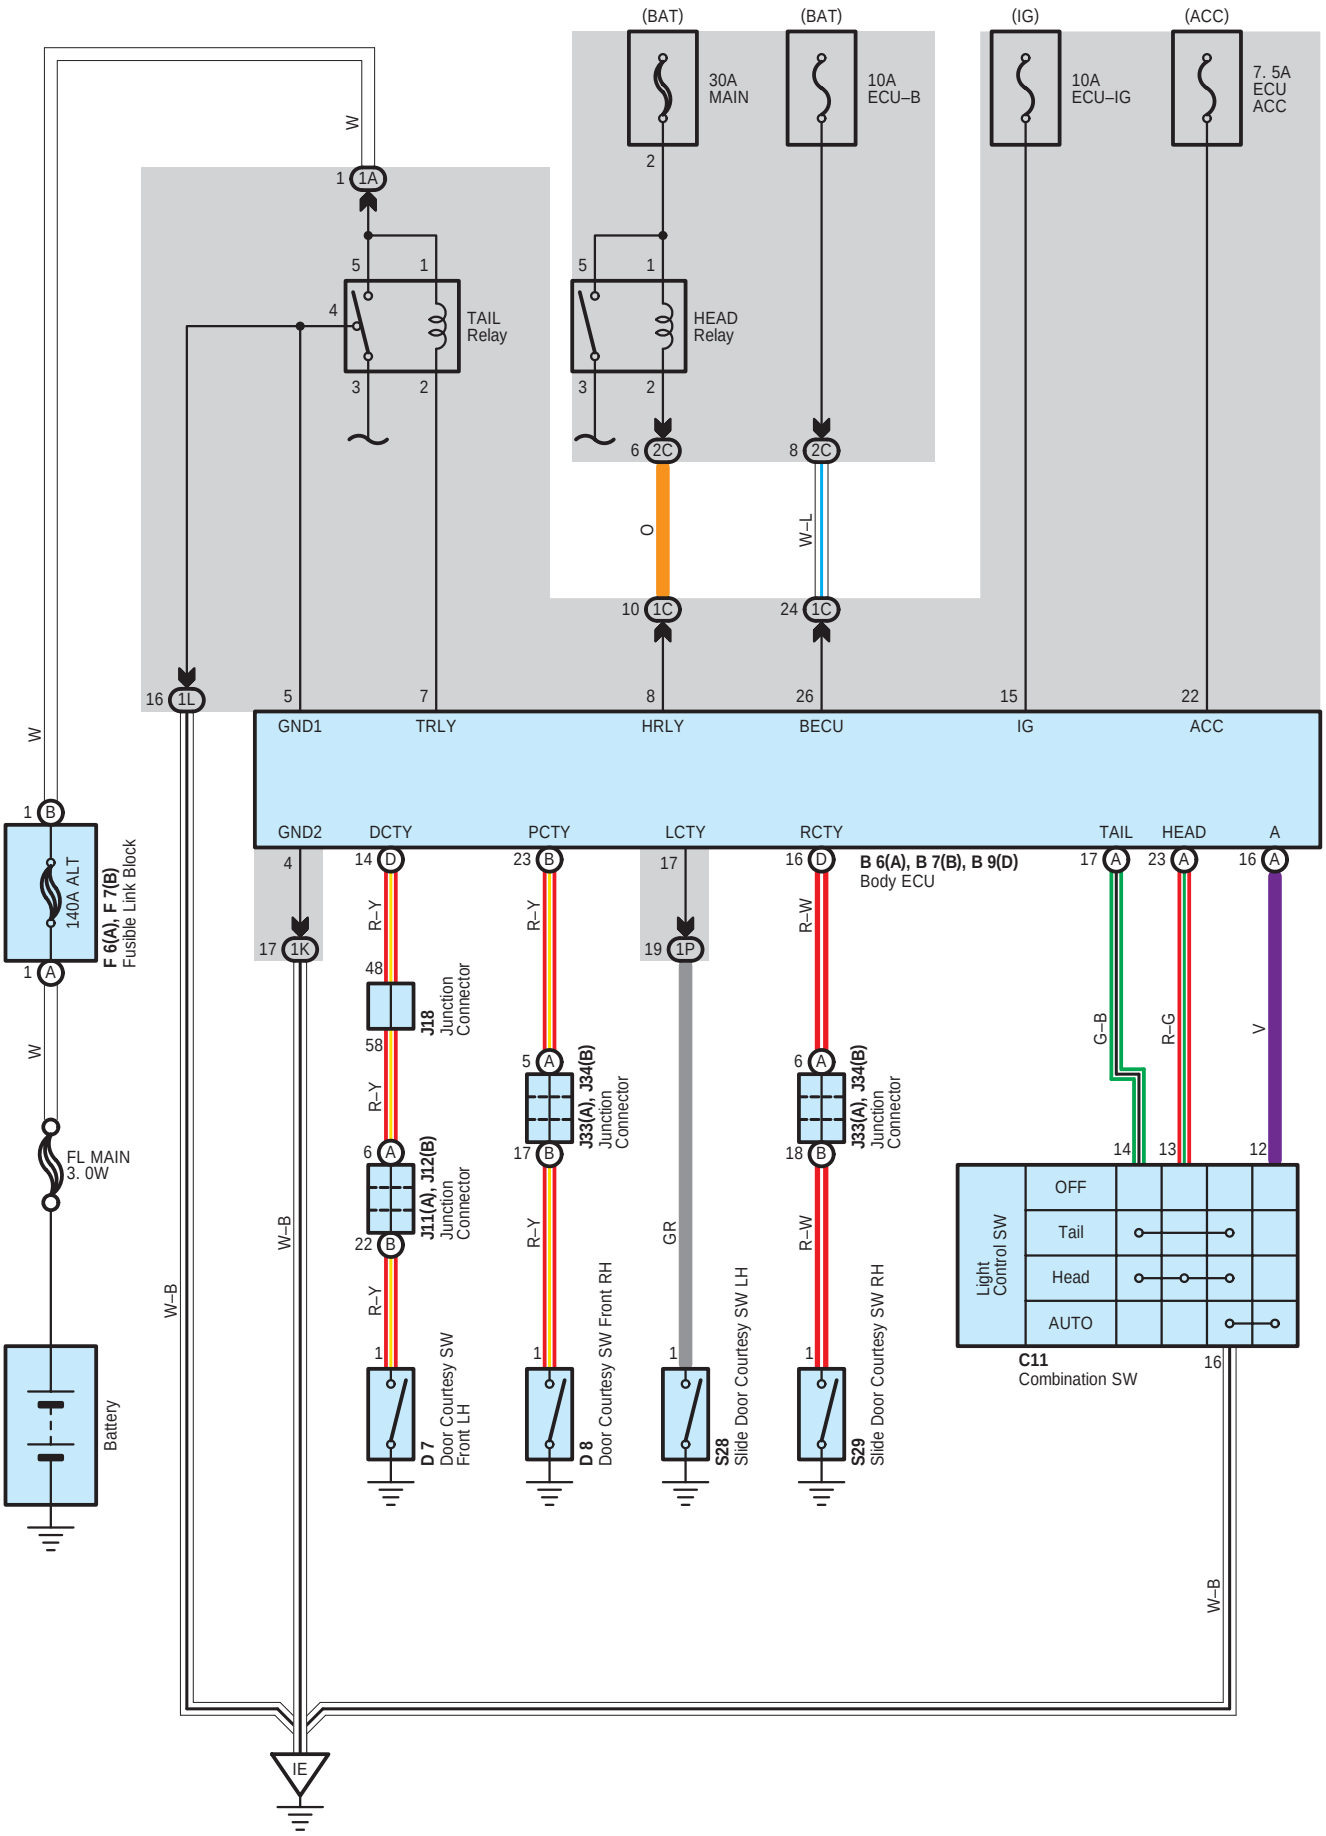

(BAT)
(BAT)
(IG)
(ACC)
30A MAIN
10A ECU–B
10A ECU–IG
7. 5A ECU ACC
TAIL Relay
HEAD Relay
GND1
TRLY
HRLY
BECU
IG
ACC
GND2
DCTY
PCTY
LCTY
RCTY
TAIL
HEAD
A
B 6(A), B 7(B), B 9(D) Body ECU
F 6(A), F 7(B) Fusible Link Block
140A ALT
FL MAIN 3. 0W
Battery
J18 Junction Connector
J11(A), J12(B) Junction Connector
J33(A), J34(B) Junction Connector
D 7 Door Courtesy SW Front LH
D 8 Door Courtesy SW Front RH
S28 Slide Door Courtesy SW LH
S29 Slide Door Courtesy SW RH
Light Control SW
OFF
Tail
Head
AUTO
C11 Combination SW
IE

: Parts Location

Code		See Page	Code		See Page	Code		See Page
B6	A	38	D8		42	J18		40
B7	B	38	F6	A	36	J33	A	40
B9	D	38	F7	B	36	J34	B	40
C11		39	J11	A	40	S28		45
D7		42	J12	B	40	S29		45

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	31	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1C		
1K	31	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1L		
1P	31	Floor No.1 Wire and Driver Side J/B (Lower Finish Panel)
2C	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)

: Ground Points

Code	See Page	Ground Points Location
IE	52	Left Kick Panel