
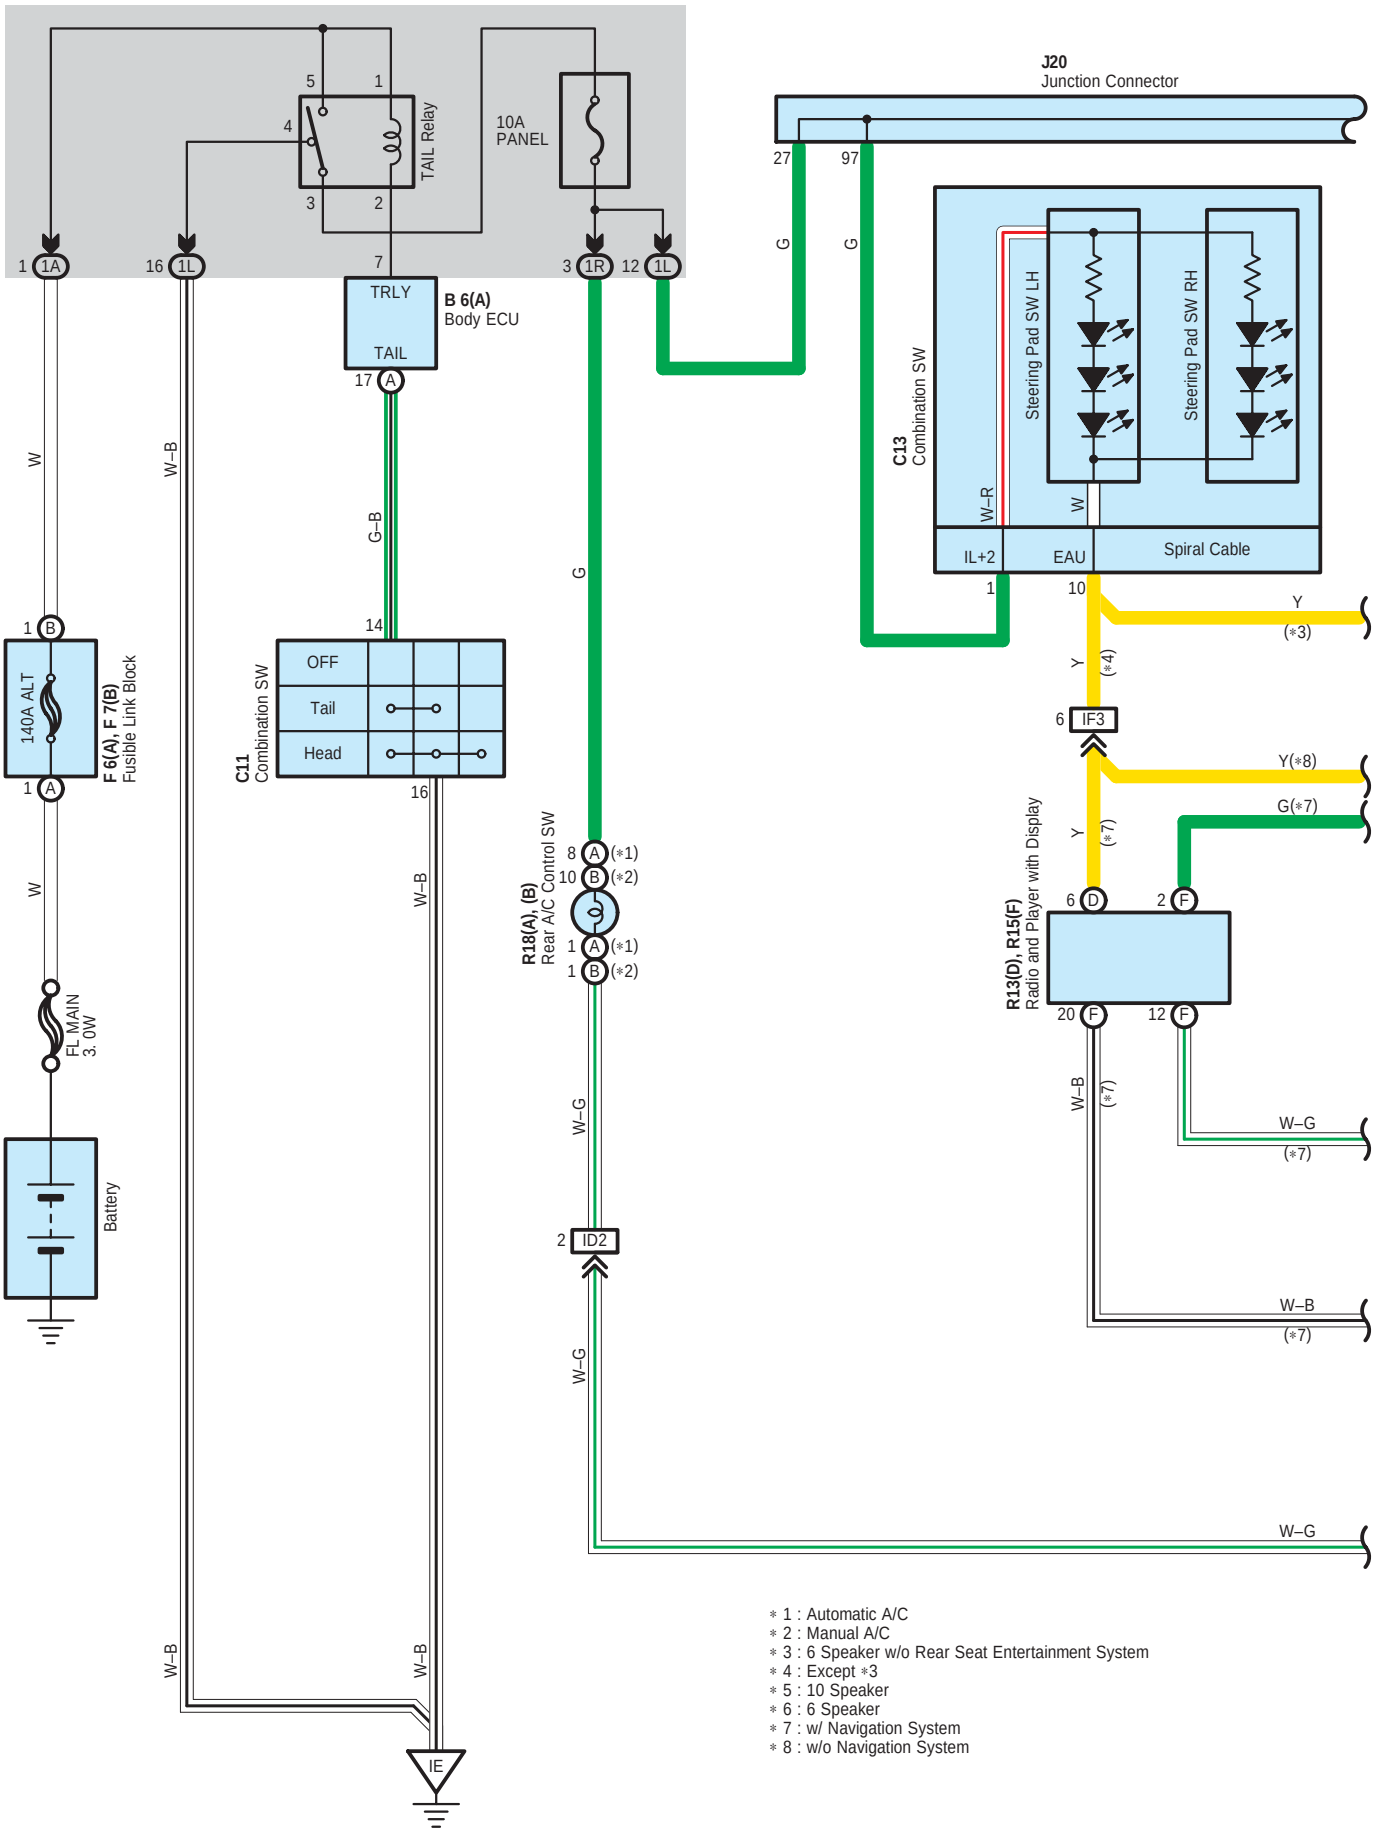
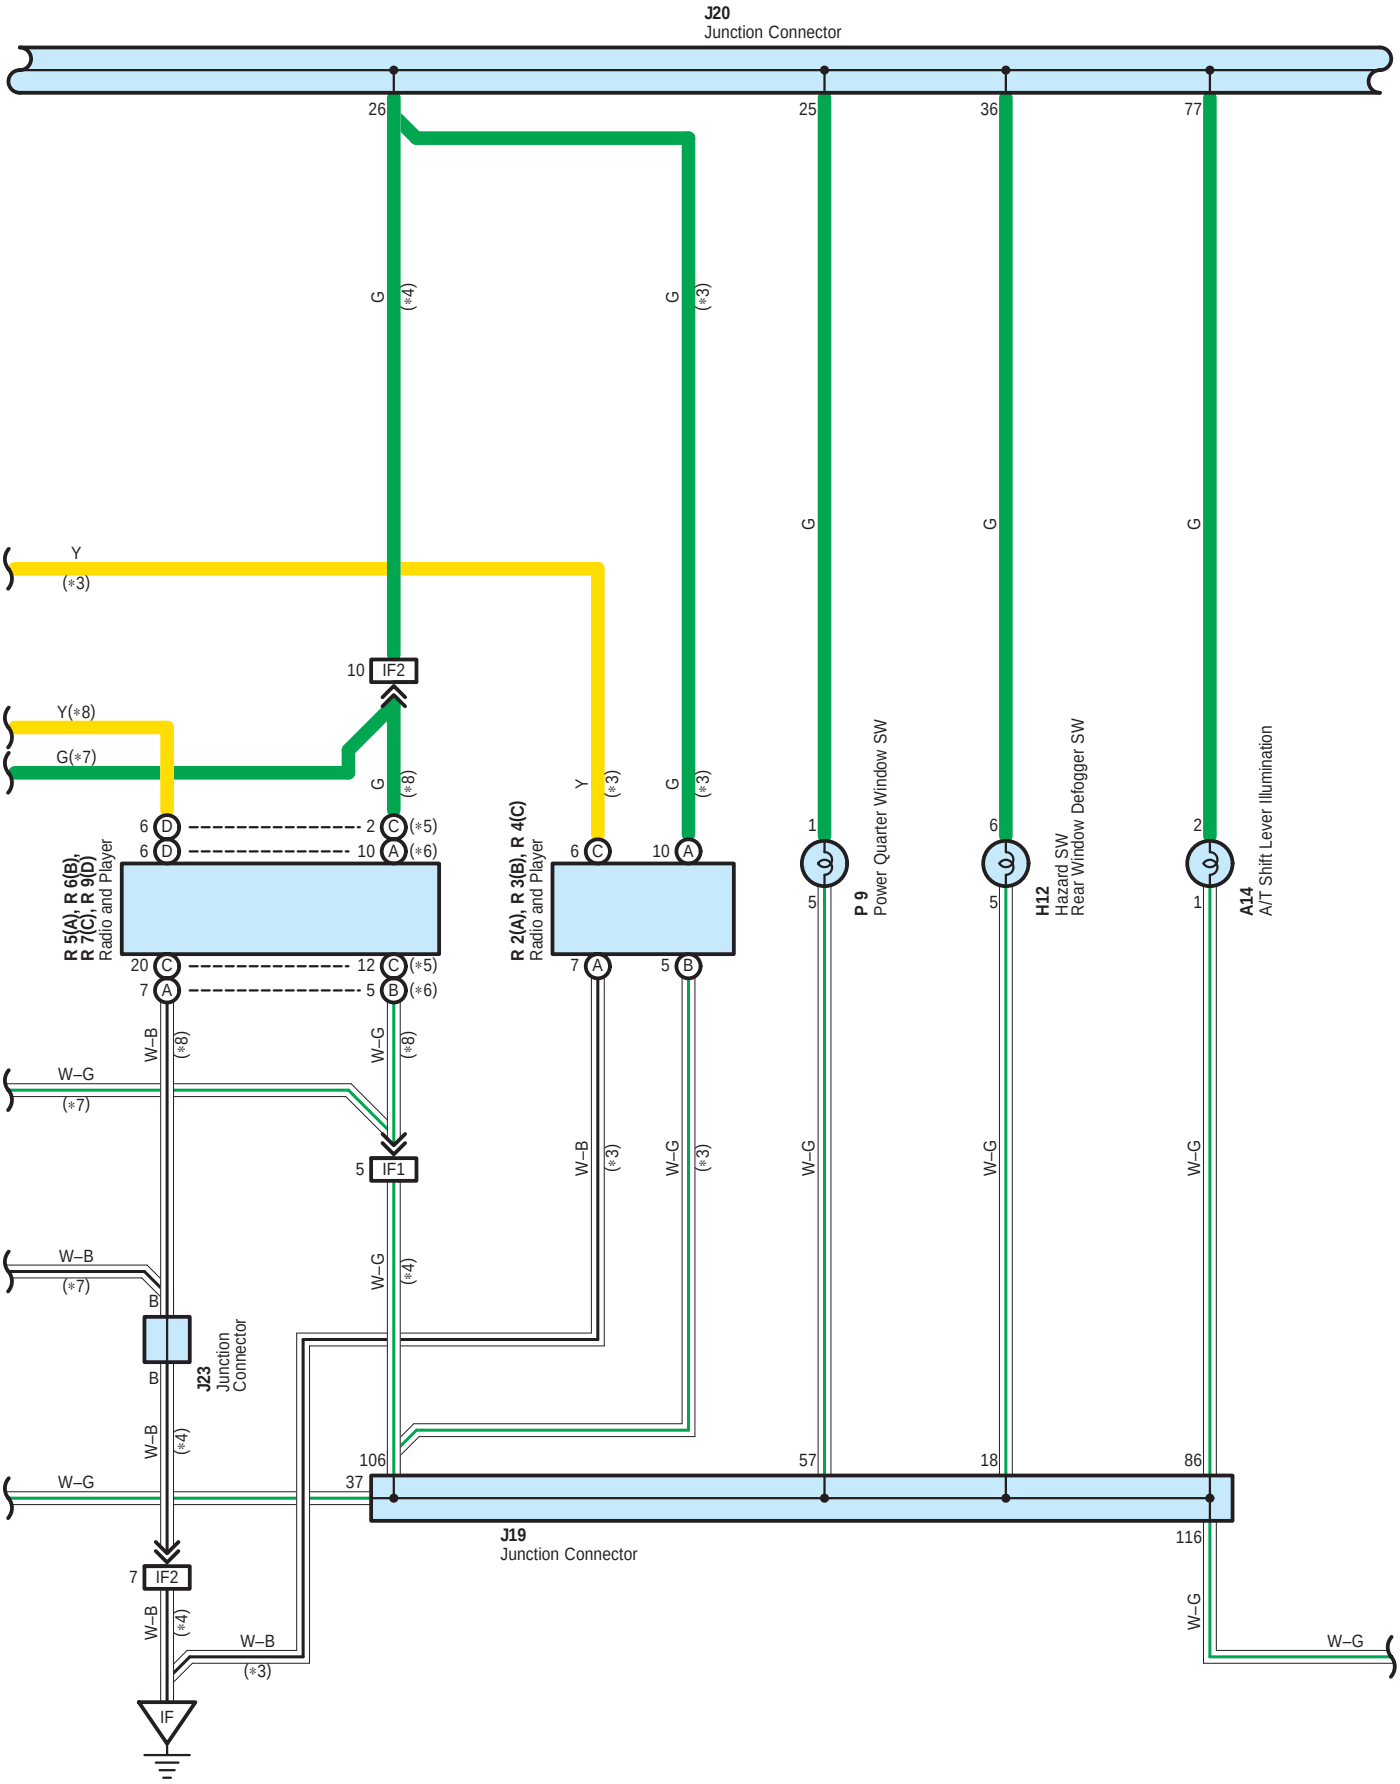



* 1 : Automatic A/C
* 2 : Manual A/C
* 3 : 6 Speaker w/o Rear Seat Entertainment System
* 4 : Except *3
* 5 : 10 Speaker
* 6 : 6 Speaker
* 7 : w/ Navigation System
* 8 : w/o Navigation System


J20
Junction Connector
26
25
36
77
G
(*4)
G
(*3)
G
G
G
Y
(*3)
10
IF2
Y(*8)
G(*7)
G
(*8)
Y
(*3)
G
(*3)
6
D
2
C
(*5)
6
D
10
A
(*6)
R 5(A), R 6(B), R 7(C), R 9(D)
Radio and Player
R 2(A), R 3(B), R 4(C)
Radio and Player
6
C
10
A
1
5
P 9
Power Quarter Window SW
6
5
H12
Hazard SW
Rear Window Defogger SW
2
1
A14
A/T Shift Lever Illumination
20
C
12
C
(*5)
7
A
5
B
(*6)
7
A
5
B
W–B
(*8)
W–G
(*8)
W–G
(*7)
W–G
W–G
W–G
5
IF1
W–B
(*3)
W–G
(*3)
W–B
(*7)
W–G
(*4)
B
B
J23
Junction
Connector
W–B
(*4)
106
57
18
86
W–G
37
J19
Junction Connector
116
7
IF2
W–B
(*4)
W–G
W–B
(*3)
IF

* 1 : Automatic A/C
* 2 : Manual A/C
* 9 : w/ Power Back Door

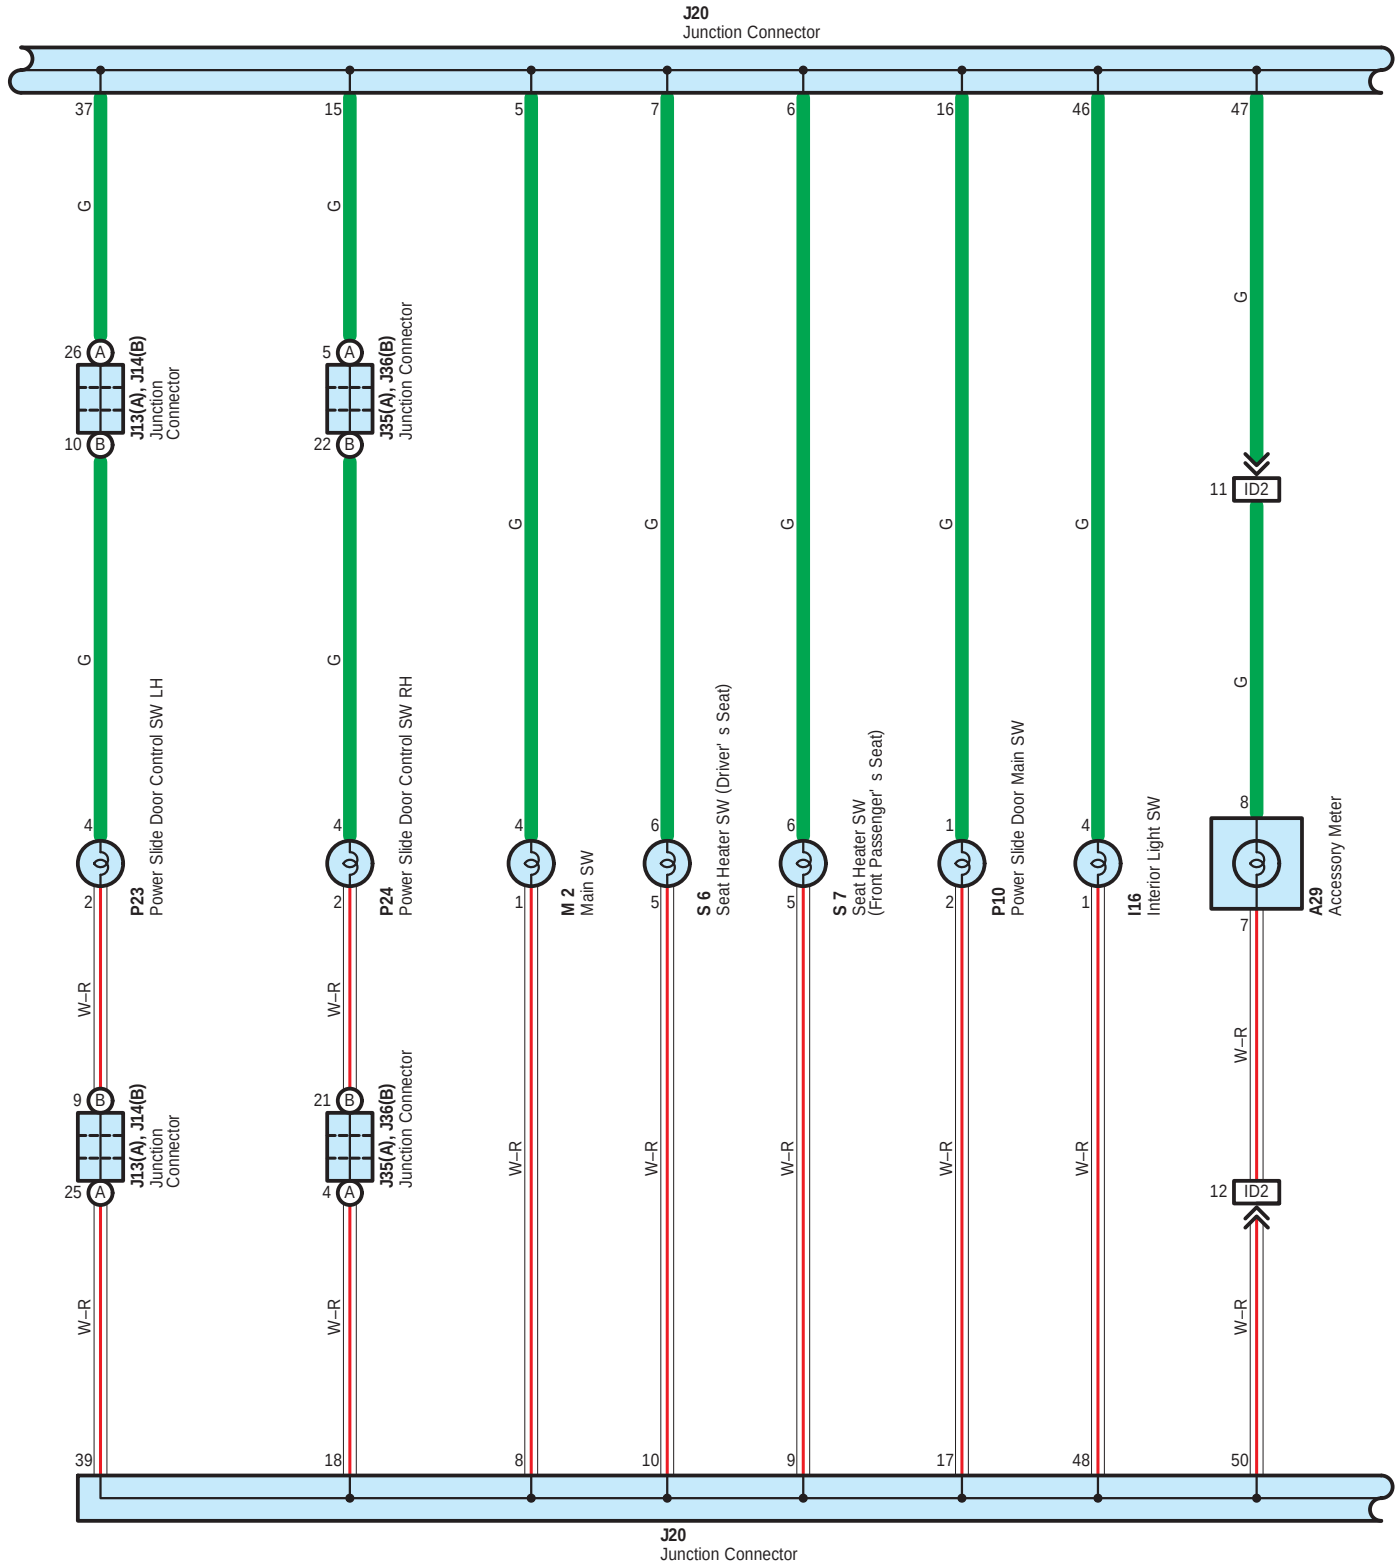

W–G W–G

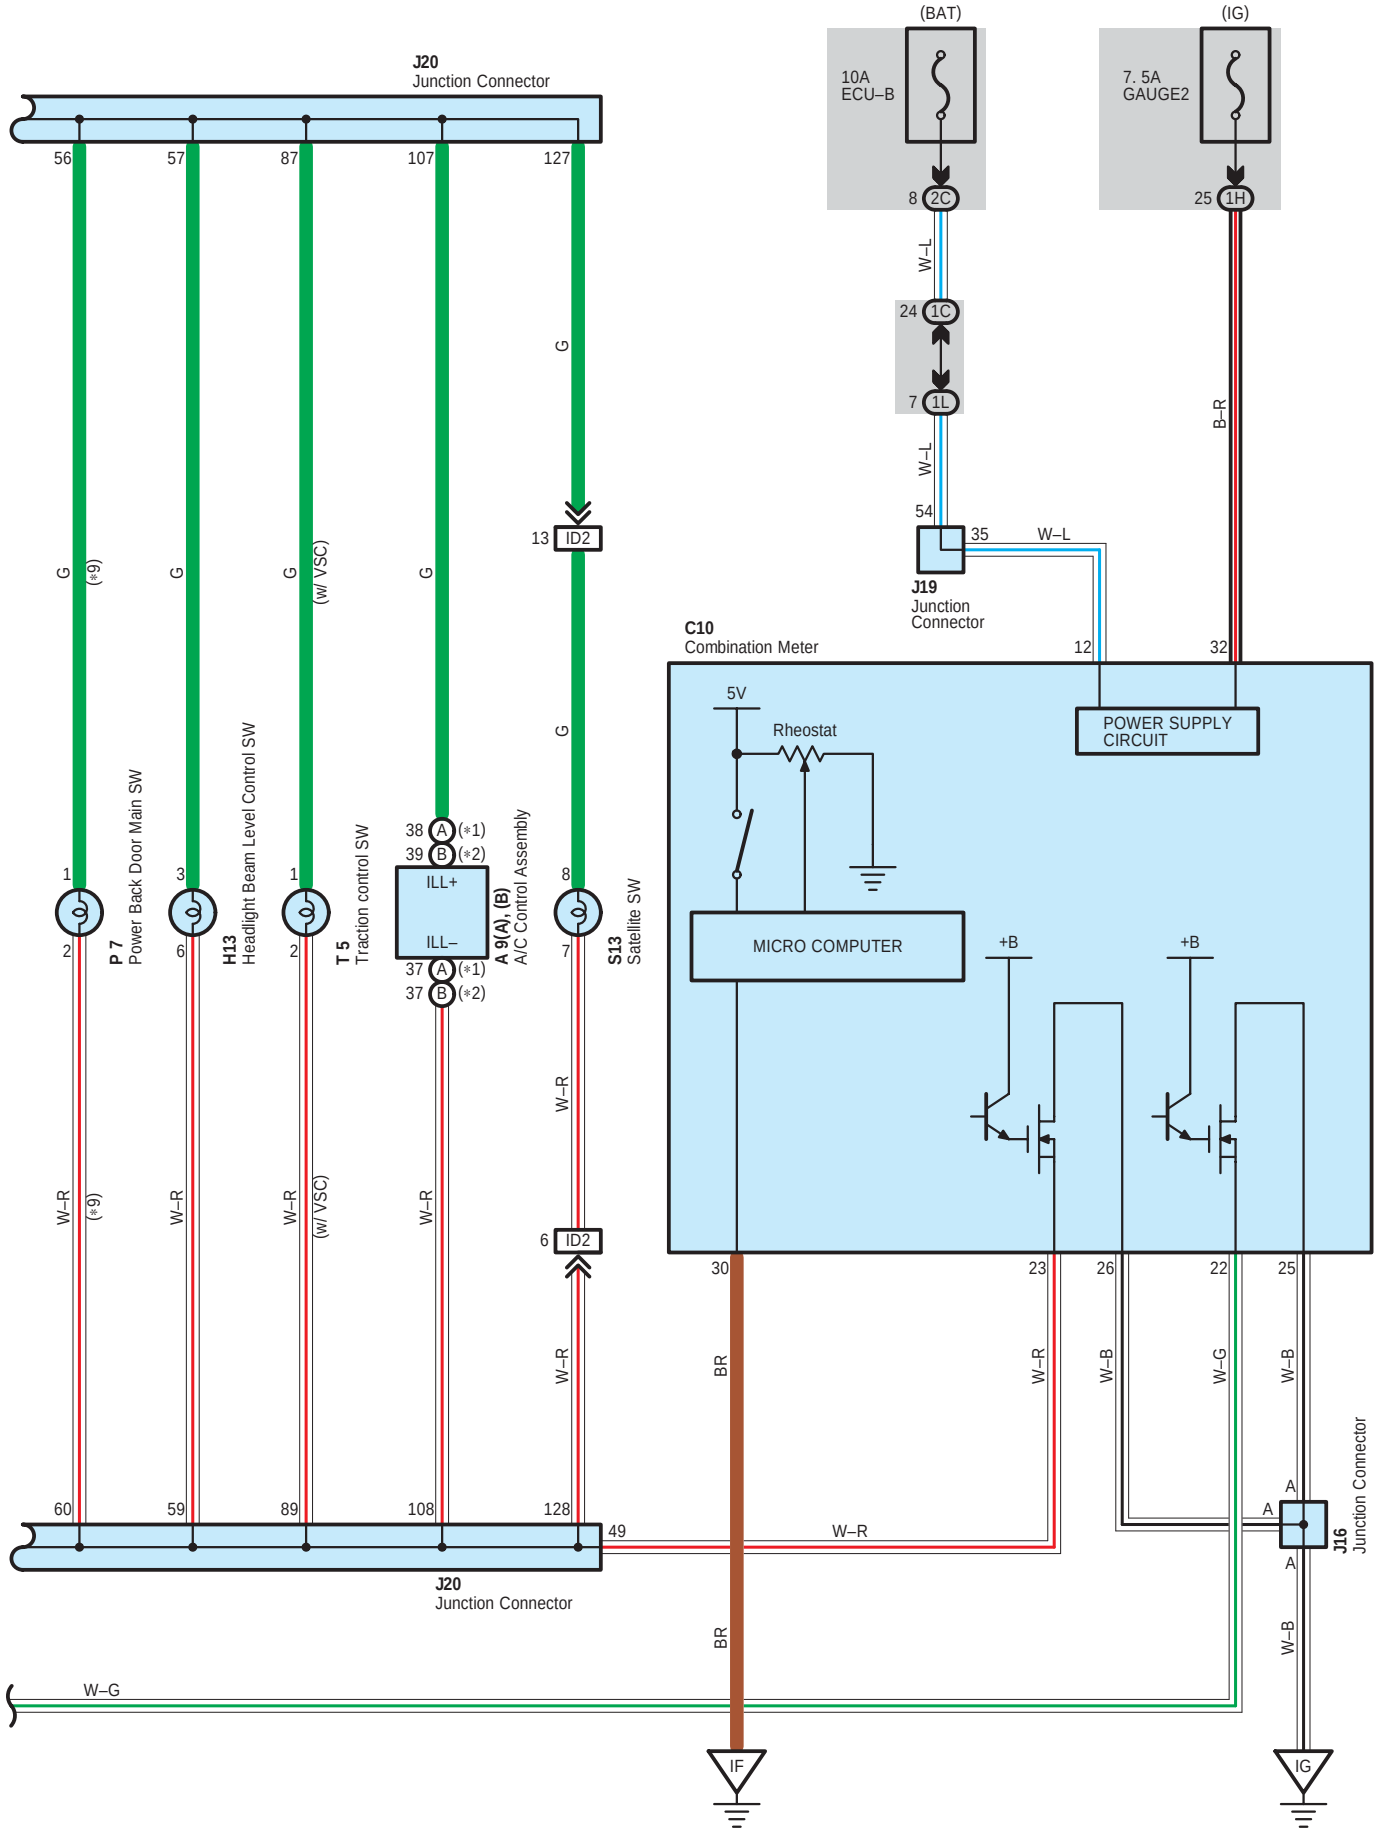
(BAT)
(IG)
10A
ECU–B
7. 5A
GAUGE2
8 2C
25 1H
W–L
24 1C
7 1L
W–L
B–R
54
35
W–L
J19
Junction
Connector
J20
Junction Connector
56
57
87
107
127
G
13 ID2
G
(*9)
G
G
(w/ VSC)
G
G
C10
Combination Meter
12
32
5V
Rheostat
POWER SUPPLY
CIRCUIT
38 A (*1)
39 B (*2)
ILL+
ILL–
37 A (*1)
37 B (*2)
A 9(A), (B)
A/C Control Assembly
1
3
1
8
2
6
2
7
P 7
Power Back Door Main SW
H13
Headlight Beam Level Control SW
T 5
Traction control SW
S13
Satellite SW
MICRO COMPUTER
+B
+B
W–R
(*9)
W–R
W–R
(w/ VSC)
W–R
W–R
6 ID2
30
23
26
22
25
BR
W–R
W–B
W–G
W–B
60
59
89
108
128
49
W–R
J20
Junction Connector
A
A
A
J16
Junction Connector
BR
W–B
W–G
IF
IG

Illumination

: Parts Location

Code		See Page	Code		See Page	Code		See Page
A9	A	38	J14	B	40	R3	B	41
	B	38	J16		40	R4	C	41
A14		38	J19		40	R5	A	41
A29		42	J20		40	R6	B	41
B6	A	38	J23		40	R7	C	41
C10		39	J35	A	40	R9	D	41
C11		39	J36	B	40	R13	D	41
C13		39	M2		40	R15	F	41
F6	A	36	P7		41	R18	A	45
F7	B	36	P9		41		B	45
H12		39	P10		41	S6		41
H13		39	P23		44	S7		41
I16		39	P24		44	S13		45
J13	A	40	R2	A	41	T5		41

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	31	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1C		
1H	30	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1L	31	
1R	31	Roof Wire and Driver Side J/B (Lower Finish Panel)
2C	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID2	52	Roof Wire and Instrument Panel Wire (Near the Driver Side J/B)
IF1	52	Instrument Panel Wire and Instrument Panel No.2 Wire (Instrument Panel Center)
IF2		
IF3		

: Ground Points

Code	See Page	Ground Points Location
IE	52	Left Kick Panel
IF	52	Instrument Panel Brace LH
IG	52	Right Kick Panel