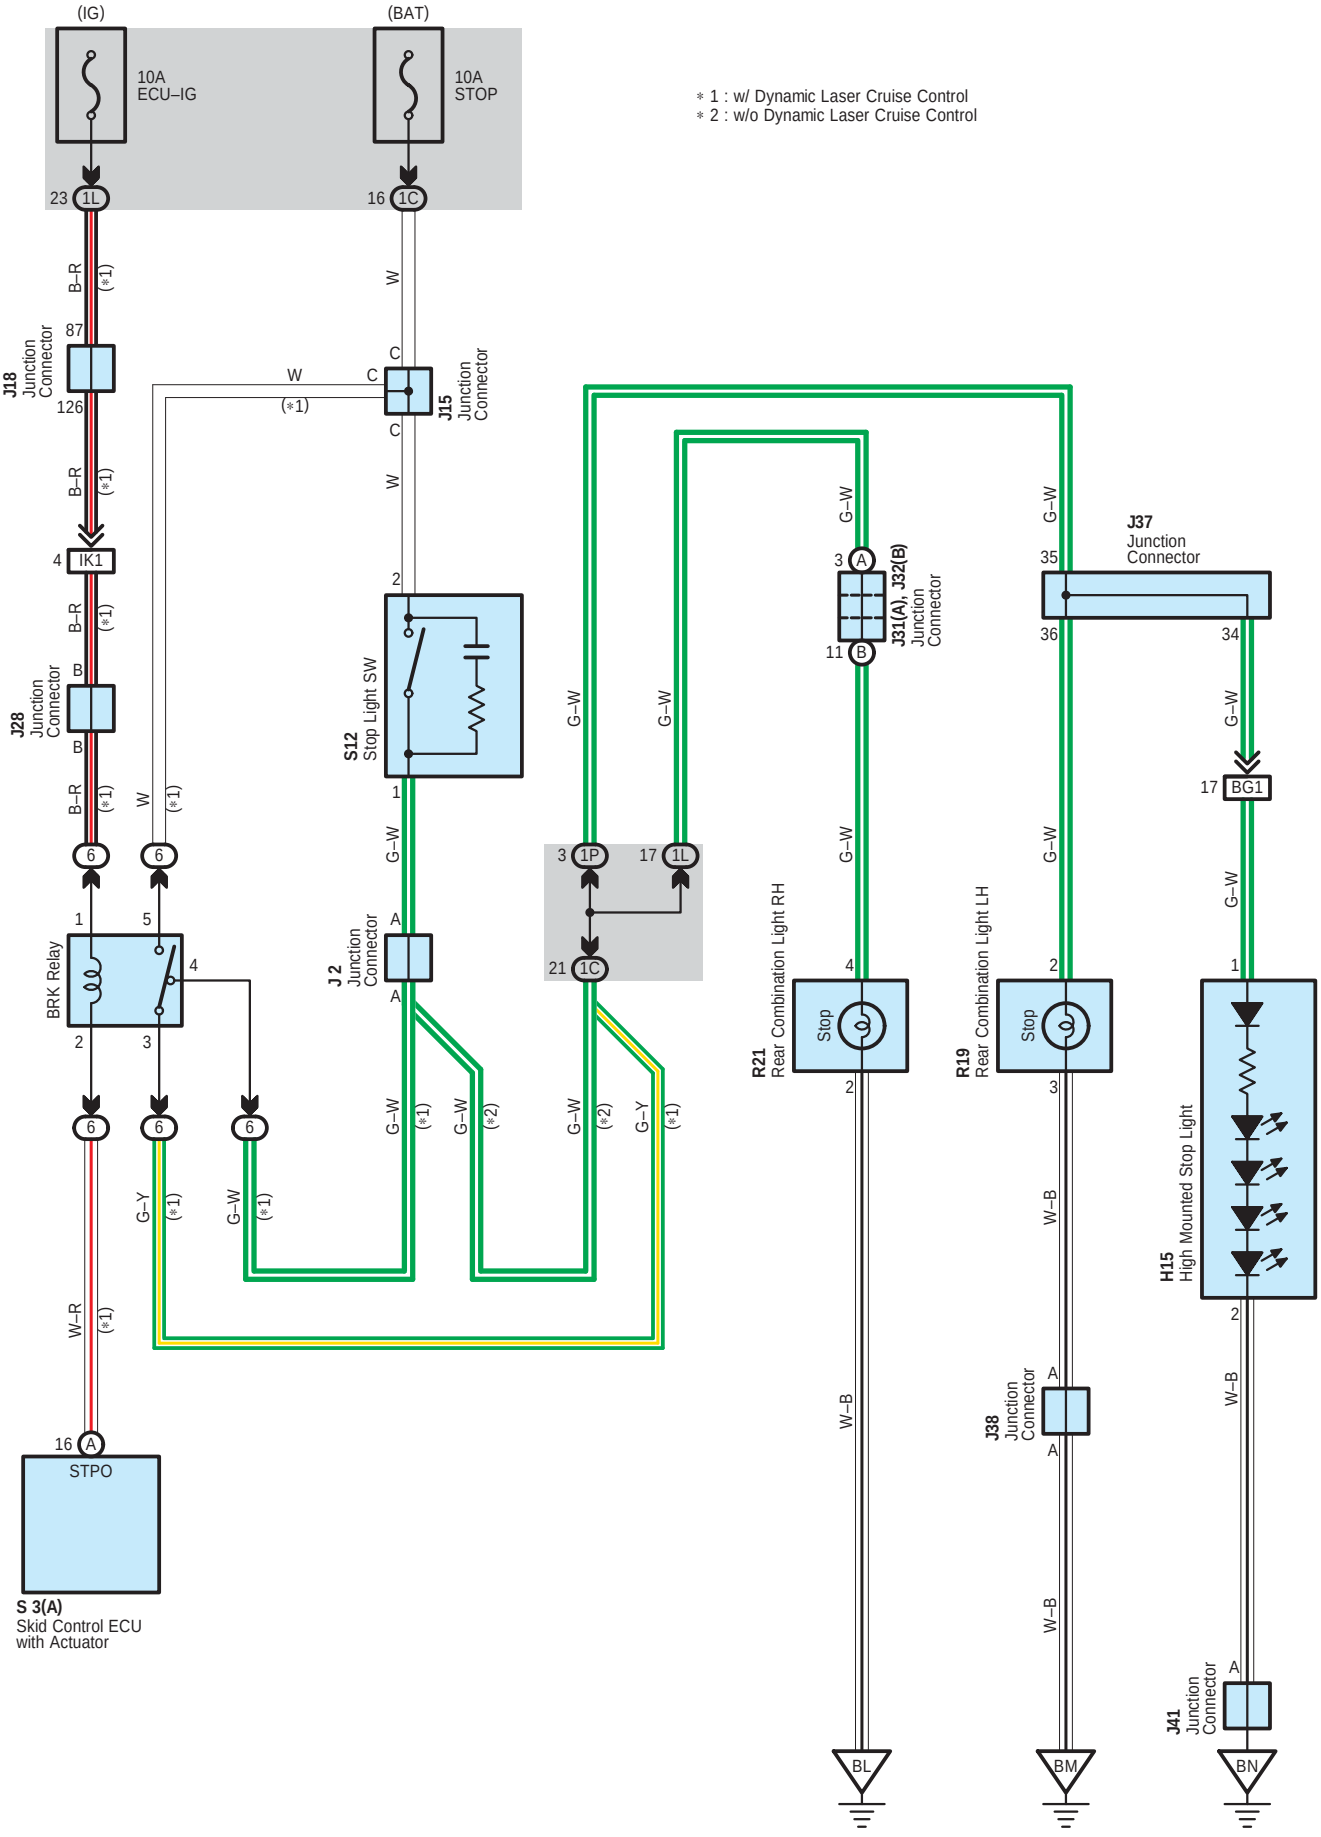

(IG)
(BAT)
10A
ECU–IG
10A
STOP
∗1 : w/ Dynamic Laser Cruise Control
∗2 : w/o Dynamic Laser Cruise Control
J18
Junction
Connector
J15
Junction
Connector
J28
Junction
Connector
J2
Junction
Connector
S12
Stop Light SW
BRK Relay
J31(A), J32(B)
Junction
Connector
J37
Junction
Connector
R21
Rear Combination Light RH
R19
Rear Combination Light LH
H15
High Mounted Stop Light
J38
Junction
Connector
J41
Junction
Connector
S 3(A)
Skid Control ECU
with Actuator
STPO
Stop
IK1
BG1
1L
1C
1P
B–R
W
G–W
G–Y
W–R
W–B
BL
BM
BN

: Parts Location

Code	See Page	Code	See Page	Code	See Page
H15	42	J31 A	40	R19	45
J2	37	J32 B	40	R21	45
J15	40	J37	43	S3 A	37
J18	40	J38	43	S12	41
J28	40	J41	43		

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
6	28	R/B No.6 (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	31	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1L	31	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1P	31	Floor No.1 Wire and Driver Side J/B (Lower Finish Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IK1	53	Engine Room Main Wire and Instrument Panel Wire (Right Kick Panel)
BG1	55	Back Door No.1 Wire and Floor No.1 Wire (Left Rear Quarter Panel)

: Ground Points

Code	See Page	Ground Points Location
BL	54	Right Rear Quarter Panel
BM	54	Left Rear Quarter Panel
BN	54	Left Side of the Back Door