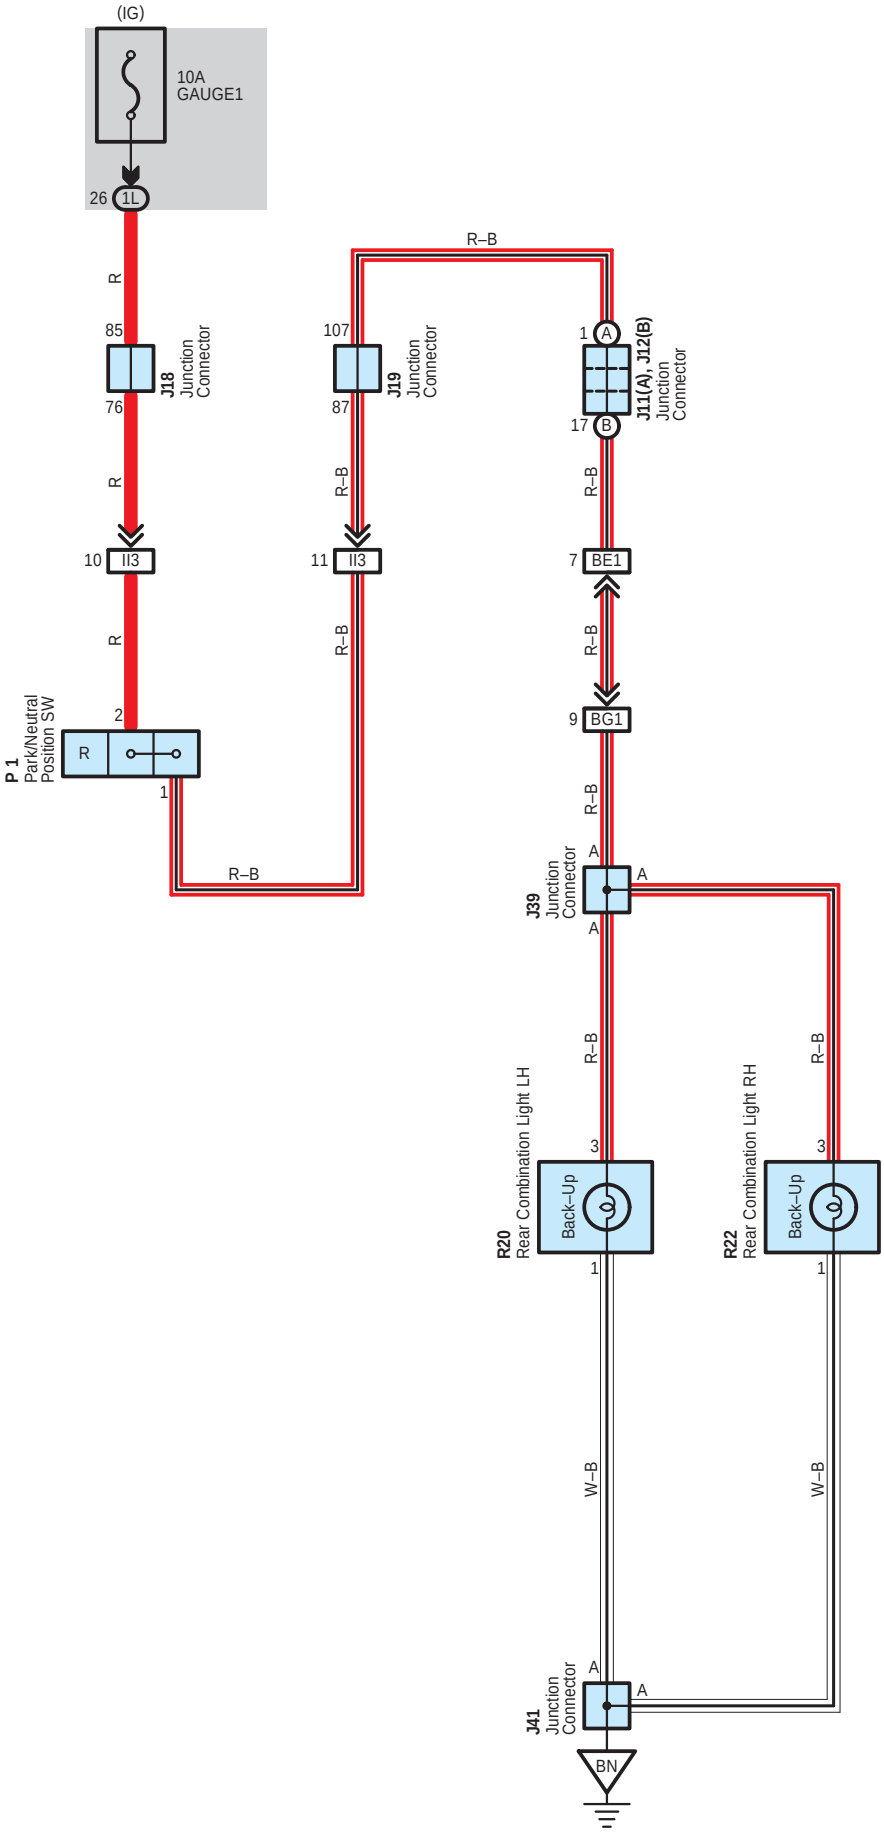

(IG)
10A
GAUGE1
26
1L
R
85
J18
Junction
Connector
76
R
10
II3
R
2
P 1
Park/Neutral
Position SW
R
1
R–B
107
J19
Junction
Connector
87
R–B
11
II3
R–B
R–B
1
A
J11(A), J12(B)
Junction
Connector
17
B
R–B
7
BE1
R–B
9
BG1
R–B
A
J39
Junction
Connector
A
A
R–B
3
R20
Rear Combination Light LH
Back–Up
1
R–B
3
R22
Rear Combination Light RH
Back–Up
1
W–B
W–B
A
J41
Junction
Connector
A
BN

: Parts Location

Code		See Page	Code	See Page	Code	See Page
J11	A	40	J19	40	P1	37
J12	B	40	J39	43	R20	45
J18		40	J41	43	R22	45

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1L	31	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
II3	53	Engine Wire and Instrument Panel Wire (Right Kick Panel)
BE1	54	Floor No.1 Wire and Floor No.1 Wire (Left Rear Quarter Panel)
BG1	55	Back Door No.1 Wire and Floor No.1 Wire (Left Rear Quarter Panel)

: Ground Points

Code	See Page	Ground Points Location
BN	54	Left Side of the Back Door