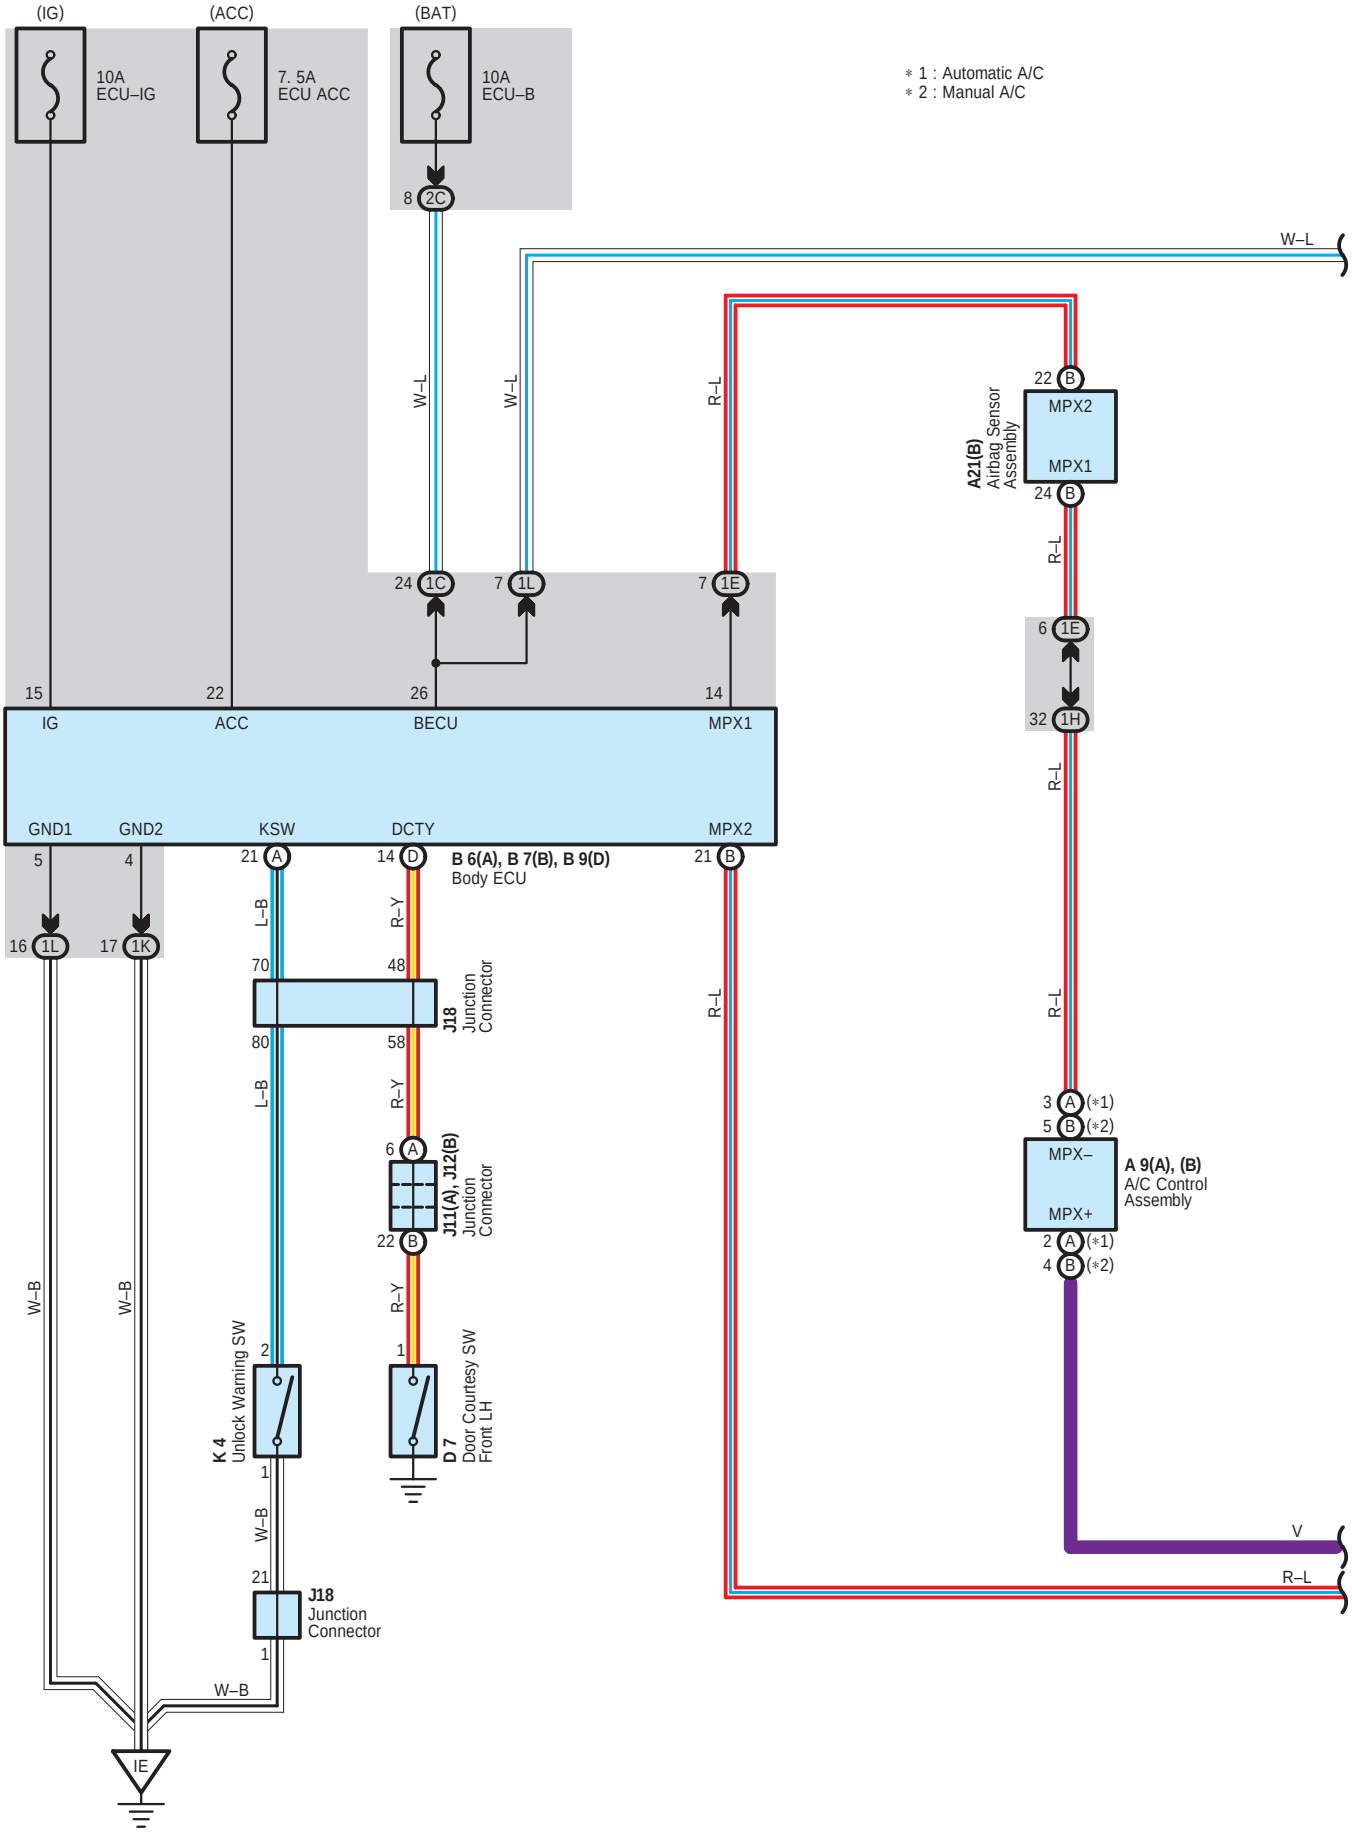
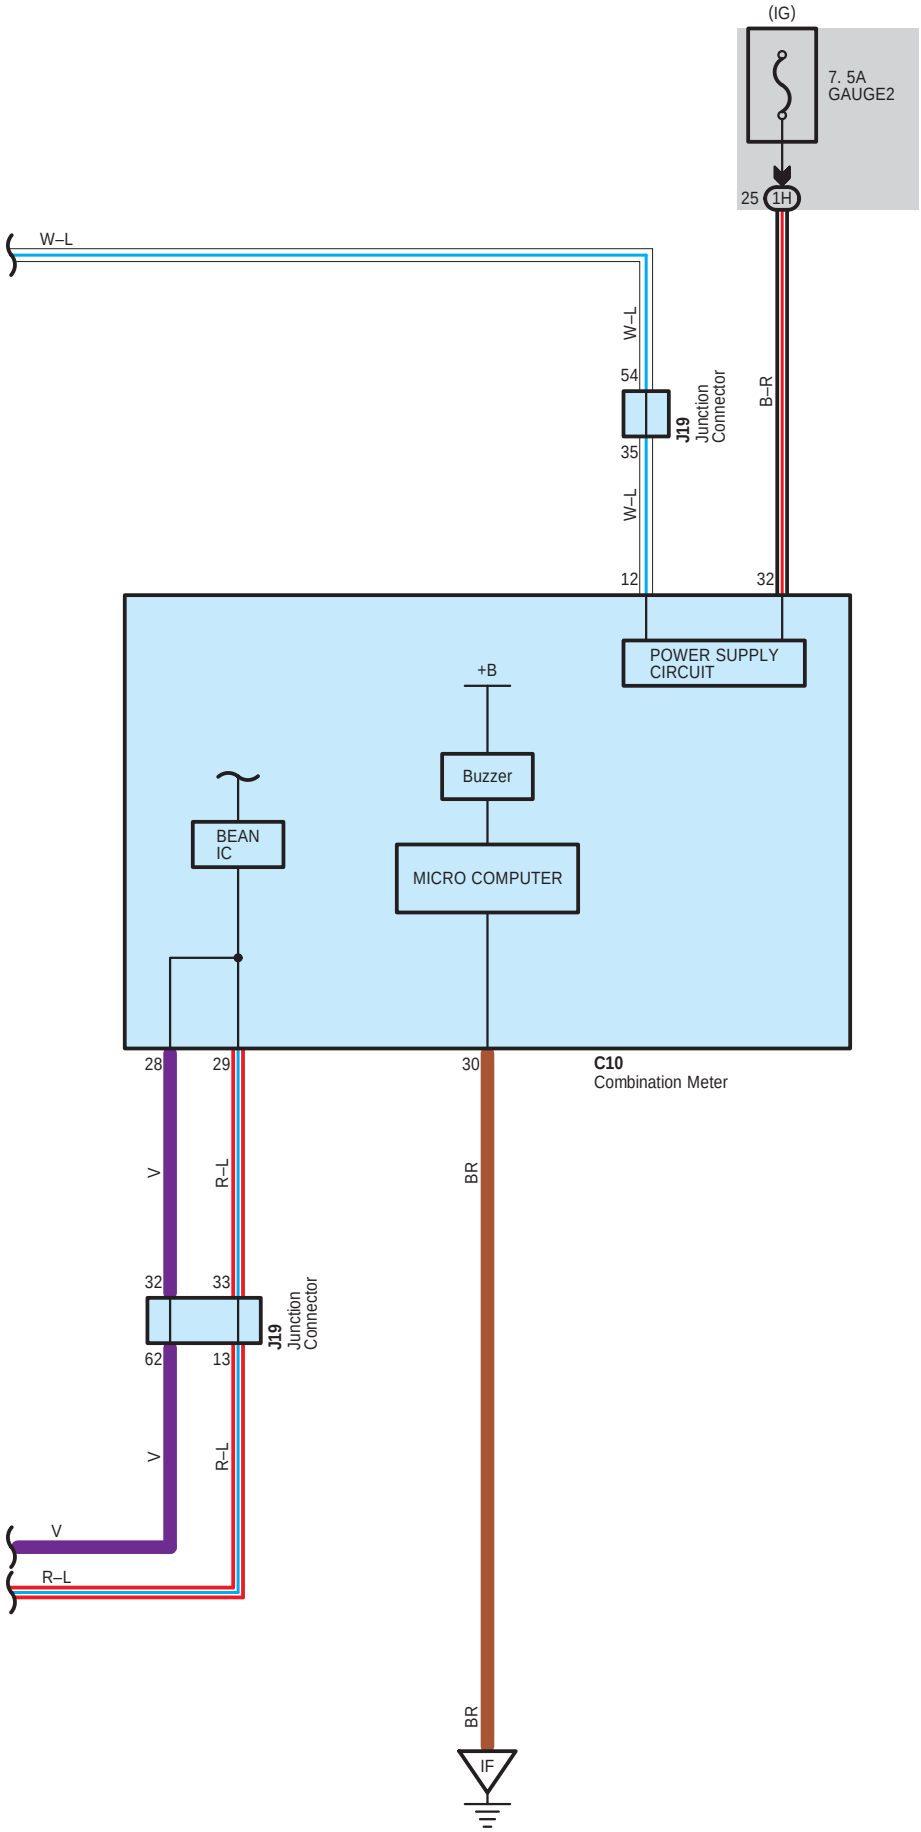

(IG)
(ACC)
(BAT)
10A
ECU–IG
7. 5A
ECU ACC
10A
ECU–B
∗ 1 : Automatic A/C
∗ 2 : Manual A/C
8 2C
W–L
W–L
R–L
22 B
MPX2
MPX1
24 B
A21(B)
Airbag Sensor
Assembly
24 1C
7 1L
7 1E
6 1E
32 1H
15
22
26
14
IG
ACC
BECU
MPX1
GND1
GND2
KSW
DCTY
MPX2
5
4
21 A
14 D
21 B
B 6(A), B 7(B), B 9(D)
Body ECU
16 1L
17 1K
L–B
R–Y
70
48
80
58
J18
Junction
Connector
6 A
22 B
J11(A), J12(B)
Junction
Connector
3 A (∗1)
5 B (∗2)
MPX–
MPX+
A 9(A), (B)
A/C Control
Assembly
2 A (∗1)
4 B (∗2)
W–B
W–B
2
1
K 4
Unlock Warning SW
1
D 7
Door Courtesy SW
Front LH
V
R–L
21
J18
Junction
Connector
1
W–B
IE


(IG)
7. 5A
GAUGE2
25
1H
W–L
W–L
54
J19
Junction
Connector
35
W–L
12
B–R
32
POWER SUPPLY
CIRCUIT
+B
Buzzer
BEAN
IC
MICRO COMPUTER
28
29
30
C10
Combination Meter
V
R–L
BR
32
33
J19
Junction
Connector
62
13
V
R–L
V
R–L
BR
IF

Key Reminder

○ : Parts Location

Code		See Page	Code		See Page	Code	See Page
A9	A	38	B9	D	38	J18	40
	B	38	C10		39	J19	40
A21	B	38	D7		42	K4	40
B6	A	38	J11	A	40		
B7	B	38	J12	B	40		

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	31	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1E	31	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1H	30	
1K	31	
1L		
2C	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)

▽ : Ground Points

Code	See Page	Ground Points Location
IE	52	Left Kick Panel
IF	52	Instrument Panel Brace LH