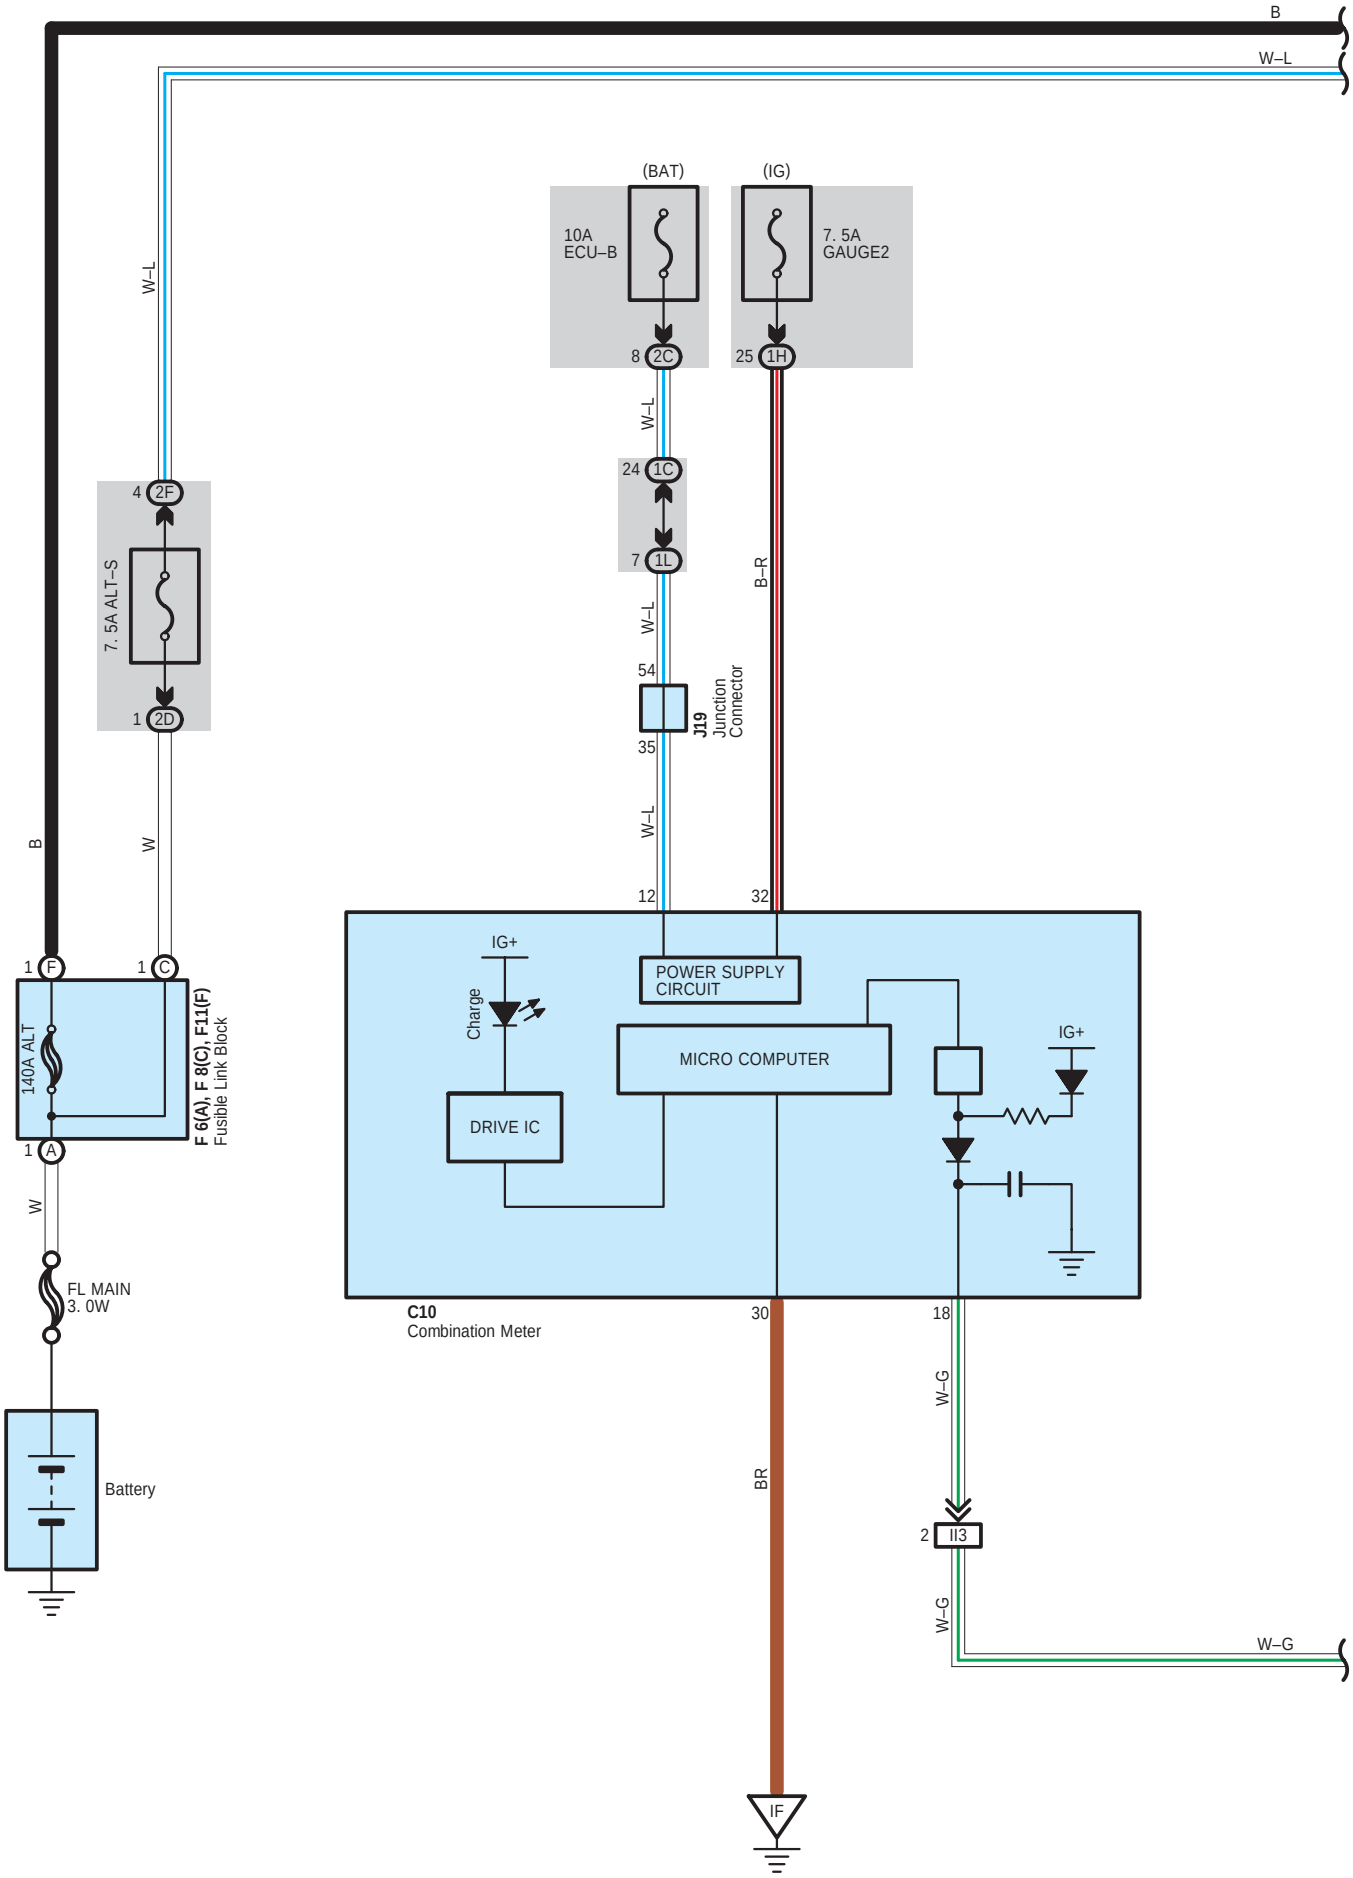
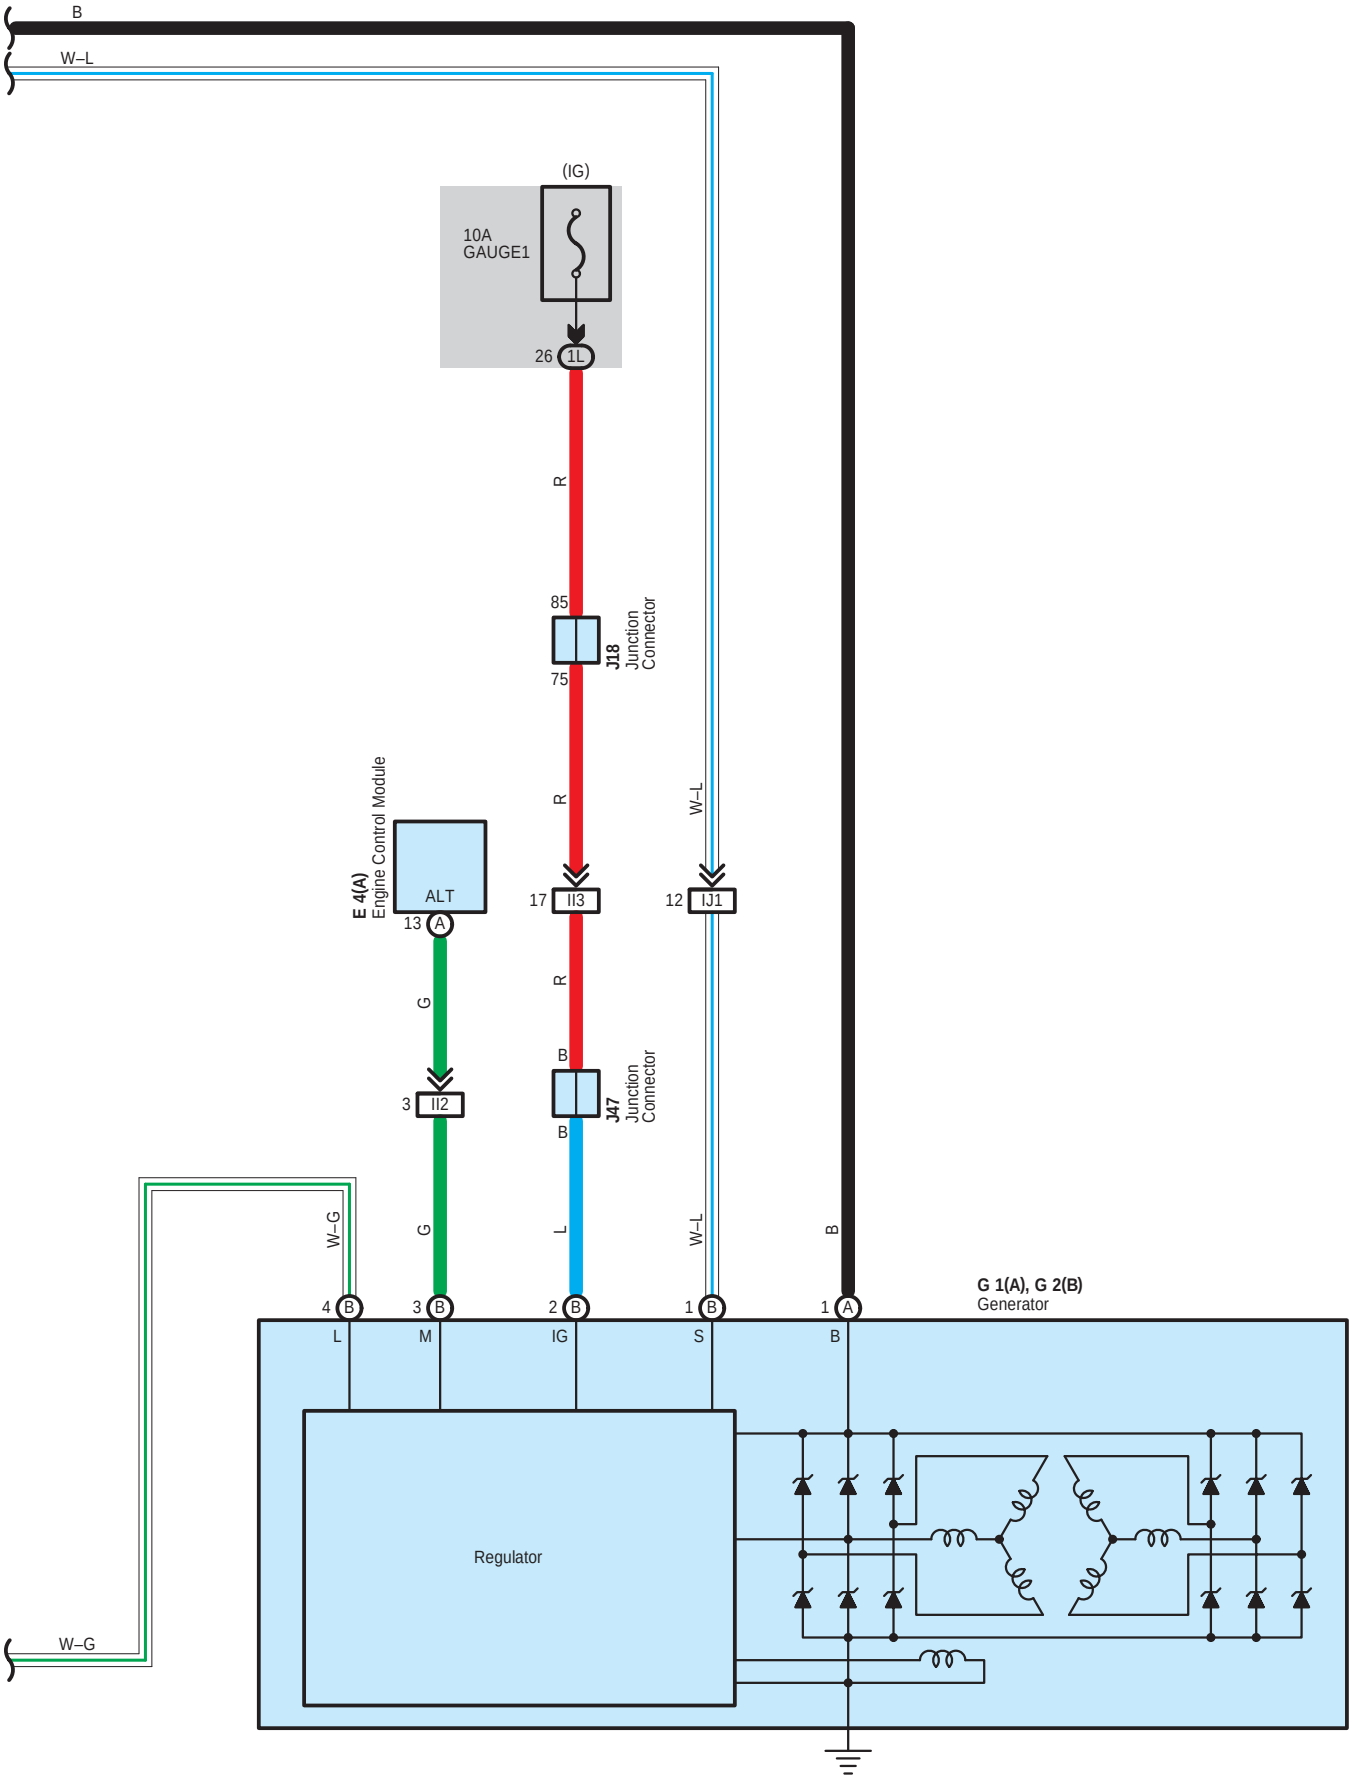

B
W–L
(BAT)
(IG)
10A
ECU–B
7. 5A
GAUGE2
8 2C
25 1H
W–L
24 1C
7 1L
B–R
W–L
54
J19
Junction
Connector
35
W–L
12
32
4 2F
7. 5A ALT–S
1 2D
B
W
1 F
1 C
140A ALT
F 6(A), F 8(C), F11(F)
Fusible Link Block
1 A
W
FL MAIN
3. 0W
Battery
IG+
Charge
POWER SUPPLY
CIRCUIT
MICRO COMPUTER
DRIVE IC
IG+
C10
Combination Meter
30
18
BR
W–G
2 II3
W–G
W–G
IF


B
W–L
(IG)
10A
GAUGE1
26
1L
R
85
J18
Junction
Connector
75
R
W–L
E 4(A)
Engine Control Module
ALT
13
A
17
II3
12
IJ1
G
R
3
II2
B
J47
Junction
Connector
B
W–G
G
L
W–L
B
4
B
3
B
2
B
1
B
1
A
L
M
IG
S
B
G 1(A), G 2(B)
Generator
Regulator
W–G

Charging

: Parts Location

Code		See Page	Code		See Page	Code	See Page
C10		39	F11	F	36	J19	40
E4	A	39	G1	A	36	J47	40
F6	A	36	G2	B	36		
F8	C	36	J18		40		

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	31	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1H	30	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1L	31	
2C	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2D		
2F		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
II2	53	Engine Wire and Instrument Panel Wire (Right Kick Panel)
II3		
IJ1	53	Engine Wire and Engine Room Main Wire (Right Kick Panel)

: Ground Points

Code	See Page	Ground Points Location
IF	52	Instrument Panel Brace LH