


∗ 1 : w/ Side Airbag
∗ 2 : w/o Side Airbag
∗ 3 : w/ Power Seat
∗ 4 : w/o Power Seat
∗ 5 : Automatic A/C
∗ 6 : Manual A/C

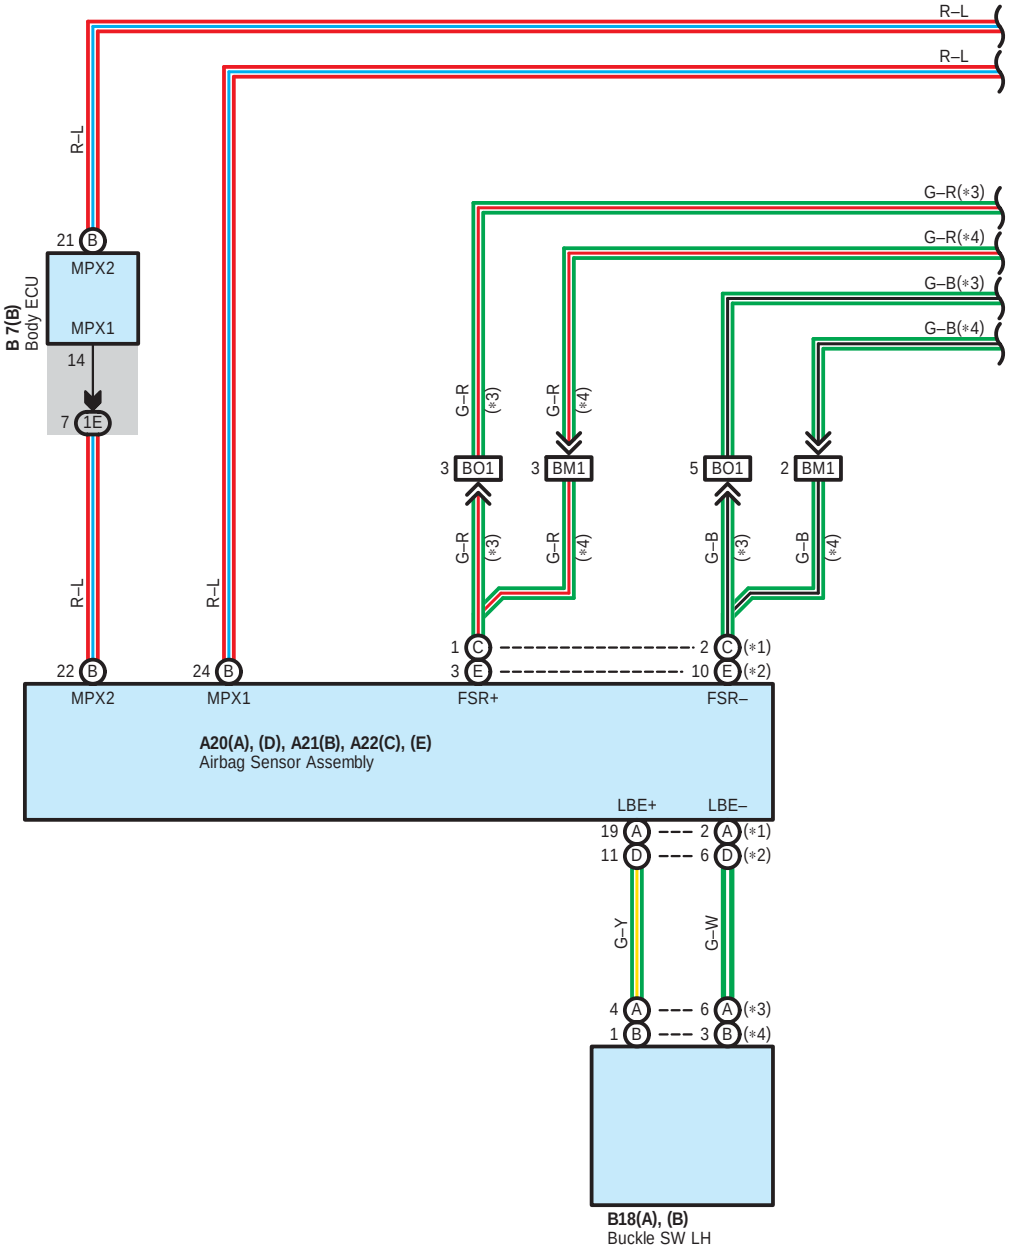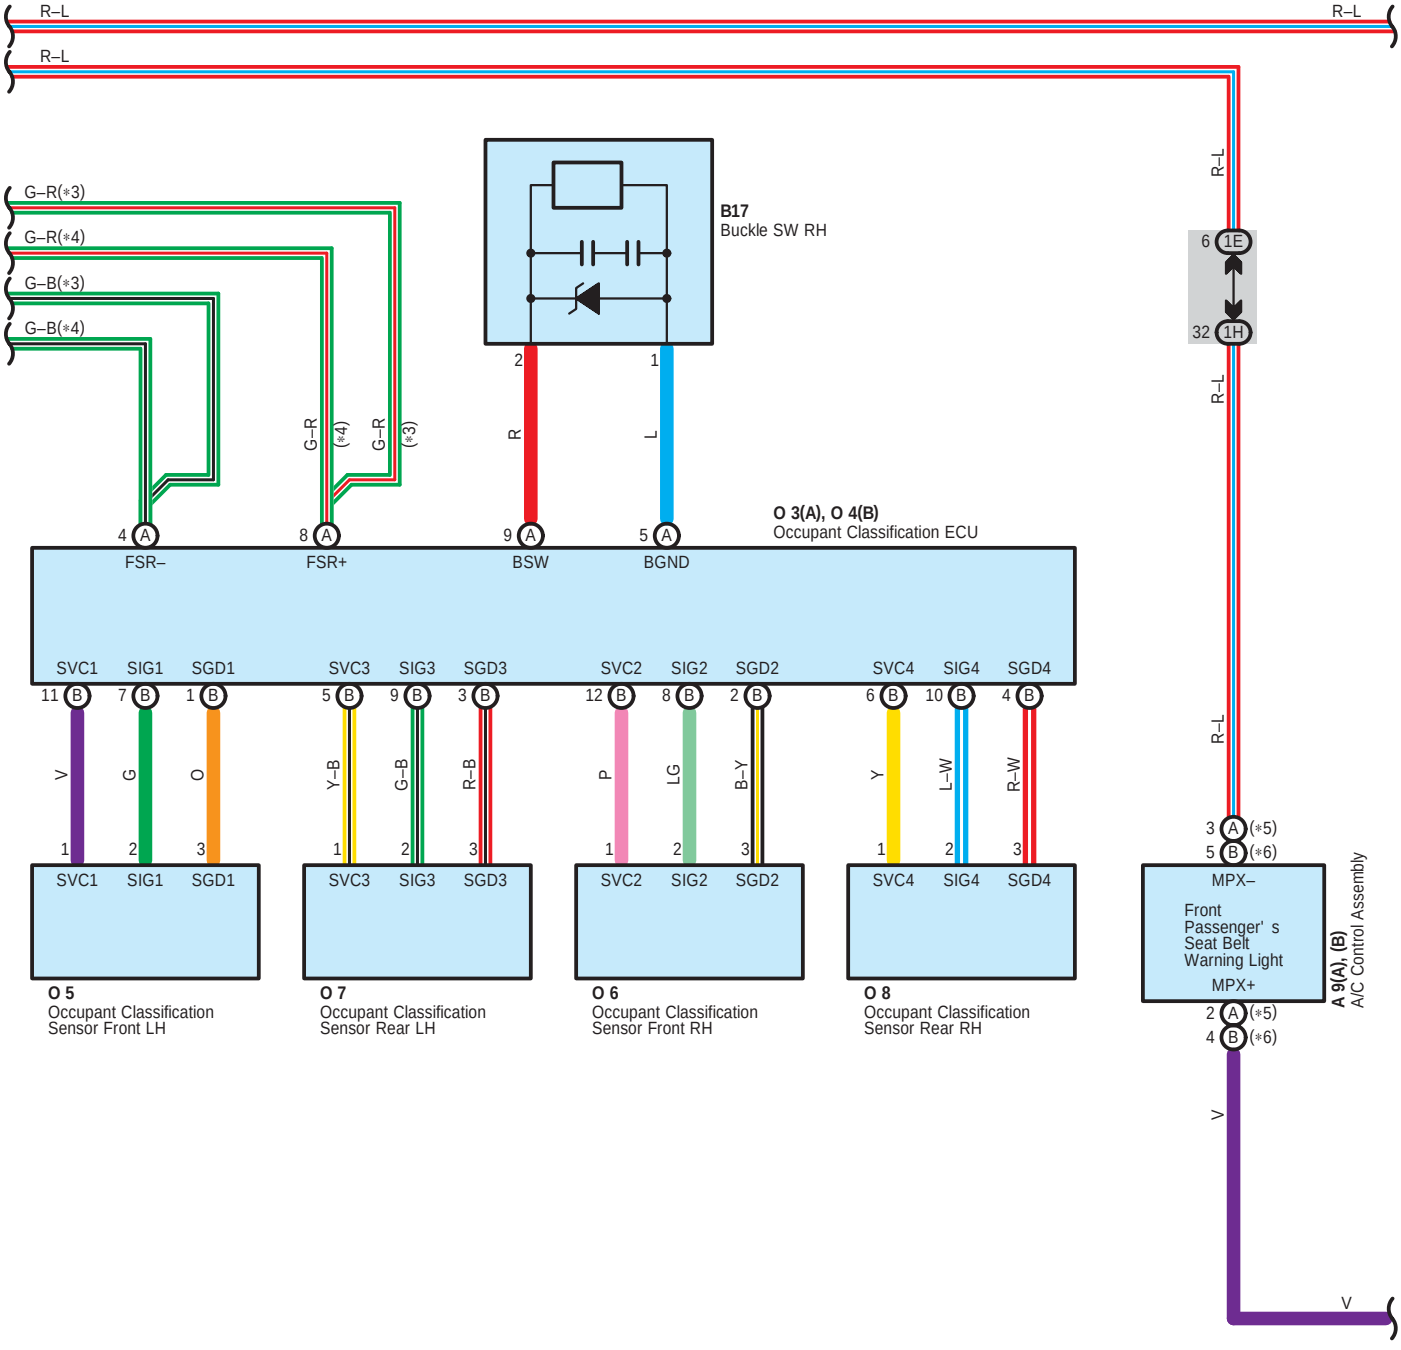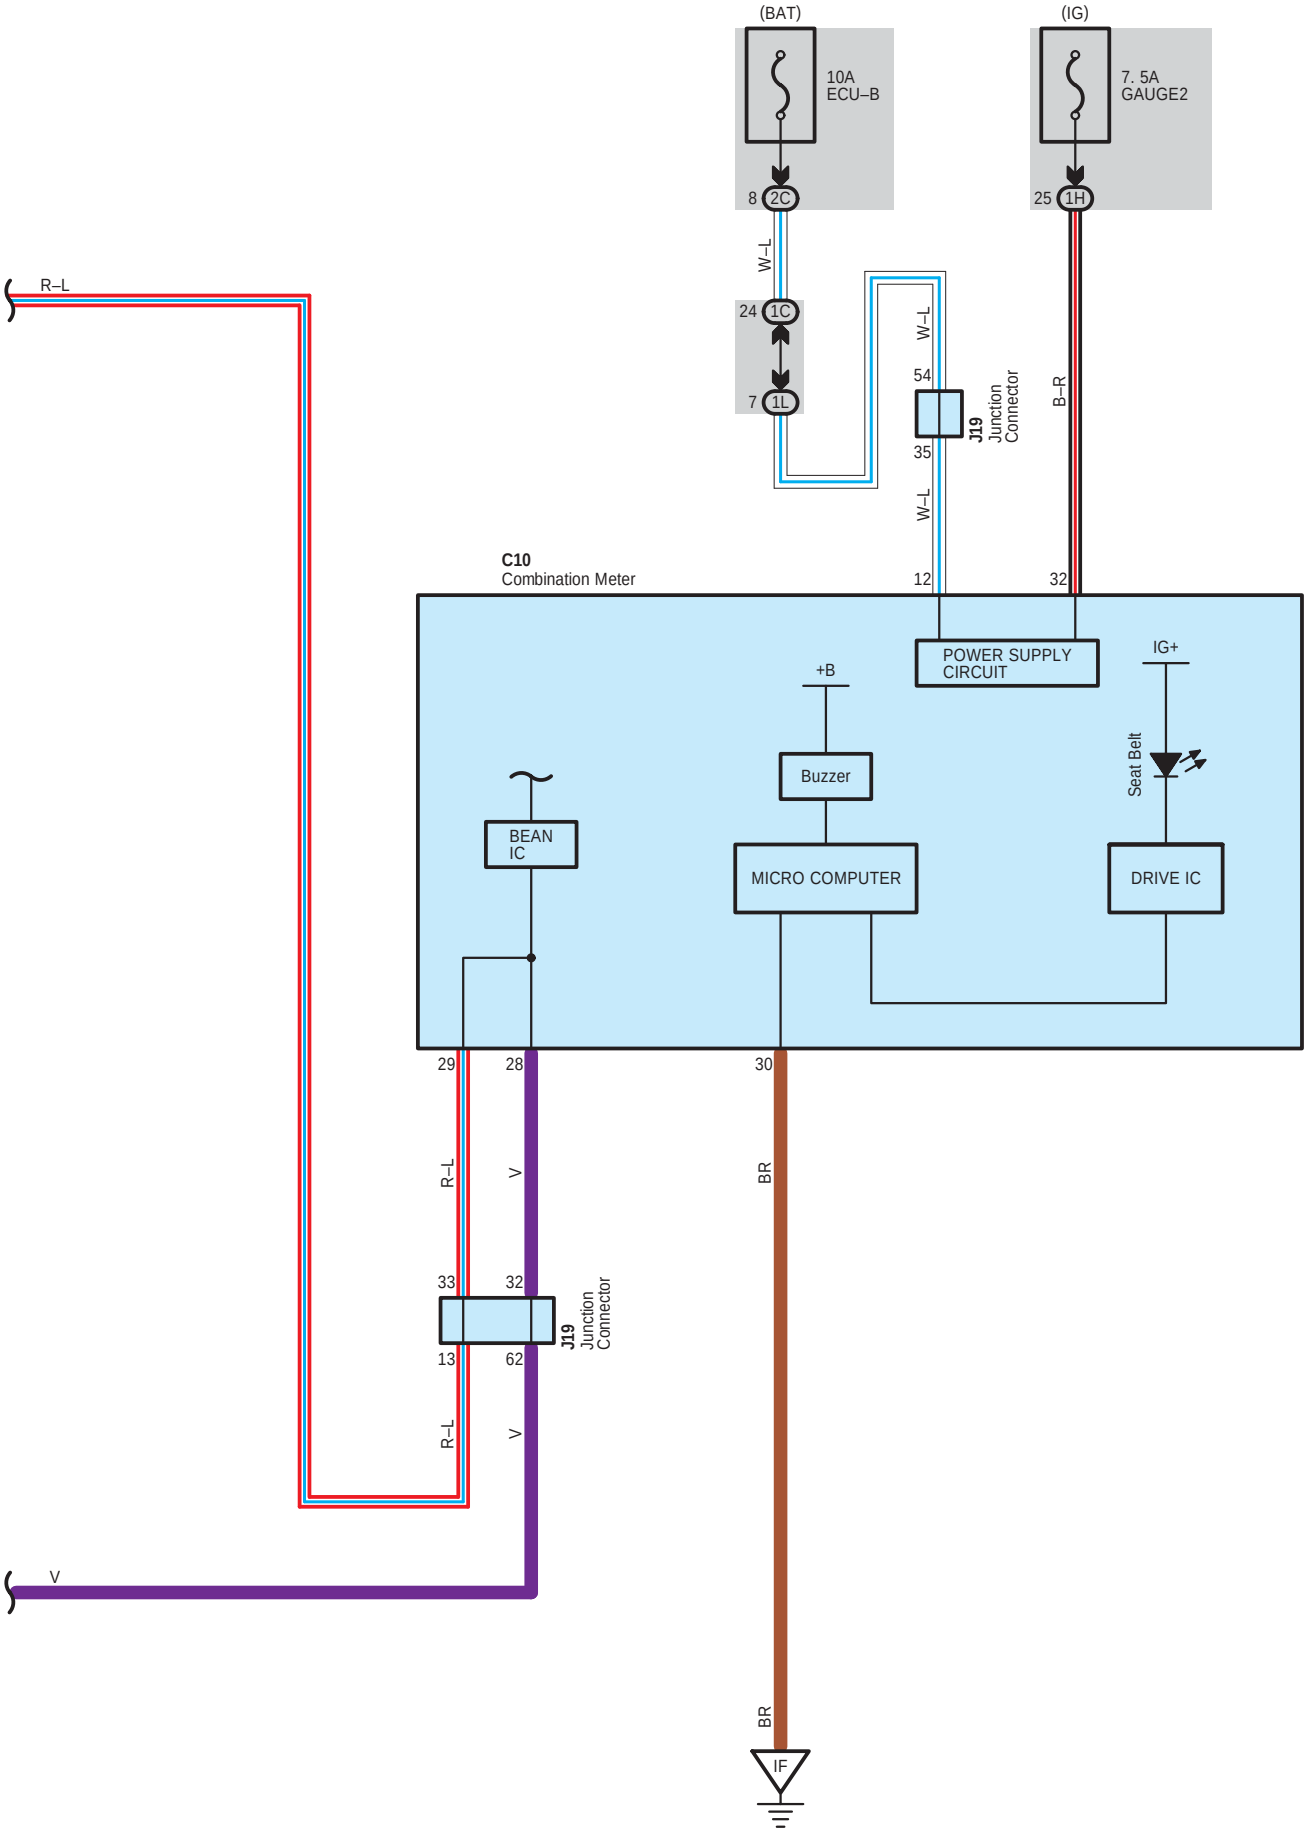


R–L
R–L
R–L
R–L
G–R(*3)
G–R(*4)
G–B(*3)
G–B(*4)
G–R
(*4)
G–R
(*3)
B17
Buckle SW RH
2
1
R
L
6 1E
32 1H
R–L
R–L
R–L
O 3(A), O 4(B)
Occupant Classification ECU
4 A
FSR–
8 A
FSR+
9 A
BSW
5 A
BGND
SVC1
SIG1
SGD1
SVC3
SIG3
SGD3
SVC2
SIG2
SGD2
SVC4
SIG4
SGD4
11 B
7 B
1 B
5 B
9 B
3 B
12 B
8 B
2 B
6 B
10 B
4 B
V
G
O
Y–B
G–B
R–B
P
LG
B–Y
Y
L–W
R–W
1
2
3
SVC1
SIG1
SGD1
SVC3
SIG3
SGD3
SVC2
SIG2
SGD2
SVC4
SIG4
SGD4
O 5
Occupant Classification
Sensor Front LH
O 7
Occupant Classification
Sensor Rear LH
O 6
Occupant Classification
Sensor Front RH
O 8
Occupant Classification
Sensor Rear RH
3 A (*5)
5 B (*6)
MPX–
Front
Passenger' s
Seat Belt
Warning Light
MPX+
2 A (*5)
4 B (*6)
A 9(A), (B)
A/C Control Assembly
V
V


(BAT)
10A
ECU–B
8
2C
W–L
24
1C
7
1L
(IG)
7. 5A
GAUGE2
25
1H
B–R
R–L
W–L
54
35
W–L
J19
Junction
Connector
C10
Combination Meter
12
32
POWER SUPPLY
CIRCUIT
IG+
+B
Buzzer
Seat Belt
BEAN
IC
MICRO COMPUTER
DRIVE IC
29
28
30
R–L
V
BR
33
32
J19
Junction
Connector
13
62
R–L
V
V
BR
IF

: Parts Location

Code		See Page	Code		See Page	Code	See Page
A9	A	38	B18	A	46 (*1)	O5	46 (*1)
	B	38			47 (*2)		47 (*2)
A20	A	38		B	46 (*1)	O6	46 (*1)
	D	38			47 (*2)		47 (*2)
A21	B	38	C10		39	O7	46 (*1)
A22	C	38	J19		40		47 (*2)
	E	38	O3	A	46 (*1)	O8	46 (*1)
B7	B	38			47 (*2)		47 (*2)
B17		46 (*1)	O4	B	46 (*1)		
		47 (*2)			47 (*2)		

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	31	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1E	31	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1H	30	
1L	31	
2C	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BM1	57 (*2)	Floor No.2 Wire and Seat No.1 Wire (Under the Front Passenger's Seat)
BO1	56 (*1)	Seat No.1 Wire and Floor No.2 Wire (Under the Front Passenger's Seat)

: Ground Points

Code	See Page	Ground Points Location
IF	52	Instrument Panel Brace LH

* 1 : Front Seat w/ Power Seat * 2 : Front Seat w/o Power Seat * 3 : Rear No.2 Seat