


Power Window with Jam Protection

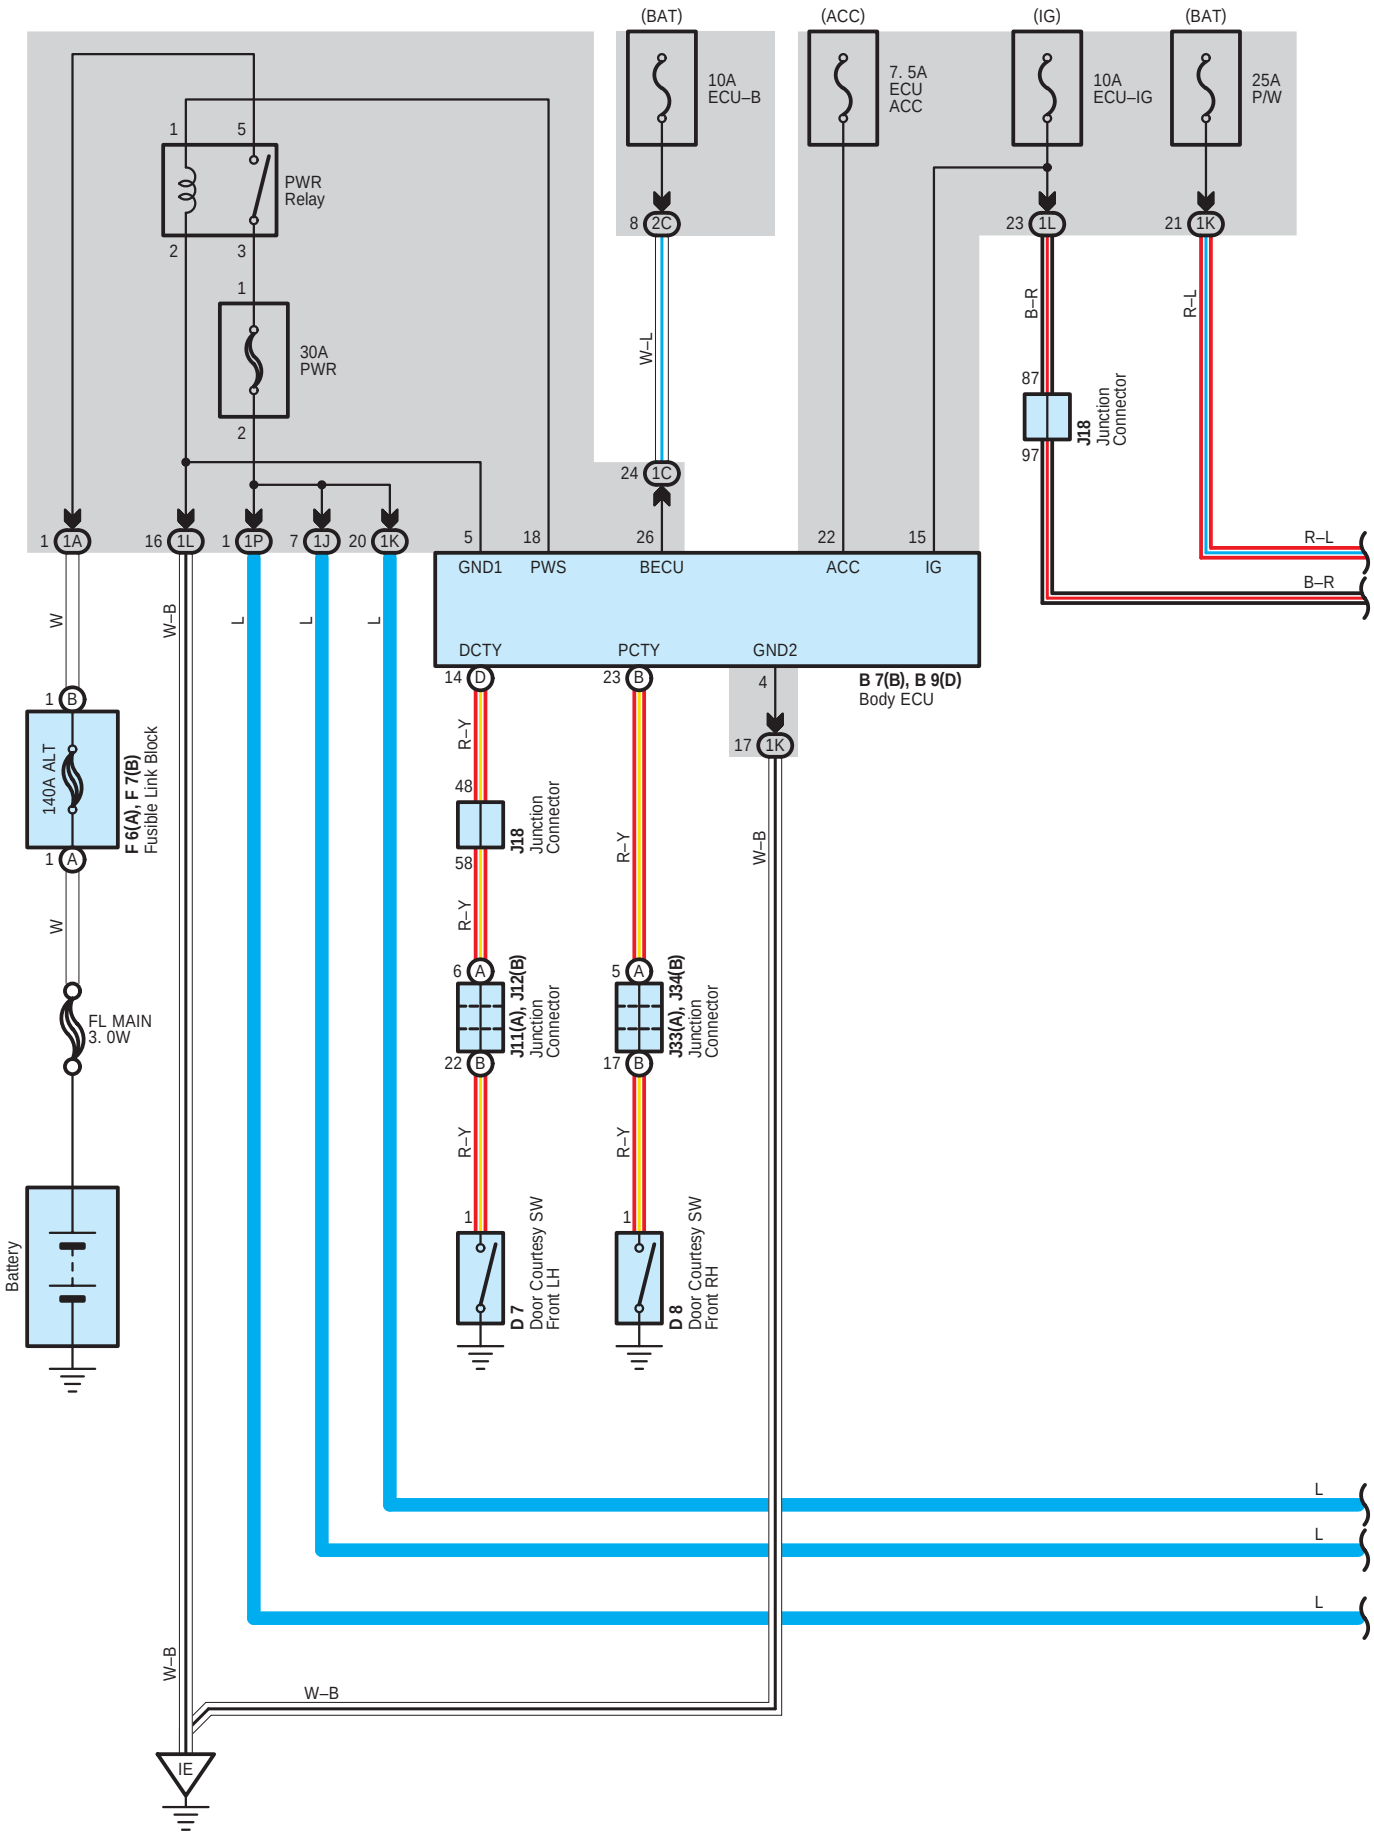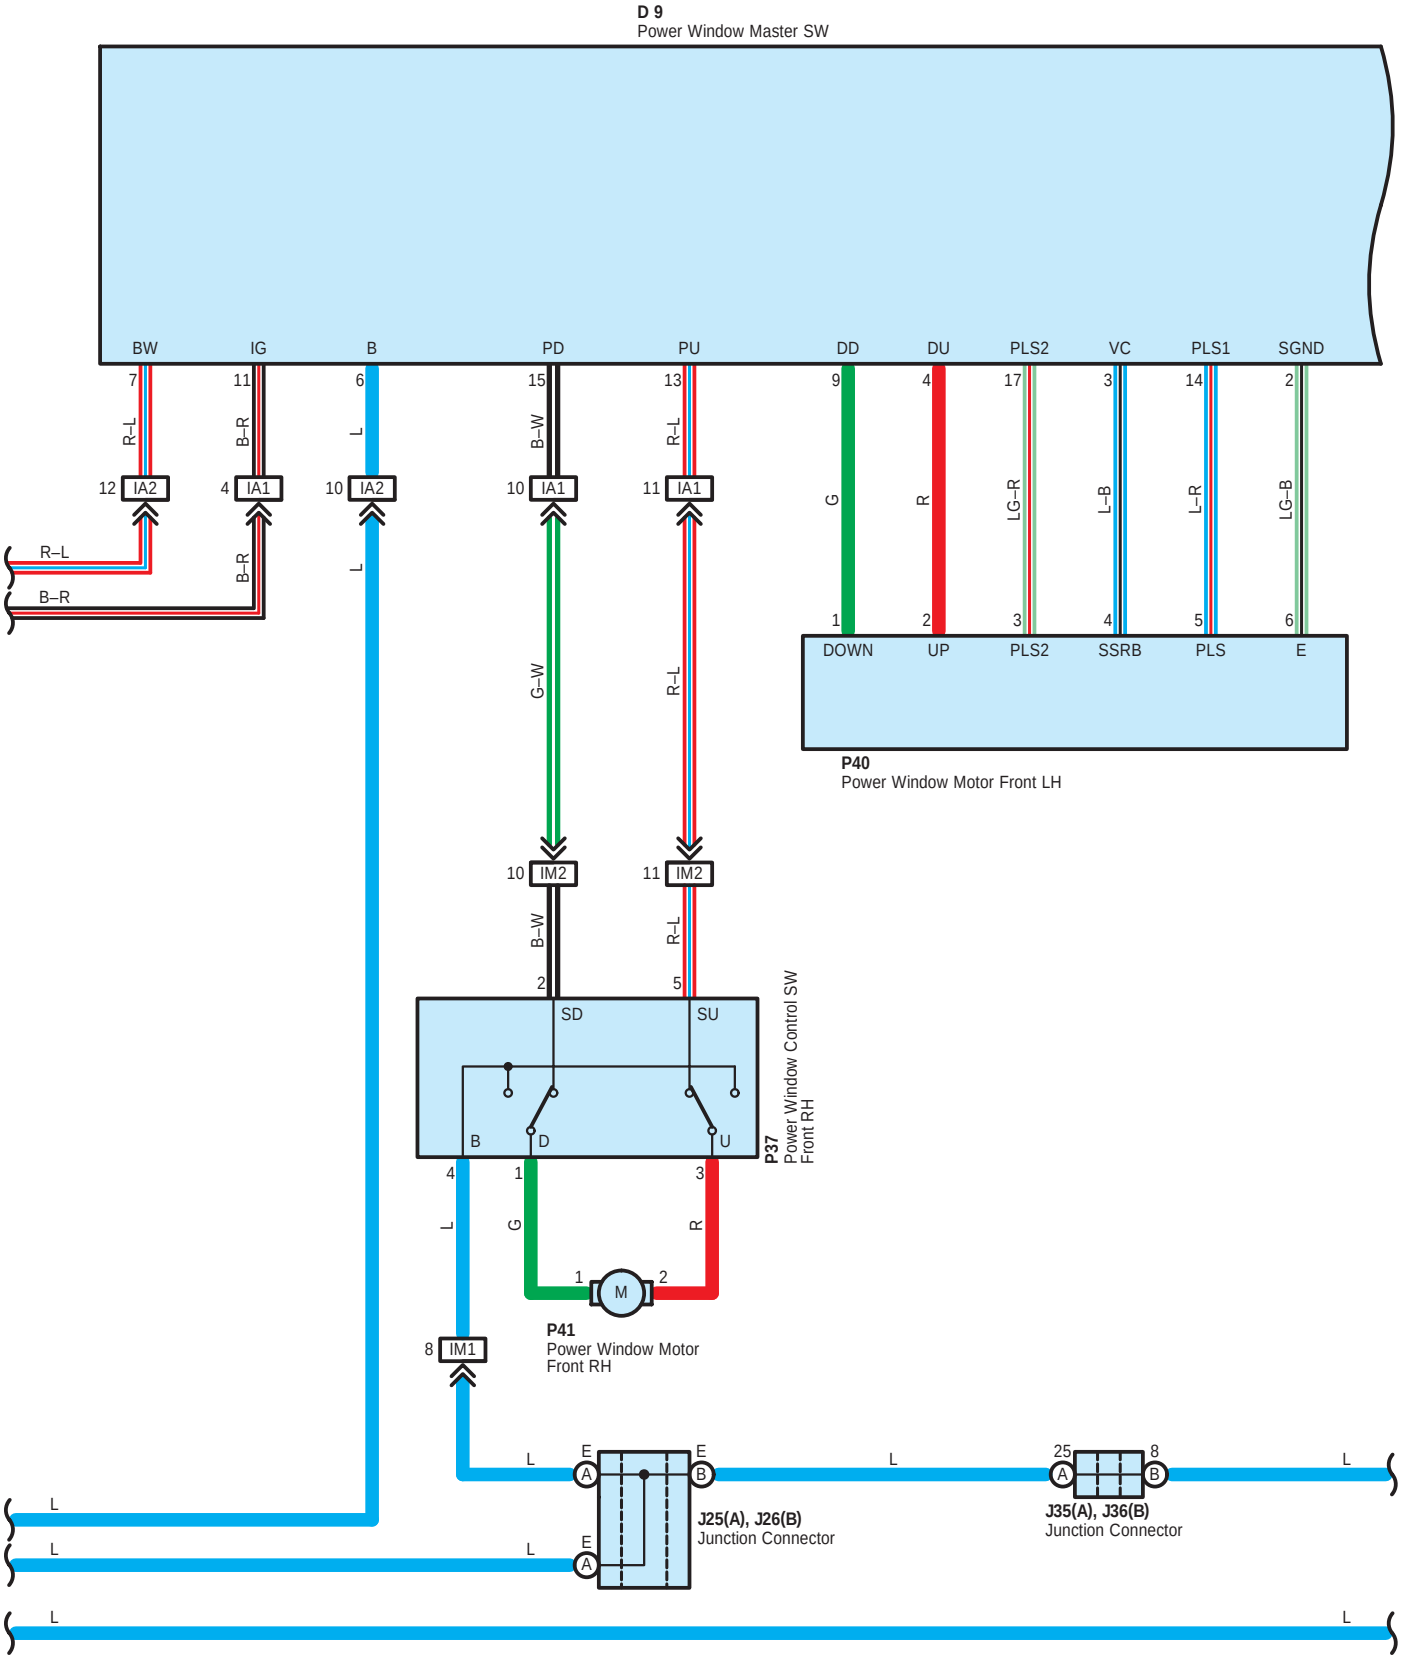


D 9
Power Window Master SW
BW
IG
B
PD
PU
DD
DU
PLS2
VC
PLS1
SGND
7
11
6
15
13
9
4
17
3
14
2
R–L
B–R
L
B–W
R–L
G
R
LG–R
L–B
L–R
LG–B
12 IA2
4 IA1
10 IA2
10 IA1
11 IA1
1
2
3
4
5
6
DOWN
UP
PLS2
SSRB
PLS
E
P40
Power Window Motor Front LH
R–L
B–R
L
G–W
R–L
10 IM2
11 IM2
B–W
R–L
2
5
SD
SU
B
D
U
P37
Power Window Control SW
Front RH
4
1
3
L
G
R
1
M
2
P41
Power Window Motor
Front RH
8 IM1
L
E
A
E
B
L
25
A
8
B
L
J25(A), J26(B)
Junction Connector
J35(A), J36(B)
Junction Connector
L
L
E
A
L
L
L

Power Window with Jam Protection

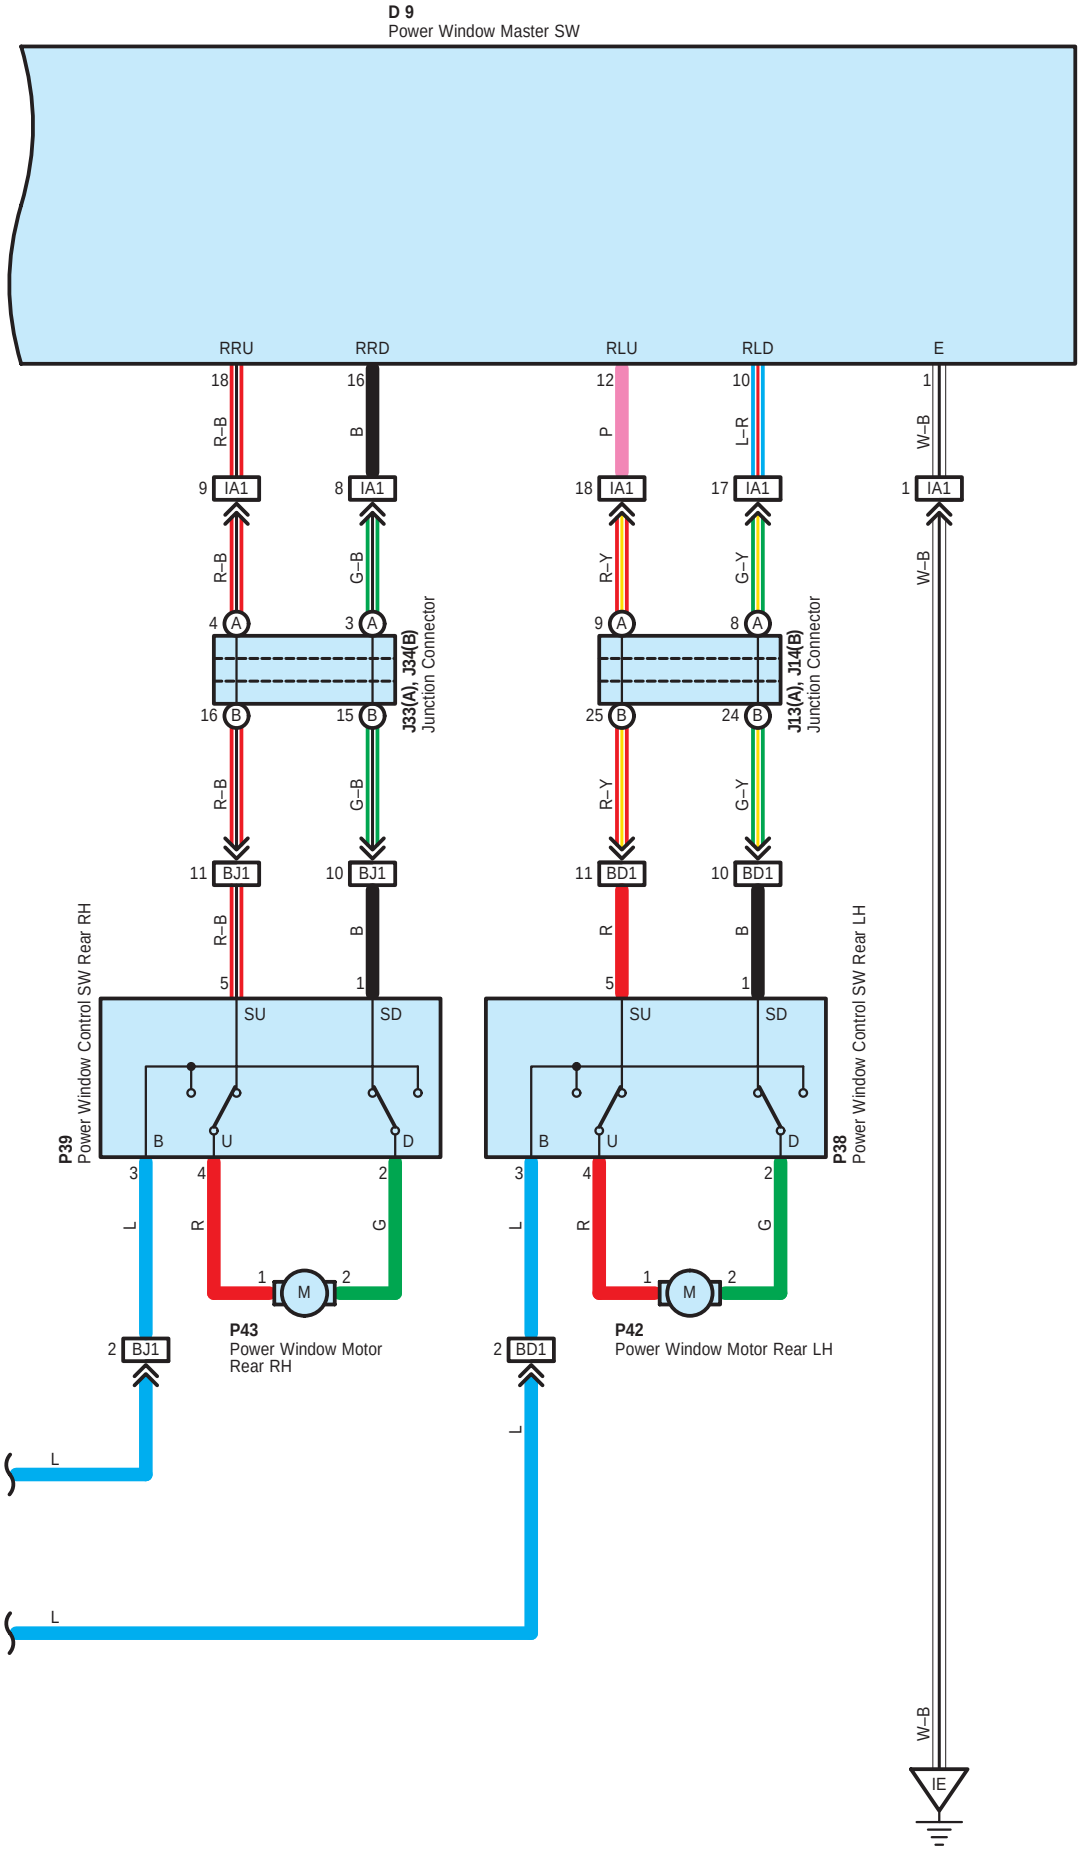

: Parts Location

Code		See Page	Code		See Page	Code	See Page
B7	B	38	J13	A	40	P37	44
B9	D	38	J14	B	40	P38	44
D7		42	J18		40	P39	44
D8		42	J25	A	40	P40	44
D9		42	J26	B	40	P41	44
F6	A	36	J33	A	40	P42	44
F7	B	36	J34	B	40	P43	44
J11	A	40	J35	A	40		
J12	B	40	J36	B	40		

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	31	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1C		
1J	31	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1K		
1L		
1P	31	Floor No.1 Wire and Driver Side J/B (Lower Finish Panel)
2C	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	52	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IA2		
IM1	53	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IM2		
BD1	54	Rear Door No.2 Wire and Floor No.1 Wire (On the Left Rear Wheel House)
BJ1	55	Rear Door No.1 Wire and Floor No.2 Wire (On the Right Rear Wheel House)

: Ground Points

Code	See Page	Ground Points Location
IE	52	Left Kick Panel