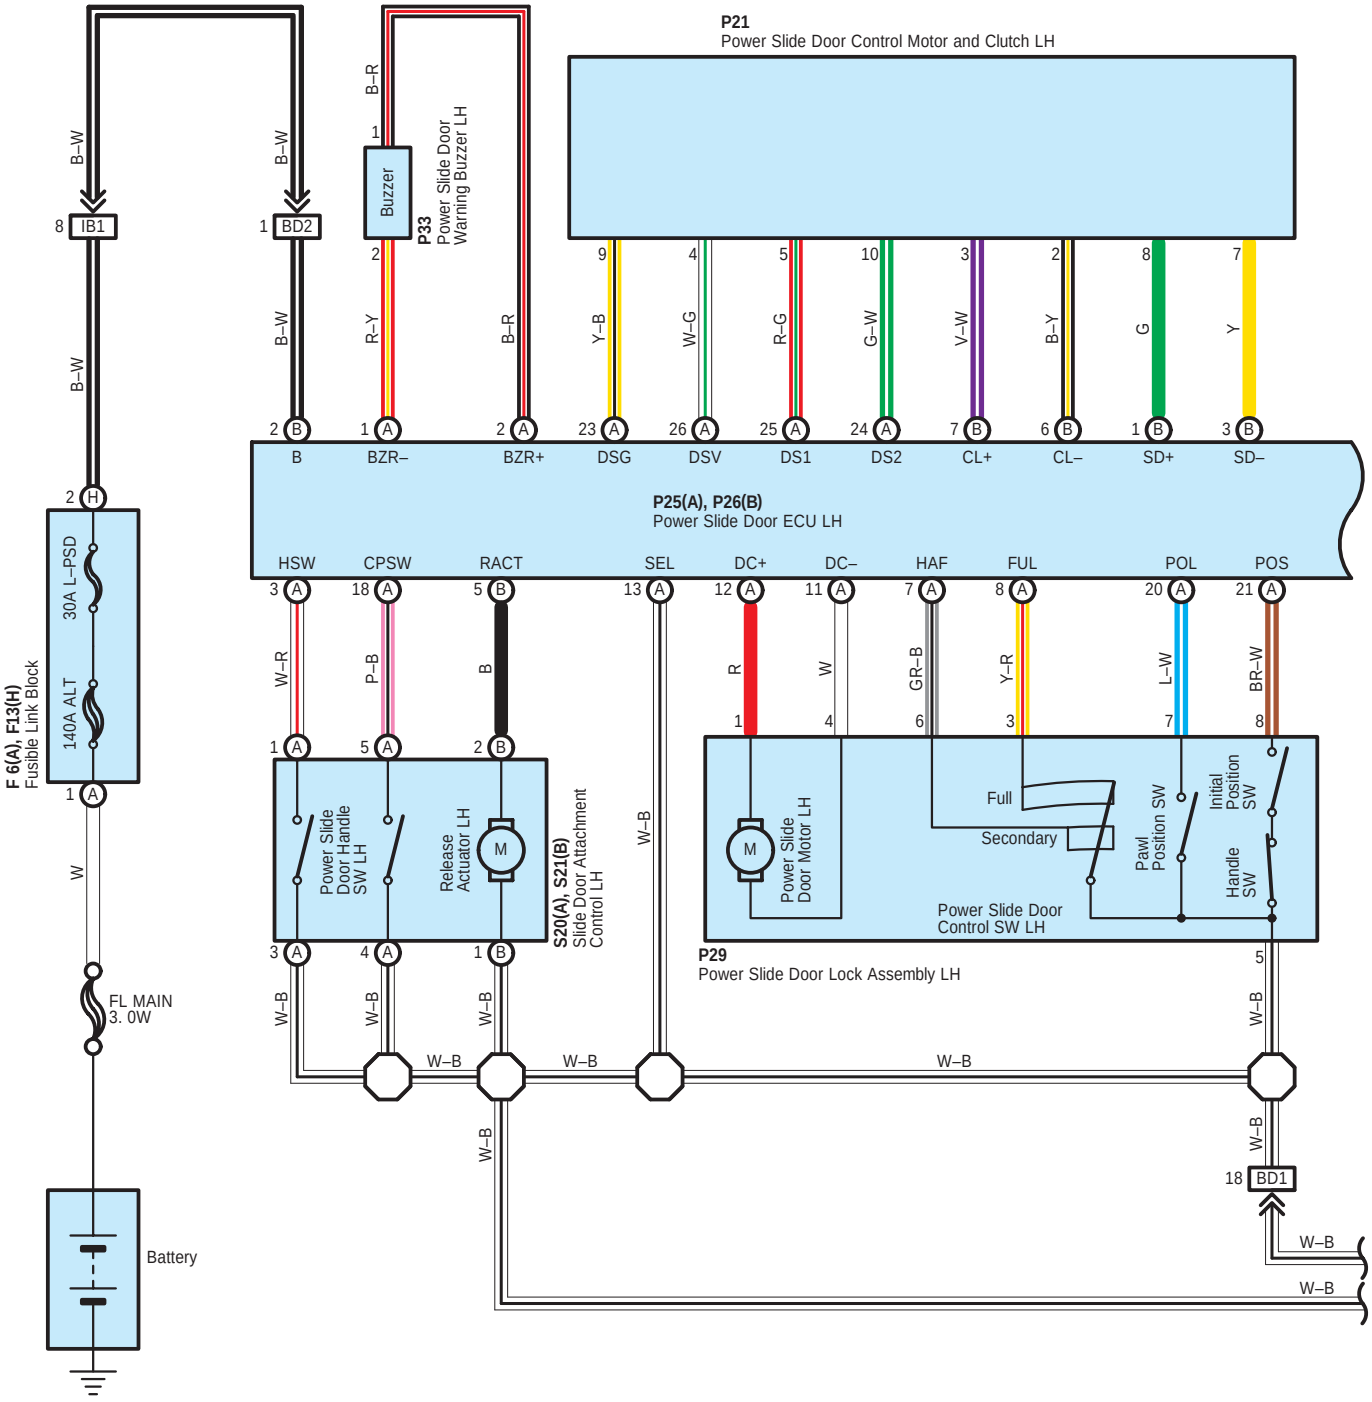
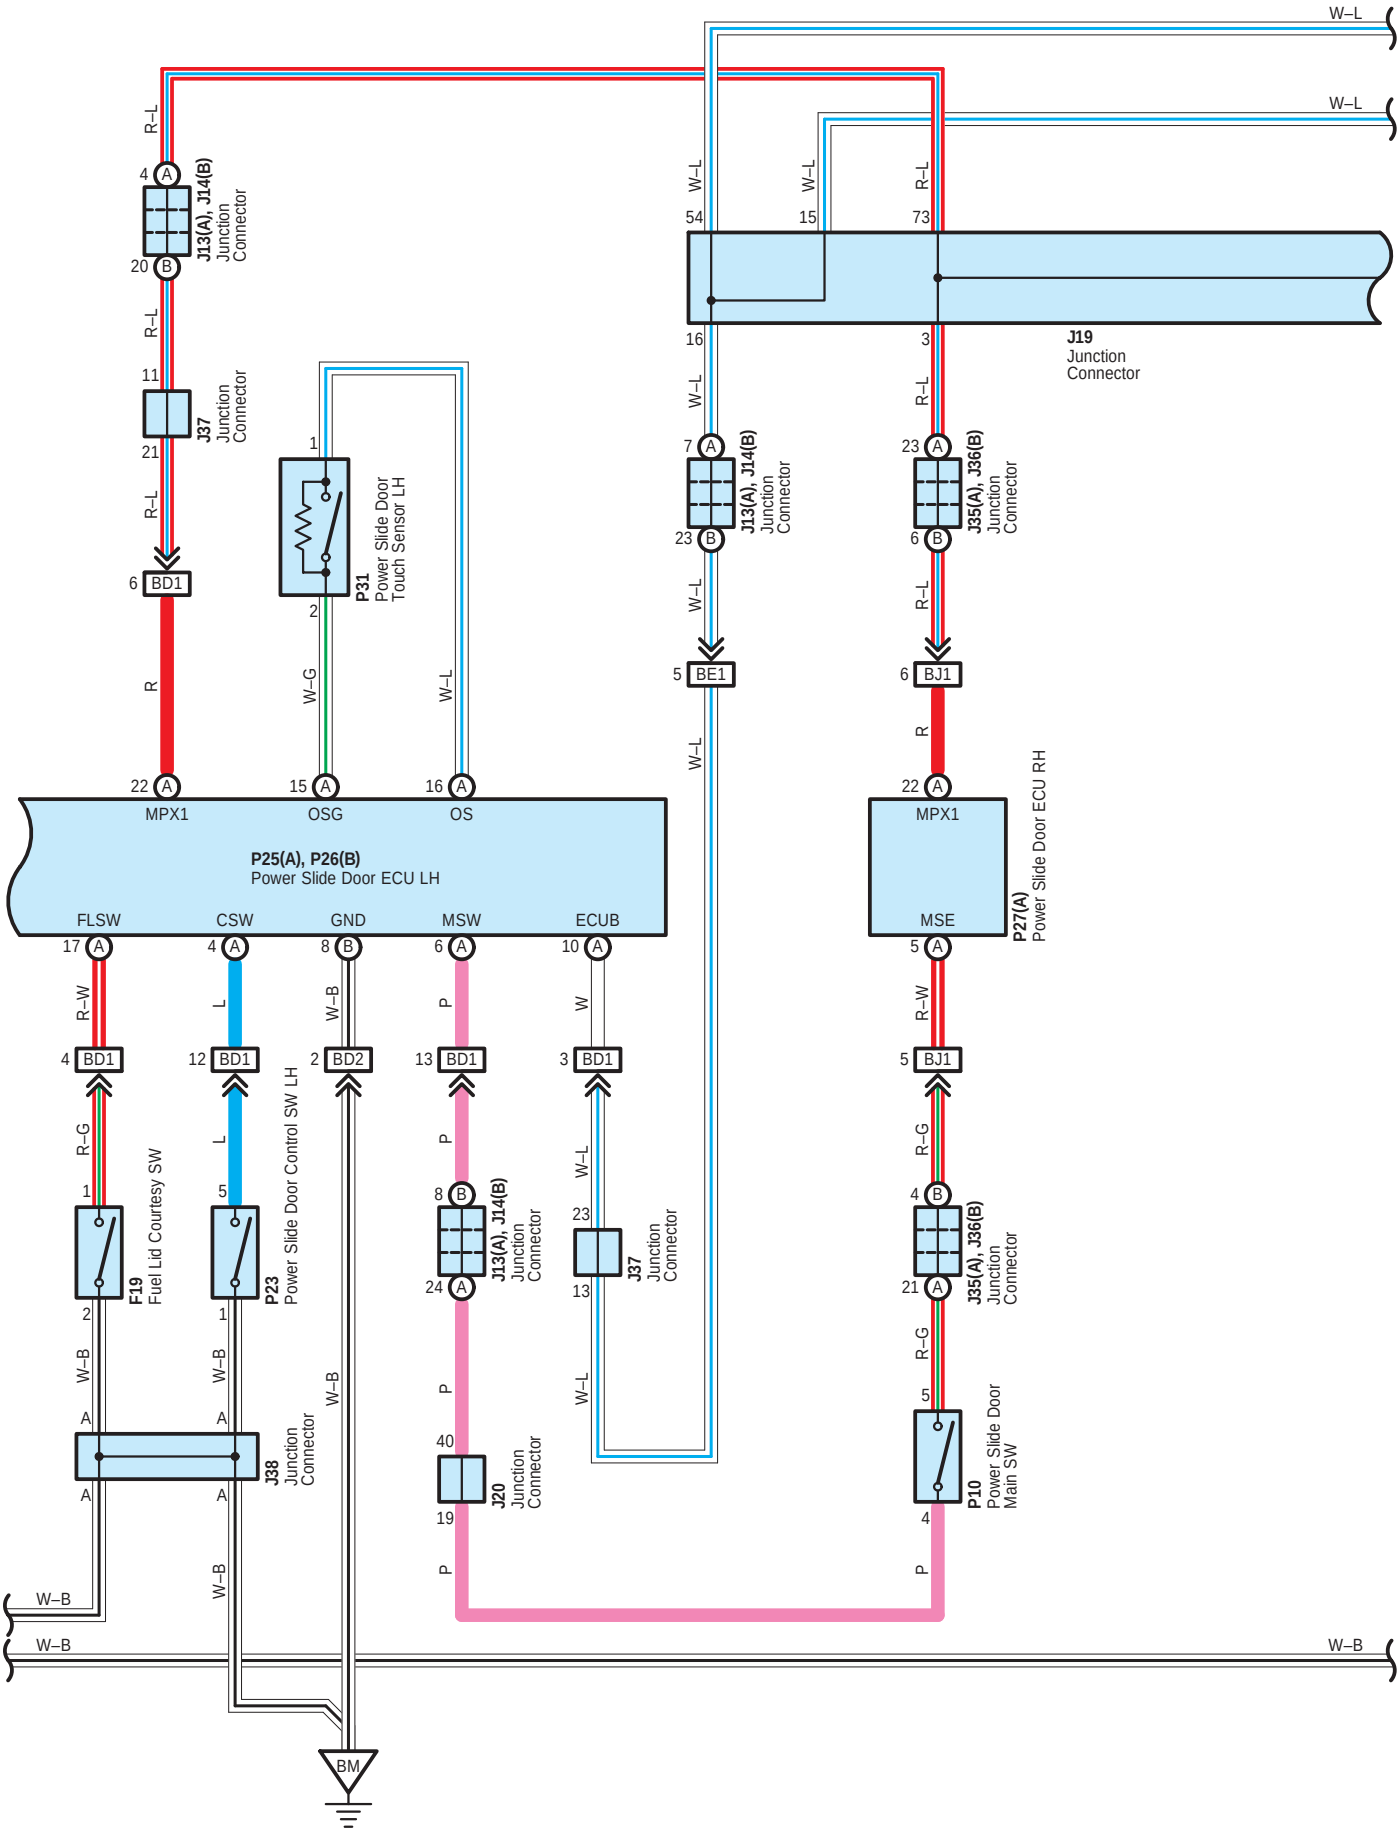
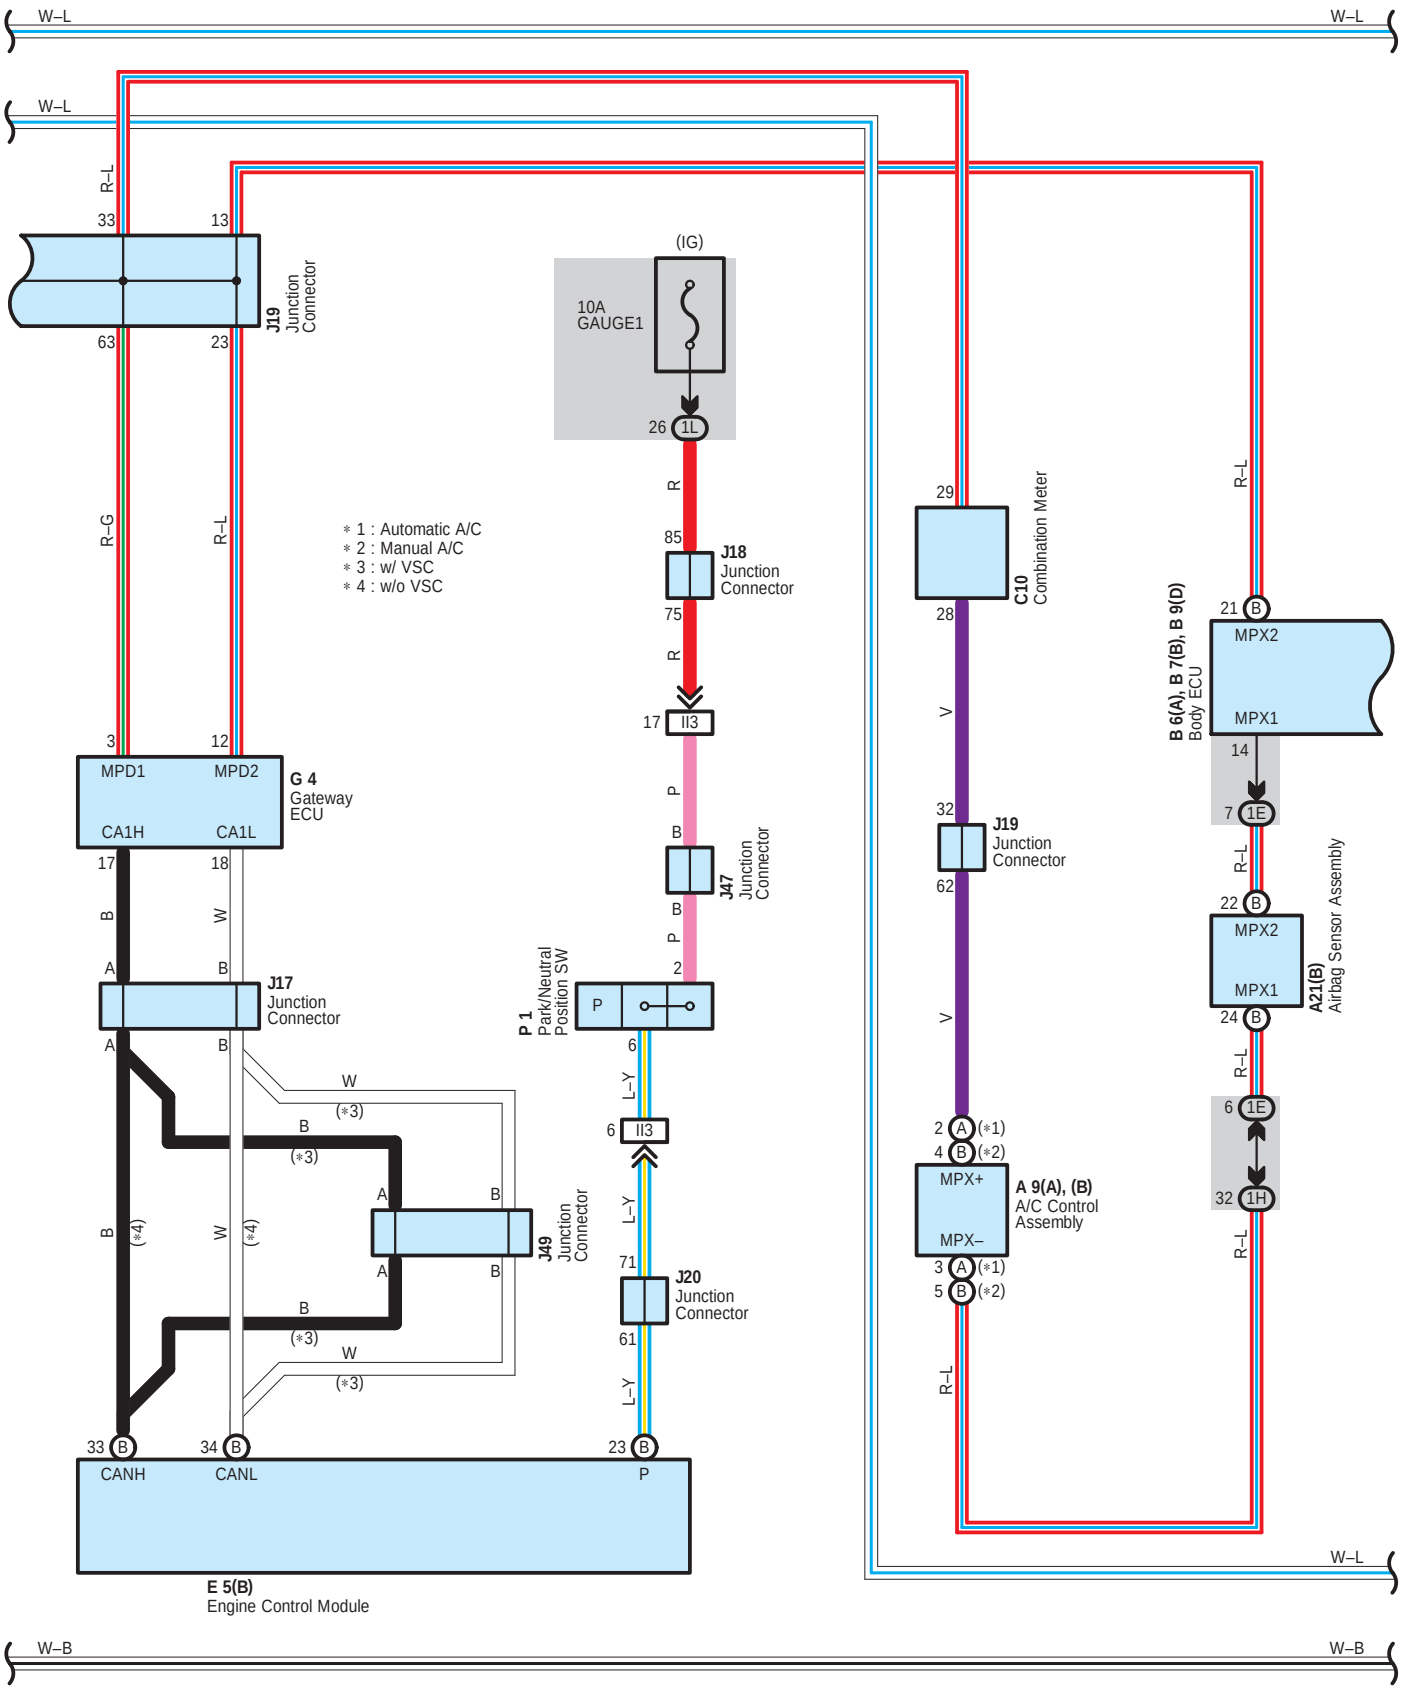
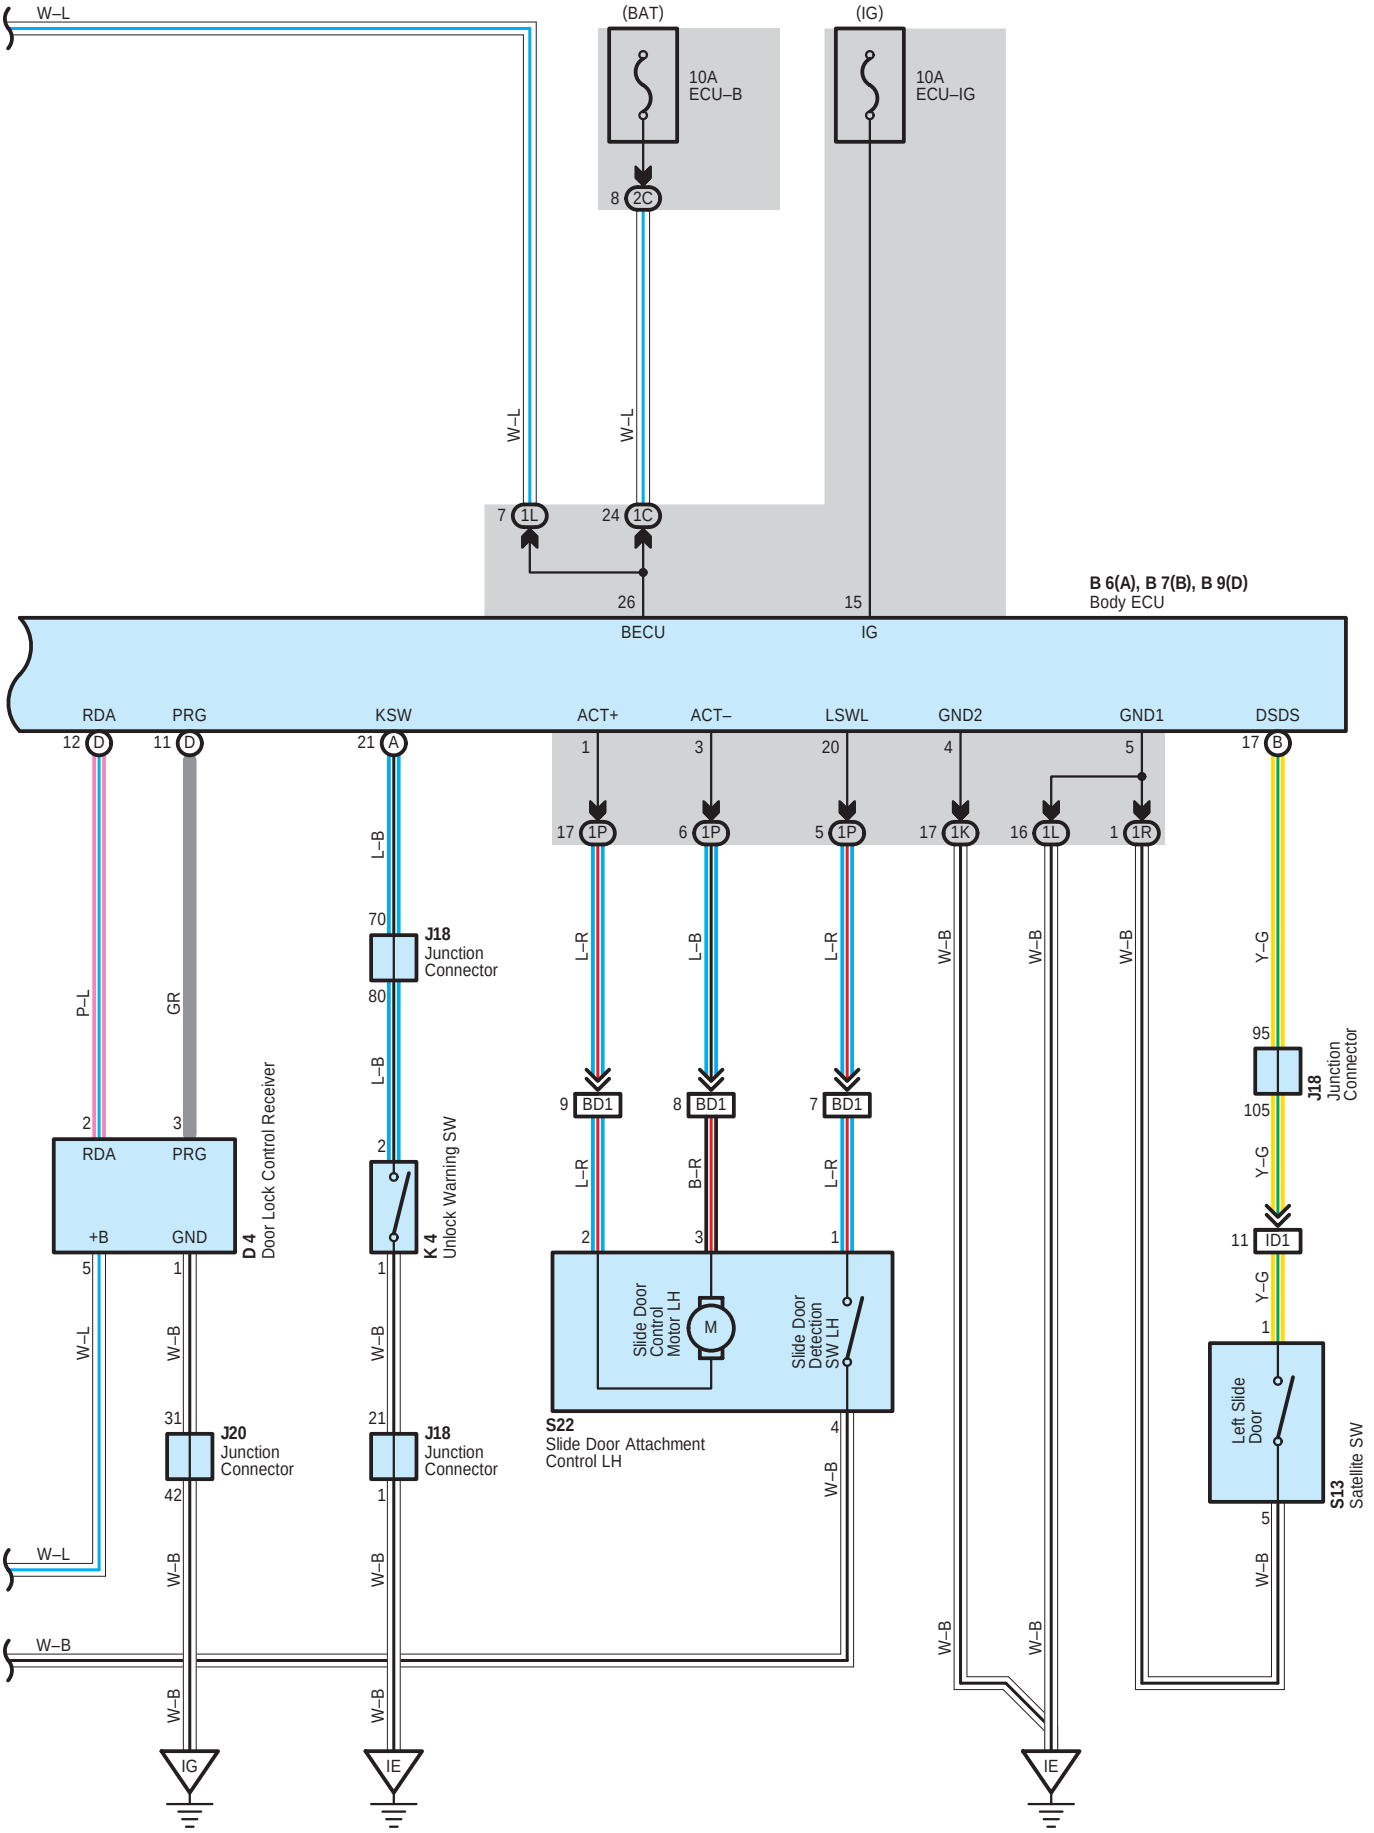

P21
Power Slide Door Control Motor and Clutch LH
P33
Power Slide Door Warning Buzzer LH
Buzzer
P25(A), P26(B)
Power Slide Door ECU LH
HSW
CPSW
RACT
SEL
DC+
DC–
HAF
FUL
POL
POS
B
BZR–
BZR+
DSG
DSV
DS1
DS2
CL+
CL–
SD+
SD–
IB1
BD2
BD1
F 6(A), F13(H)
Fusible Link Block
30A L–PSD
140A ALT
FL MAIN
3. 0W
Battery
S20(A), S21(B)
Slide Door Attachment Control LH
Power Slide Door Handle SW LH
Release Actuator LH
P29
Power Slide Door Lock Assembly LH
Power Slide Door Motor LH
Full
Secondary
Pawl Position SW
Initial Position SW
Handle SW
Power Slide Door Control SW LH
B–W
B–R
R–Y
Y–B
W–G
R–G
G–W
V–W
B–Y
G
Y
W–R
P–B
B
R
W
GR–B
Y–R
L–W
BR–W
W
W–B


W–L
W–L
R–L
4 A
J13(A), J14(B)
Junction Connector
20 B
R–L
11
J37
Junction Connector
21
R–L
6 BD1
R
22 A
MPX1
1
P31
Power Slide Door Touch Sensor LH
2
W–G
15 A
OSG
W–L
16 A
OS
P25(A), P26(B)
Power Slide Door ECU LH
FLSW
CSW
GND
MSW
ECUB
17 A
R–W
4 BD1
4 A
L
12 BD1
8 B
W–B
2 BD2
6 A
P
13 BD1
10 A
W
3 BD1
R–G
1
F19
Fuel Lid Courtesy SW
2
W–B
A
A
L
5
P23
Power Slide Door Control SW LH
1
W–B
A
A
J38
Junction Connector
W–B
W–B
W–B
8 B
J13(A), J14(B)
Junction Connector
24 A
P
40
J20
Junction Connector
19
P
W–L
23
J37
Junction Connector
13
W–L
W–L
54
15
73
J19
Junction Connector
16
3
W–L
R–L
7 A
J13(A), J14(B)
Junction Connector
23 B
W–L
5 BE1
W–L
23 A
J35(A), J36(B)
Junction Connector
6 B
R–L
6 BJ1
R
22 A
MPX1
MSE
P27(A)
Power Slide Door ECU RH
5 A
R–W
5 BJ1
R–G
4 B
J35(A), J36(B)
Junction Connector
21 A
R–G
5
P10
Power Slide Door Main SW
4
P
W–B
W–B
BM


W–L
W–L
W–L
R–L
33
13
J19
Junction Connector
63
23
R–G
R–L
(IG)
10A
GAUGE1
26
1L
R
85
J18
Junction Connector
75
R
17
II3
P
B
J47
Junction Connector
B
P
2
P 1
Park/Neutral Position SW
P
6
L–Y
6
II3
L–Y
71
J20
Junction Connector
61
L–Y
23
B
P
＊1 : Automatic A/C
＊2 : Manual A/C
＊3 : w/ VSC
＊4 : w/o VSC
3
12
MPD1
MPD2
CA1H
CA1L
G 4
Gateway ECU
17
18
B
W
A
B
J17
Junction Connector
A
B
W
(＊3)
B
(＊3)
B
(＊4)
W
(＊4)
A
B
J49
Junction Connector
A
B
B
(＊3)
W
(＊3)
33
B
34
B
CANH
CANL
E 5(B)
Engine Control Module
29
C10
Combination Meter
28
V
32
J19
Junction Connector
62
V
2
A
(＊1)
4
B
(＊2)
MPX+
MPX–
A 9(A), (B)
A/C Control Assembly
3
A
(＊1)
5
B
(＊2)
R–L
R–L
21
B
MPX2
MPX1
B 6(A), B 7(B), B 9(D)
Body ECU
14
7
1E
R–L
22
B
MPX2
MPX1
A21(B)
Airbag Sensor Assembly
24
B
R–L
6
1E
32
1H
R–L
W–L
W–B
W–B


W–L
(BAT)
(IG)
10A
ECU–B
10A
ECU–IG
8 2C
W–L
W–L
7 1L
24 1C
26
15
BECU
IG
B 6(A), B 7(B), B 9(D)
Body ECU
RDA
PRG
KSW
ACT+
ACT–
LSWL
GND2
GND1
DSDS
12 D
11 D
21 A
1
3
20
4
5
17 B
17 1P
6 1P
5 1P
17 1K
16 1L
1 1R
P–L
GR
L–B
L–R
L–B
L–R
W–B
W–B
W–B
Y–G
70
80
J18
Junction
Connector
95
105
J18
Junction
Connector
Y–G
Y–G
11 ID1
1
2
RDA
PRG
+B
GND
D 4
Door Lock Control Receiver
2
K 4
Unlock Warning SW
9 BD1
8 BD1
7 BD1
L–R
B–R
L–R
2
3
1
Slide Door
Control
Motor LH
M
Slide Door
Detection
SW LH
S22
Slide Door Attachment
Control LH
4
Left Slide
Door
S13
Satellite SW
5
W–L
W–B
W–L
W–B
31
42
J20
Junction
Connector
21
1
J18
Junction
Connector
W–B
W–B
W–B
W–B
W–B
W–B
W–B
W–B
IG
IE
IE

Power Slide Door (LH)

: Parts Location

Code		See Page	Code		See Page	Code		See Page
A9	A	38	J14	B	40	P21		44
	B	38	J17		40	P23		44
A21	B	38	J18		40	P25	A	44
B6	A	38	J19		40	P26	B	44
B7	B	38	J20		40	P27	A	44
B9	D	38	J35	A	40	P29		44
C10		39	J36	B	40	P31		44
D4		39	J37		43	P33		44
E5	B	39	J38		43	S13		45
F6	A	36	J47		40	S20	A	45
F13	H	36	J49		40	S21	B	45
F19		42	K4		40	S22		45
G4		39	P1		37			
J13	A	40	P10		41			

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	31	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1E	31	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1H	30	
1K	31	
1L		
1P	31	Floor No.1 Wire and Driver Side J/B (Lower Finish Panel)
1R	31	Roof Wire and Driver Side J/B (Lower Finish Panel)
2C	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB1	52	Engine Room Main Wire and Floor No.1 Wire (Left Cowl Side Panel)
ID1	52	Roof Wire and Instrument Panel Wire (Near the Driver Side J/B)
II3	53	Engine Wire and Instrument Panel Wire (Right Kick Panel)
BD1	54	Rear Door No.2 Wire and Floor No.1 Wire (On the Left Rear Wheel House)
BD2		
BE1	54	Floor No.1 Wire and Floor No.1 Wire (Left Rear Quarter Panel)
BJ1	55	Rear Door No.1 Wire and Floor No.2 Wire (On the Right Rear Wheel House)

: Ground Points

Code	See Page	Ground Points Location
IE	52	Left Kick Panel
IG	52	Right Kick Panel
BM	54	Left Rear Quarter Panel