



Power Slide Door (RH)

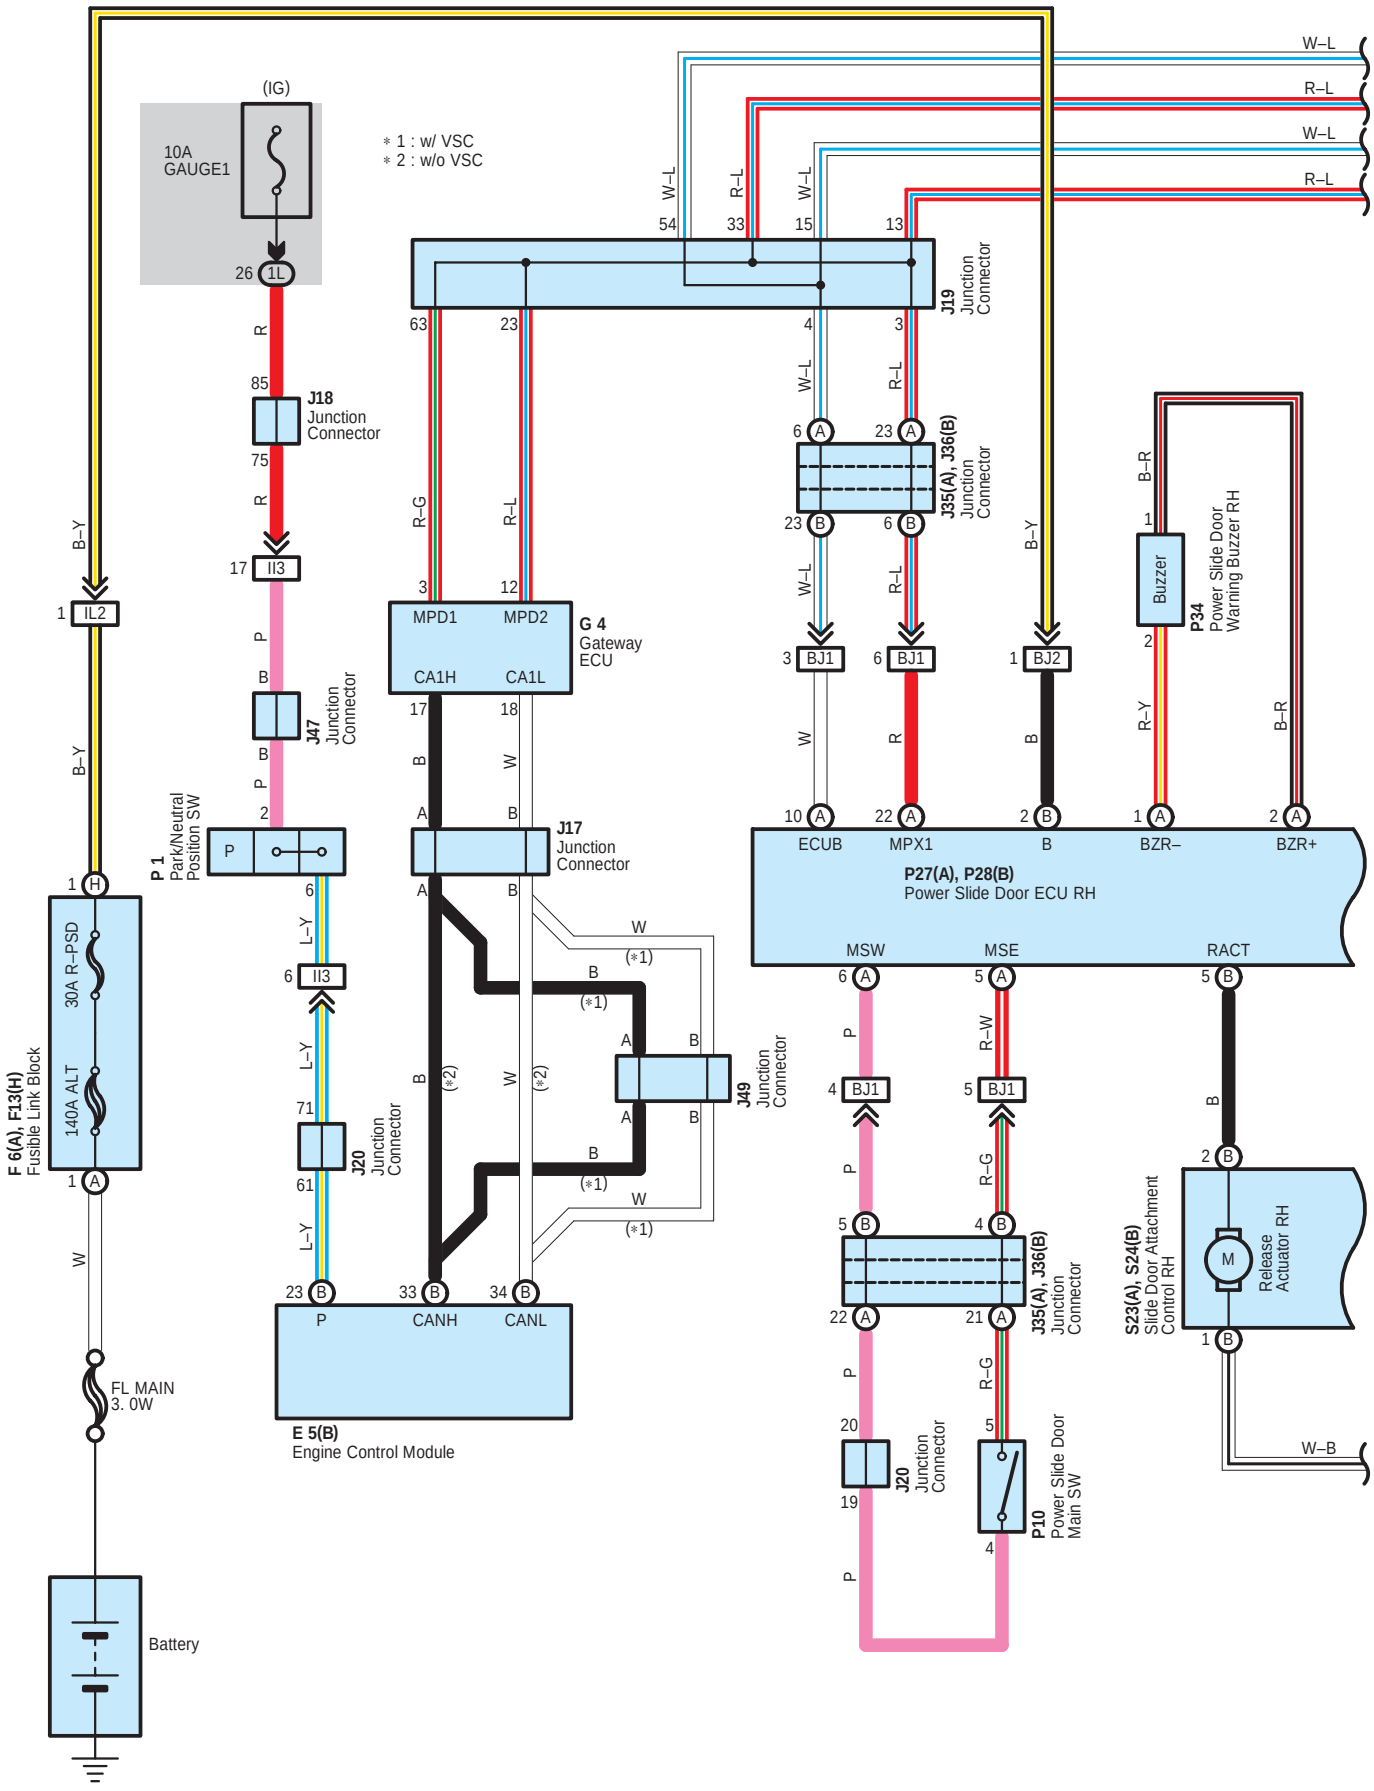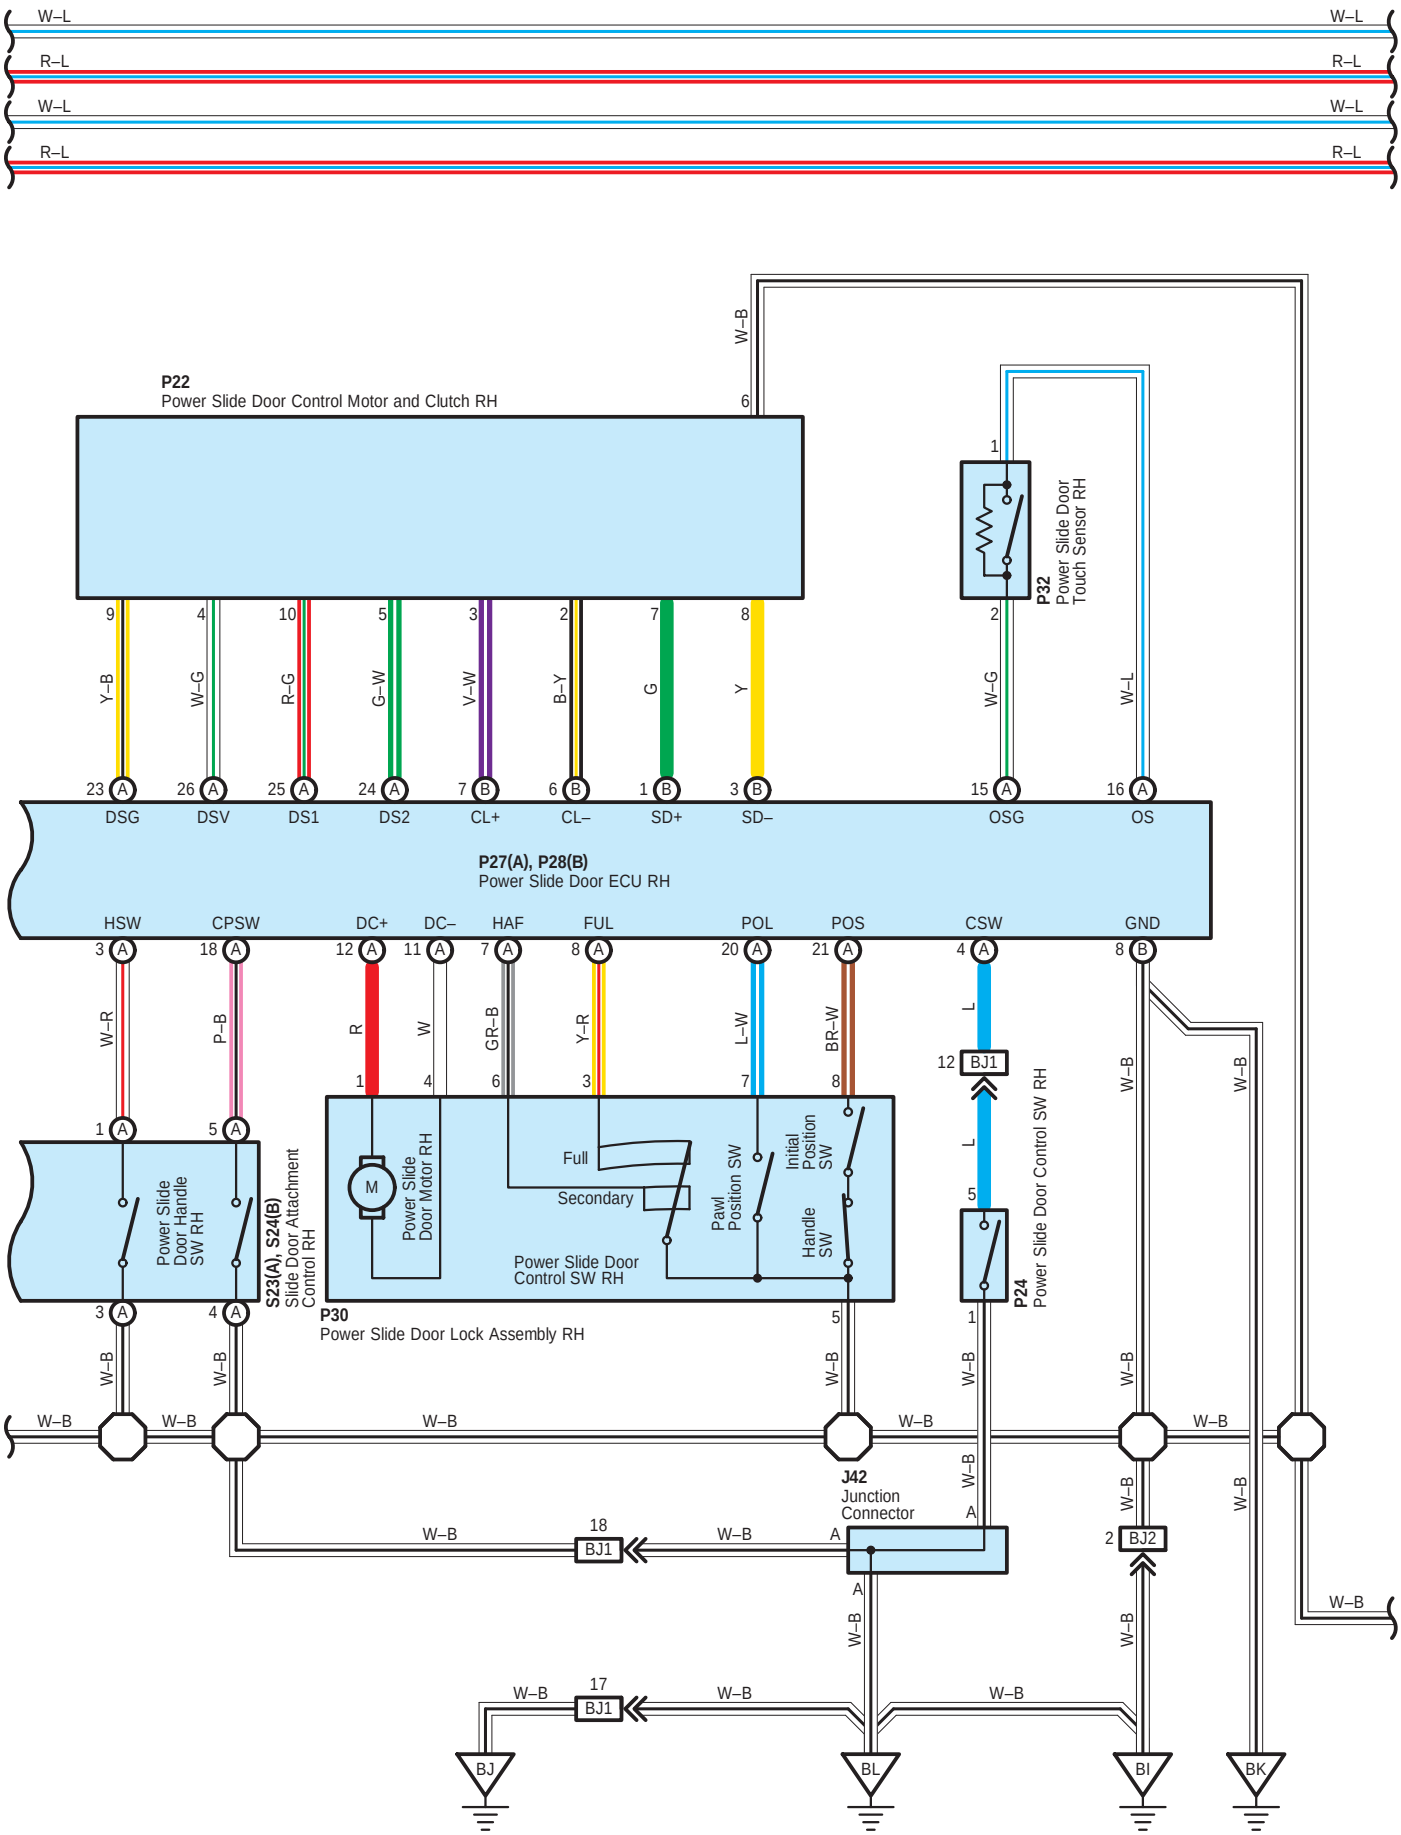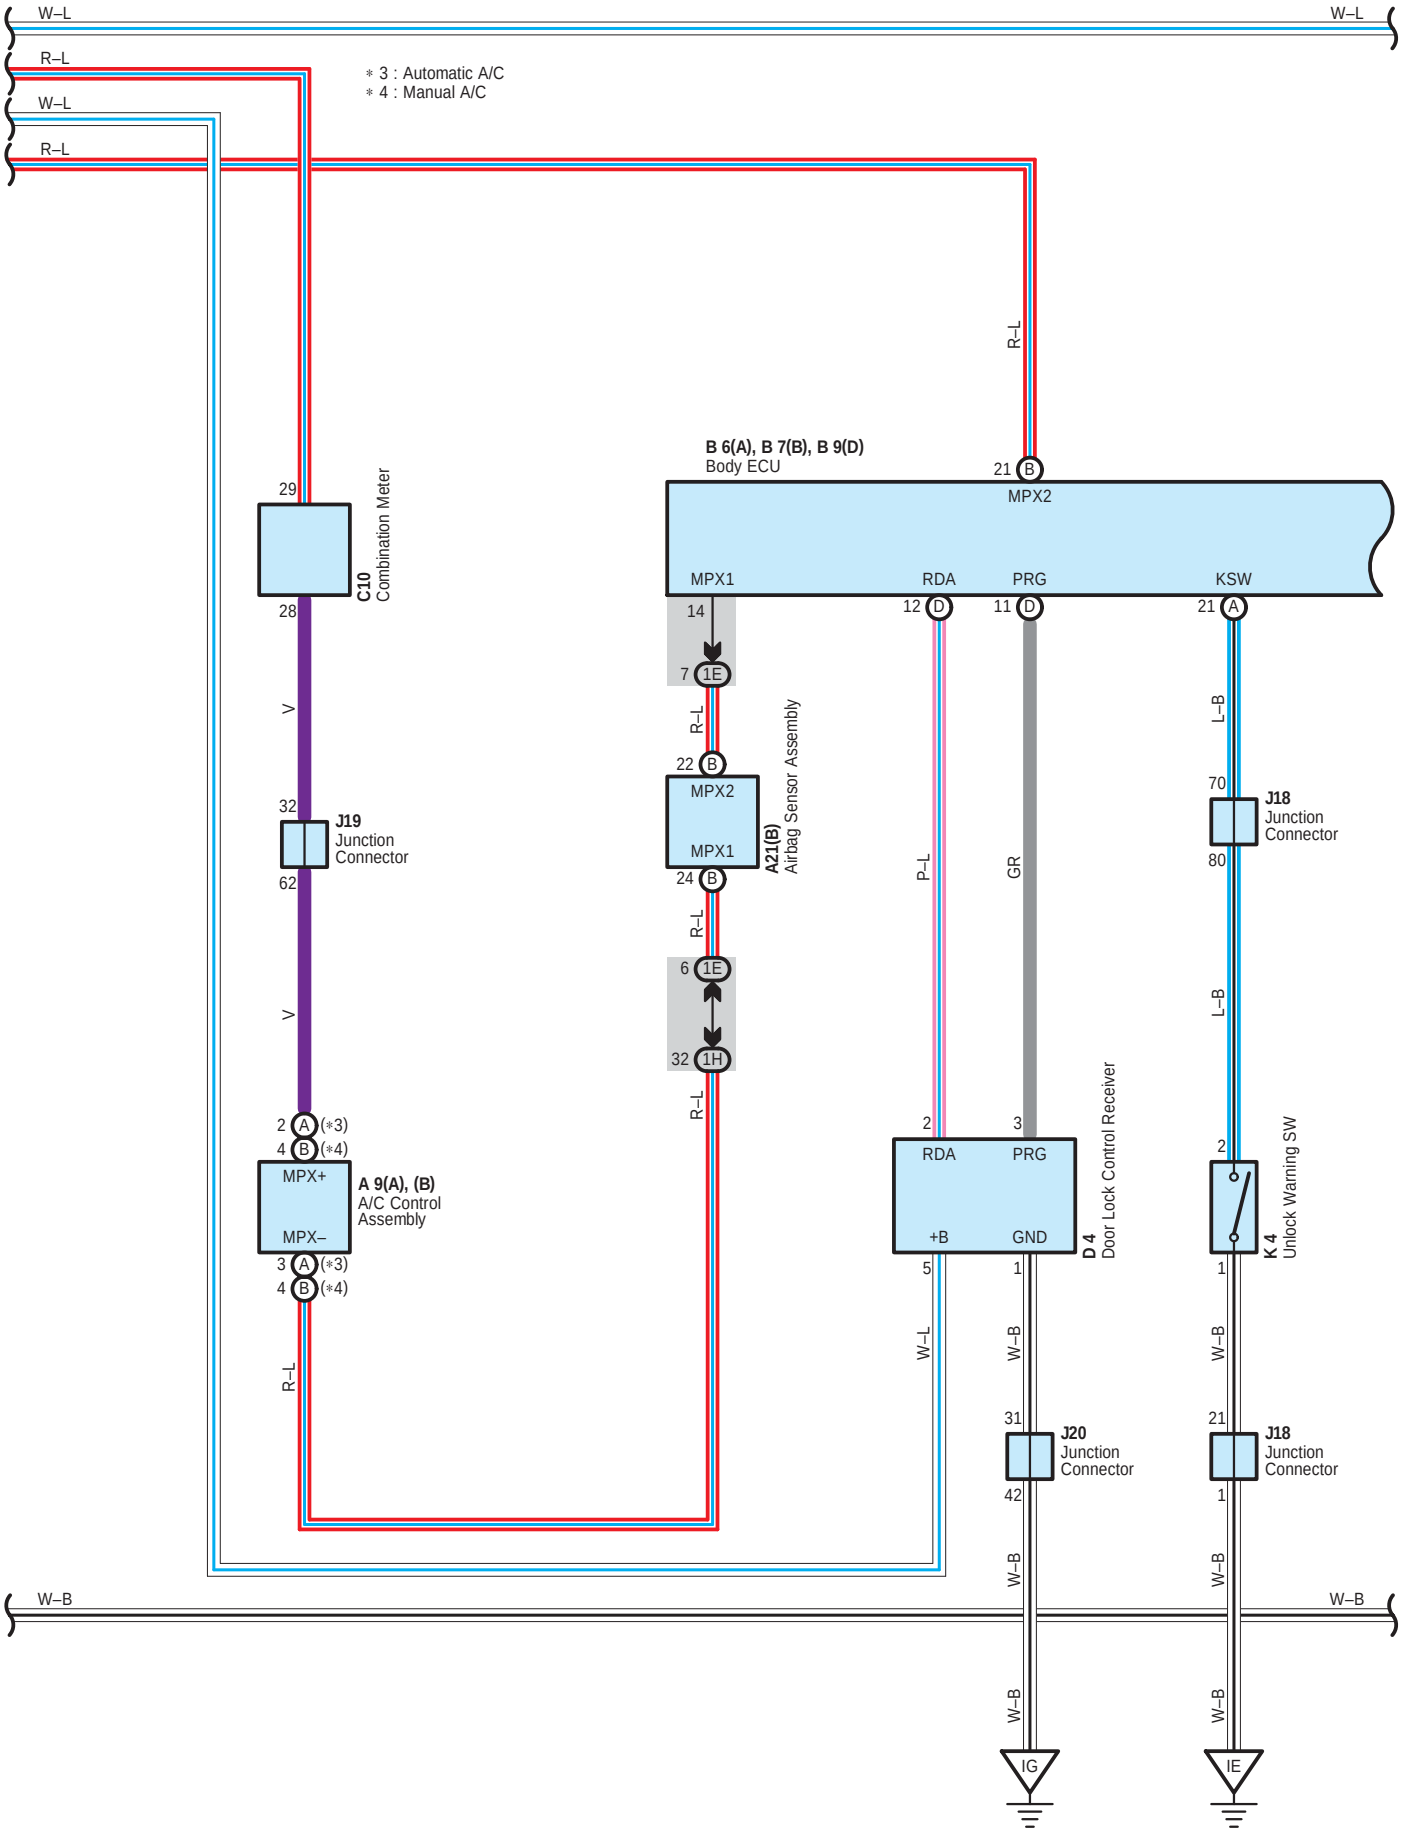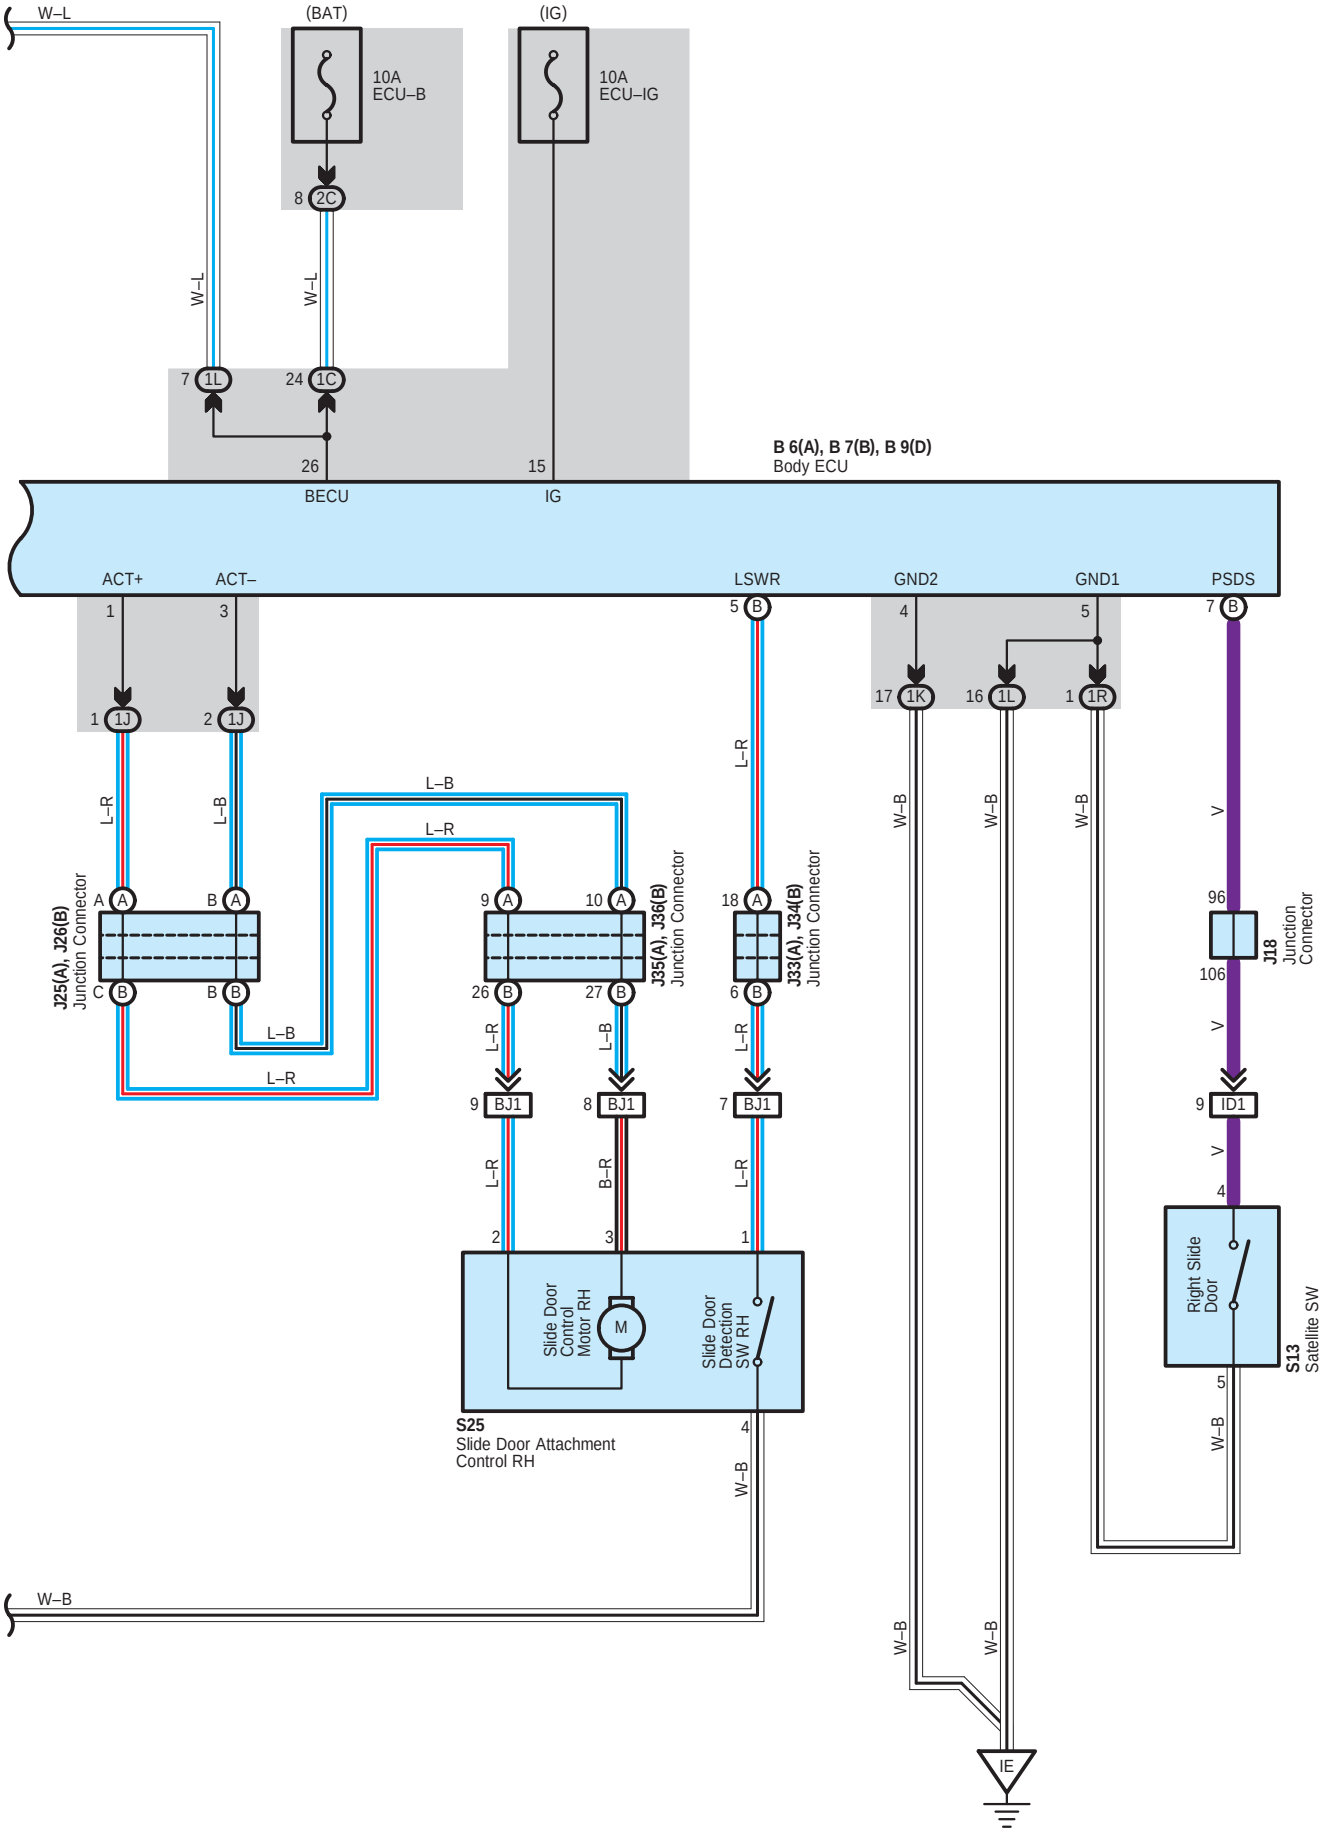


W–L
R–L
W–L
R–L
W–L
R–L
W–L
R–L
P22
Power Slide Door Control Motor and Clutch RH
W–B
6
1
P32
Power Slide Door Touch Sensor RH
2
W–G
W–L
9
4
10
5
3
2
7
8
Y–B
W–G
R–G
G–W
V–W
B–Y
G
Y
23 A
26 A
25 A
24 A
7 B
6 B
1 B
3 B
15 A
16 A
DSG
DSV
DS1
DS2
CL+
CL–
SD+
SD–
OSG
OS
P27(A), P28(B)
Power Slide Door ECU RH
HSW
CPSW
DC+
DC–
HAF
FUL
POL
POS
CSW
GND
3 A
18 A
12 A
11 A
7 A
8 A
20 A
21 A
4 A
8 B
W–R
P–B
R
W
GR–B
Y–R
L–W
BR–W
L
1
4
6
3
7
8
12 BJ1
L
5
1 A
5 A
M
Power Slide Door Motor RH
Full
Secondary
Pawl Position SW
Initial Position SW
Handle SW
Power Slide Door Control SW RH
P24
Power Slide Door Control SW RH
Power Slide Door Handle SW RH
S23(A), S24(B)
Slide Door Attachment Control RH
P30
Power Slide Door Lock Assembly RH
3 A
4 A
5
1
W–B
J42
Junction Connector
18
BJ1
A
2
BJ2
17
BJ
BL
BI
BK


W–L
W–L
R–L
W–L
R–L
＊3 : Automatic A/C
＊4 : Manual A/C
B 6(A), B 7(B), B 9(D)
Body ECU
21 B
MPX2
MPX1
RDA
PRG
KSW
14
12 D
11 D
21 A
7 1E
R–L
22 B
MPX2
MPX1
24 B
A21(B)
Airbag Sensor Assembly
R–L
6 1E
32 1H
R–L
P–L
GR
L–B
70
J18
Junction
Connector
80
L–B
29
C10
Combination Meter
28
V
32
J19
Junction
Connector
62
V
2 A (＊3)
4 B (＊4)
MPX+
MPX–
A 9(A), (B)
A/C Control
Assembly
3 A (＊3)
4 B (＊4)
R–L
2
3
RDA
PRG
+B
GND
D 4
Door Lock Control Receiver
5
1
W–L
W–B
2
K 4
Unlock Warning SW
1
W–B
31
J20
Junction
Connector
42
W–B
21
J18
Junction
Connector
1
W–B
W–B
W–B
W–B
W–B
IG
IE


W–L
(BAT)
(IG)
10A
ECU–B
10A
ECU–IG
8 2C
W–L
W–L
7 1L
24 1C
26
BECU
15
IG
B 6(A), B 7(B), B 9(D)
Body ECU
ACT+
ACT–
LSWR
GND2
GND1
PSDS
1
3
5 B
4
5
7 B
1 1J
2 1J
17 1K
16 1L
1 1R
L–R
L–B
L–B
L–R
L–R
W–B
W–B
W–B
V
96
106
J18
Junction
Connector
V
V
J25(A), J26(B)
Junction Connector
A A
B A
9 A
10 A
18 A
C B
B B
26 B
27 B
6 B
J35(A), J36(B)
Junction Connector
J33(A), J34(B)
Junction Connector
L–B
L–R
L–R
L–B
L–R
9 BJ1
8 BJ1
7 BJ1
9 ID1
L–R
B–R
L–R
V
4
2
3
1
Slide Door
Control
Motor RH
M
Slide Door
Detection
SW RH
Right Slide
Door
S13
Satellite SW
5
S25
Slide Door Attachment
Control RH
4
W–B
W–B
W–B
W–B
W–B
IE

Power Slide Door (RH)

○ : **Parts Location**

Code		See Page	Code		See Page	Code		See Page
A9	A	38	J18		40	P1		37
	B	38	J19		40	P10		41
A21	B	38	J20		40	P22		44
B6	A	38	J25	A	40	P24		44
B7	B	38	J26	B	40	P27	A	44
B9	D	38	J33	A	40	P28	B	44
C10		39	J34	B	40	P30		44
D4		39	J35	A	40	P32		44
E5	B	39	J36	B	40	P34		44
F6	A	36	J42		43	S13		45
F13	H	36	J47		40	S23	A	45
G4		39	J49		40	S24	B	45
J17		40	K4		40	S25		45

: **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	31	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1E	31	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1H	30	
1J	31	
1K		
1L		
1R	31	Roof Wire and Driver Side J/B (Lower Finish Panel)
2C	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)

: **Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID1	52	Roof Wire and Instrument Panel Wire (Near the Driver Side J/B)
II3	53	Engine Wire and Instrument Panel Wire (Right Kick Panel)
IL2	53	Engine Room Main Wire and Floor No.2 Wire (Right Kick Panel)
BJ1	55	Rear Door No.1 Wire and Floor No.2 Wire (On the Right Rear Wheel House)
BJ2		

: **Ground Points**

Code	See Page	Ground Points Location
IE	52	Left Kick Panel
IG	52	Right Kick Panel
BI	54	Under the Right Center Pillar
BJ	54	Inside of the Slide Door RH
BK		
BL	54	Right Rear Quarter Panel