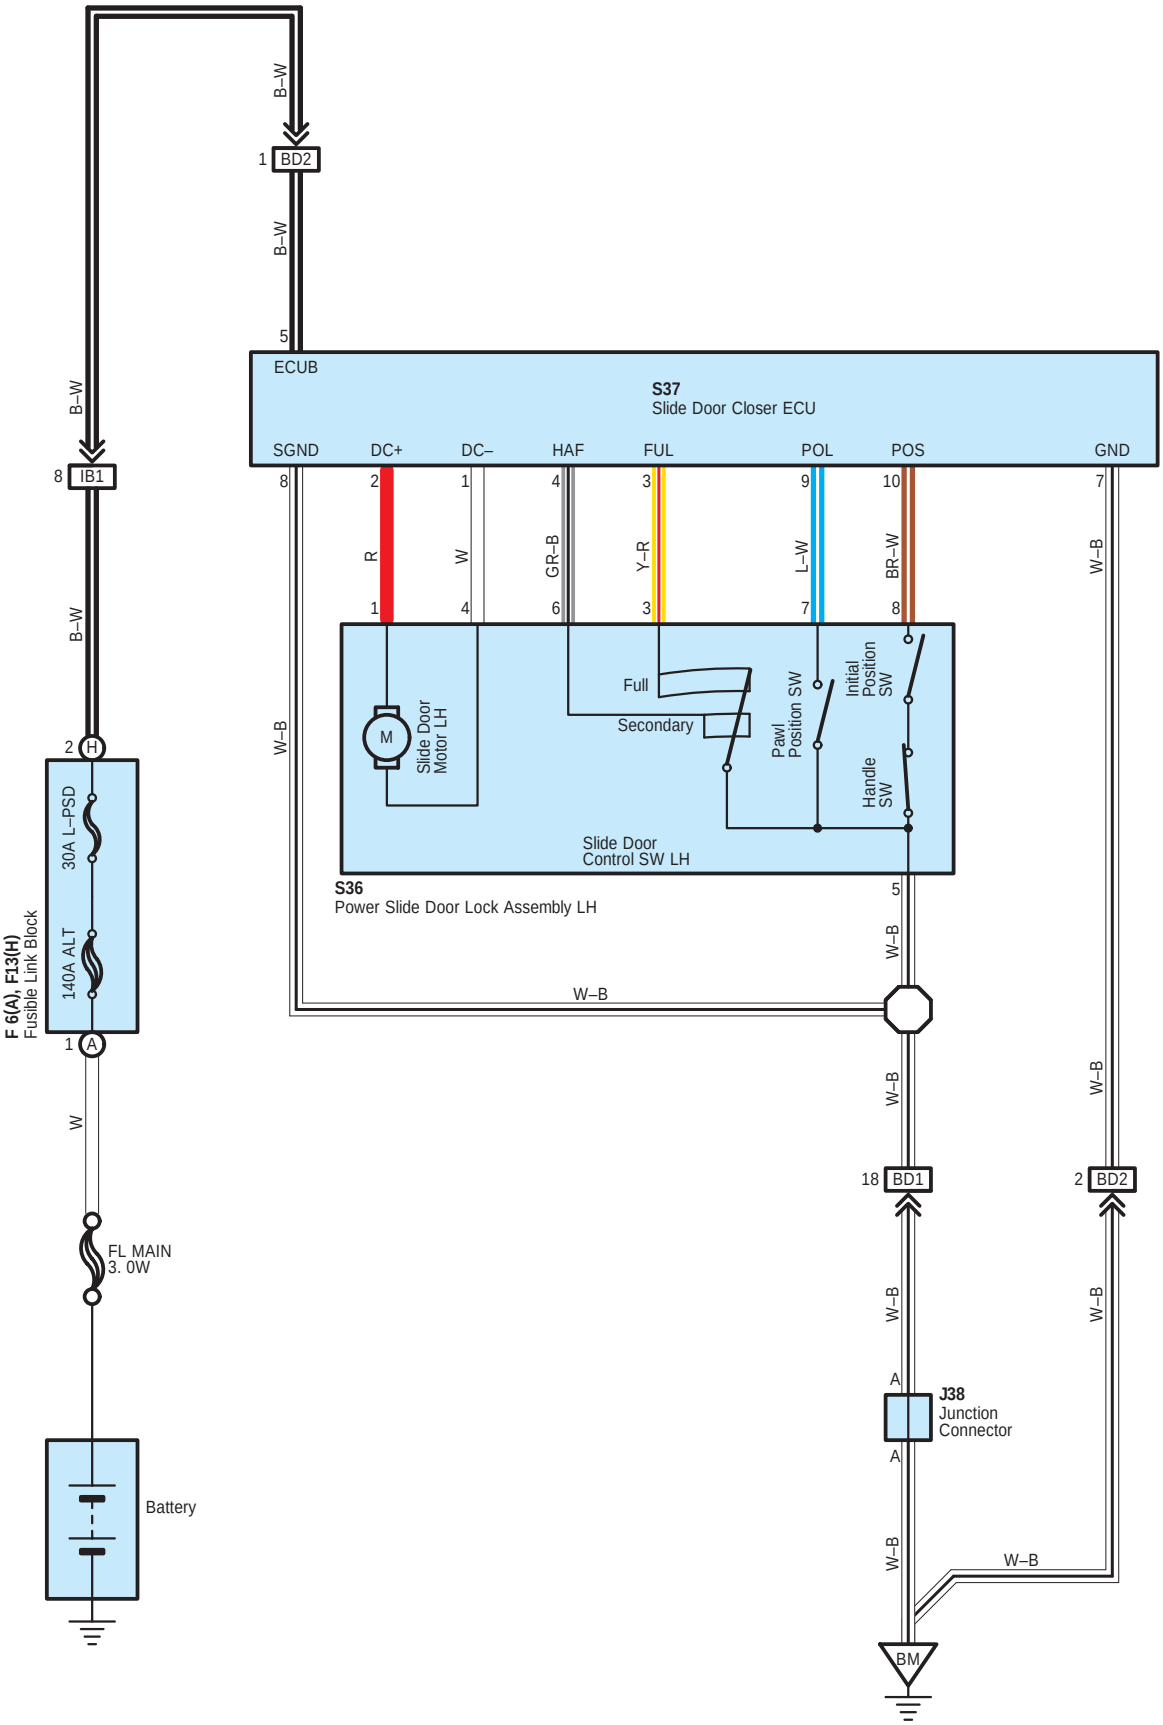

B–W
1 BD2
B–W
5
ECUB
S37
Slide Door Closer ECU
SGND
DC+
DC–
HAF
FUL
POL
POS
GND
8
2
1
4
3
9
10
7
R
W
GR–B
Y–R
L–W
BR–W
W–B
1
4
6
3
7
8
B–W
8 IB1
B–W
2 H
30A L–PSD
140A ALT
F 6(A), F13(H)
Fusible Link Block
1 A
W
FL MAIN
3. 0W
Battery
M
Slide Door
Motor LH
Full
Secondary
Pawl
Position SW
Initial
Position
SW
Handle
SW
Slide Door
Control SW LH
S36
Power Slide Door Lock Assembly LH
W–B
5
W–B
W–B
18 BD1
2 BD2
W–B
W–B
A
J38
Junction
Connector
A
W–B
W–B
BM

○ : **Parts Location**

Code		See Page	Code	See Page	Code	See Page
F6	A	36	J38	43	S37	45
F13	H	36	S36	45		

▭ : **Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB1	52	Engine Room Main Wire and Floor No.1 Wire (Left Cowl Side Panel)
BD1	54	Rear Door No.2 Wire and Floor No.1 Wire (On the Left Rear Wheel House)
BD2		

▽ : **Ground Points**

Code	See Page	Ground Points Location
BM	54	Left Rear Quarter Panel