



Back Door Closer

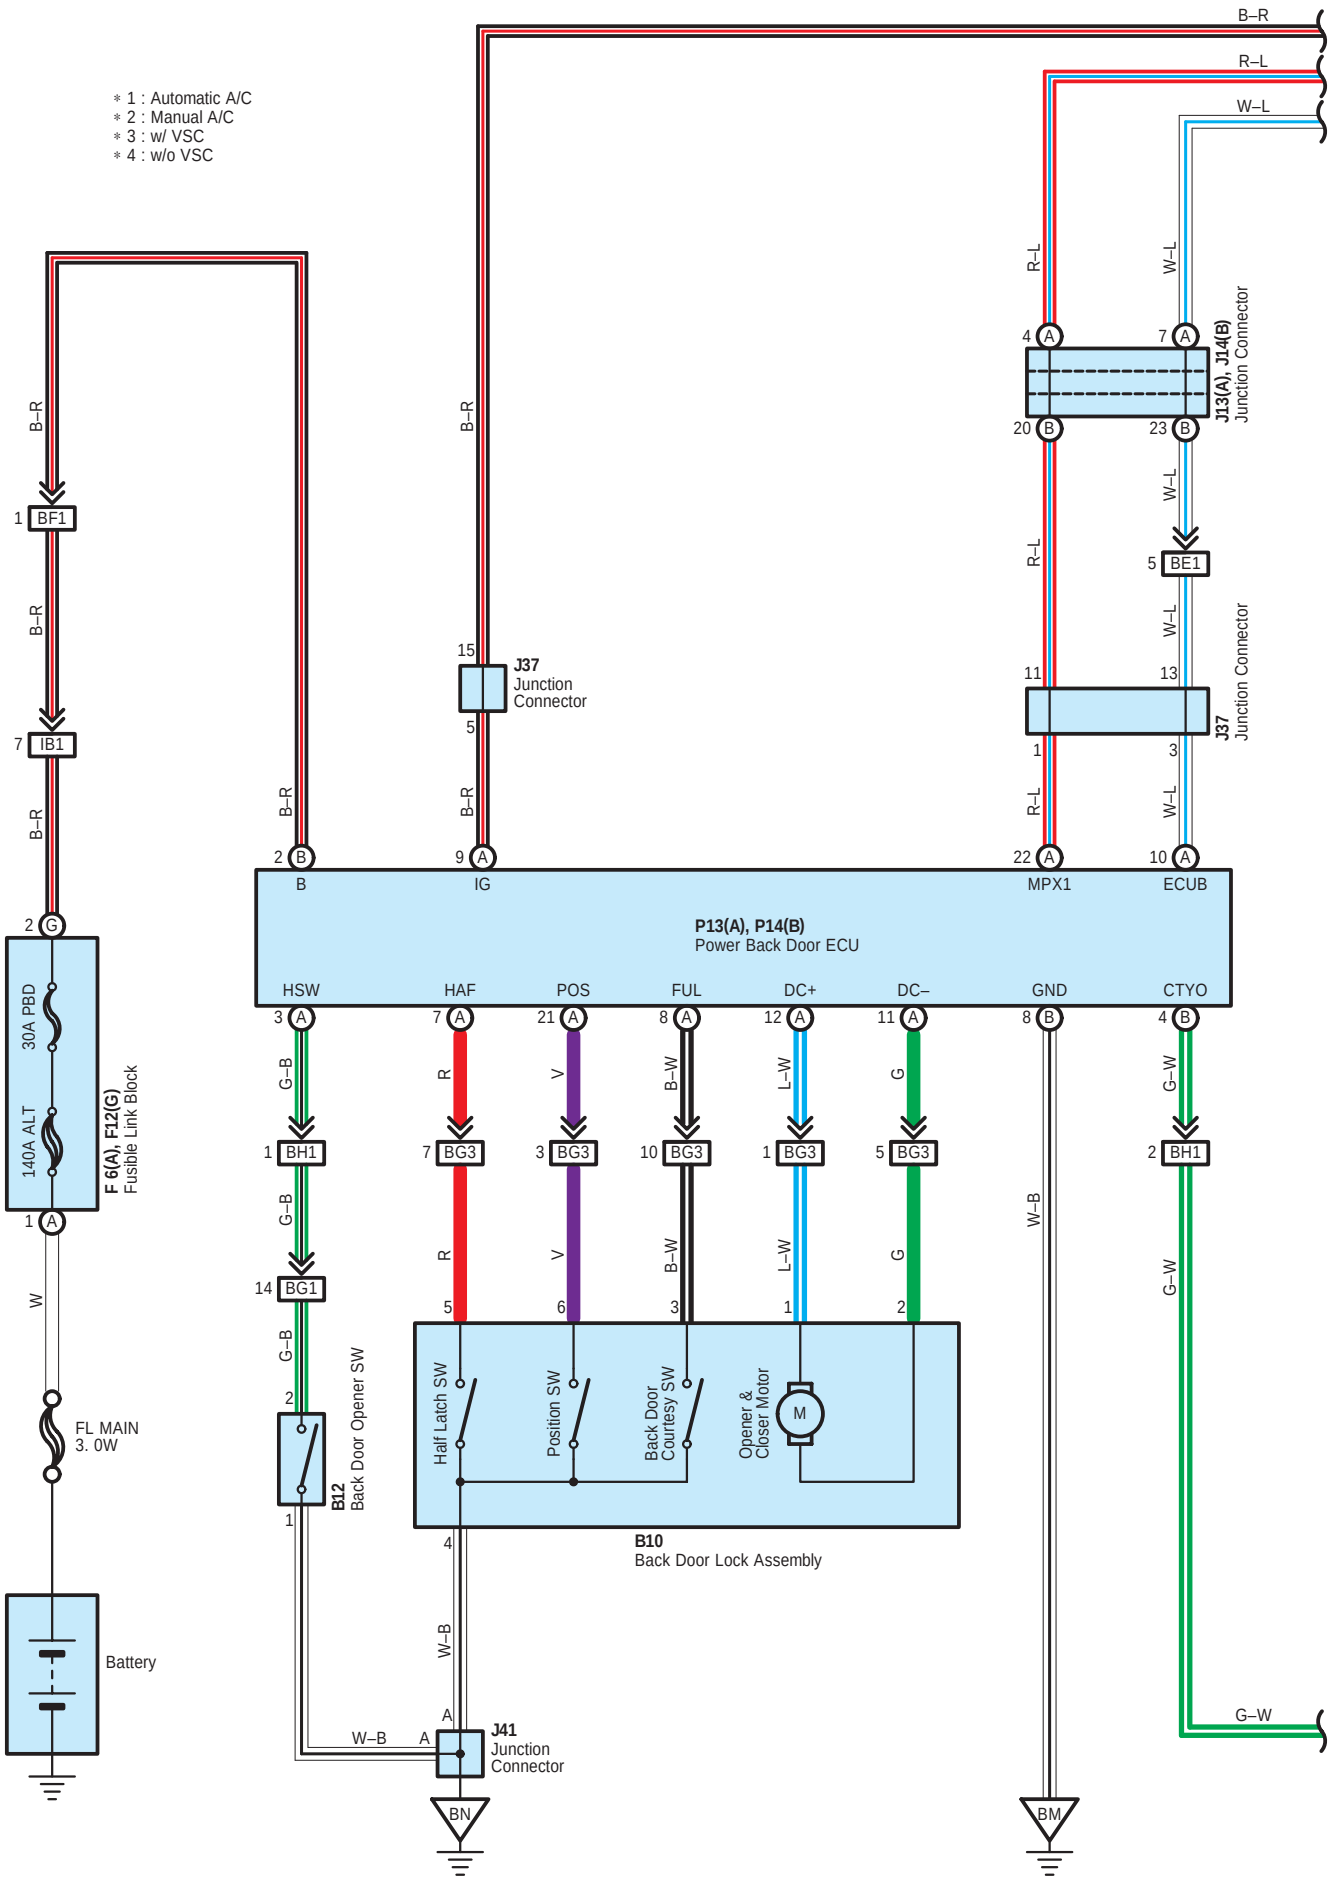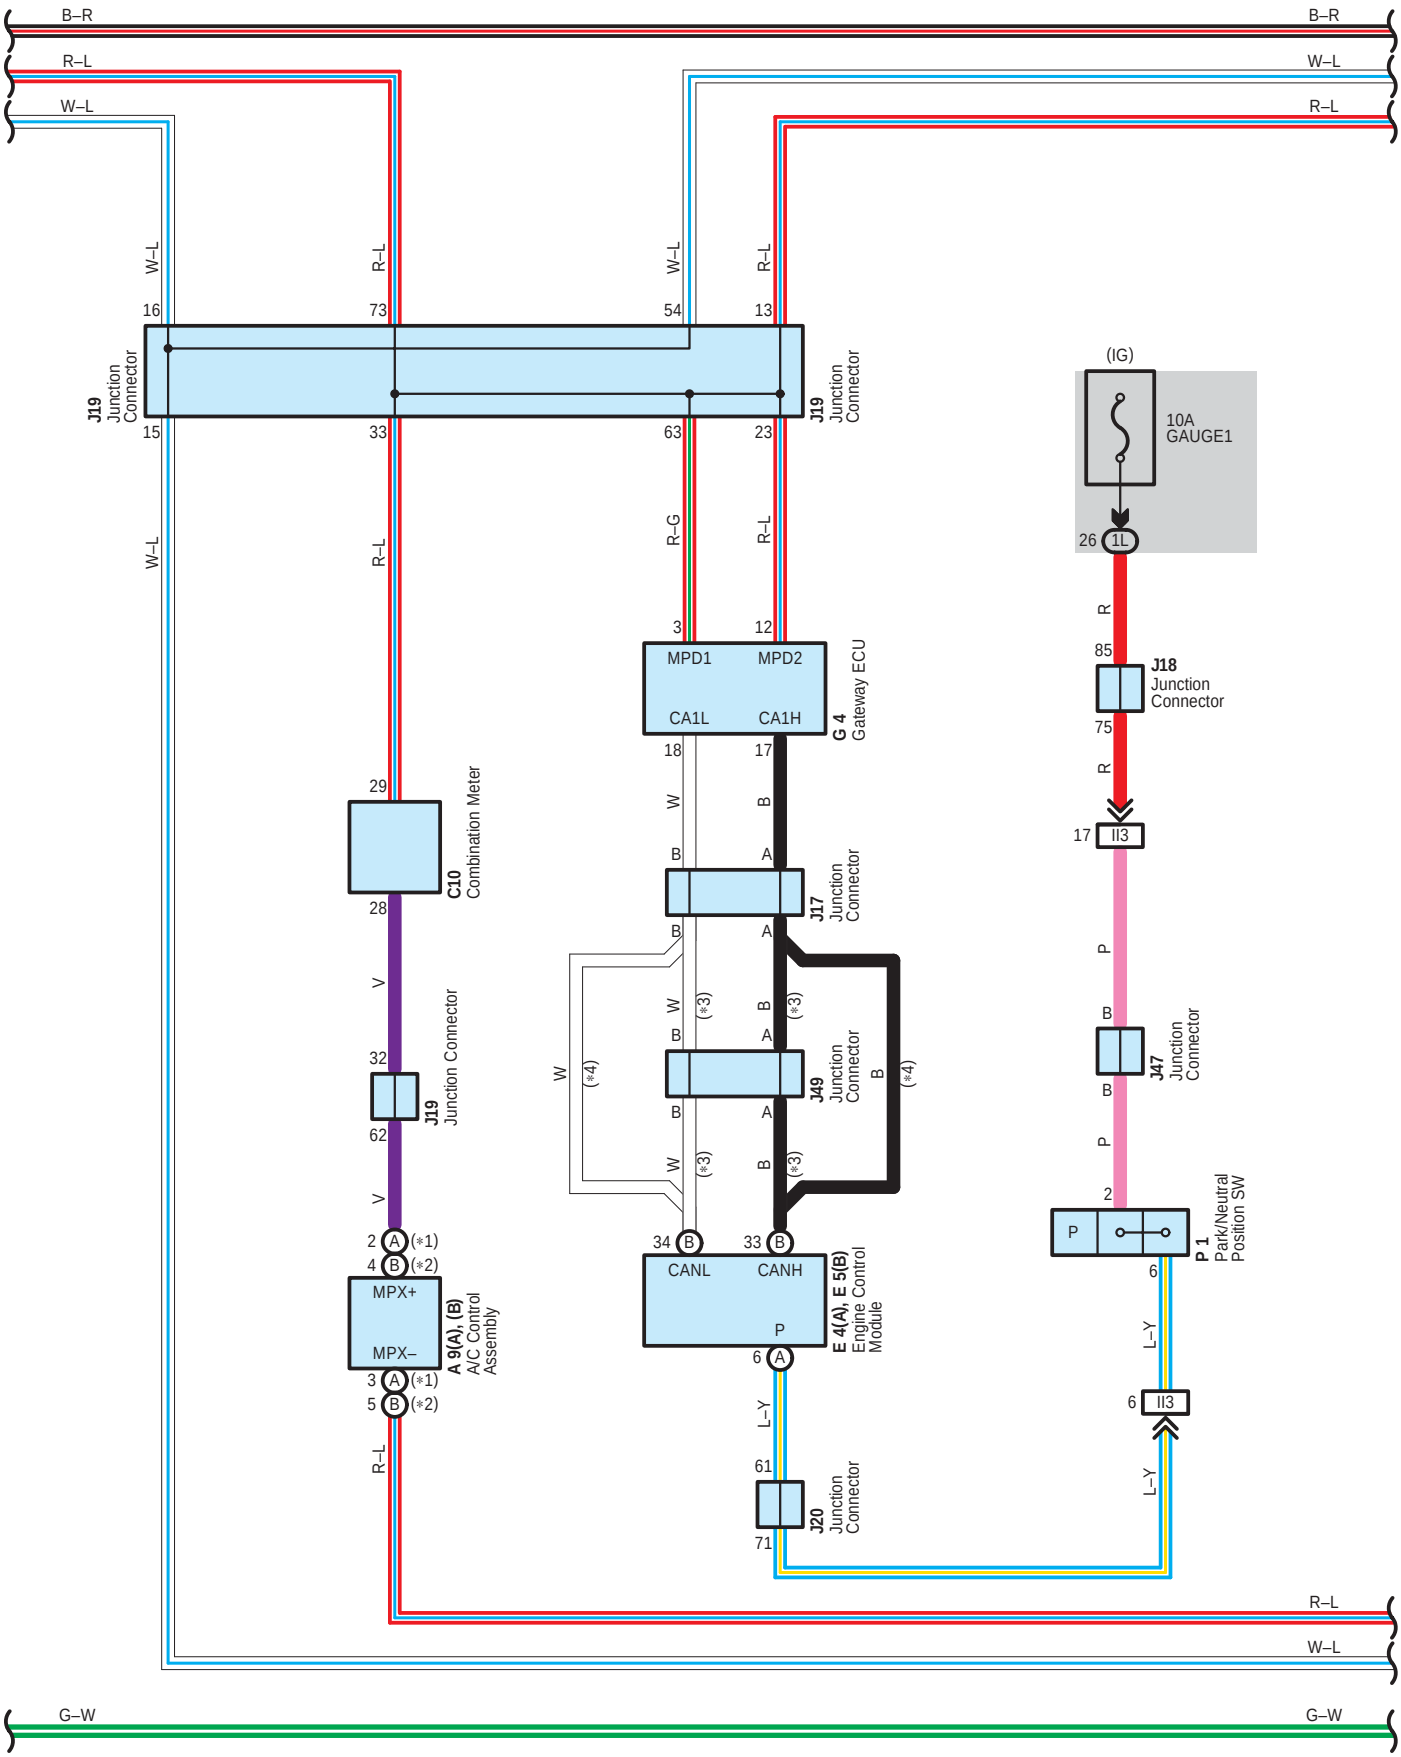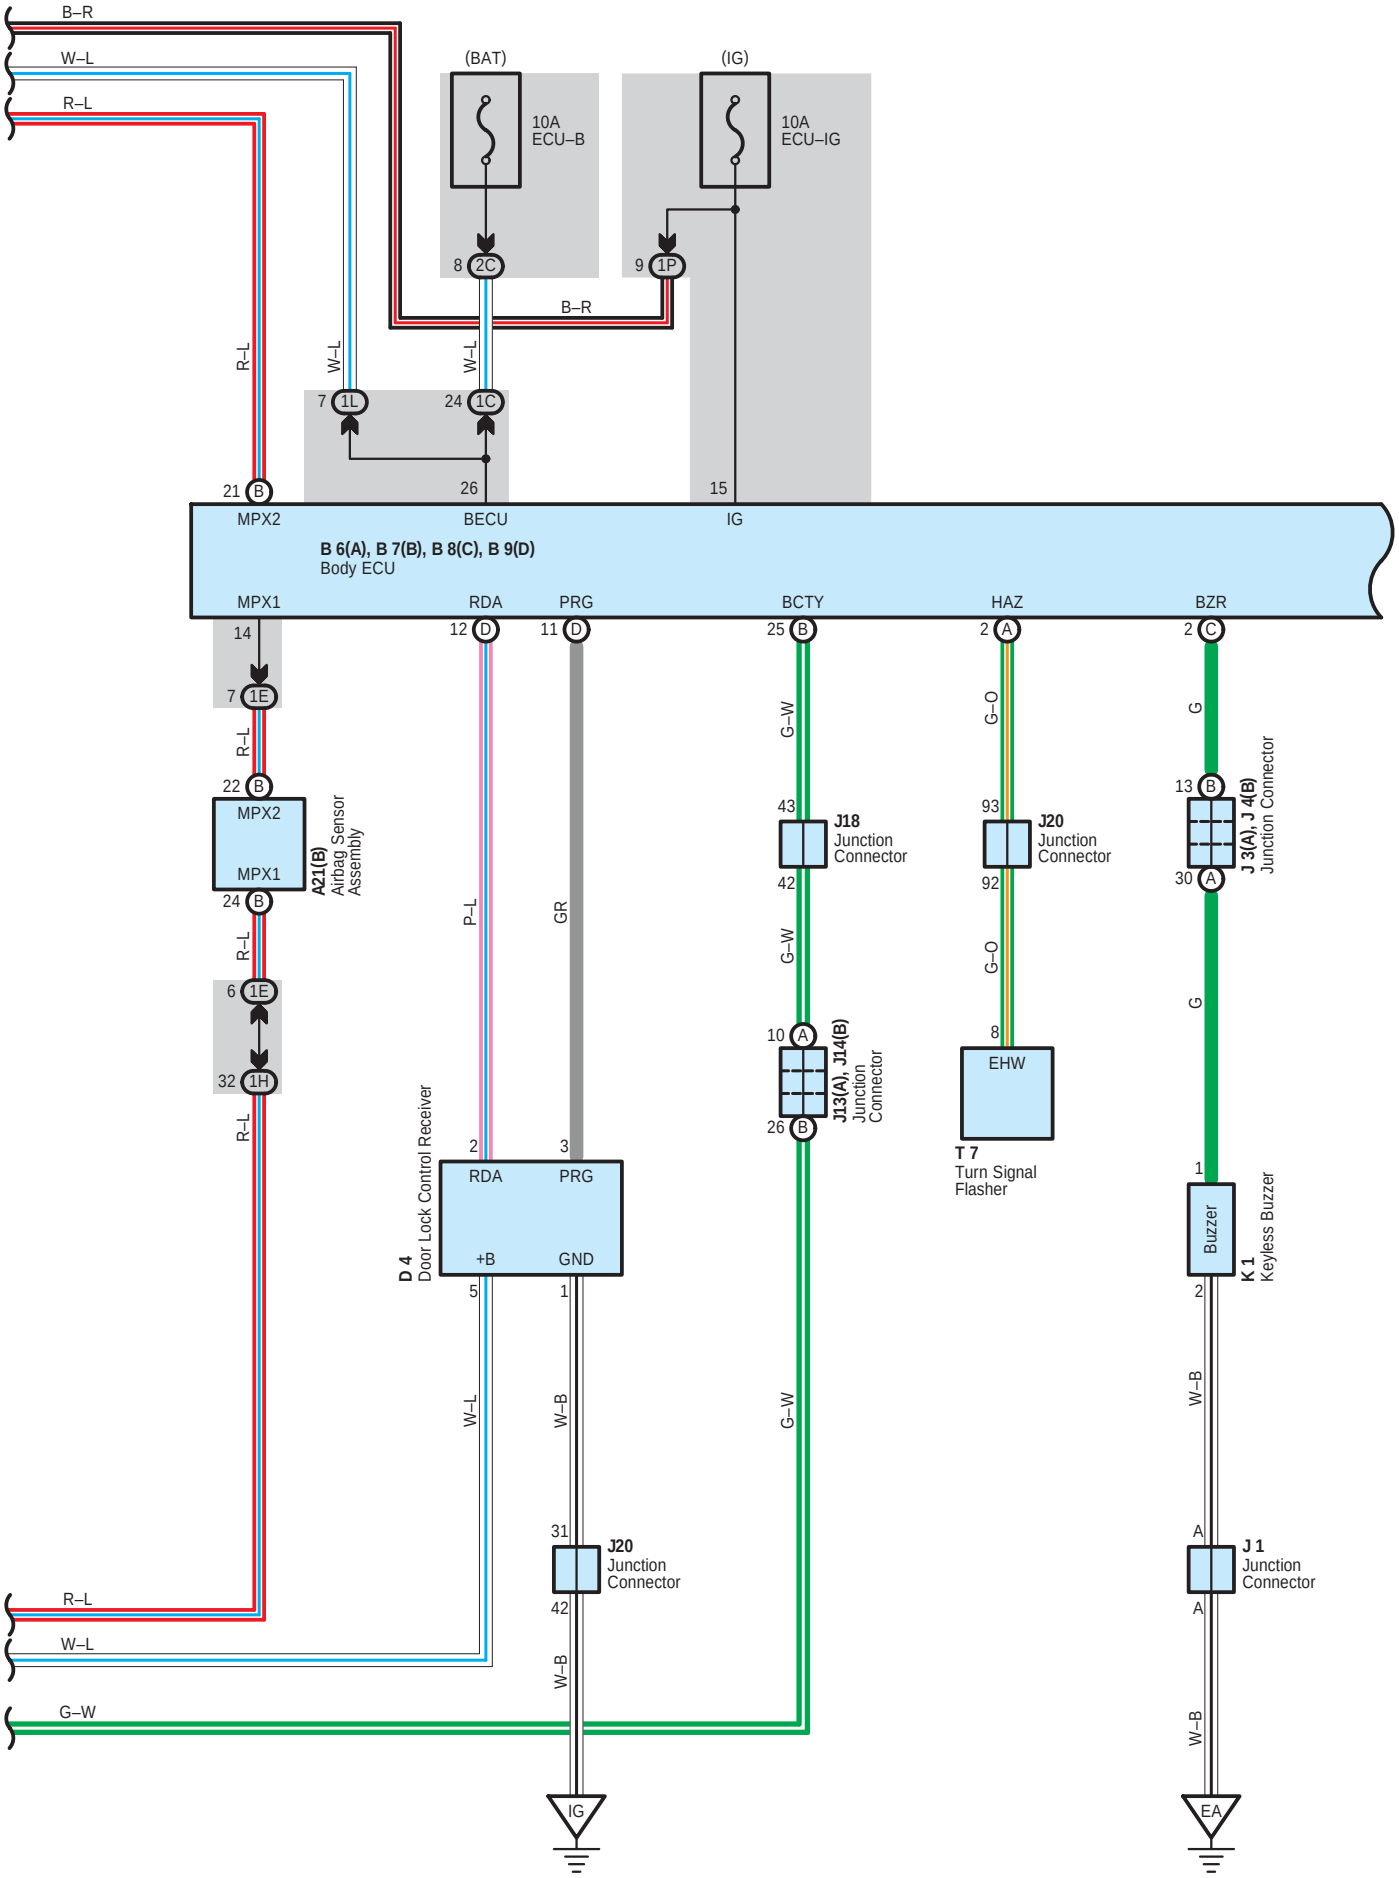


B–R
R–L
W–L
J19 Junction Connector
16
73
54
13
15
33
63
23
C10 Combination Meter
29
28
J19 Junction Connector
32
62
A 9(A), (B) A/C Control Assembly
MPX+
MPX–
G 4 Gateway ECU
MPD1
MPD2
CA1L
CA1H
18
17
3
12
J17 Junction Connector
J49 Junction Connector
(*1)
(*2)
(*3)
(*4)
E 4(A), E 5(B) Engine Control Module
CANL
CANH
34
33
6
61
71
J20 Junction Connector
(IG)
10A GAUGE1
26
1L
85
75
17
II3
J18 Junction Connector
J47 Junction Connector
P 1 Park/Neutral Position SW
2
6
R–G
G–W

Back Door Closer

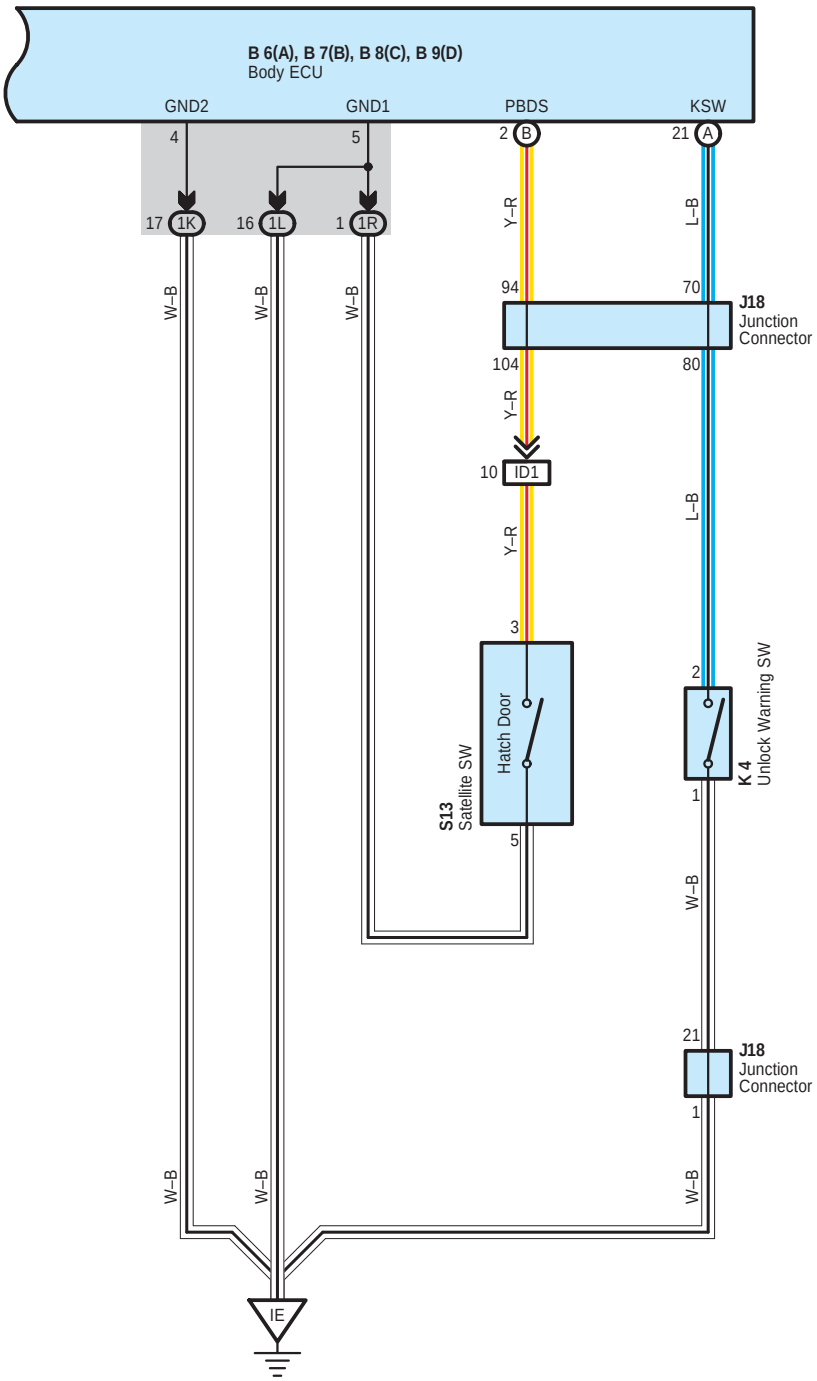


B 6(A), B 7(B), B 8(C), B 9(D)
Body ECU
GND2
GND1
PBDS
KSW
4
5
2 B
21 A
17 1K
16 1L
1 1R
Y–R
L–B
W–B
94
70
J18
Junction
Connector
104
80
Y–R
10 ID1
L–B
Y–R
3
2
S13
Satellite SW
Hatch Door
K 4
Unlock Warning SW
5
1
W–B
21
J18
Junction
Connector
1
W–B
W–B
W–B
IE

Back Door Closer

○ : Parts Location

Code		See Page	Code		See Page	Code		See Page
A9	A	38	E5	B	39	J20		40
	B	38	F6	A	36	J37		43
A21	B	38	F12	G	36	J41		43
B6	A	38	G4		39	J47		40
B7	B	38	J1		37	J49		40
B8	C	38	J3	A	40	K1		37
B9	D	38	J4	B	40	K4		40
B10		42	J13	A	40	P1		37
B12		42	J14	B	40	P13	A	44
C10		39	J17		40	P14	B	44
D4		39	J18		40	S13		45
E4	A	39	J19		40	T7		41

⬭ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	31	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1E	31	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1H	30	
1K	31	
1L		
1P	31	Floor No.1 Wire and Driver Side J/B (Lower Finish Panel)
1R	31	Roof Wire and Driver Side J/B (Lower Finish Panel)
2C	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)

▭ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB1	52	Engine Room Main Wire and Floor No.1 Wire (Left Cowl Side Panel)
ID1	52	Roof Wire and Instrument Panel Wire (Near the Driver Side J/B)
II3	53	Engine Wire and Instrument Panel Wire (Right Kick Panel)
BE1	54	Floor No.1 Wire and Floor No.1 Wire (Left Rear Quarter Panel)
BF1		
BG1	55	Back Door No.1 Wire and Floor No.1 Wire (Left Rear Quarter Panel)
BG3		
BH1	55	Floor No.1 Wire and Floor No.1 Wire (Left Rear Quarter Panel)

▽ : Ground Points

Code	See Page	Ground Points Location
EA	50	Front Side of the Right Fender Apron
IE	52	Left Kick Panel
IG	52	Right Kick Panel
BM	54	Left Rear Quarter Panel
BN	54	Left Side of the Back Door