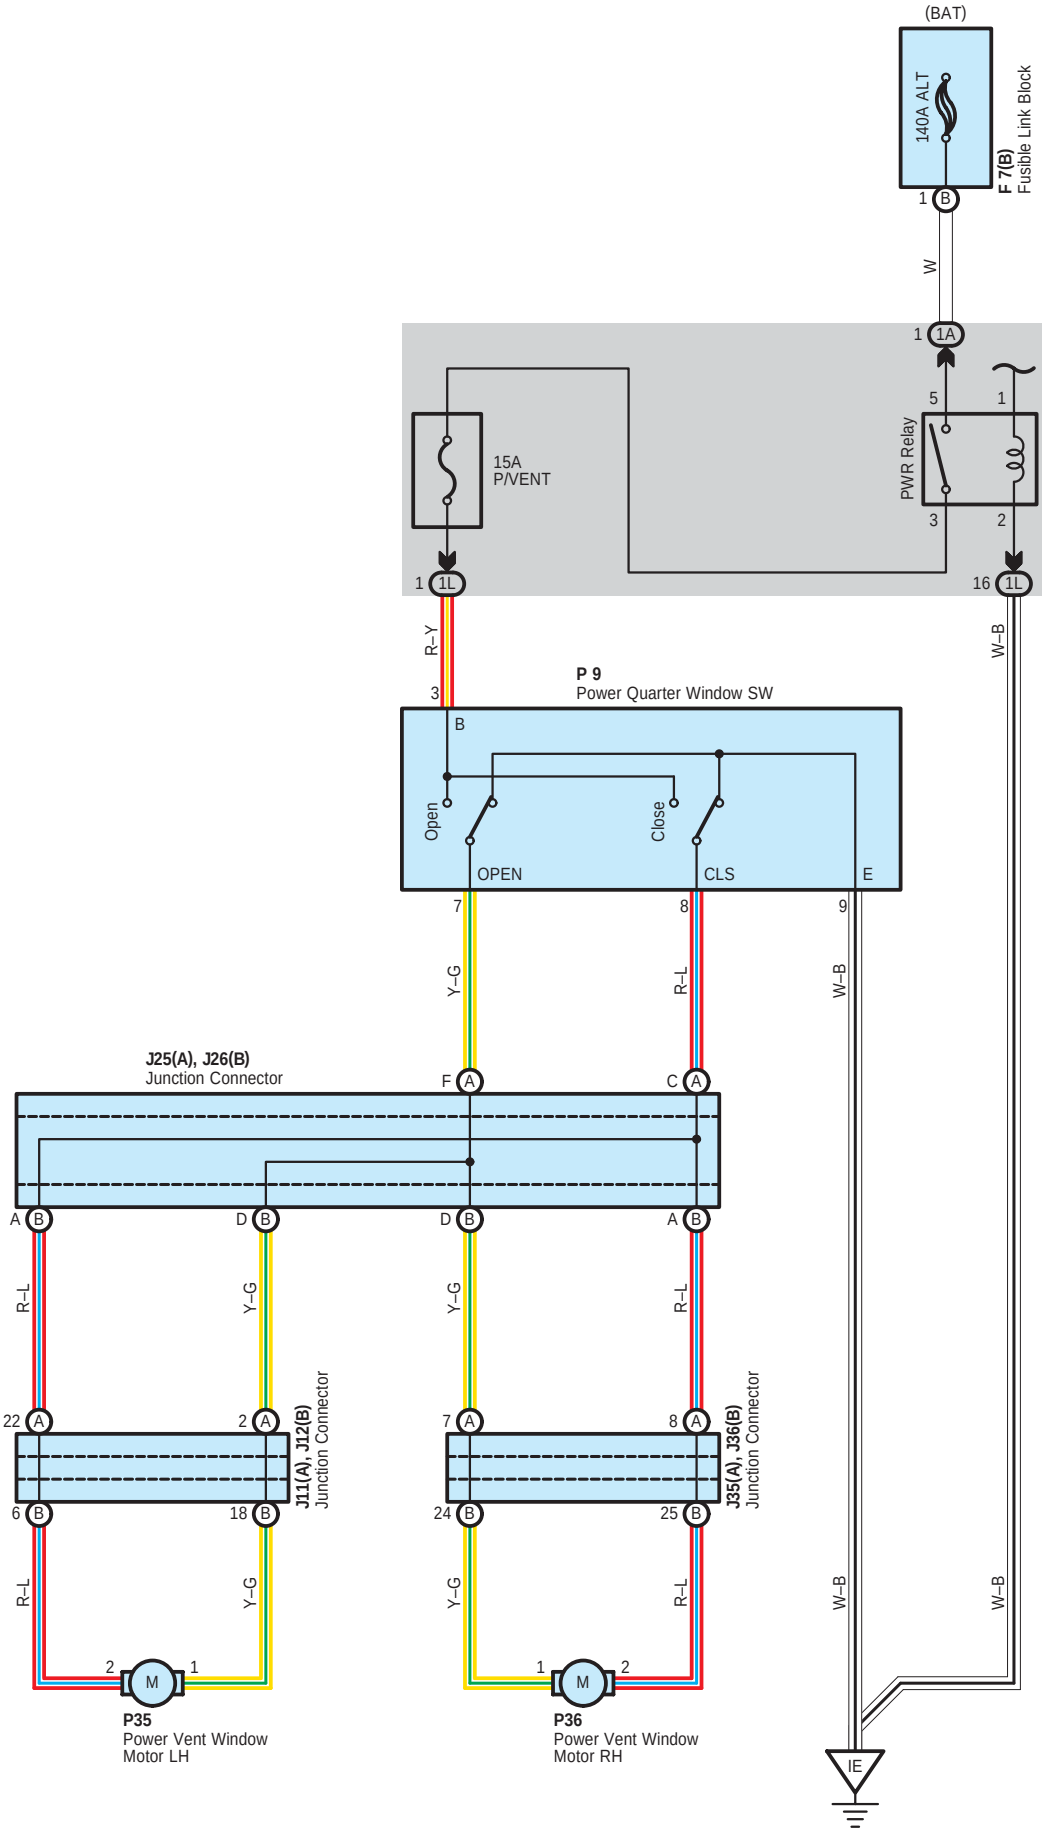

(BAT)
140A ALT
F 7(B)
Fusible Link Block
1 B
W
1 1A
5 1
PWR Relay
3 2
15A
P/VENT
1 1L
16 1L
R–Y
W–B
P 9
Power Quarter Window SW
3 B
Open
Close
OPEN
CLS
E
7 8 9
Y–G
R–L
W–B
J25(A), J26(B)
Junction Connector
F A
C A
A B D B D B A B
R–L
Y–G
Y–G
R–L
22 A 2 A
7 A 8 A
J11(A), J12(B)
Junction Connector
J35(A), J36(B)
Junction Connector
6 B 18 B
24 B 25 B
R–L
Y–G
Y–G
R–L
W–B
W–B
2 M 1
1 M 2
P35
Power Vent Window
Motor LH
P36
Power Vent Window
Motor RH
IE

○ : Parts Location

Code		See Page	Code		See Page	Code	See Page
F7	B	36	J26	B	40	P35	44
J11	A	40	J35	A	40	P36	44
J12	B	40	J36	B	40		
J25	A	40	P9		41		

⬭ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	31	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1L	31	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)

▽ : Ground Points

Code	See Page	Ground Points Location
IE	52	Left Kick Panel