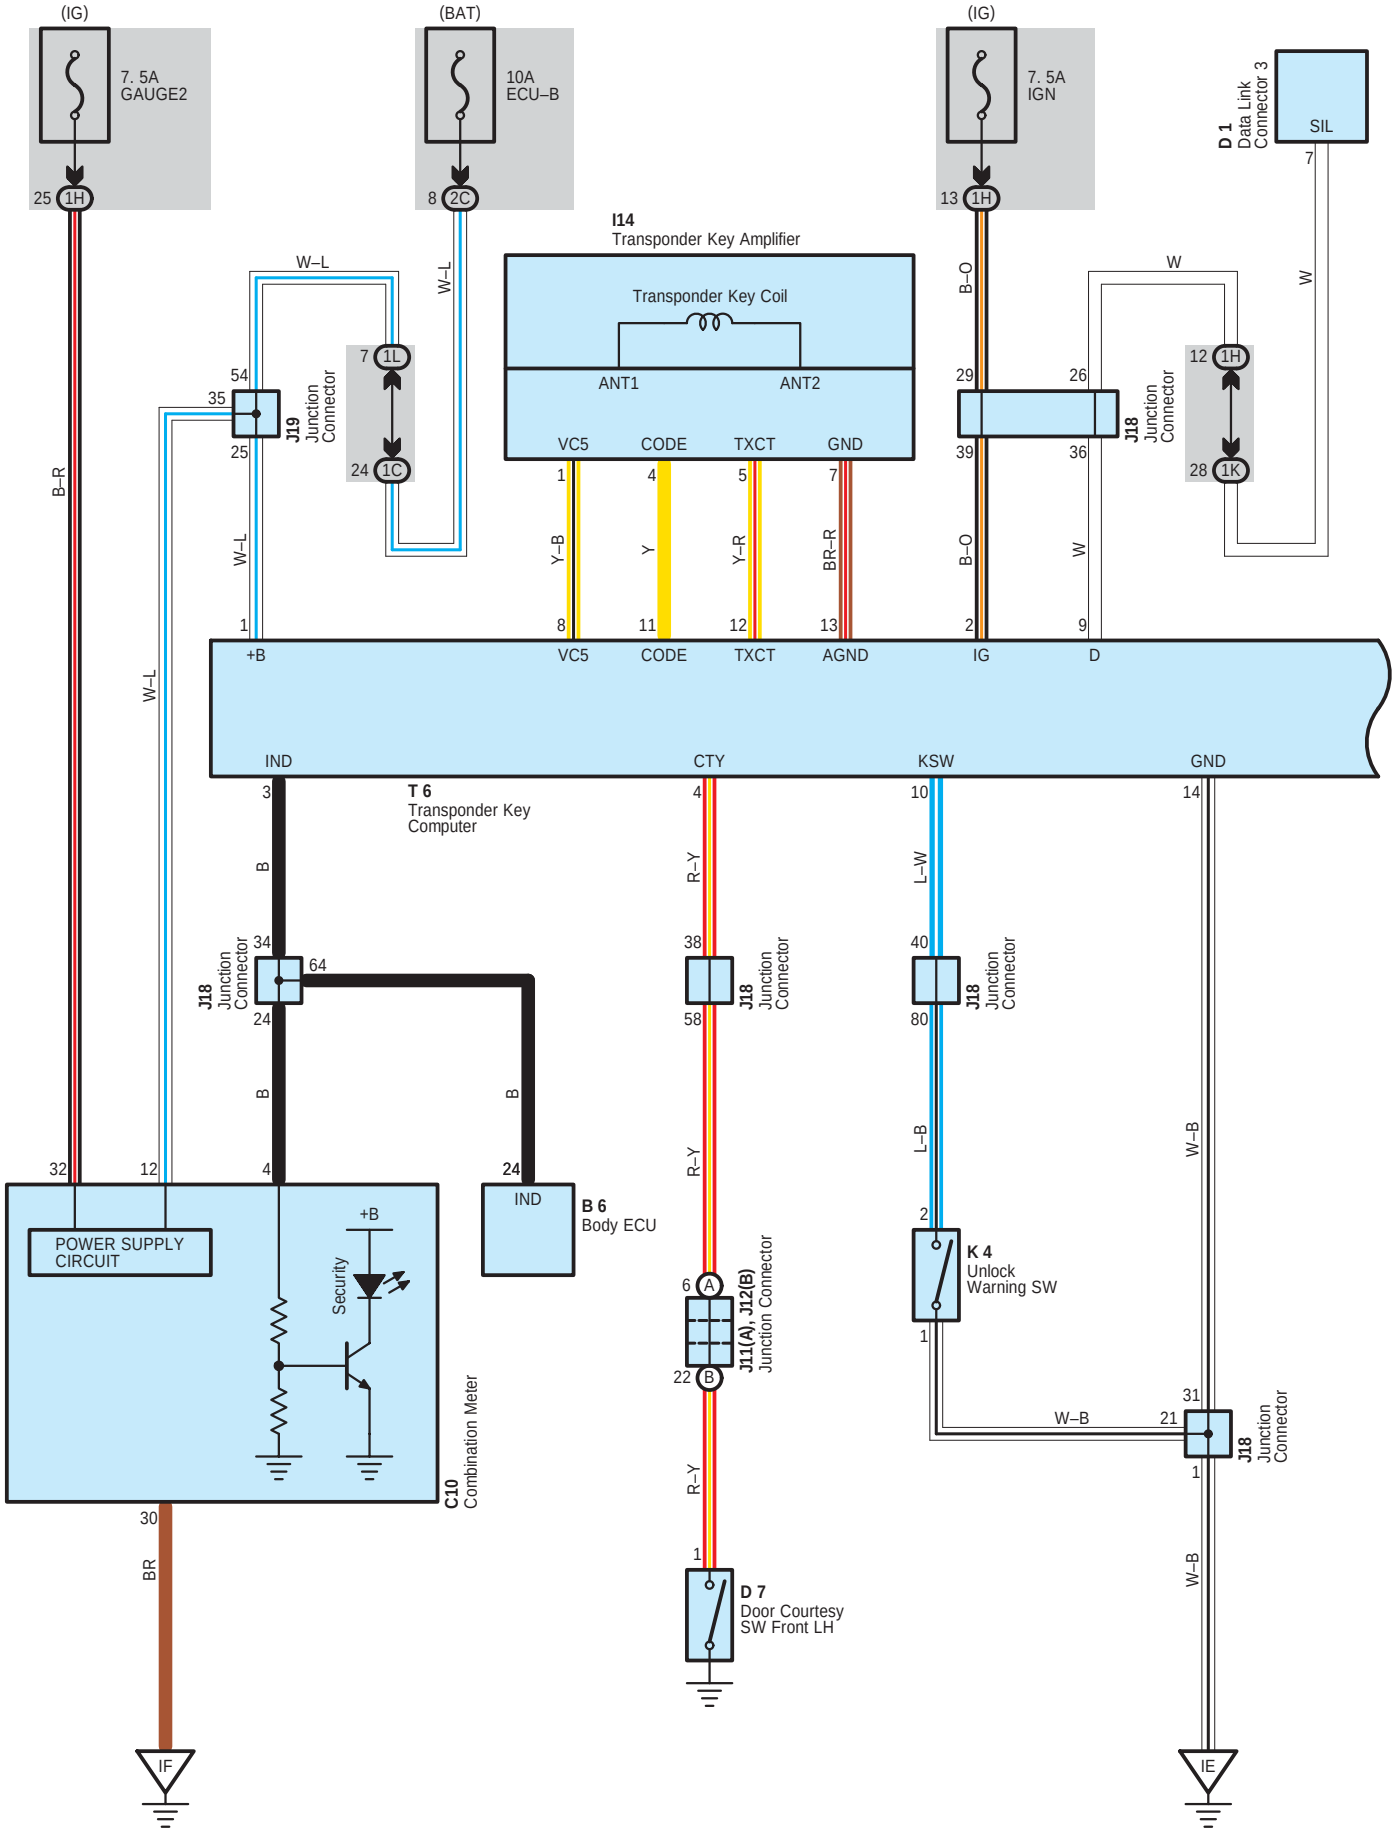
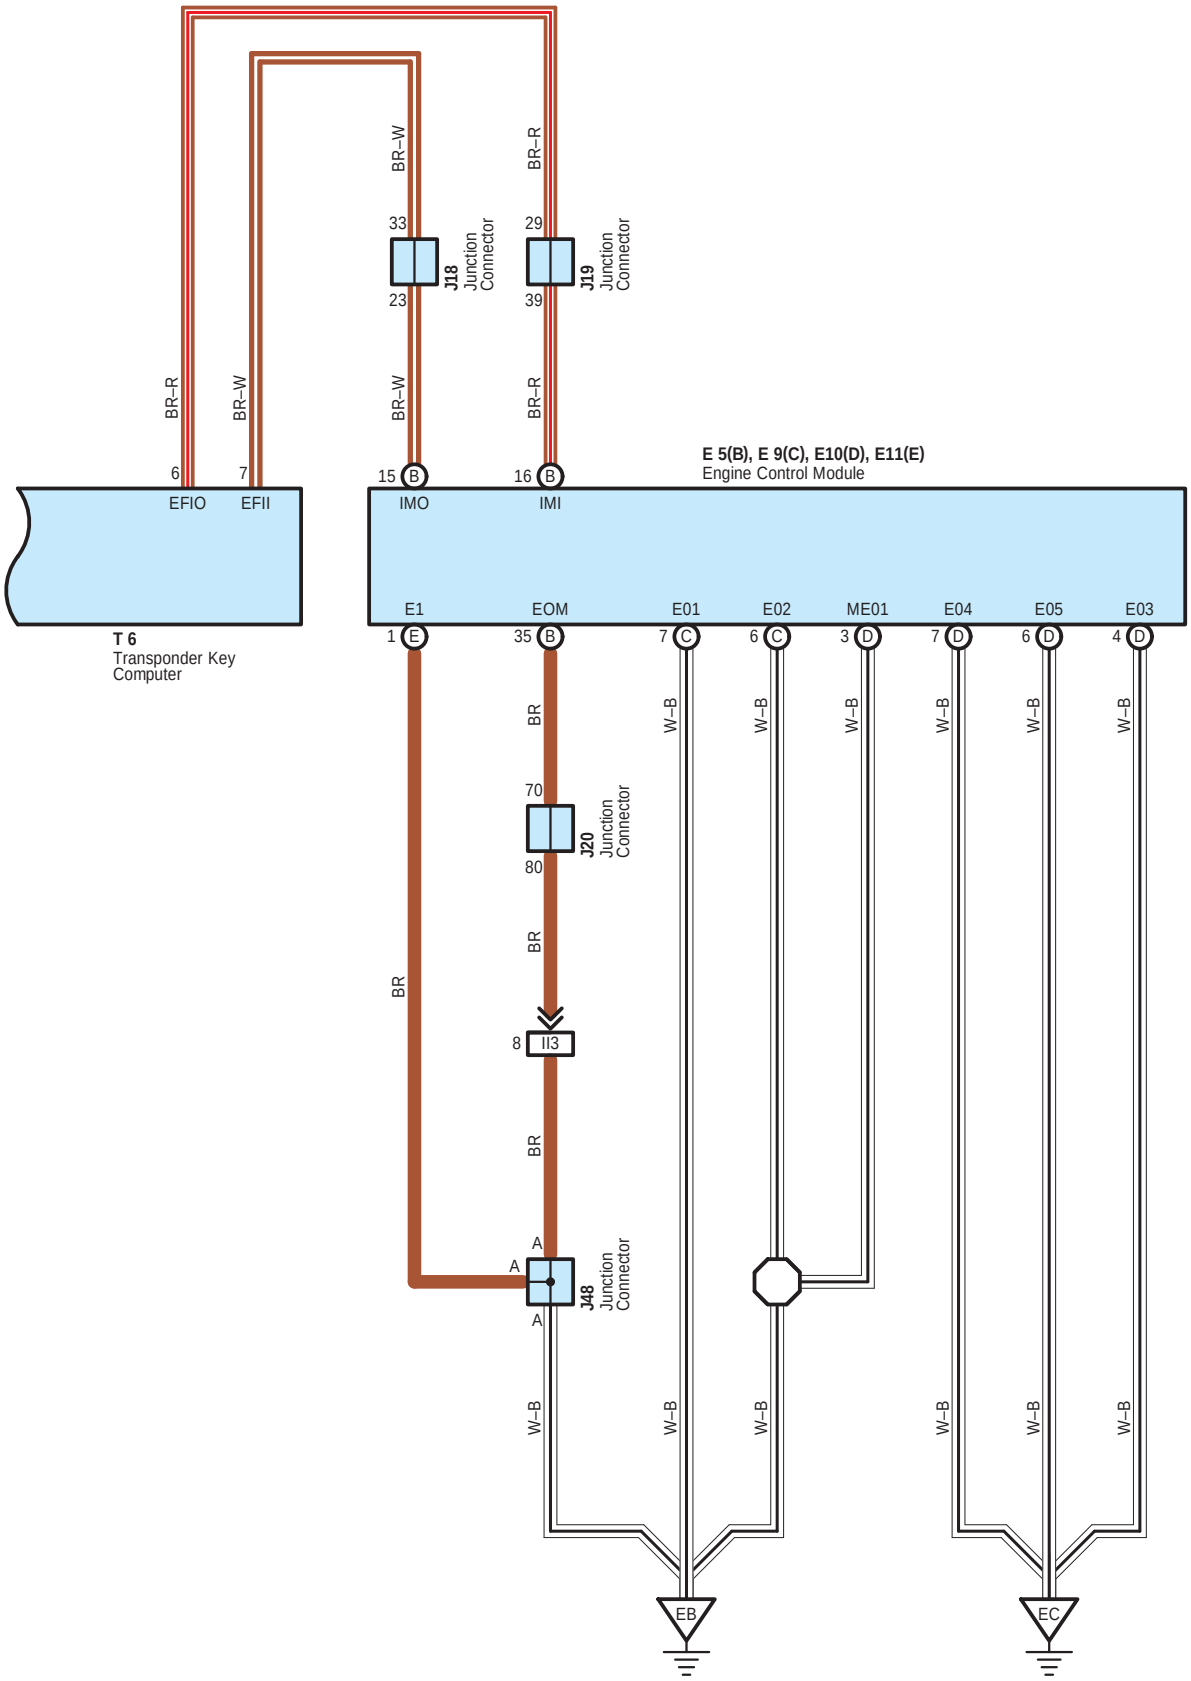

(IG)
7. 5A
GAUGE2
25 1H
(BAT)
10A
ECU–B
8 2C
(IG)
7. 5A
IGN
13 1H
D 1
Data Link
Connector 3
SIL
7
I14
Transponder Key Amplifier
Transponder Key Coil
ANT1
ANT2
VC5
CODE
TXCT
GND
W–L
B–R
W–L
B–O
W
W
B–O
W
W
54
35
J19
Junction
Connector
25
7 1L
24 1C
29
26
J18
Junction
Connector
39
36
12 1H
28 1K
1
+B
8
VC5
11
CODE
12
TXCT
13
AGND
2
IG
9
D
Y–B
Y
Y–R
BR–R
IND
CTY
KSW
GND
3
T 6
Transponder Key
Computer
4
10
14
B
R–Y
L–W
W–B
34
64
J18
Junction
Connector
24
38
J18
Junction
Connector
58
40
J18
Junction
Connector
80
B
B
L–B
32
12
4
24
2
POWER SUPPLY
CIRCUIT
+B
Security
IND
B 6
Body ECU
K 4
Unlock
Warning SW
6 A
22 B
J11(A), J12(B)
Junction Connector
1
W–B
31
21
J18
Junction
Connector
1
C10
Combination Meter
30
BR
R–Y
1
D 7
Door Courtesy
SW Front LH
W–B
IF
IE


BR–R
BR–W
BR–W
BR–R
33
23
29
39
J18
Junction
Connector
J19
Junction
Connector
6
7
15
16
B
B
EFIO
EFII
IMO
IMI
E 5(B), E 9(C), E10(D), E11(E)
Engine Control Module
E1
EOM
E01
E02
ME01
E04
E05
E03
1
35
7
6
3
7
6
4
E
B
C
C
D
D
D
D
T 6
Transponder Key
Computer
BR
W–B
70
80
J20
Junction
Connector
8
II3
A
A
J48
Junction
Connector
EB
EC

Engine Immobiliser System

: Parts Location

Code		See Page	Code		See Page	Code	See Page
B6		38	E9	C	39	J18	40
C10		39	E10	D	39	J19	40
D1		39	E11	E	39	J20	40
D7		42	I14		39	J48	40
E4	A	39	J11	A	40	K4	40
E5	B	39	J12	B	40	T6	41

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	31	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1H	30	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1K	31	
1L		
2C	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
II3	53	Engine Wire and Instrument Panel Wire (Right Kick Panel)

: Ground Points

Code	See Page	Ground Points Location
EB	50	Rear Bank of Right Cylinder Head
EC	50	Rear Bank of Left Cylinder Head
IE	52	Left Kick Panel
IF	52	Instrument Panel Brace LH