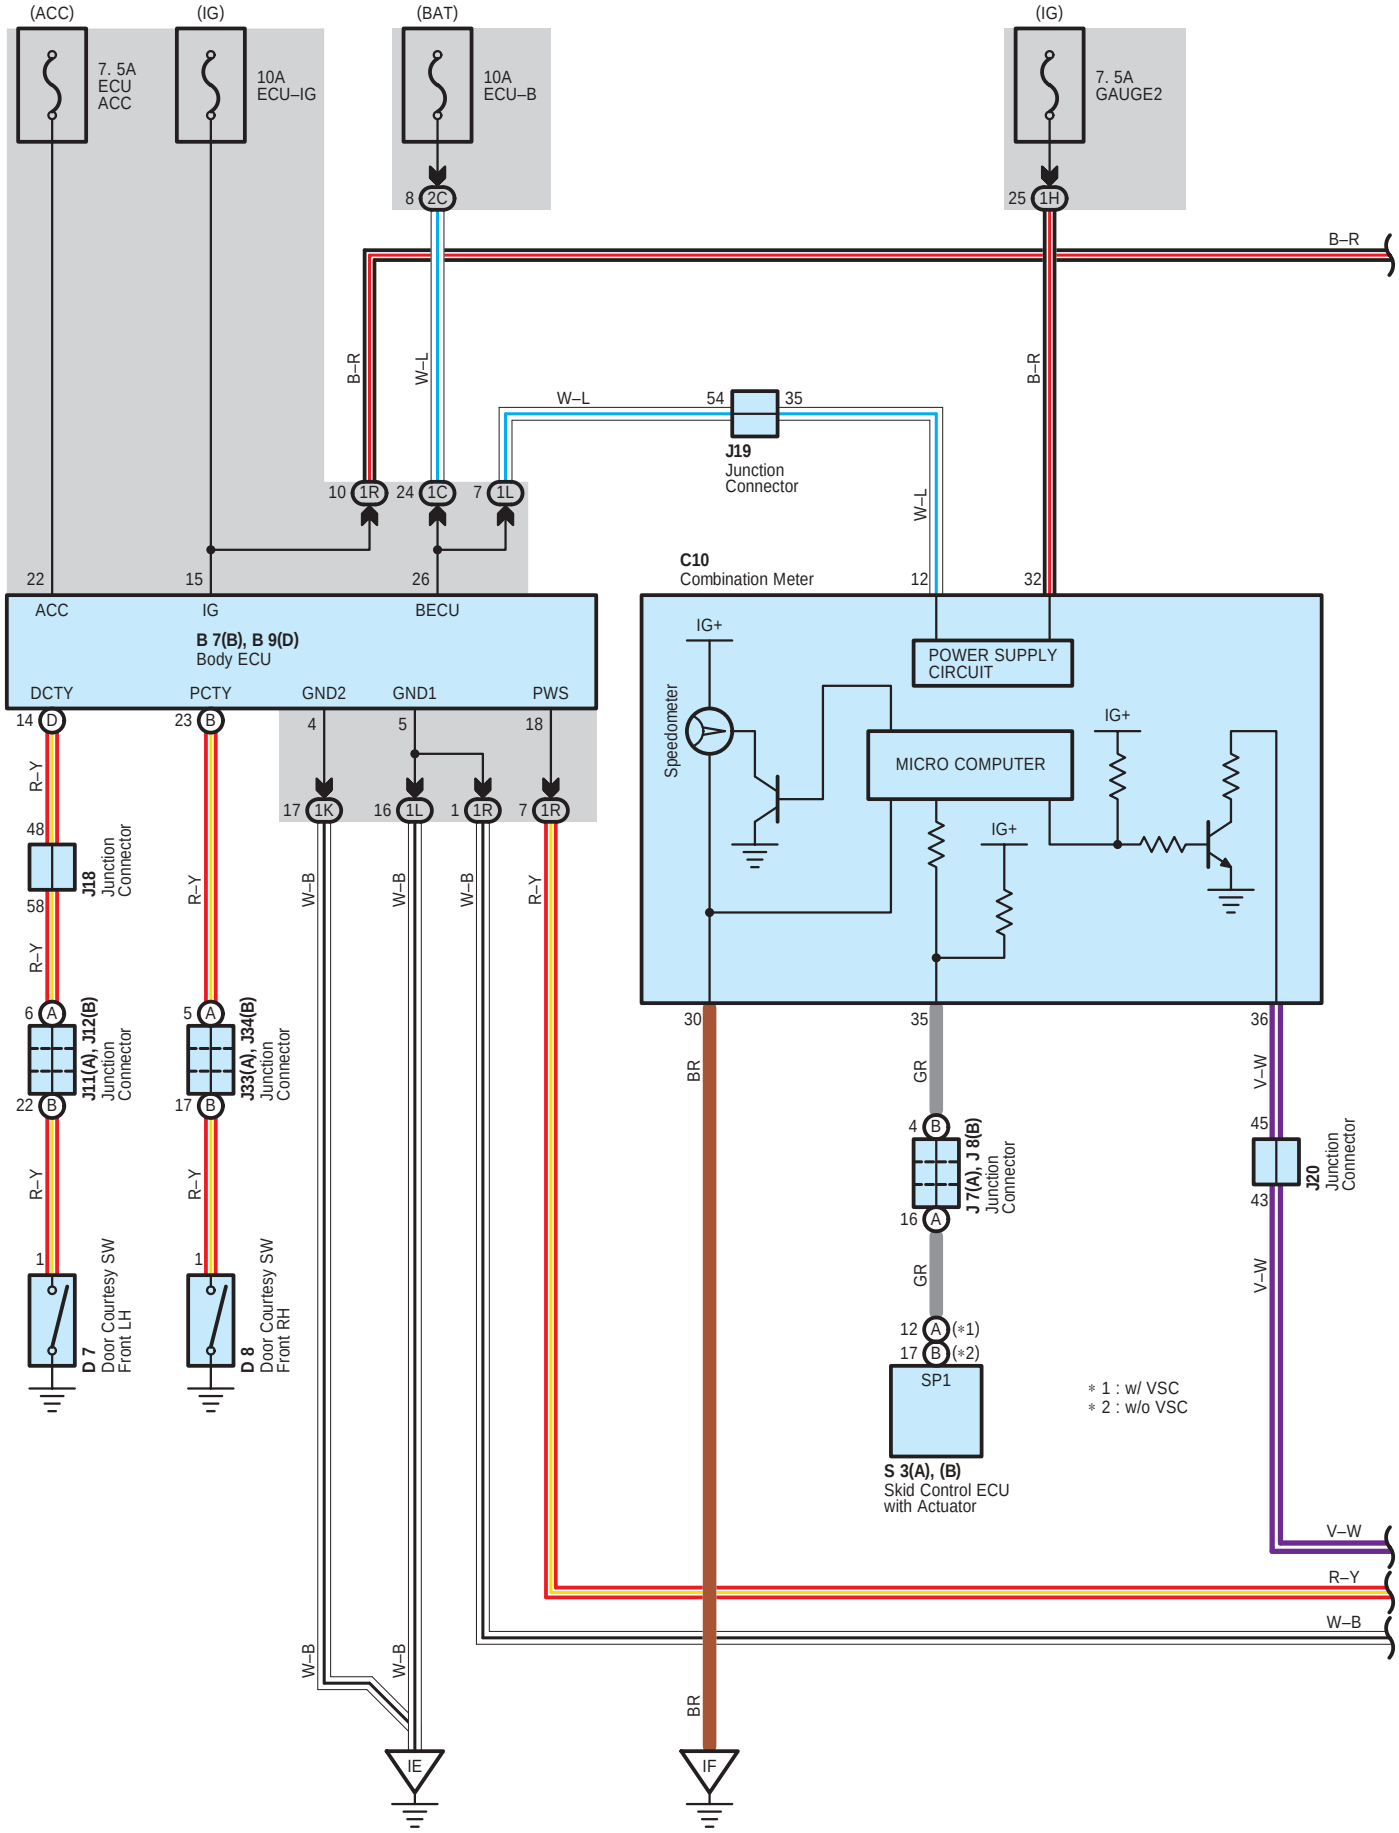
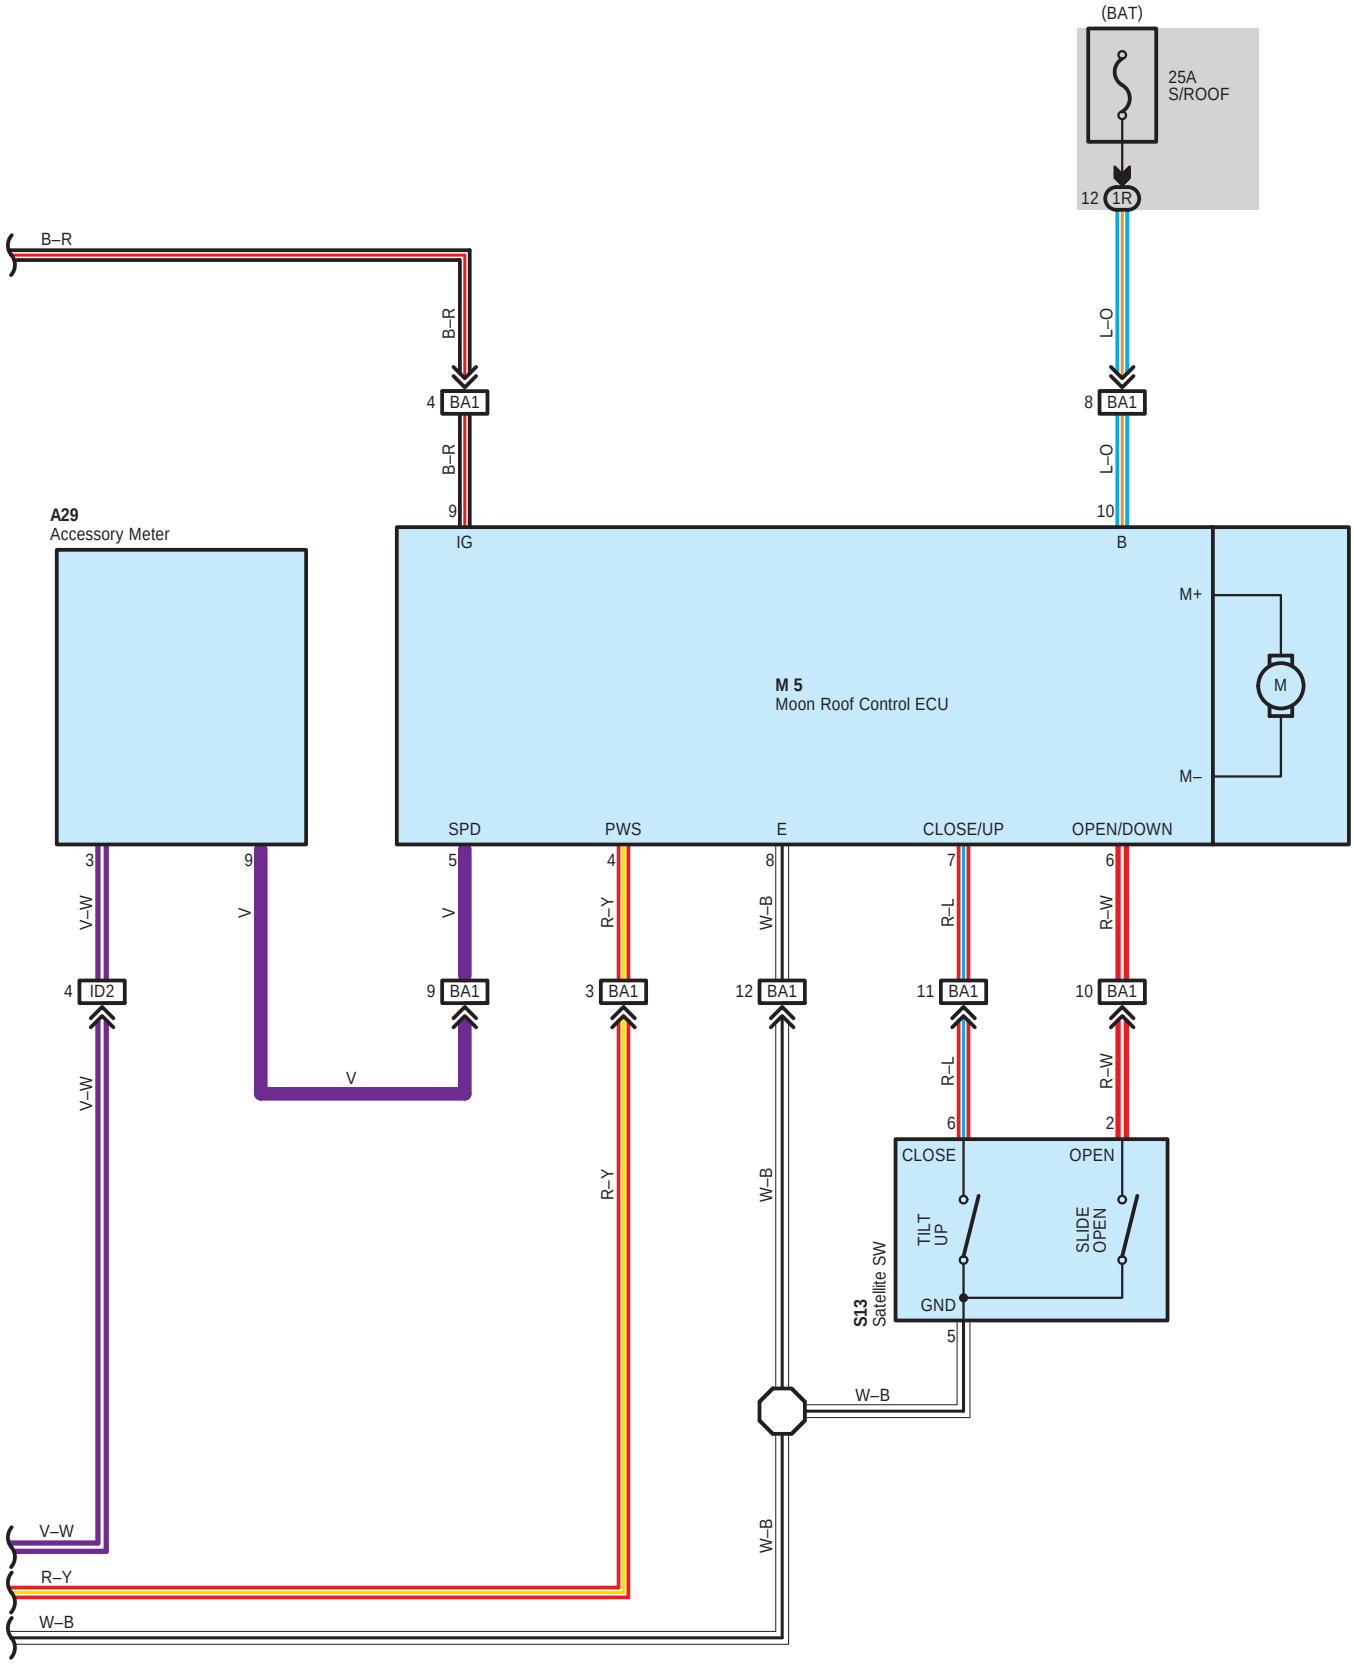

(ACC)
(IG)
(BAT)
(IG)
7. 5A
ECU
ACC
10A
ECU–IG
10A
ECU–B
7. 5A
GAUGE2
8 2C
25 1H
B–R
B–R
W–L
W–L
54
35
J19
Junction
Connector
W–L
B–R
10 1R
24 1C
7 1L
C10
Combination Meter
12
32
22
15
26
ACC
IG
BECU
B 7(B), B 9(D)
Body ECU
IG+
POWER SUPPLY
CIRCUIT
Speedometer
MICRO COMPUTER
IG+
IG+
DCTY
PCTY
GND2
GND1
PWS
14 D
23 B
4
5
18
17 1K
16 1L
1 1R
7 1R
R–Y
48
58
J18
Junction
Connector
R–Y
6 A
22 B
J11(A), J12(B)
Junction
Connector
R–Y
1
D 7
Door Courtesy SW
Front LH
R–Y
5 A
17 B
J33(A), J34(B)
Junction
Connector
R–Y
1
D 8
Door Courtesy SW
Front RH
W–B
W–B
W–B
R–Y
30
35
36
BR
GR
V–W
4 B
16 A
J 7(A), J 8(B)
Junction
Connector
45
43
J20
Junction
Connector
GR
V–W
12 A (*1)
17 B (*2)
SP1
S 3(A), (B)
Skid Control ECU
with Actuator
* 1 : w/ VSC
* 2 : w/o VSC
V–W
R–Y
W–B
W–B
W–B
BR
IE
IF


(BAT)
25A
S/ROOF
12 1R
B–R
B–R
4 BA1
B–R
9
IG
L–O
8 BA1
L–O
10
B
A29
Accessory Meter
M 5
Moon Roof Control ECU
M+
M
M–
SPD
PWS
E
CLOSE/UP
OPEN/DOWN
3
V–W
4 ID2
V–W
9
V
V
5
9 BA1
4
R–Y
3 BA1
R–Y
8
W–B
12 BA1
W–B
7
R–L
11 BA1
R–L
6
6
CLOSE
TILT
UP
GND
S13
Satellite SW
5
6
R–W
10 BA1
R–W
2
OPEN
SLIDE
OPEN
W–B
V–W
R–Y
W–B

Moon Roof

: Parts Location

Code	See Page	Code	See Page	Code	See Page
A29	42	J8 B	40	J34 B	40
B7 B	38	J11 A	40	M5	43
B9 D	38	J12 B	40	S3 A	37
C10	39	J18	40	S3 B	37
D7	42	J19	40	S13	45
D8	42	J20	40		
J7 A	40	J33 A	40		

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	31	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1H	30	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1K	31	
1L		
1R	31	Roof Wire and Driver Side J/B (Lower Finish Panel)
2C	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID2	52	Roof Wire and Instrument Panel Wire (Near the Driver Side J/B)
BA1	54	Roof No.3 Wire and Roof Wire (Front Side of the Roof)

: Ground Points

Code	See Page	Ground Points Location
IE	52	Left Kick Panel
IF	52	Instrument Panel Brace LH