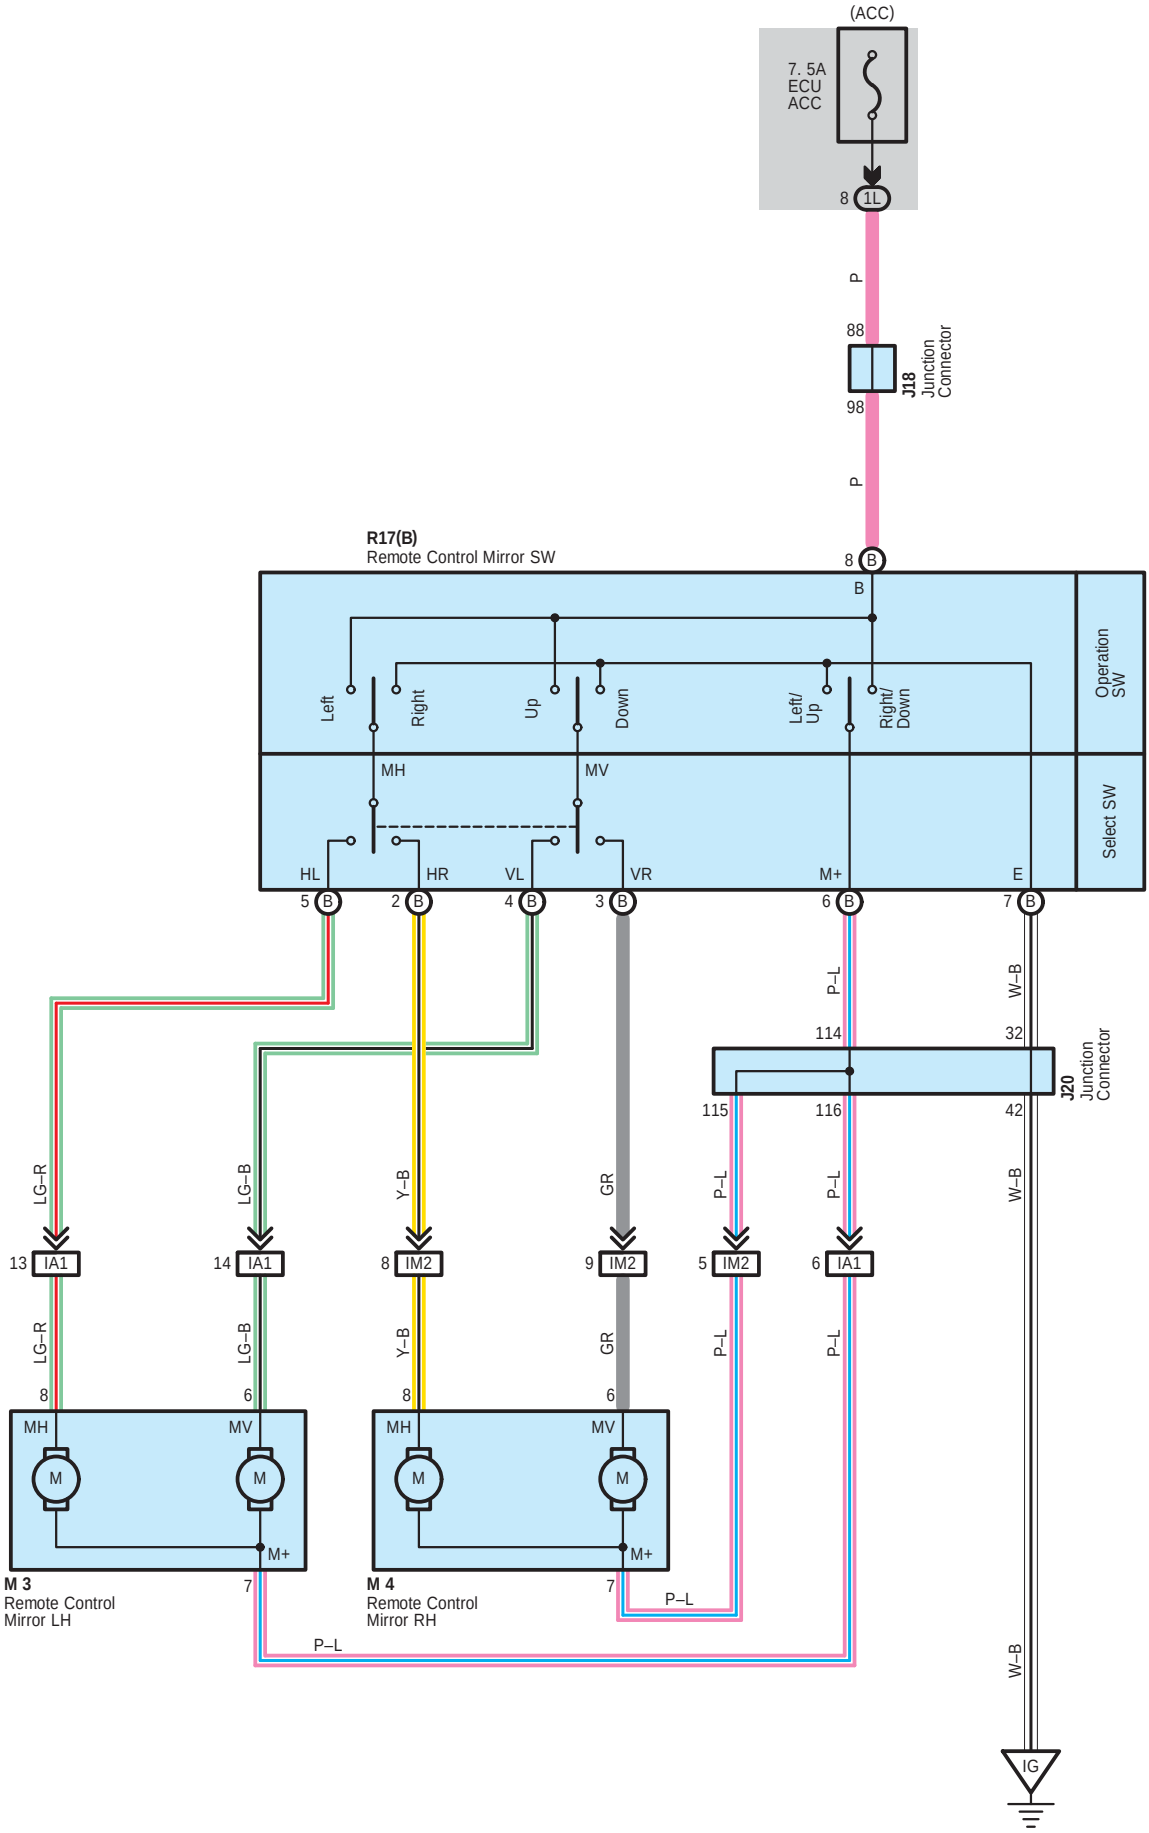

(ACC)
7. 5A
ECU
ACC
8
1L
P
88
J18
Junction
Connector
98
P
R17(B)
Remote Control Mirror SW
8
B
B
Left
Right
Up
Down
Left/
Up
Right/
Down
Operation
SW
MH
MV
Select SW
HL
HR
VL
VR
M+
E
5
2
4
3
6
7
P–L
W–B
114
32
J20
Junction
Connector
115
116
42
LG–R
LG–B
Y–B
GR
P–L
P–L
W–B
13
14
8
9
5
6
IA1
IA1
IM2
IM2
IM2
IA1
LG–R
LG–B
Y–B
GR
P–L
P–L
8
6
8
6
MH
MV
MH
MV
M
M
M
M
M+
M+
M 3
Remote Control
Mirror LH
7
M 4
Remote Control
Mirror RH
7
P–L
P–L
W–B
IG

: Parts Location

Code	See Page	Code	See Page	Code		See Page
J18	40	M3	43	R17	B	41
J20	40	M4	43			

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1L	31	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	52	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IM2	53	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)

: Ground Points

Code	See Page	Ground Points Location
IG	52	Right Kick Panel