
Power Outlet (115V)

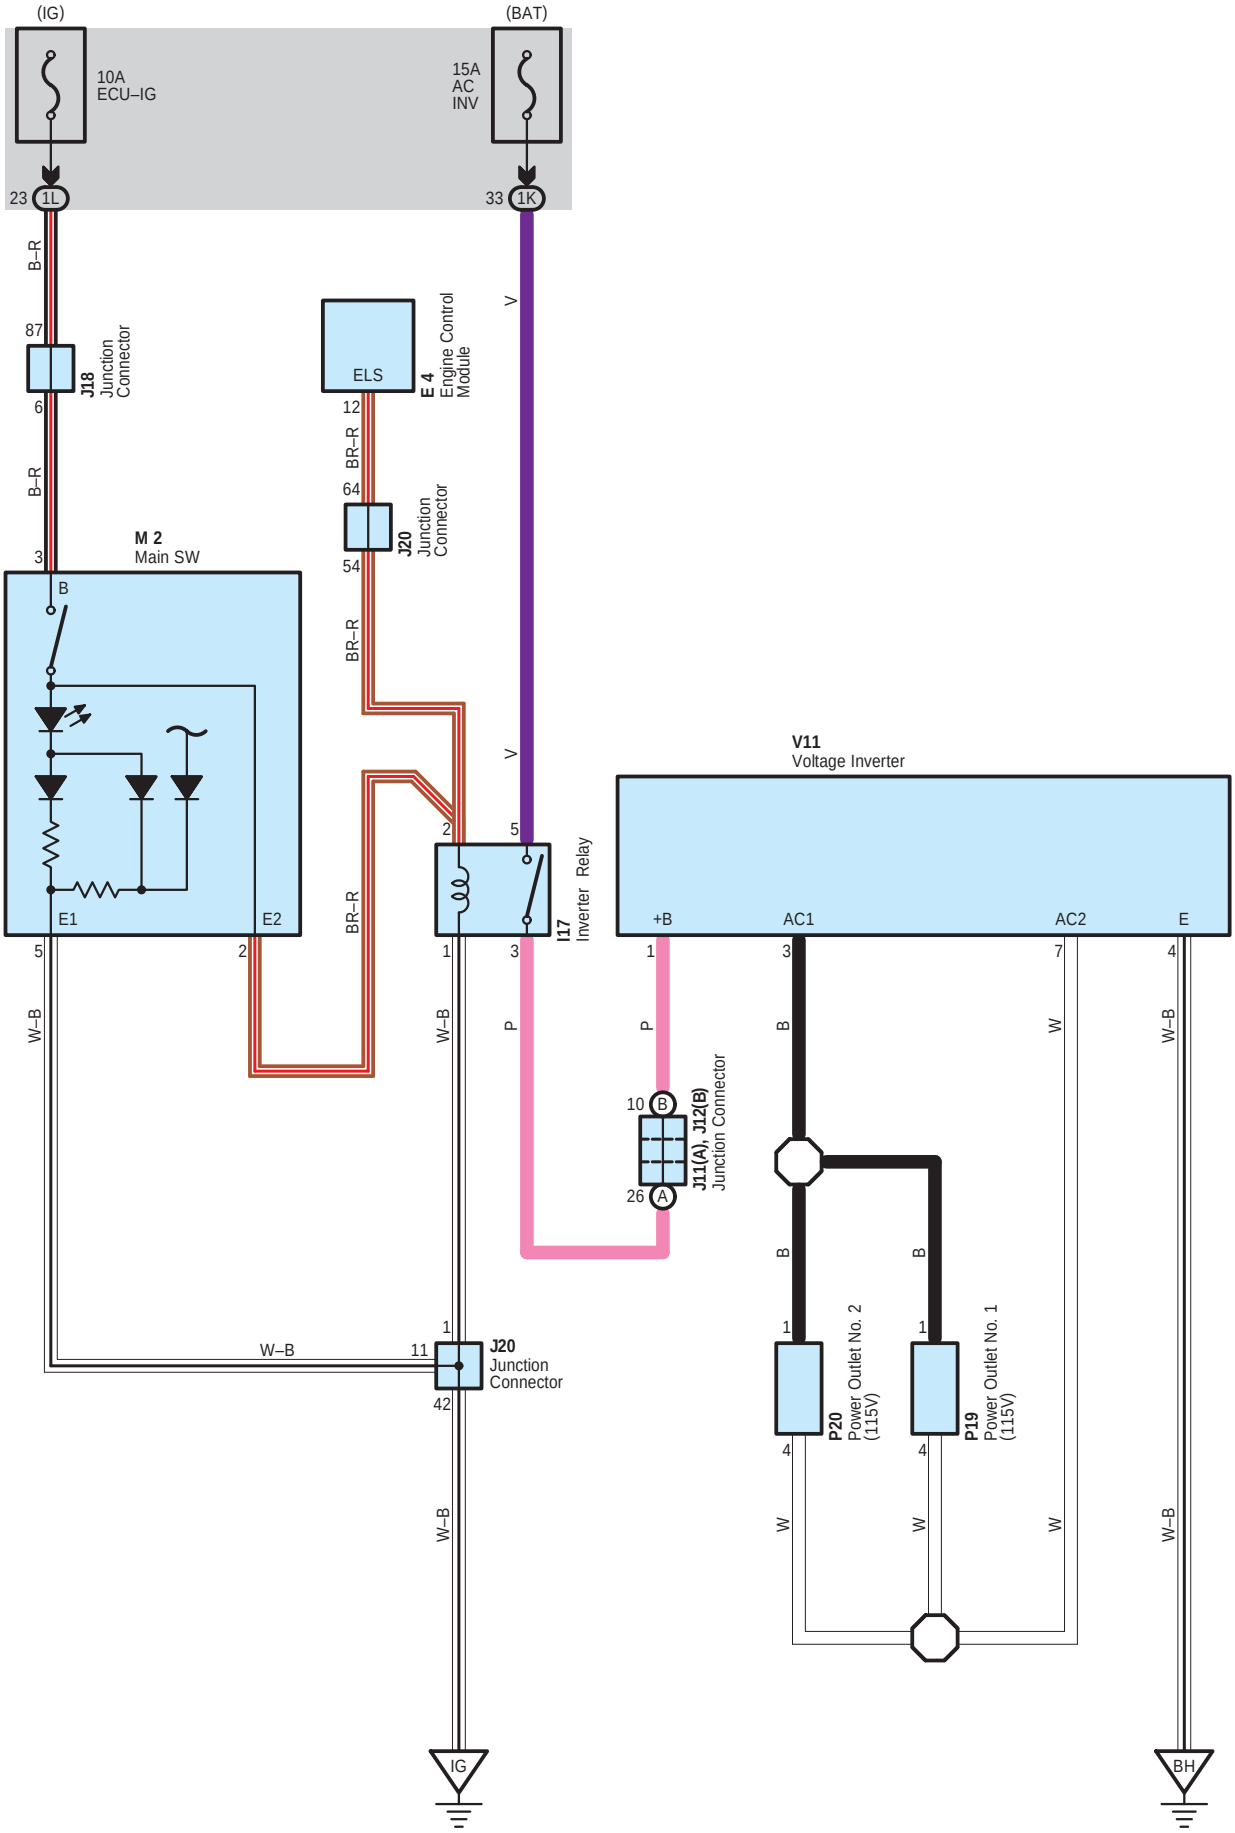

○ : **Parts Location**

Code		See Page	Code	See Page	Code	See Page
E4		39	J18	40	P20	44
I17		39	J20	40	V11	45
J11	A	40	M2	40		
J12	B	40	P19	44		

: **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1K	31	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1L		

▽ : **Ground Points**

Code	See Page	Ground Points Location
IG	52	Right Kick Panel
BH	54	Under the Left Center Pillar