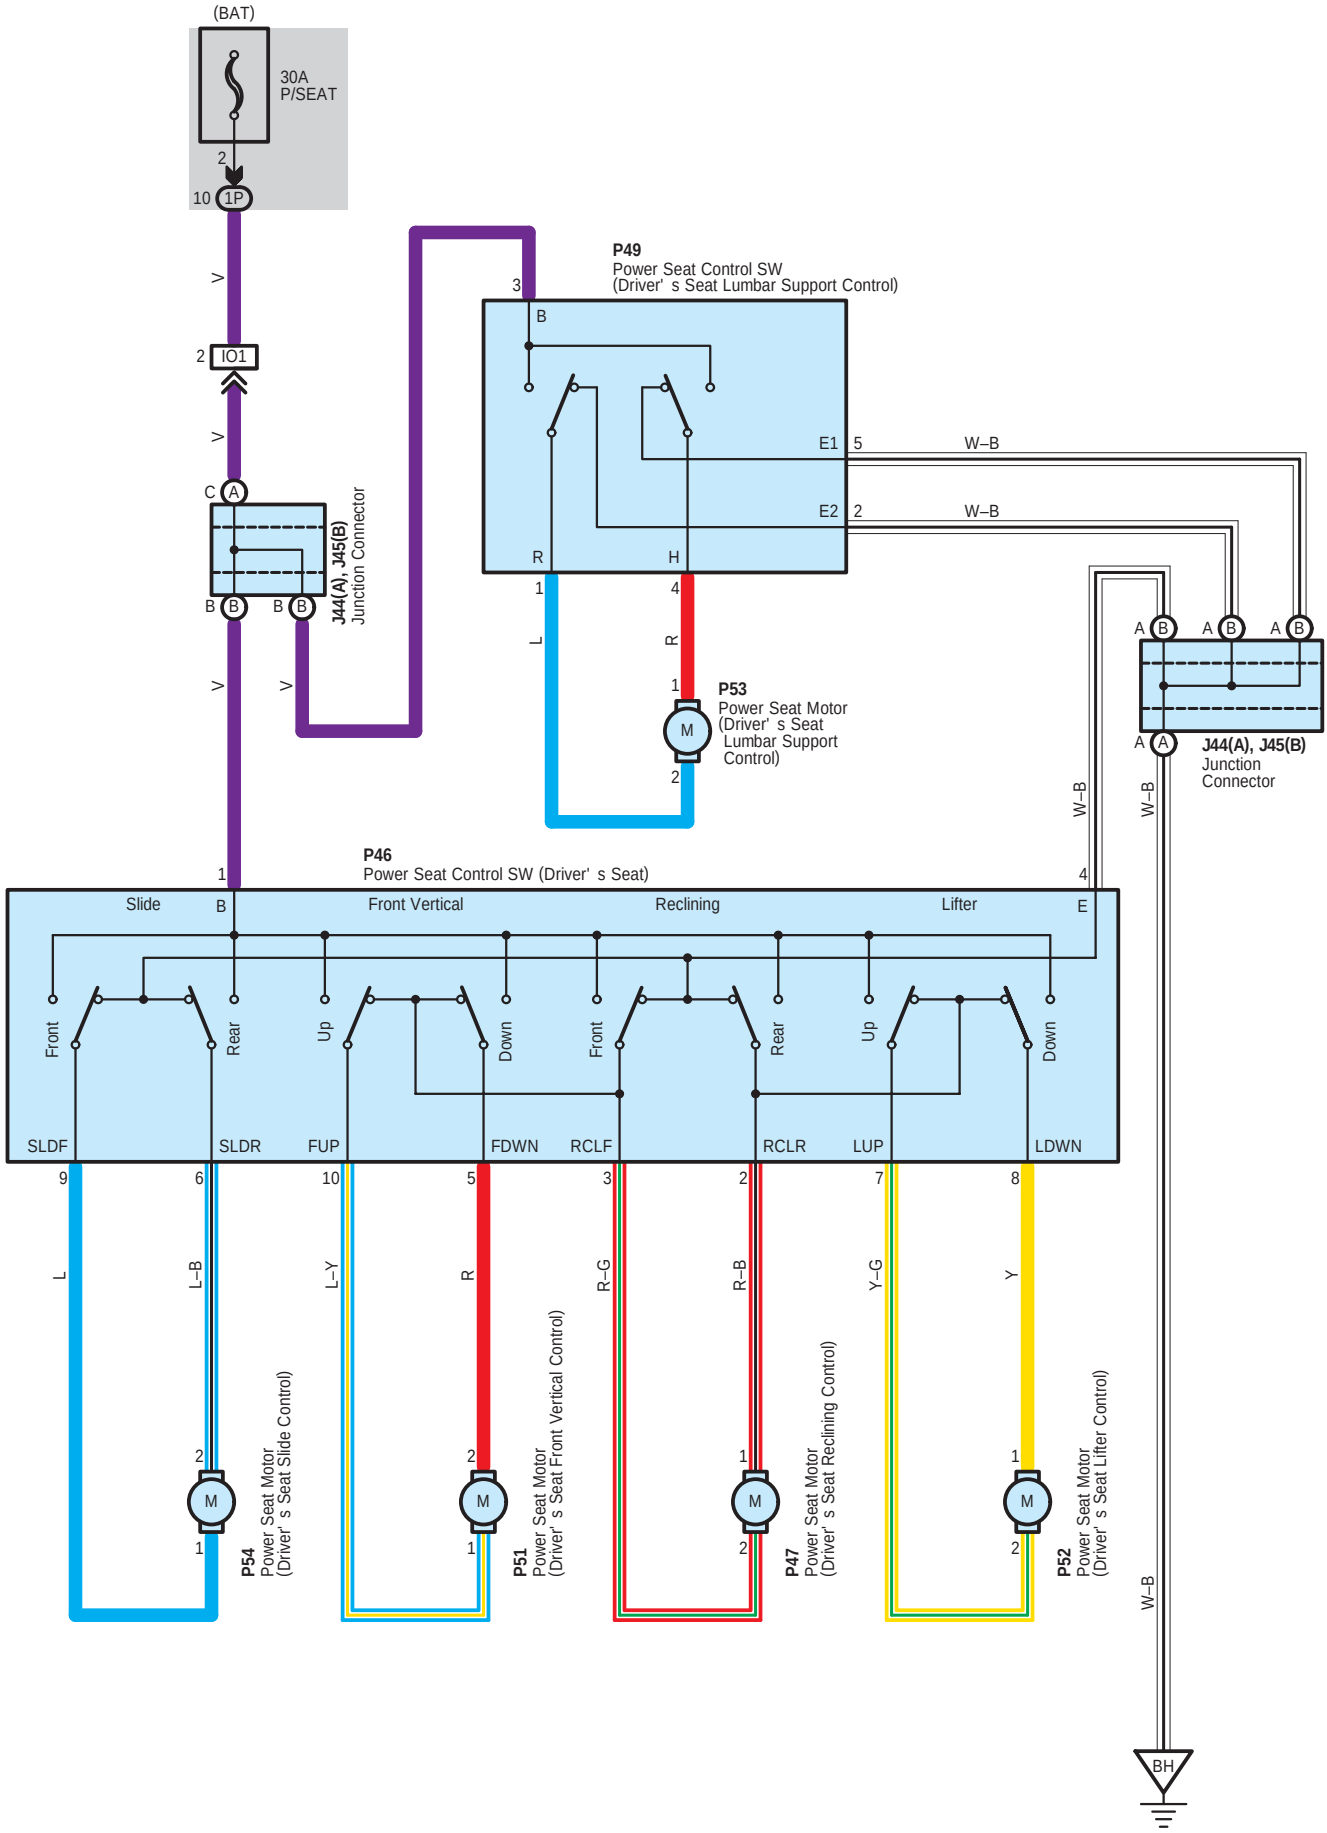

(BAT)
30A
P/SEAT
2
10
1P
V
2
IO1
V
C
A
B
B
B
B
J44(A), J45(B)
Junction Connector
V
V
P49
Power Seat Control SW
(Driver' s Seat Lumbar Support Control)
3
B
E1
5
W–B
E2
2
W–B
R
H
1
L
4
R
1
P53
Power Seat Motor
(Driver' s Seat
Lumbar Support
Control)
M
2
A
B
A
B
A
B
A
A
J44(A), J45(B)
Junction
Connector
W–B
W–B
W–B
1
P46
Power Seat Control SW (Driver' s Seat)
4
Slide
B
Front Vertical
Reclining
Lifter
E
Front
Rear
Up
Down
Front
Rear
Up
Down
SLDF
SLDR
FUP
FDWN
RCLF
RCLR
LUP
LDWN
9
6
10
5
3
2
7
8
L
L–B
L–Y
R
R–G
R–B
Y–G
Y
2
1
M
P54
Power Seat Motor
(Driver' s Seat Slide Control)
2
1
M
P51
Power Seat Motor
(Driver' s Seat Front Vertical Control)
1
2
M
P47
Power Seat Motor
(Driver' s Seat Reclining Control)
1
2
M
P52
Power Seat Motor
(Driver' s Seat Lifter Control)
W–B
BH

: Parts Location

Code		See Page	Code	See Page	Code	See Page
J44	A	46 (*1)	P47	46 (*1)	P52	46 (*1)
J45	B	46 (*1)	P49	46 (*1)	P53	46 (*1)
P46		46 (*1)	P51	46 (*1)	P54	46 (*1)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1P	31	Floor No.1 Wire and Driver Side J/B (Lower Finish Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IO1	53	Floor No.1 Wire and Floor No.1 Wire (Left Kick Panel)

: Ground Points

Code	See Page	Ground Points Location
BH	54	Under the Left Center Pillar

* 1 : Front Seat w/ Power Seat * 2 : Front Seat w/o Power Seat * 3 : Rear No.2 Seat