
Power Seat for Front Passenger's Seat

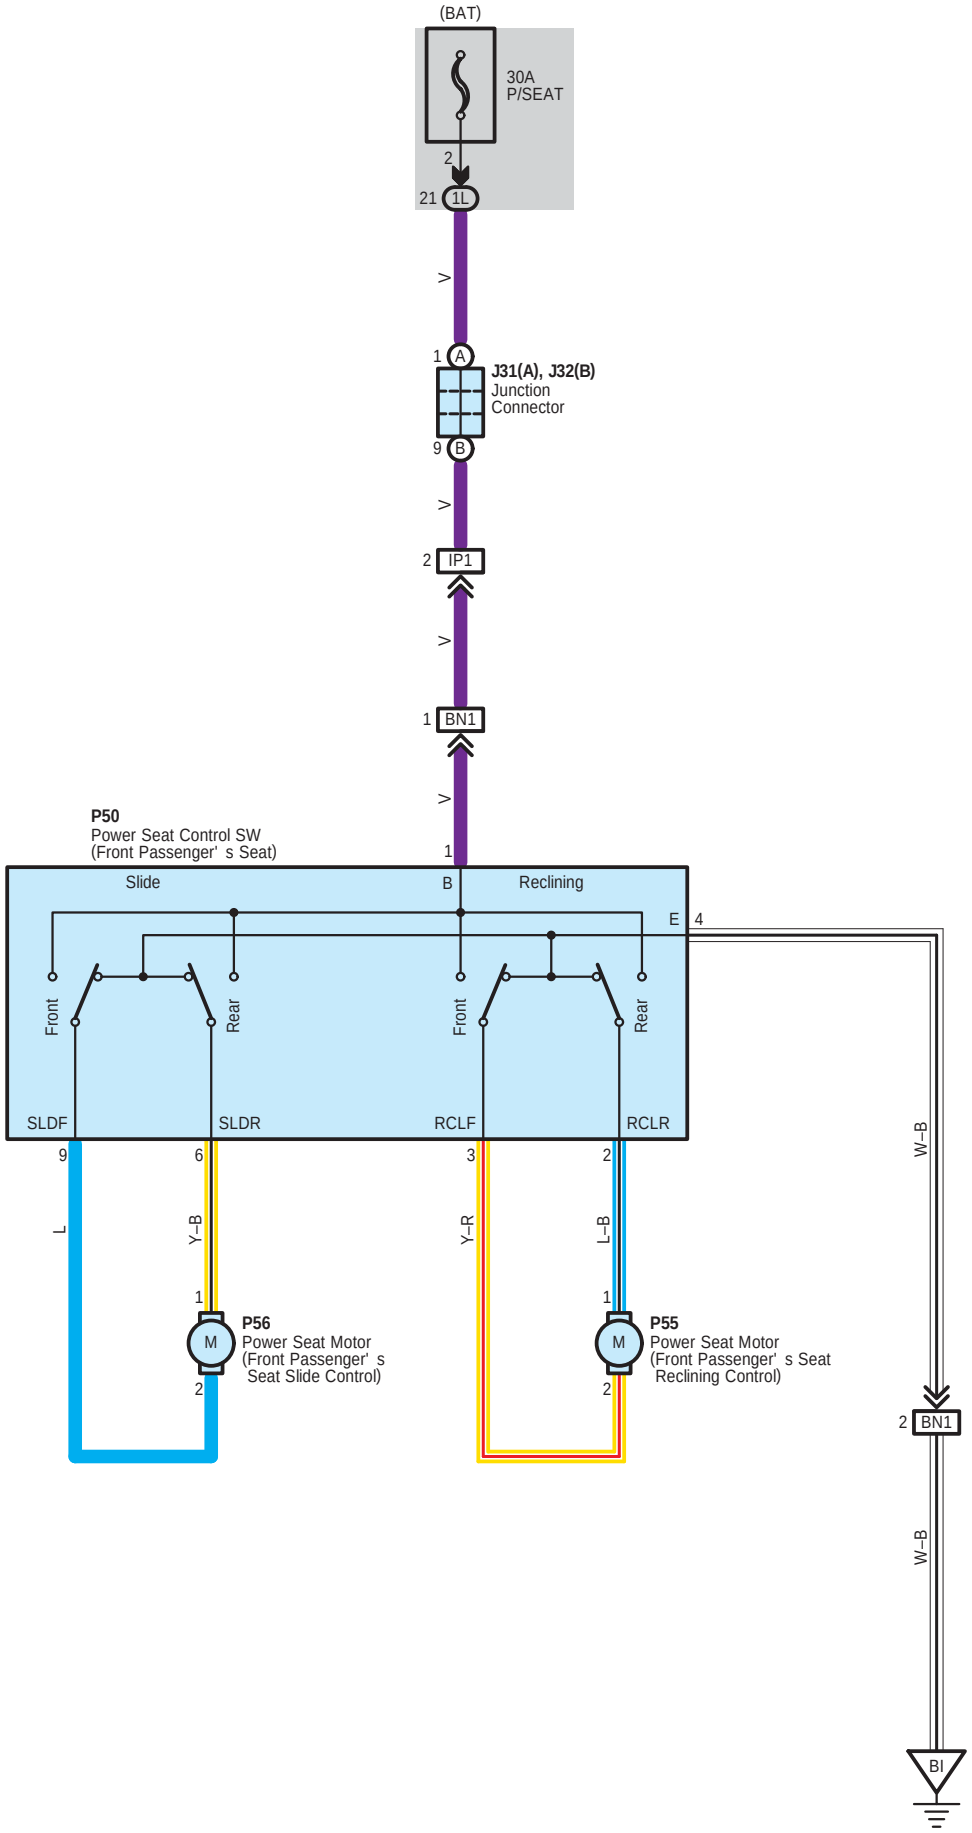

: Parts Location

Code		See Page	Code	See Page	Code	See Page
J31	A	40	P50	46 (*1)	P56	46 (*1)
J32	B	40	P55	46 (*1)		

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1L	31	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IP1	53	Floor No.2 Wire and Floor No.2 Wire (Right Kick Panel)
BN1	56 (*1)	Floor No.2 Wire and Seat No.1 Wire (Under the Front Passenger's Seat)

: Ground Points

Code	See Page	Ground Points Location
BI	54	Under the Right Center Pillar

* 1 : Front Seat w/ Power Seat * 2 : Front Seat w/o Power Seat * 3 : Rear No.2 Seat