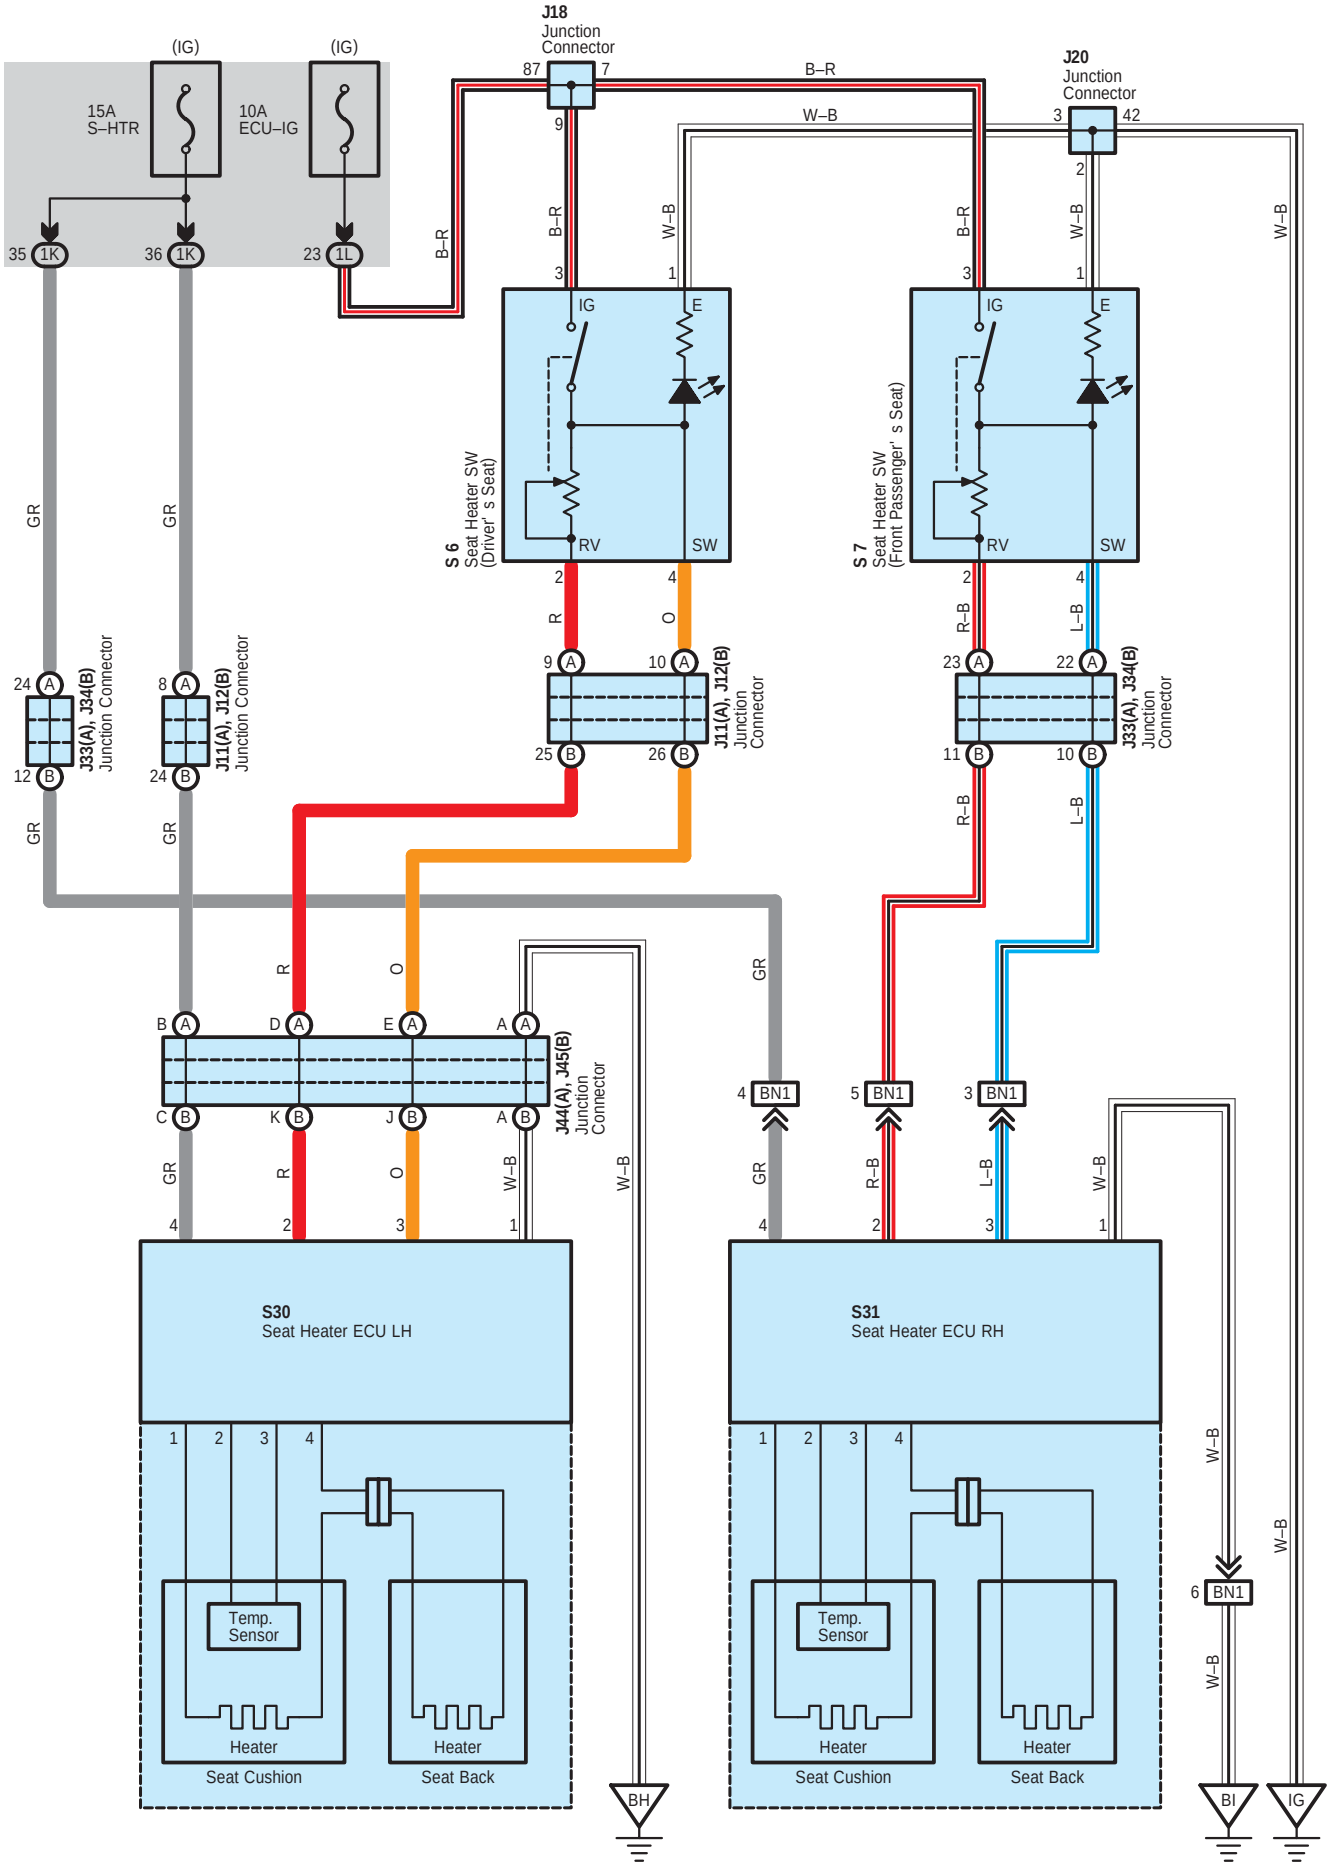

(IG)
(IG)
15A
S–HTR
10A
ECU–IG
35 1K
36 1K
23 1L
J18
Junction
Connector
87
7
9
3
B–R
W–B
J20
Junction
Connector
3
42
2
1
IG
E
RV
SW
S 6
Seat Heater SW
(Driver' s Seat)
S 7
Seat Heater SW
(Front Passenger' s Seat)
GR
R
O
R–B
L–B
24 A
12 B
8 A
24 B
J33(A), J34(B)
Junction Connector
J11(A), J12(B)
Junction Connector
9 A
10 A
25 B
26 B
23 A
22 A
11 B
10 B
B A
D A
E A
A A
C B
K B
J B
A B
J44(A), J45(B)
Junction
Connector
4 BN1
5 BN1
3 BN1
6 BN1
S30
Seat Heater ECU LH
S31
Seat Heater ECU RH
1
2
3
4
Temp.
Sensor
Heater
Seat Cushion
Heater
Seat Back
BH
BI
IG

: Parts Location

Code		See Page	Code		See Page	Code	See Page
J11	A	40	J33	A	40	S6	41
J12	B	40	J34	B	40	S7	41
J18		40	J44	A	46 (*1)	S30	46 (*1)
J20		40	J45	B	46 (*1)	S31	46 (*1)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1K	31	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1L		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BN1	56 (*1)	Floor No.2 Wire and Seat No.1 Wire (Under the Front Passenger's Seat)

: Ground Points

Code	See Page	Ground Points Location
IG	52	Right Kick Panel
BH	54	Under the Left Center Pillar
BI	54	Under the Right Center Pillar

* 1 : Front Seat w/ Power Seat * 2 : Front Seat w/o Power Seat * 3 : Rear No.2 Seat