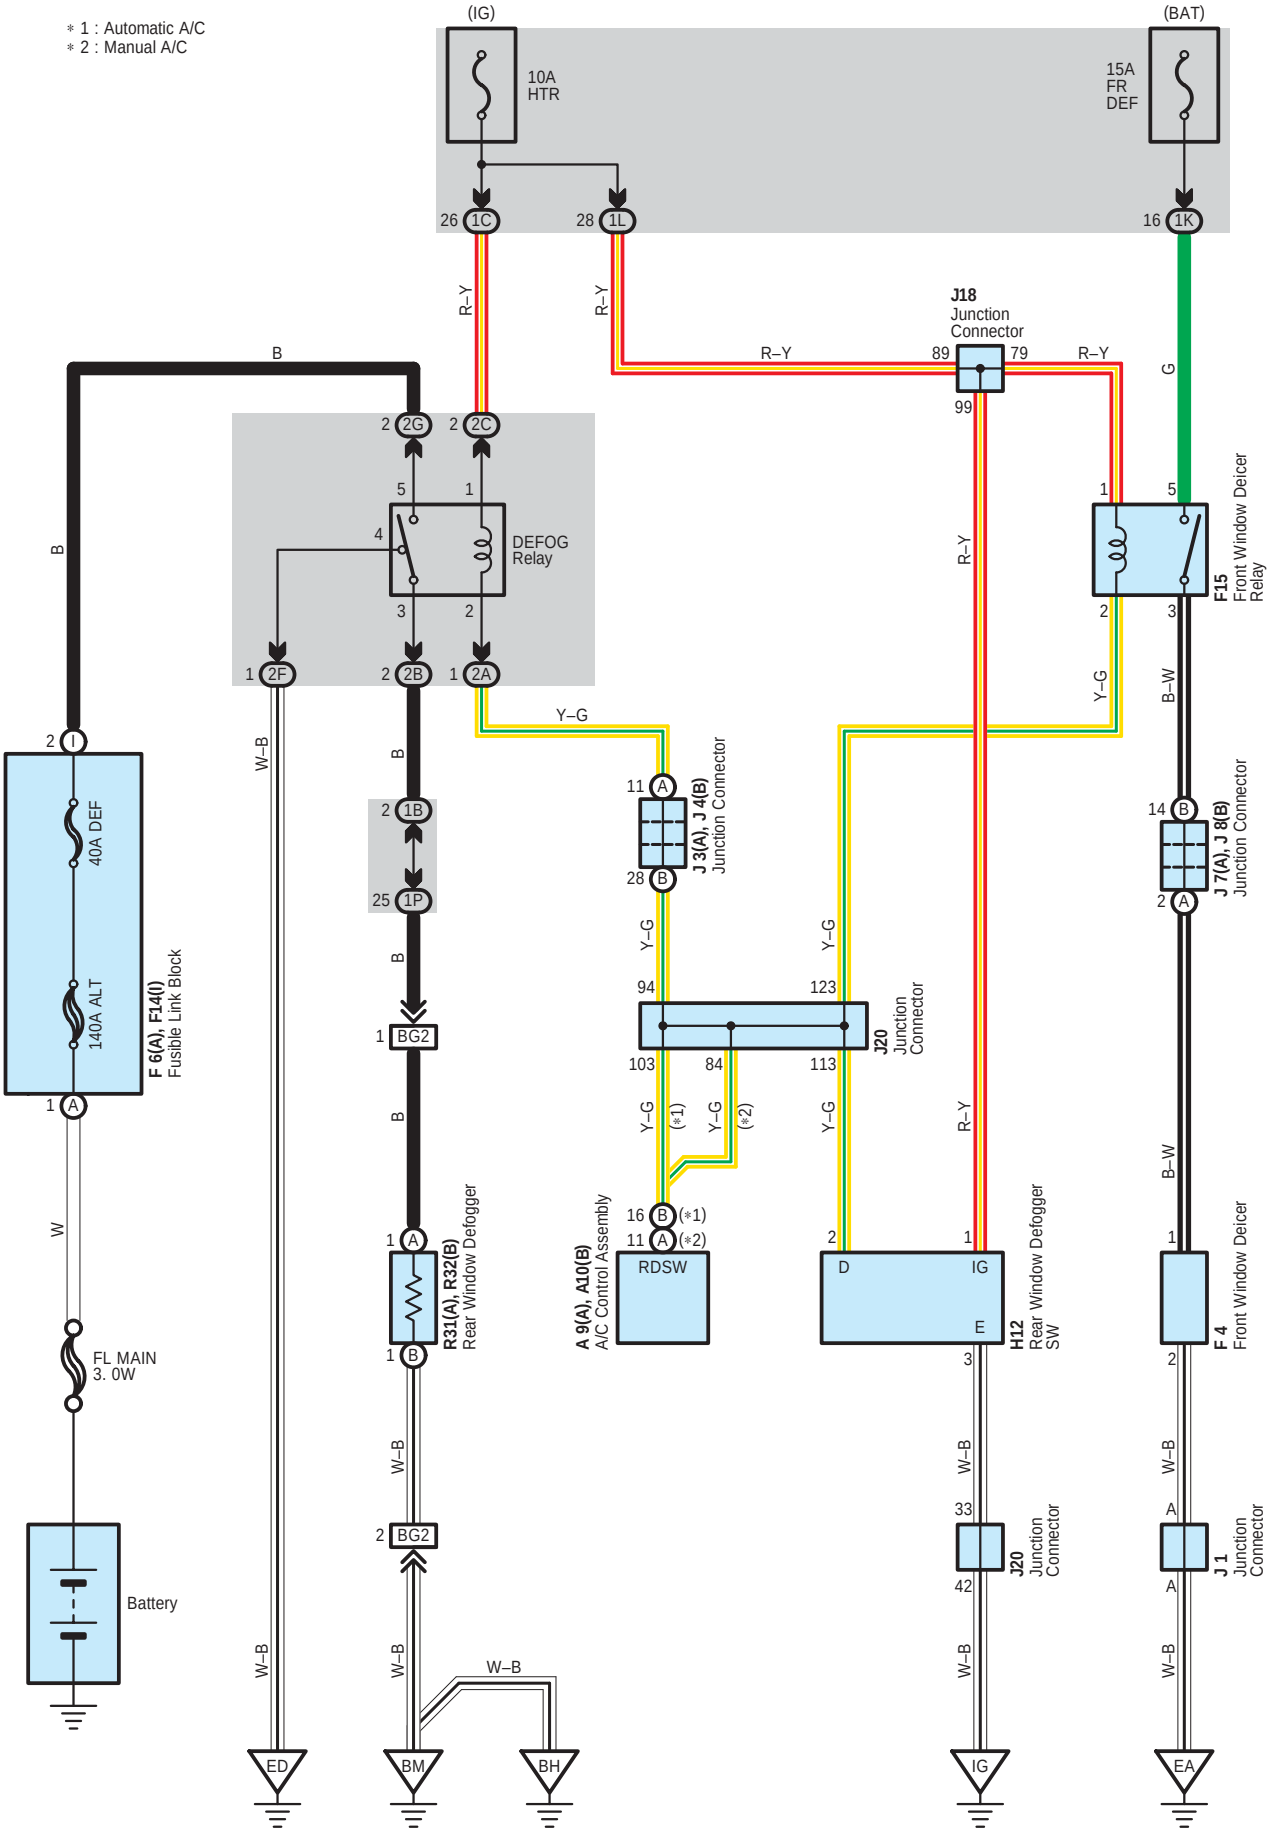

* 1 : Automatic A/C
* 2 : Manual A/C
(IG)
(BAT)
10A HTR
15A FR DEF
26 1C
28 1L
16 1K
R–Y
J18 Junction Connector
89
79
99
G
F15 Front Window Deicer Relay
DEFOG Relay
2G
2C
2F
2B
2A
1B
25 1P
BG2
Y–G
B–W
W–B
B
W
F 6(A), F14(I) Fusible Link Block
40A DEF
140A ALT
FL MAIN 3. 0W
Battery
J 3(A), J 4(B) Junction Connector
J 7(A), J 8(B) Junction Connector
J20 Junction Connector
94
123
103
84
113
(*1)
(*2)
A 9(A), A10(B) A/C Control Assembly
RDSW
H12 Rear Window Defogger SW
D
IG
E
R31(A), R32(B) Rear Window Defogger
F 4 Front Window Deicer
J 1 Junction Connector
33
42
ED
BM
BH
IG
EA

: Parts Location

Code		See Page	Code		See Page	Code		See Page
A9	A	38	H12		39	J18		40
A10	B	38	J1		37	J20		40
F4		36	J3	A	40	R31	A	45
F6	A	36	J4	B	40	R32	B	45
F14	I	36	J7	A	40			
F15		39	J8	B	40			

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	31	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1C		
1K	31	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1L		
1P	31	Floor No.1 Wire and Driver Side J/B (Lower Finish Panel)
2A	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2B		
2C		
2F		
2G		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BG2	55	Back Door No.1 Wire and Floor No.1 Wire (Left Rear Quarter Panel)

: Ground Points

Code	See Page	Ground Points Location
EA	50	Front Side of the Right Fender Apron
ED	50	Front Side of the Left Fender Apron
IG	52	Right Kick Panel
BH	54	Under the Left Center Pillar
BM	54	Left Rear Quarter Panel