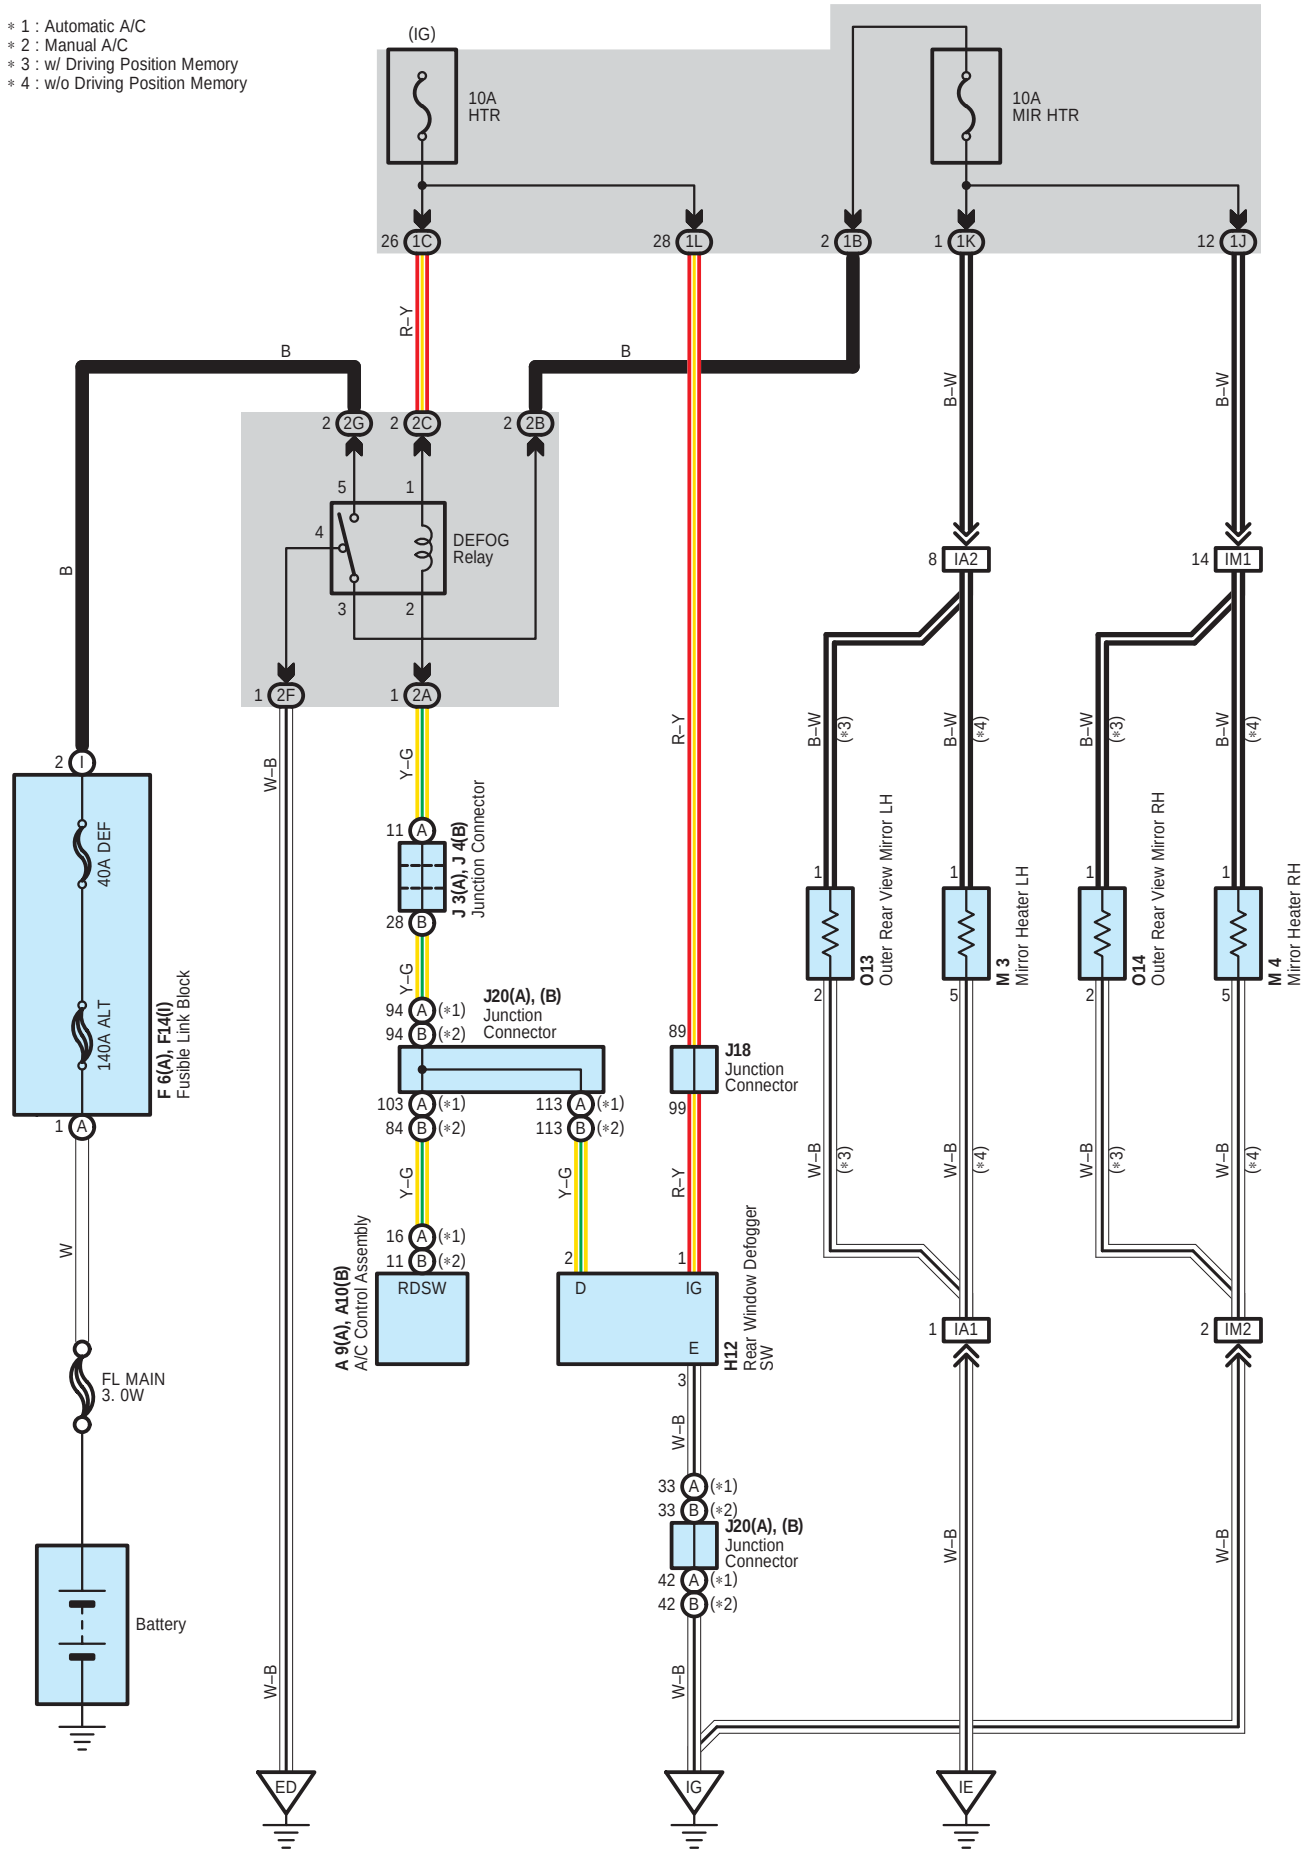

∗ 1 : Automatic A/C
∗ 2 : Manual A/C
∗ 3 : w/ Driving Position Memory
∗ 4 : w/o Driving Position Memory
(IG)
10A HTR
10A MIR HTR
DEFOG Relay
40A DEF
140A ALT
F 6(A), F14(I) Fusible Link Block
FL MAIN 3. 0W
Battery
J 3(A), J 4(B) Junction Connector
J20(A), (B) Junction Connector
J18 Junction Connector
A 9(A), A10(B) A/C Control Assembly
RDSW
H12 Rear Window Defogger SW
O13 Outer Rear View Mirror LH
M 3 Mirror Heater LH
O14 Outer Rear View Mirror RH
M 4 Mirror Heater RH
IA1
IA2
IM1
IM2
ED
IG
IE

: Parts Location

Code		See Page	Code		See Page	Code	See Page
A9	A	38	J3	A	40	M3	43
A10	B	38	J4	B	40	M4	43
F6	A	36	J18		40	O13	43
F14	I	36	J20	A	40	O14	43
H12		39	J20	B	40		

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	31	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1C		
1J	31	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1K		
1L		
2A	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2B		
2C		
2F		
2G		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	52	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IA2		
IM1	53	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IM2		

: Ground Points

Code	See Page	Ground Points Location
ED	50	Front Side of the Left Fender Apron
IE	52	Left Kick Panel
IG	52	Right Kick Panel