


Audio System with 6 Speaker and RSES

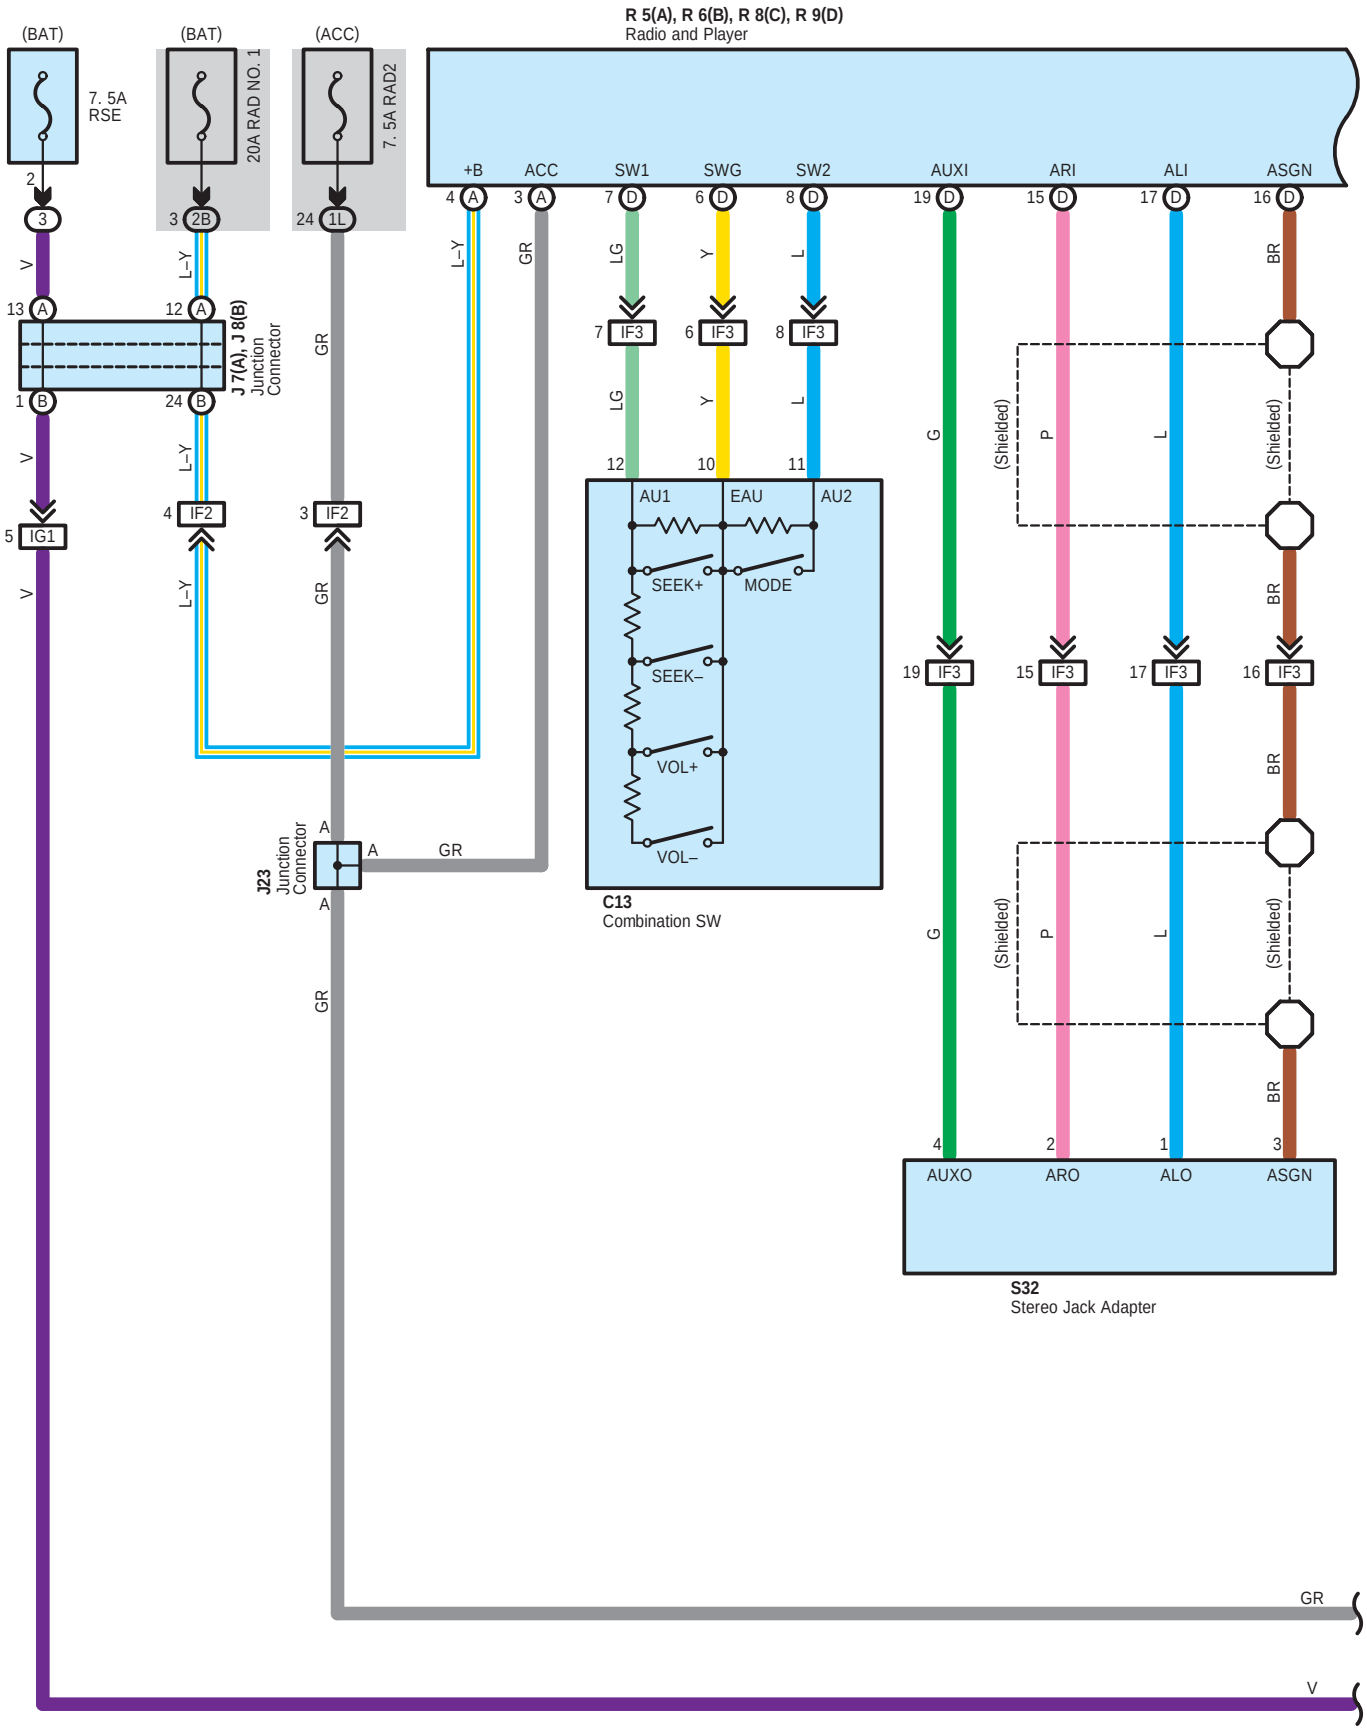


R 5(A), R 6(B), R 8(C), R 9(D)
Radio and Player

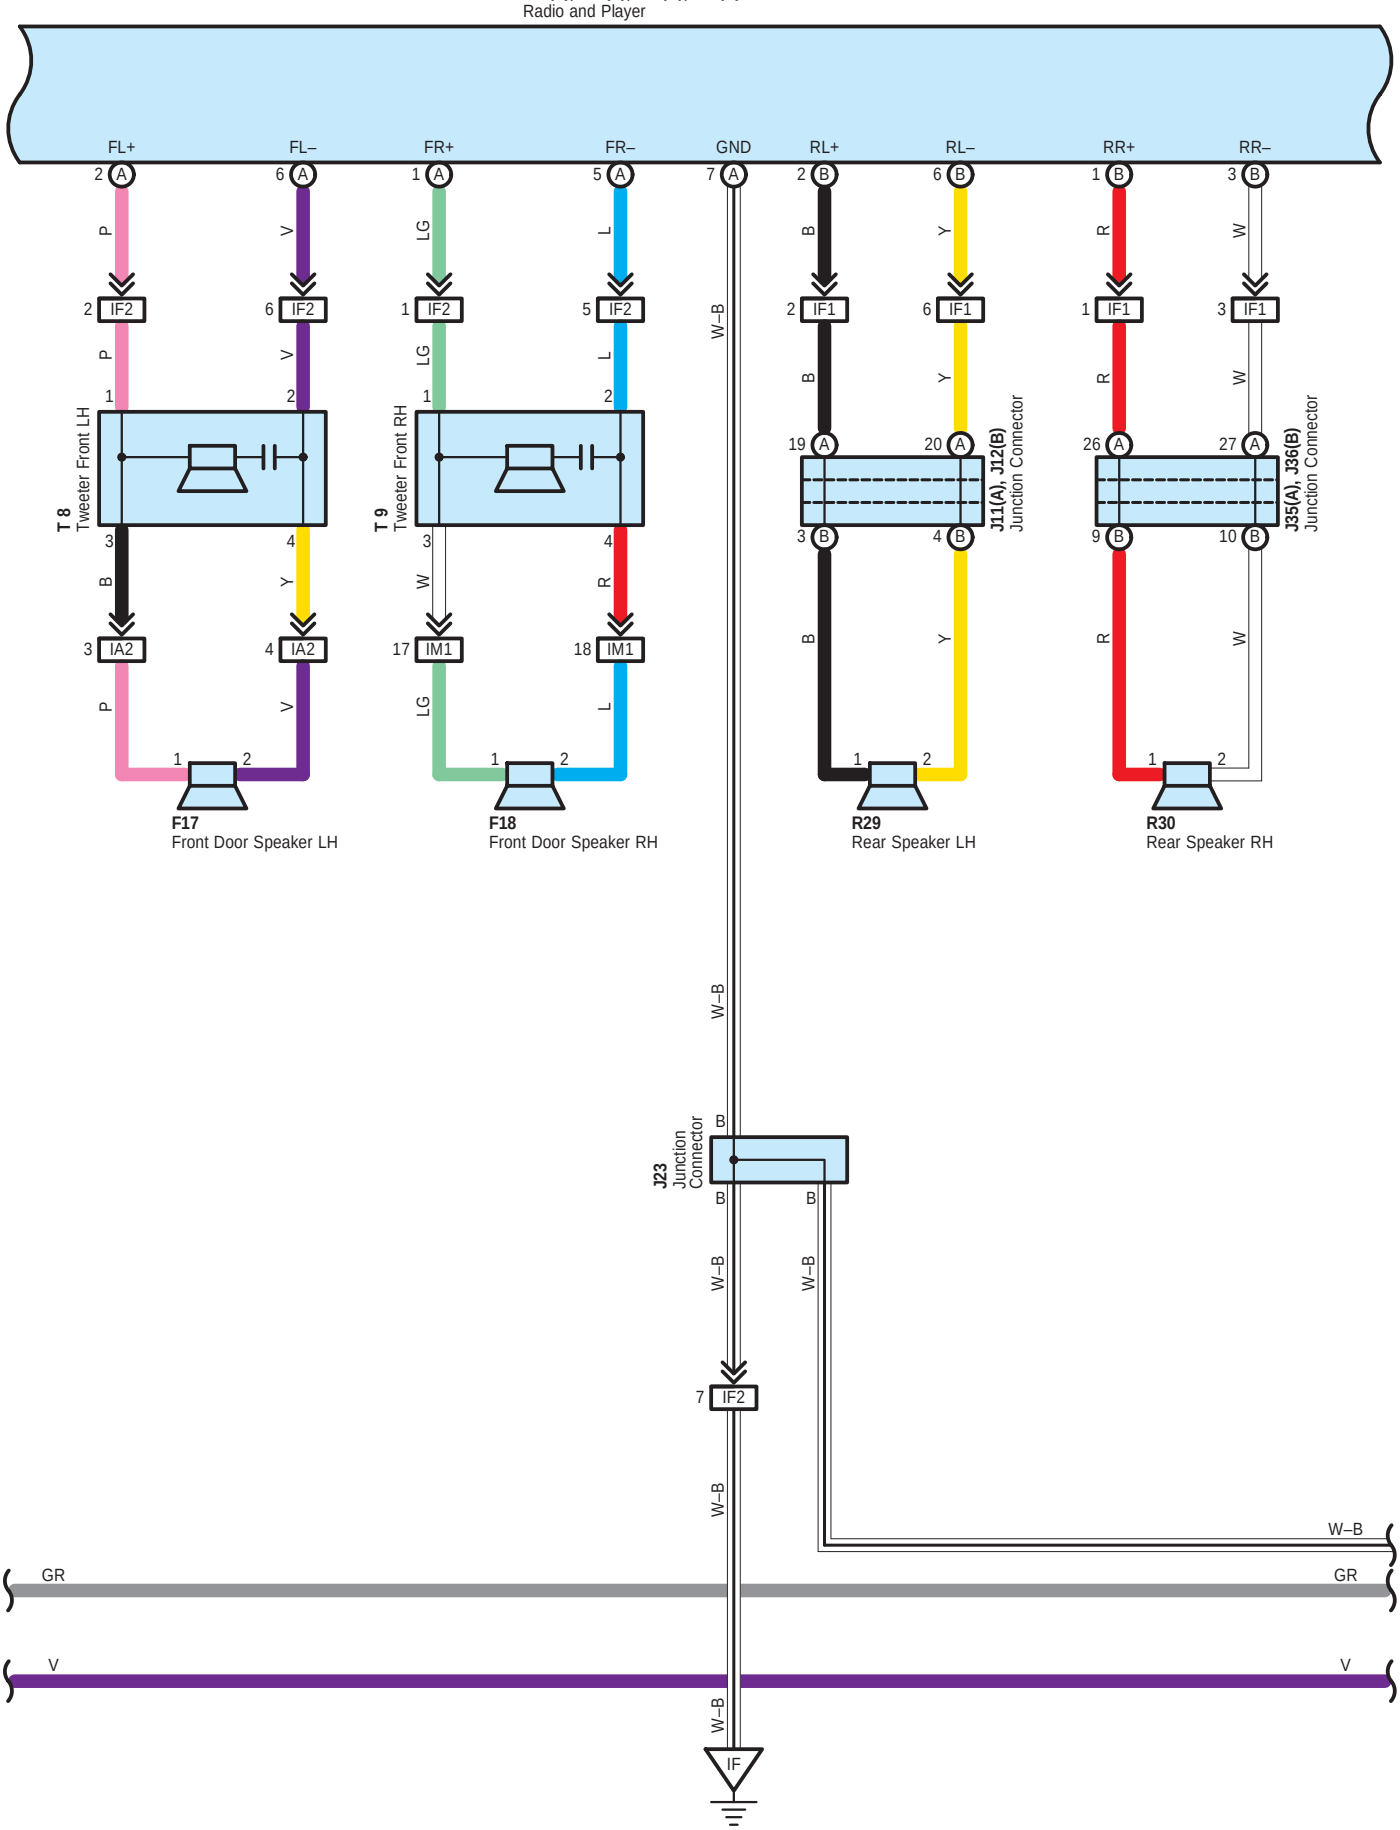

Audio System with 6 Speaker and RSES

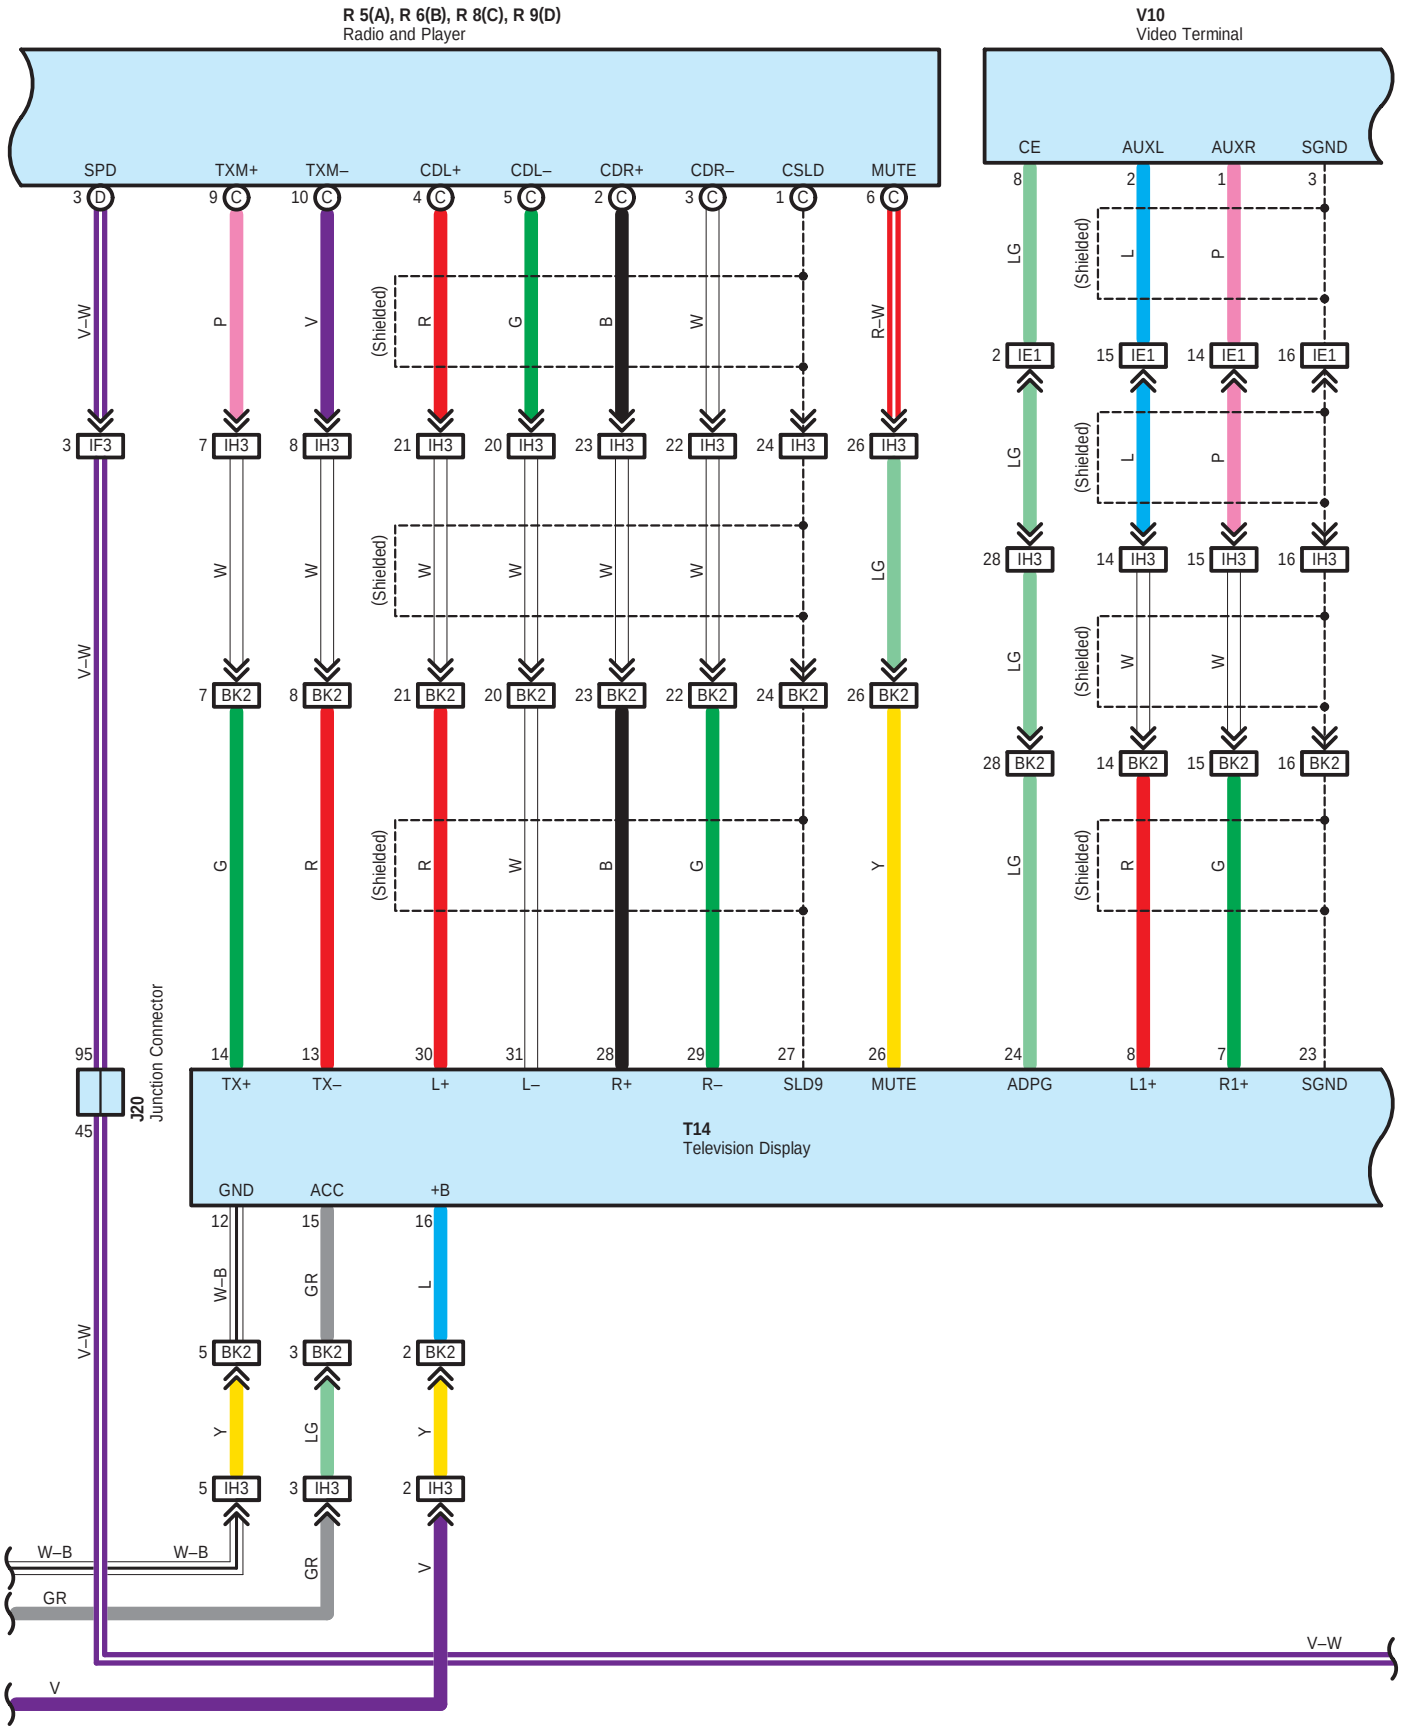

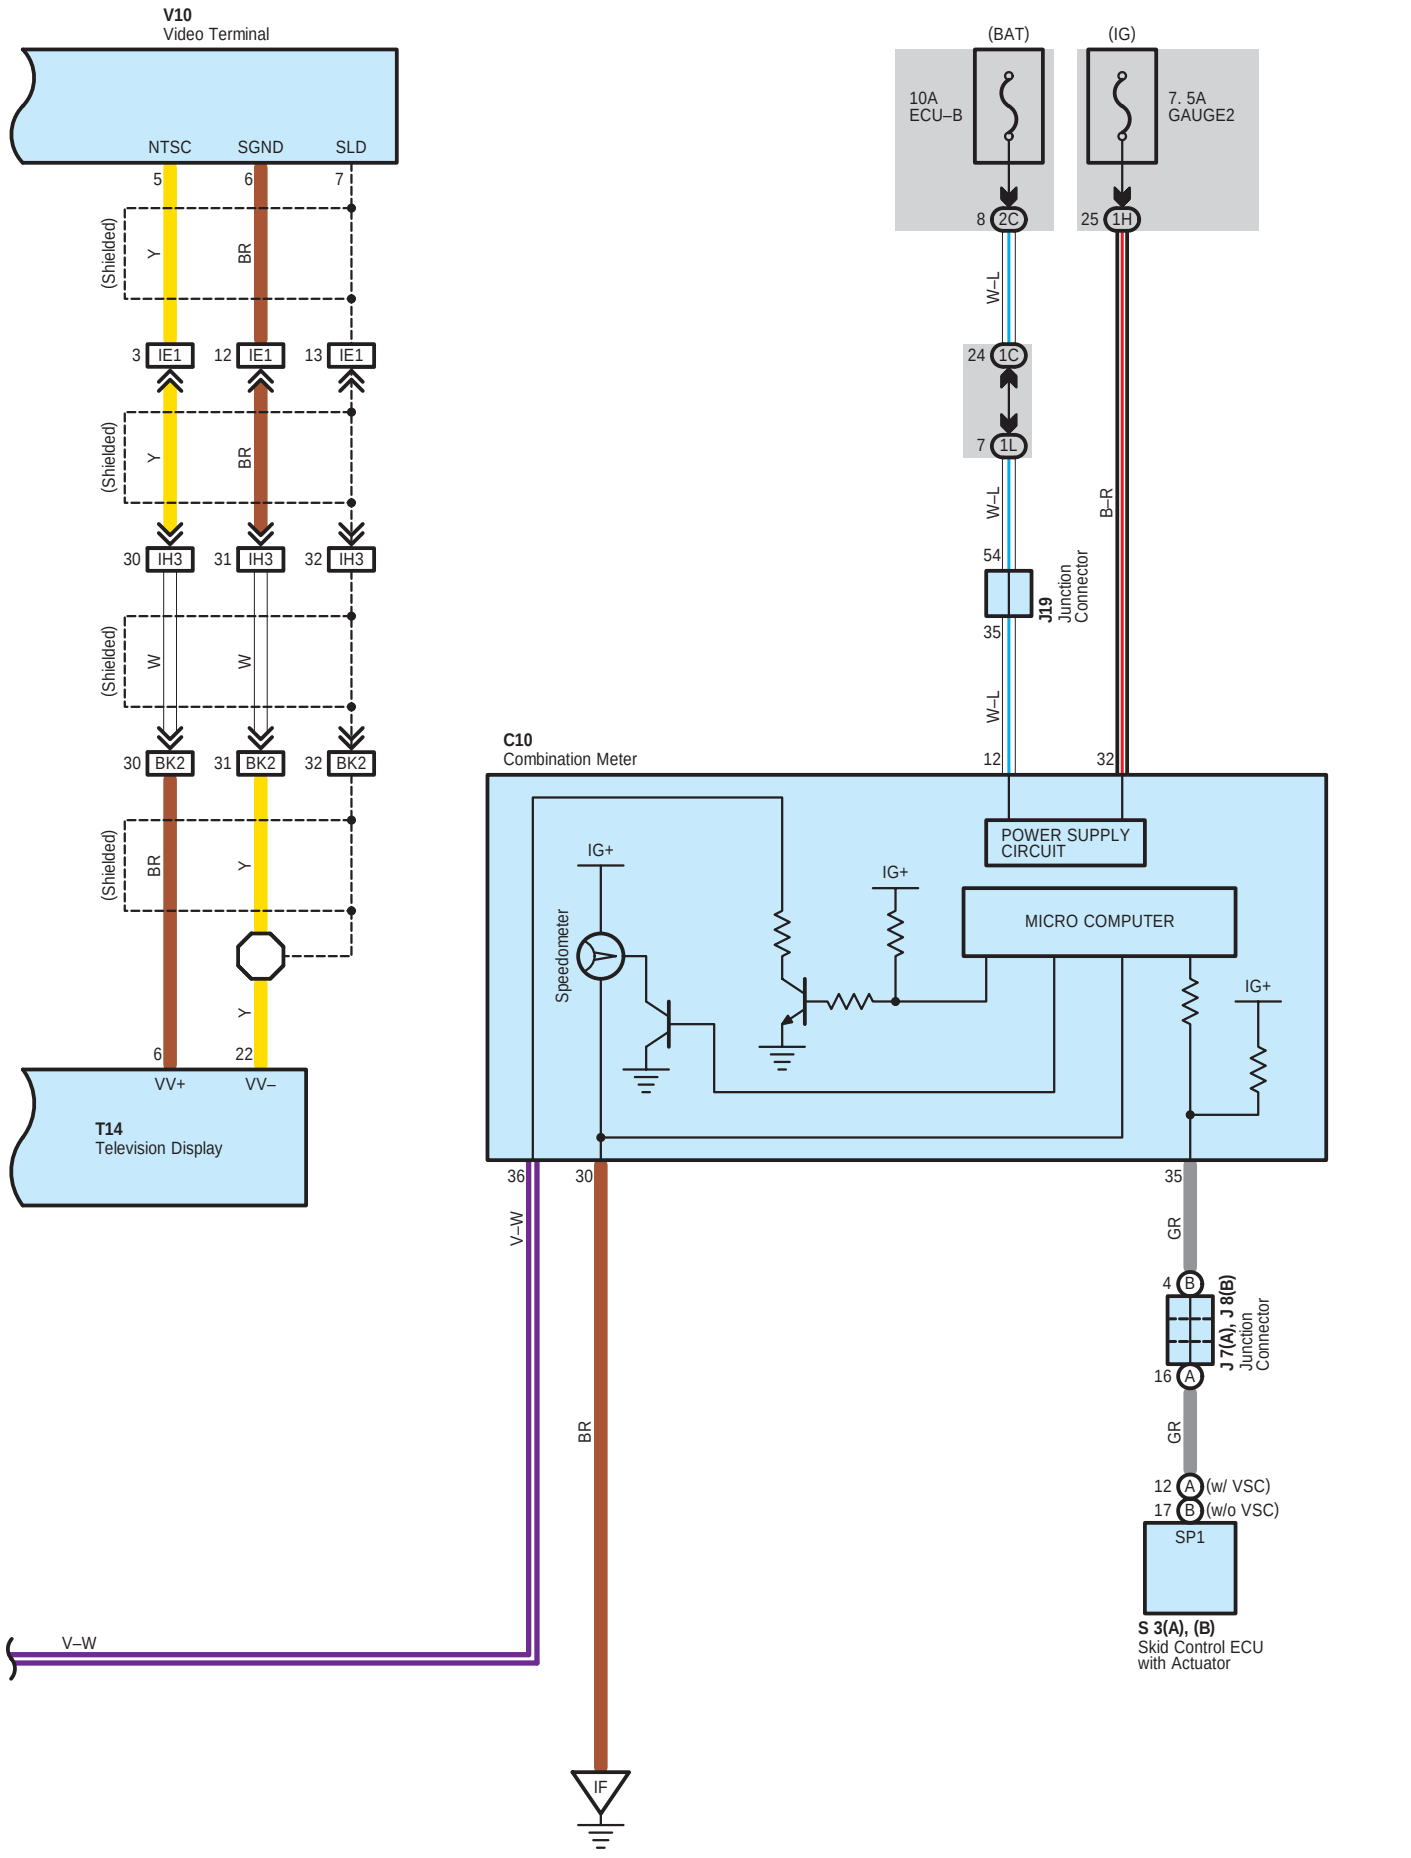
V10
Video Terminal
NTSC
SGND
SLD
5
6
7
(Shielded)
Y
BR
3 IE1
12 IE1
13 IE1
30 IH3
31 IH3
32 IH3
W
30 BK2
31 BK2
32 BK2
6
22
VV+
VV–
T14
Television Display
(BAT)
(IG)
10A
ECU–B
7. 5A
GAUGE2
8 2C
25 1H
W–L
24 1C
7 1L
54
35
J19
Junction
Connector
B–R
C10
Combination Meter
12
32
POWER SUPPLY
CIRCUIT
IG+
Speedometer
MICRO COMPUTER
36
30
35
V–W
BR
GR
4 B
16 A
J7(A), J8(B)
Junction
Connector
12 A (w/ VSC)
17 B (w/o VSC)
SP1
S 3(A), (B)
Skid Control ECU
with Actuator
IF

Audio System with 6 Speaker and RSES

: Parts Location

Code	See Page	Code	See Page	Code	See Page
C10	39	J20	40	R30	45
C13	39	J23	40	S3 A	37
F17	42	J35 A	40	S3 B	37
F18	42	J36 B	40	S32	41
J7 A	40	R5 A	41	T8	41
J8 B	40	R6 B	41	T9	41
J11 A	40	R8 C	41	T14	45
J12 B	40	R9 D	41	V10	45
J19	40	R29	45		

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	26	R/B No.3 (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	31	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1H	30	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1L	31	
2B	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2C		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA2	52	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IE1	52	Floor No.1 Wire and Instrument Panel No.2 Wire (Near the Driver Side J/B)
IF1	52	Instrument Panel Wire and Instrument Panel No.2 Wire (Instrument Panel Center)
IF2		
IF3		
IG1	52	Instrument Panel No.2 Wire and Instrument Panel Wire (Instrument Panel Brace RH)
IH3	52	Floor No.2 Wire and Instrument Panel No.2 Wire (Instrument Panel Brace RH)
IM1	53	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
BK2	55	Roof No.2 Wire and Floor No.2 Wire (Right Rear Quarter Panel)

: Ground Points

Code	See Page	Ground Points Location
IF	52	Instrument Panel Brace LH