

Audio System with 6 Speaker

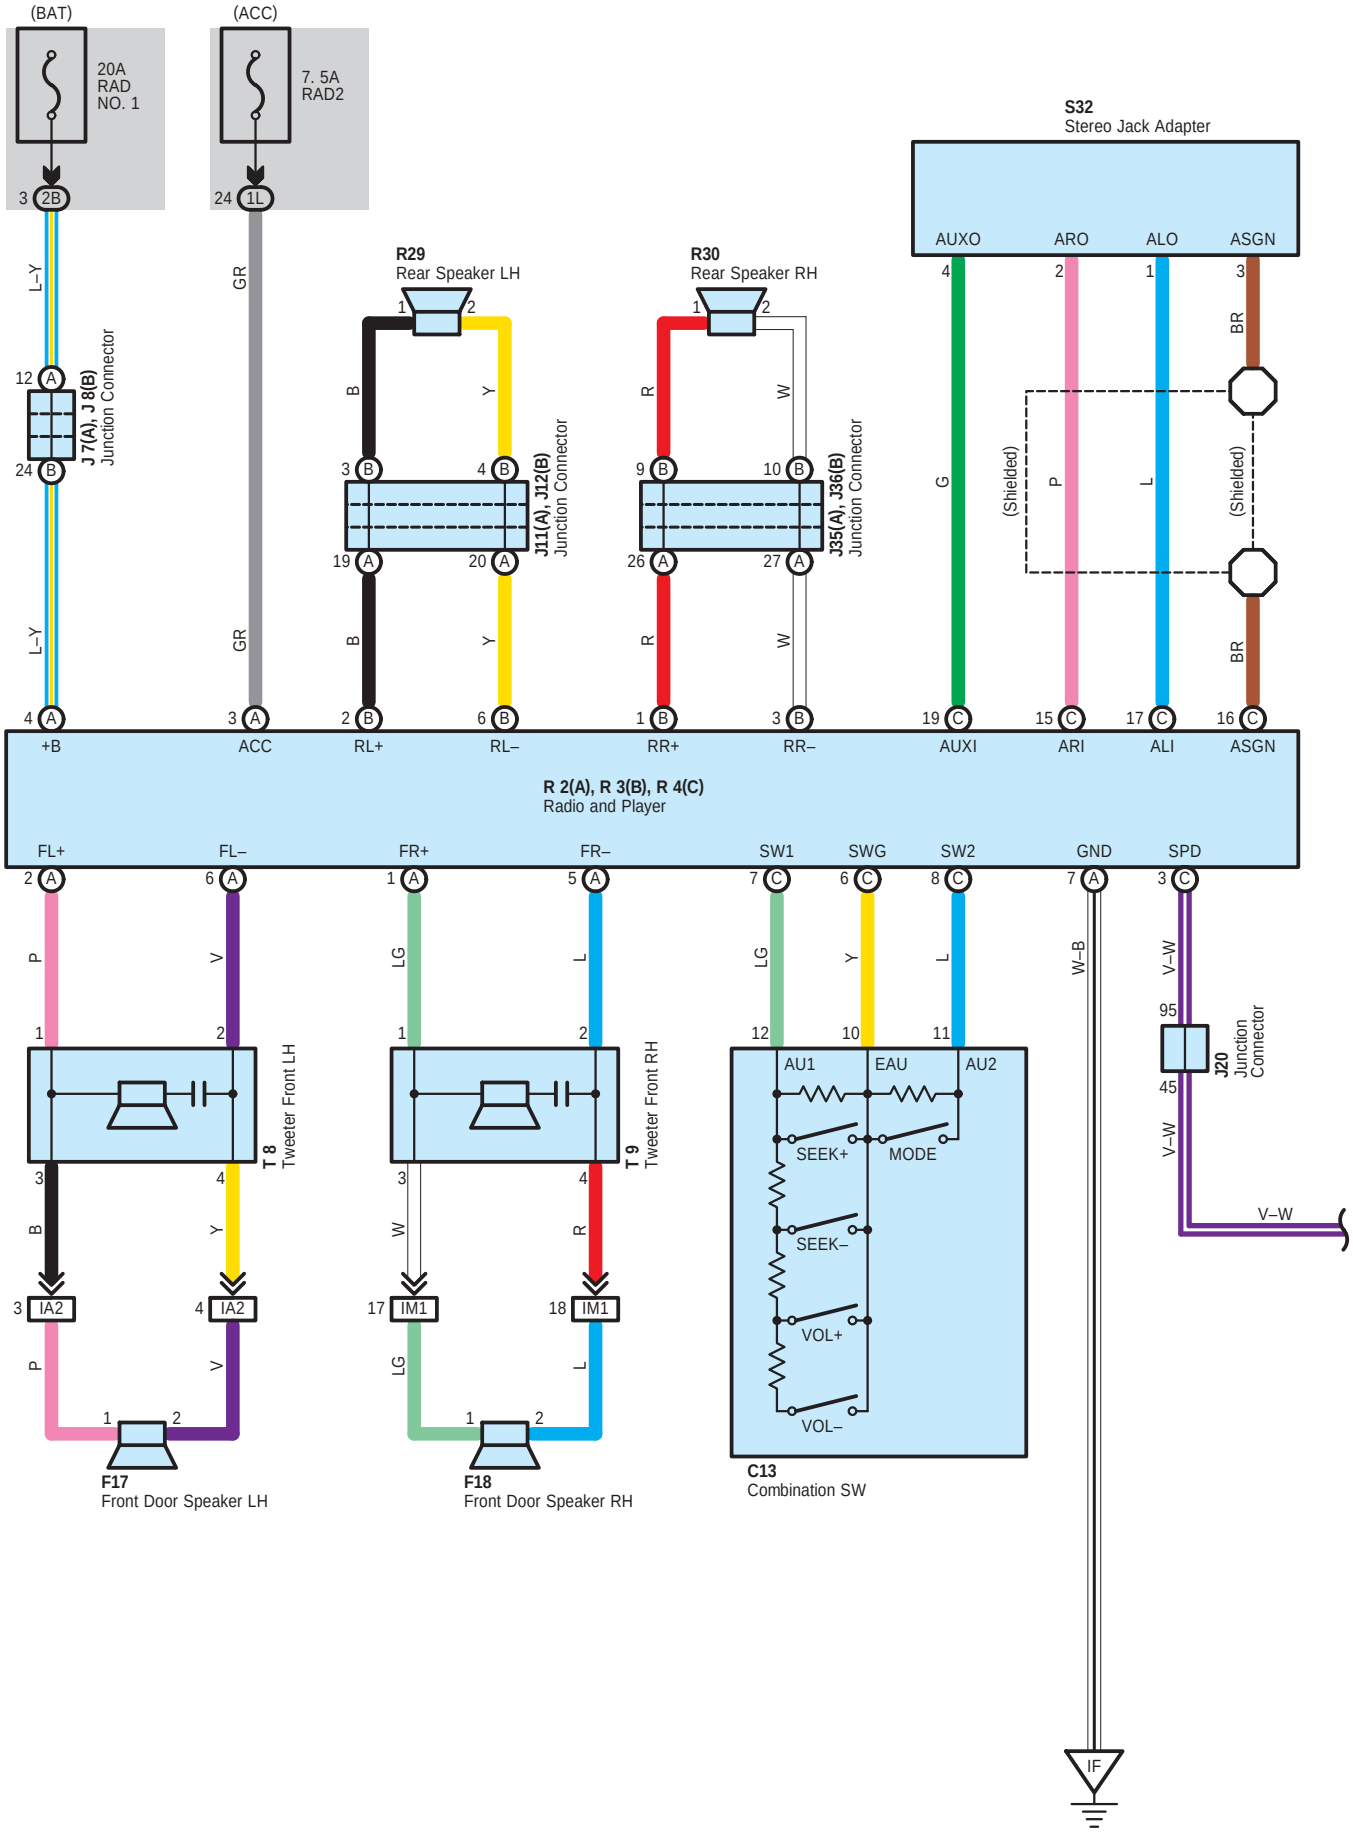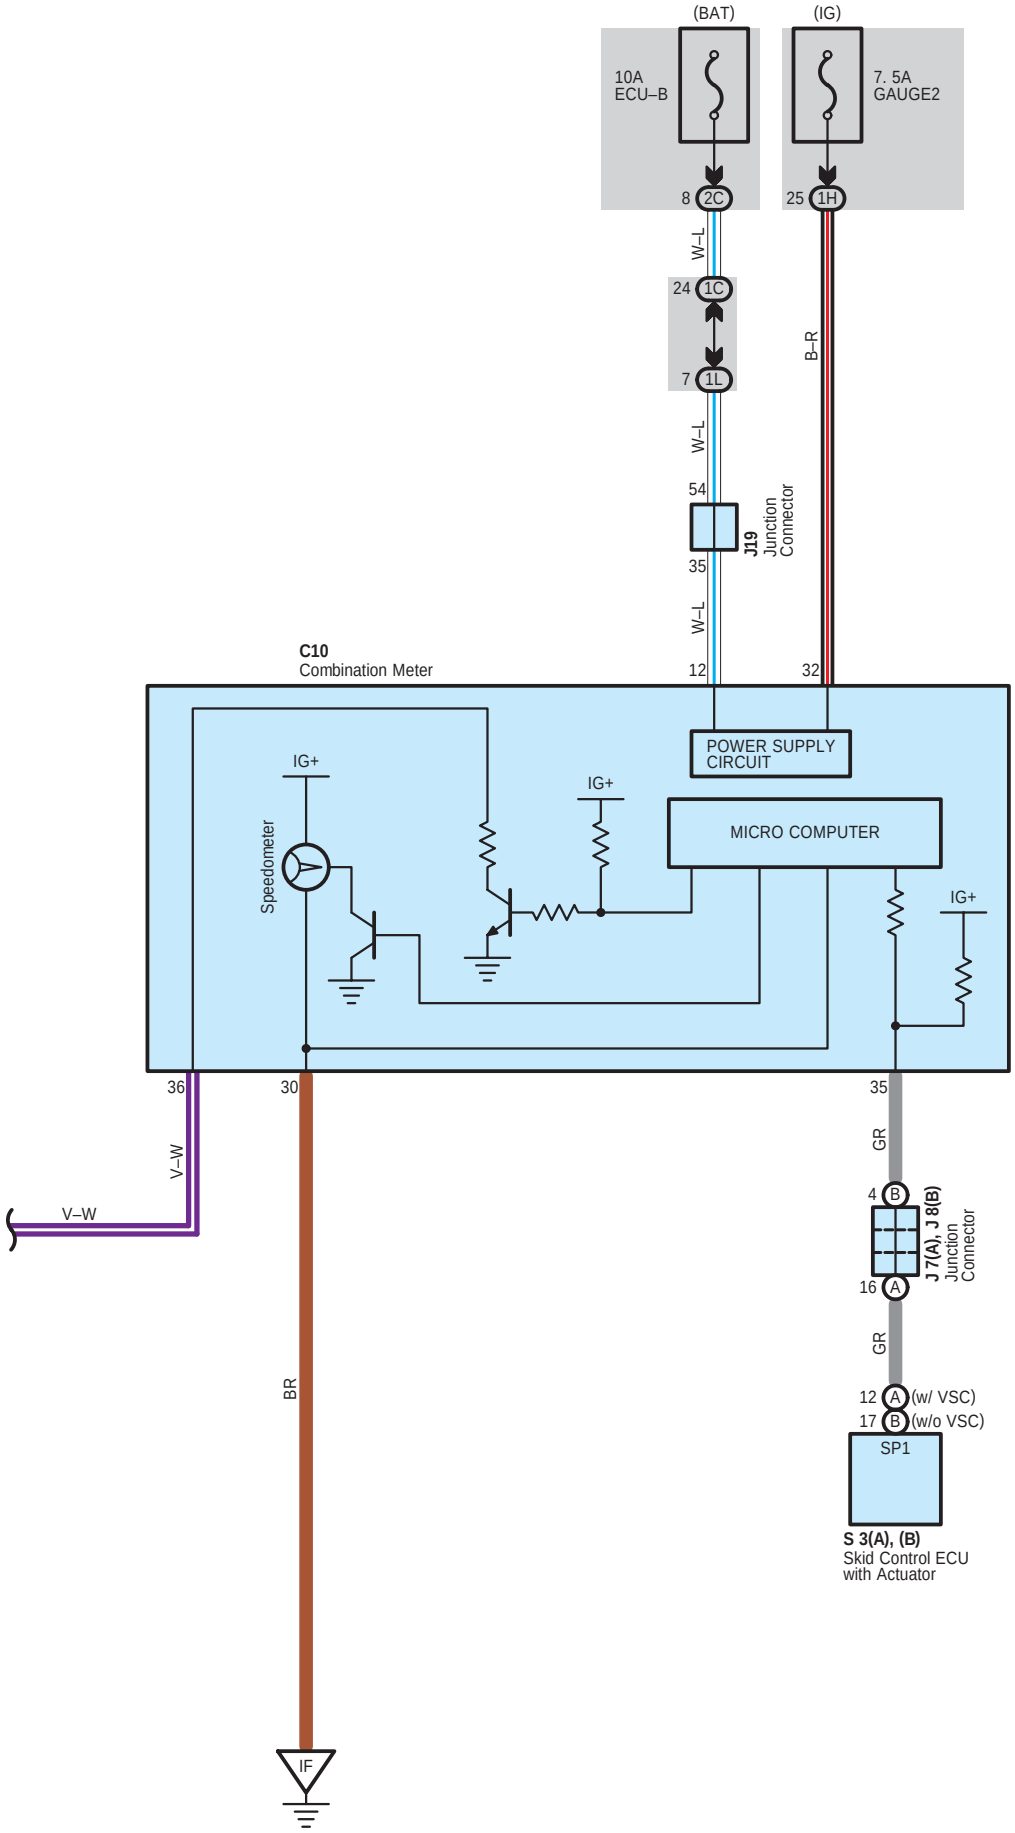


(BAT)
(IG)
10A
ECU–B
7. 5A
GAUGE2
8 2C
25 1H
W–L
24 1C
7 1L
B–R
W–L
54
J19
Junction
Connector
35
W–L
12
32
C10
Combination Meter
POWER SUPPLY
CIRCUIT
IG+
IG+
MICRO COMPUTER
Speedometer
IG+
36
30
35
V–W
V–W
GR
4 B
J 7(A), J 8(B)
Junction
Connector
16 A
GR
BR
12 A (w/ VSC)
17 B (w/o VSC)
SP1
S 3(A), (B)
Skid Control ECU
with Actuator
IF

Audio System with 6 Speaker

: Parts Location

Code		See Page	Code		See Page	Code		See Page
C10		39	J19		40	R30		45
C13		39	J20		40	S3	A	37
F17		42	J35	A	40		B	37
F18		42	J36	B	40	S32		41
J7	A	40	R2	A	41	T8		41
J8	B	40	R3	B	41	T9		41
J11	A	40	R4	C	41			
J12	B	40	R29		45			

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	31	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1H	30	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1L	31	
2B	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2C		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA2	52	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IM1	53	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)

: Ground Points

Code	See Page	Ground Points Location
IF	52	Instrument Panel Brace LH