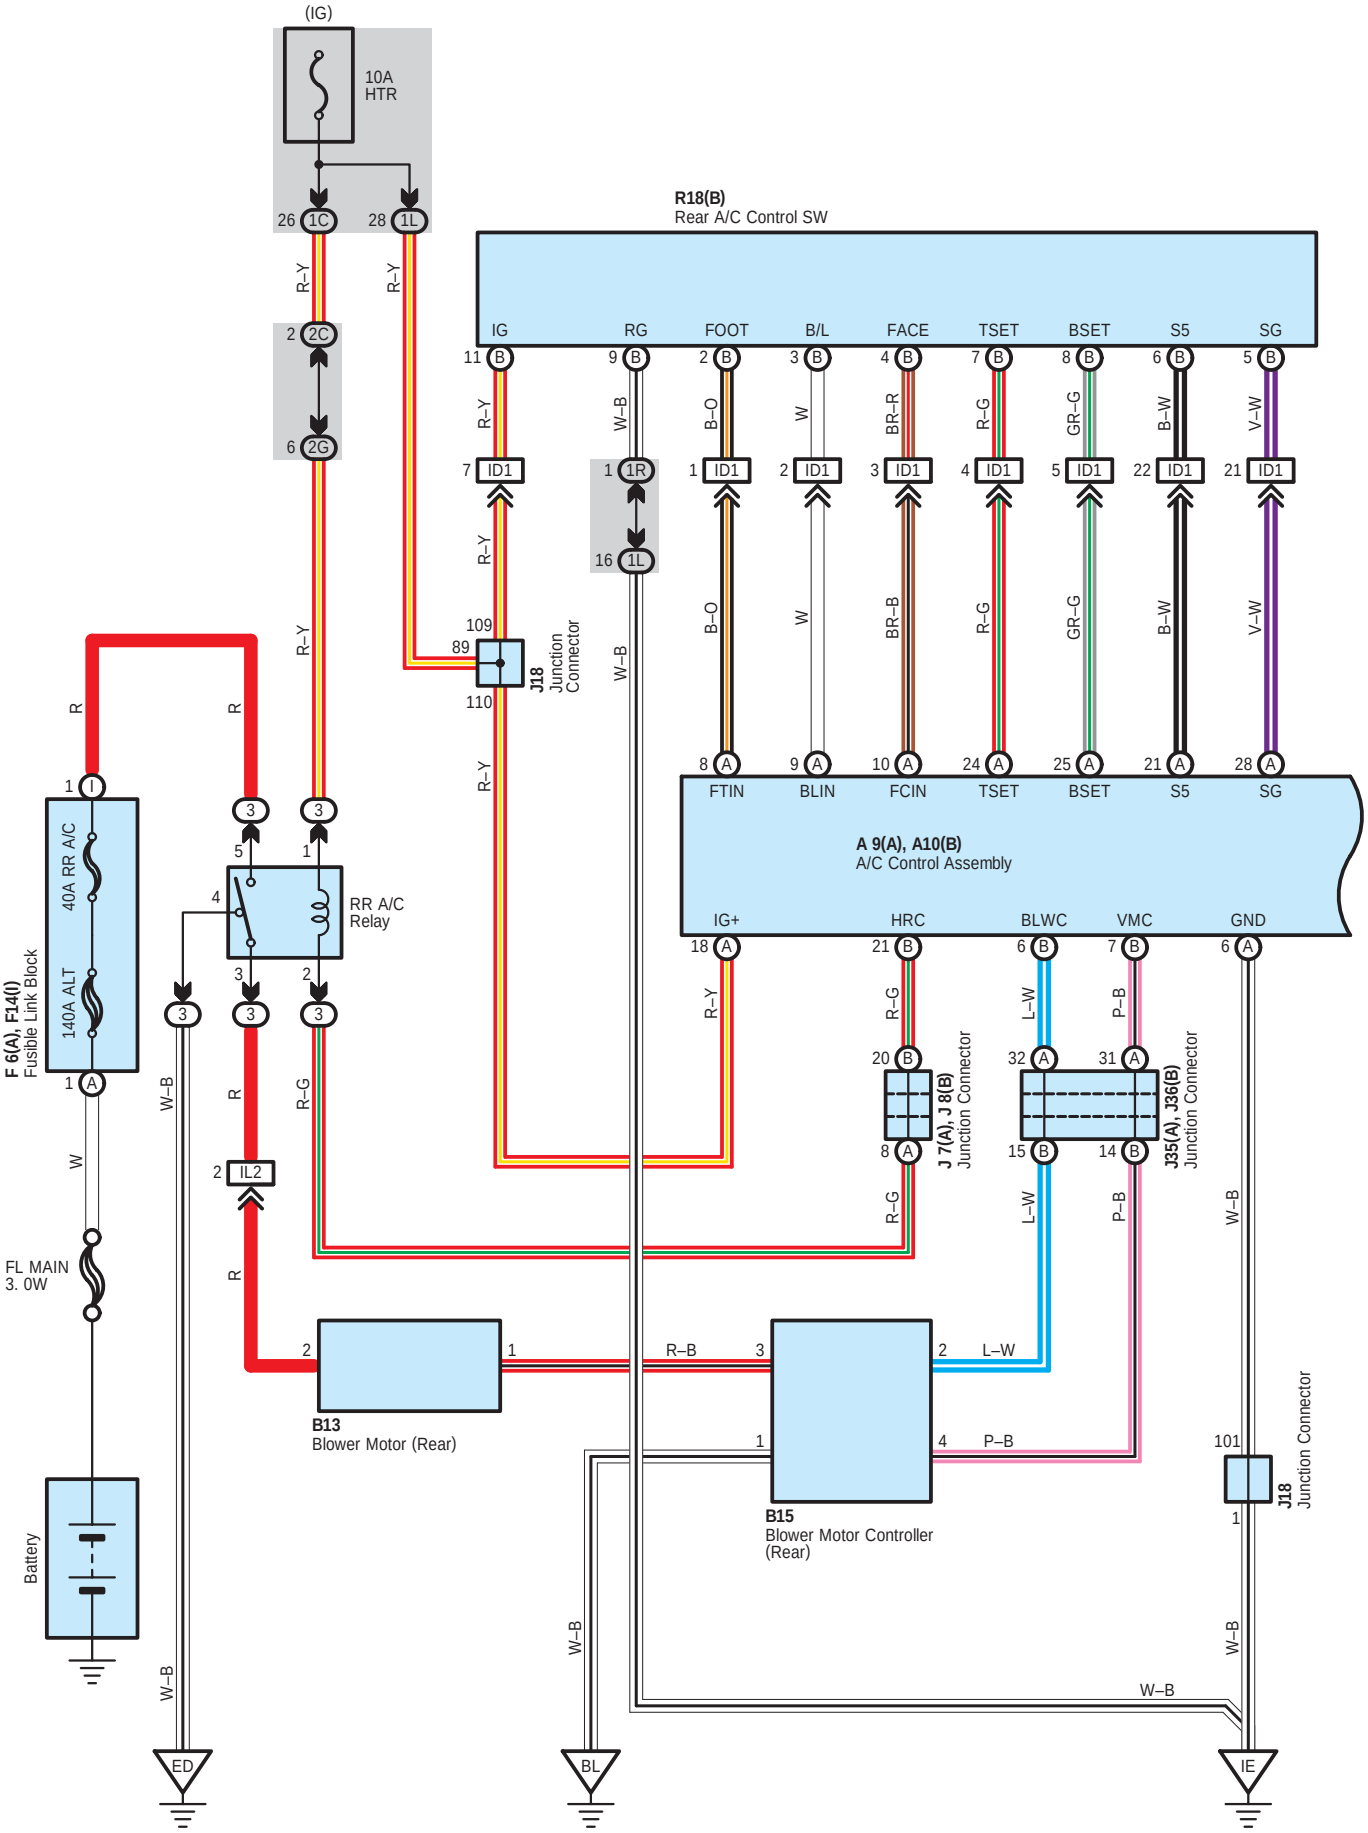
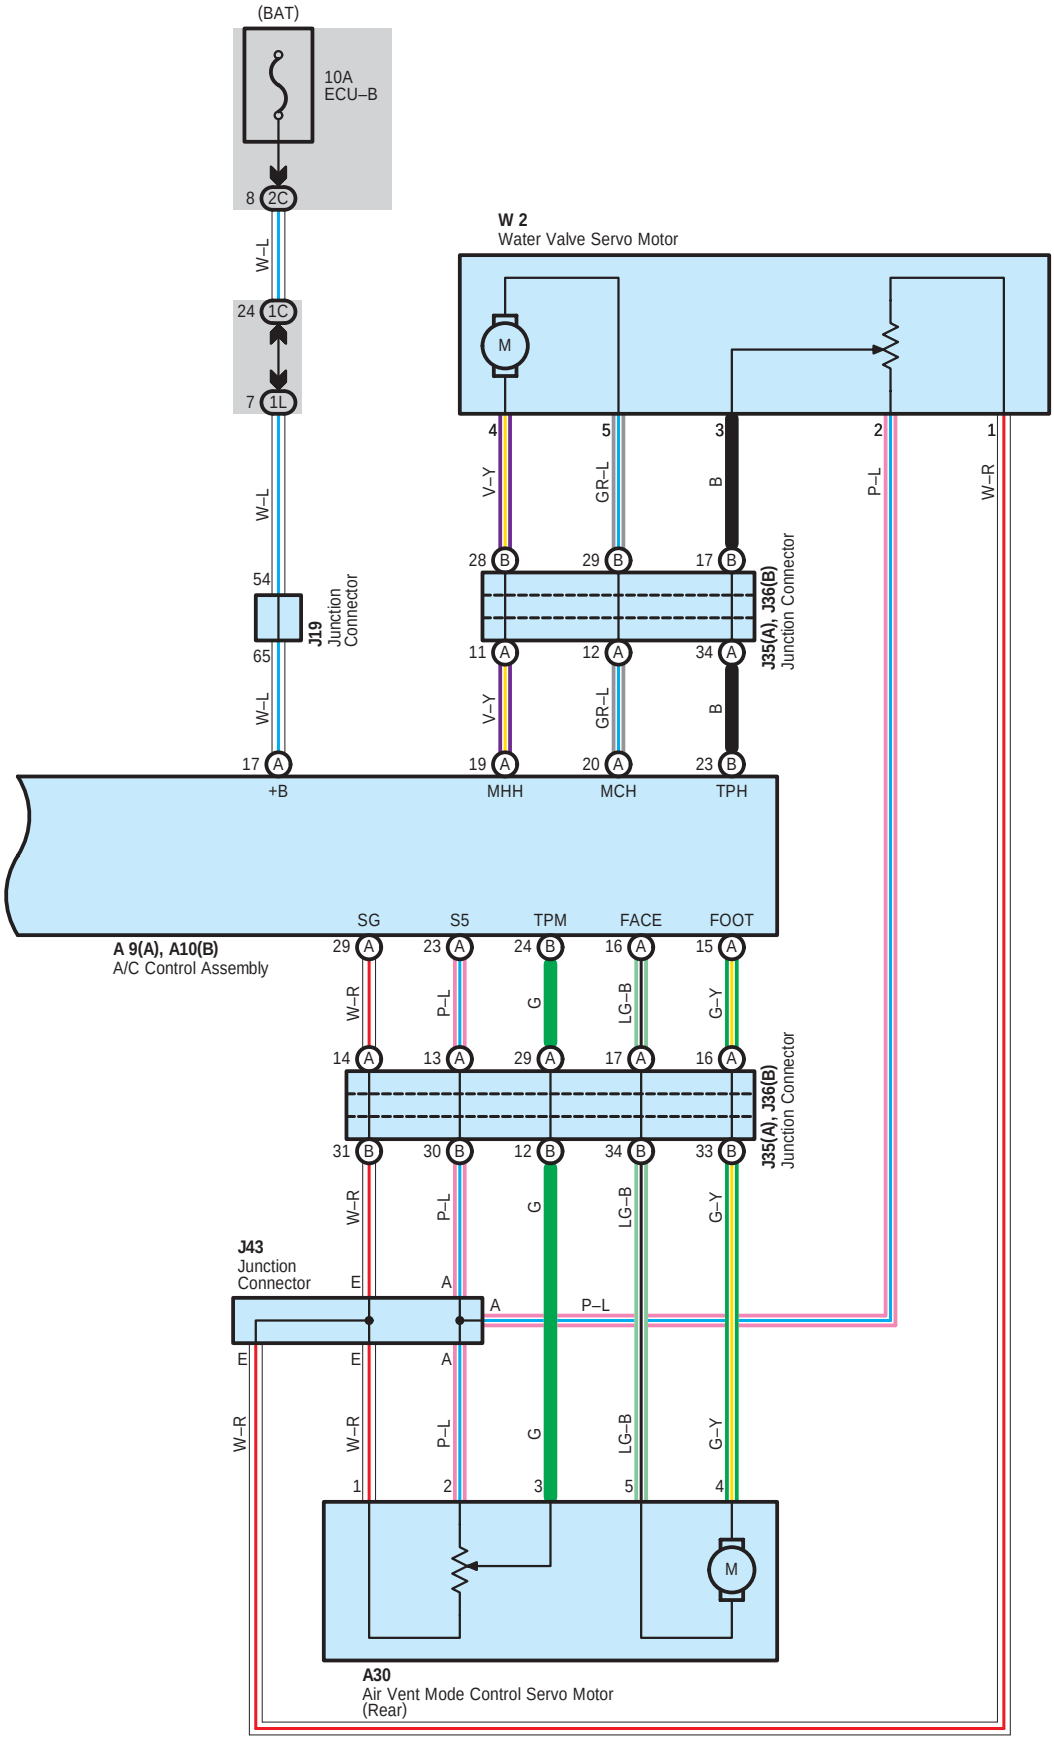

(IG)
10A
HTR
26 1C
28 1L
R–Y
2 2C
6 2G
R18(B)
Rear A/C Control SW
IG
RG
FOOT
B/L
FACE
TSET
BSET
S5
SG
11 B
9 B
2 B
3 B
4 B
7 B
8 B
6 B
5 B
W–B
B–O
W
BR–R
R–G
GR–G
B–W
V–W
7 ID1
1 1R
1 ID1
2 ID1
3 ID1
4 ID1
5 ID1
22 ID1
21 ID1
16 1L
109
89
110
J18
Junction
Connector
BR–B
GR–G
8 A
9 A
10 A
24 A
25 A
21 A
28 A
FTIN
BLIN
FCIN
TSET
BSET
S5
SG
A 9(A), A10(B)
A/C Control Assembly
IG+
HRC
BLWC
VMC
GND
18 A
21 B
6 B
7 B
6 A
20 B
8 A
32 A
31 A
15 B
14 B
J 7(A), J 8(B)
Junction Connector
J35(A), J36(B)
Junction Connector
L–W
P–B
F 6(A), F14(I)
Fusible Link Block
40A RR A/C
140A ALT
1 I
1 A
3
5
4
1
2
RR A/C
Relay
2 IL2
FL MAIN
3. 0W
Battery
B13
Blower Motor (Rear)
B15
Blower Motor Controller
(Rear)
101
J18
Junction Connector
ED
BL
IE


(BAT)
10A
ECU–B
8 2C
W–L
24 1C
7 1L
W–L
54
J19
Junction
Connector
65
W–L
17 A
+B
W 2
Water Valve Servo Motor
M
4
5
3
2
1
V–Y
GR–L
B
P–L
W–R
28 B
29 B
17 B
J35(A), J36(B)
Junction Connector
11 A
12 A
34 A
V–Y
GR–L
B
19 A
20 A
23 B
MHH
MCH
TPH
SG
S5
TPM
FACE
FOOT
A 9(A), A10(B)
A/C Control Assembly
29 A
23 A
24 B
16 A
15 A
W–R
P–L
G
LG–B
G–Y
14 A
13 A
29 A
17 A
16 A
J35(A), J36(B)
Junction Connector
31 B
30 B
12 B
34 B
33 B
W–R
P–L
G
LG–B
G–Y
J43
Junction
Connector
E
A
A
P–L
E
E
A
W–R
W–R
P–L
G
LG–B
G–Y
1
2
3
5
4
M
A30
Air Vent Mode Control Servo Motor
(Rear)

Manual Air Conditioning (Rear)

: Parts Location

Code		See Page	Code		See Page	Code		See Page
A9	A	38	F14	I	36	J36	B	40
A10	B	38	J7	A	40	J43		43
A30		42	J8	B	40	R18	B	45
B13		42	J18		40	W2		45
B15		42	J19		40			
F6	A	36	J35	A	40			

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	26	R/B No.3 (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	31	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1L	31	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1R	31	Roof Wire and Driver Side J/B (Lower Finish Panel)
2C	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2G		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID1	52	Roof Wire and Instrument Panel Wire (Near the Driver Side J/B)
IL2	53	Engine Room Main Wire and Floor No.2 Wire (Right Kick Panel)

: Ground Points

Code	See Page	Ground Points Location
ED	50	Front Side of the Left Fender Apron
IE	52	Left Kick Panel
BL	54	Right Rear Quarter Panel