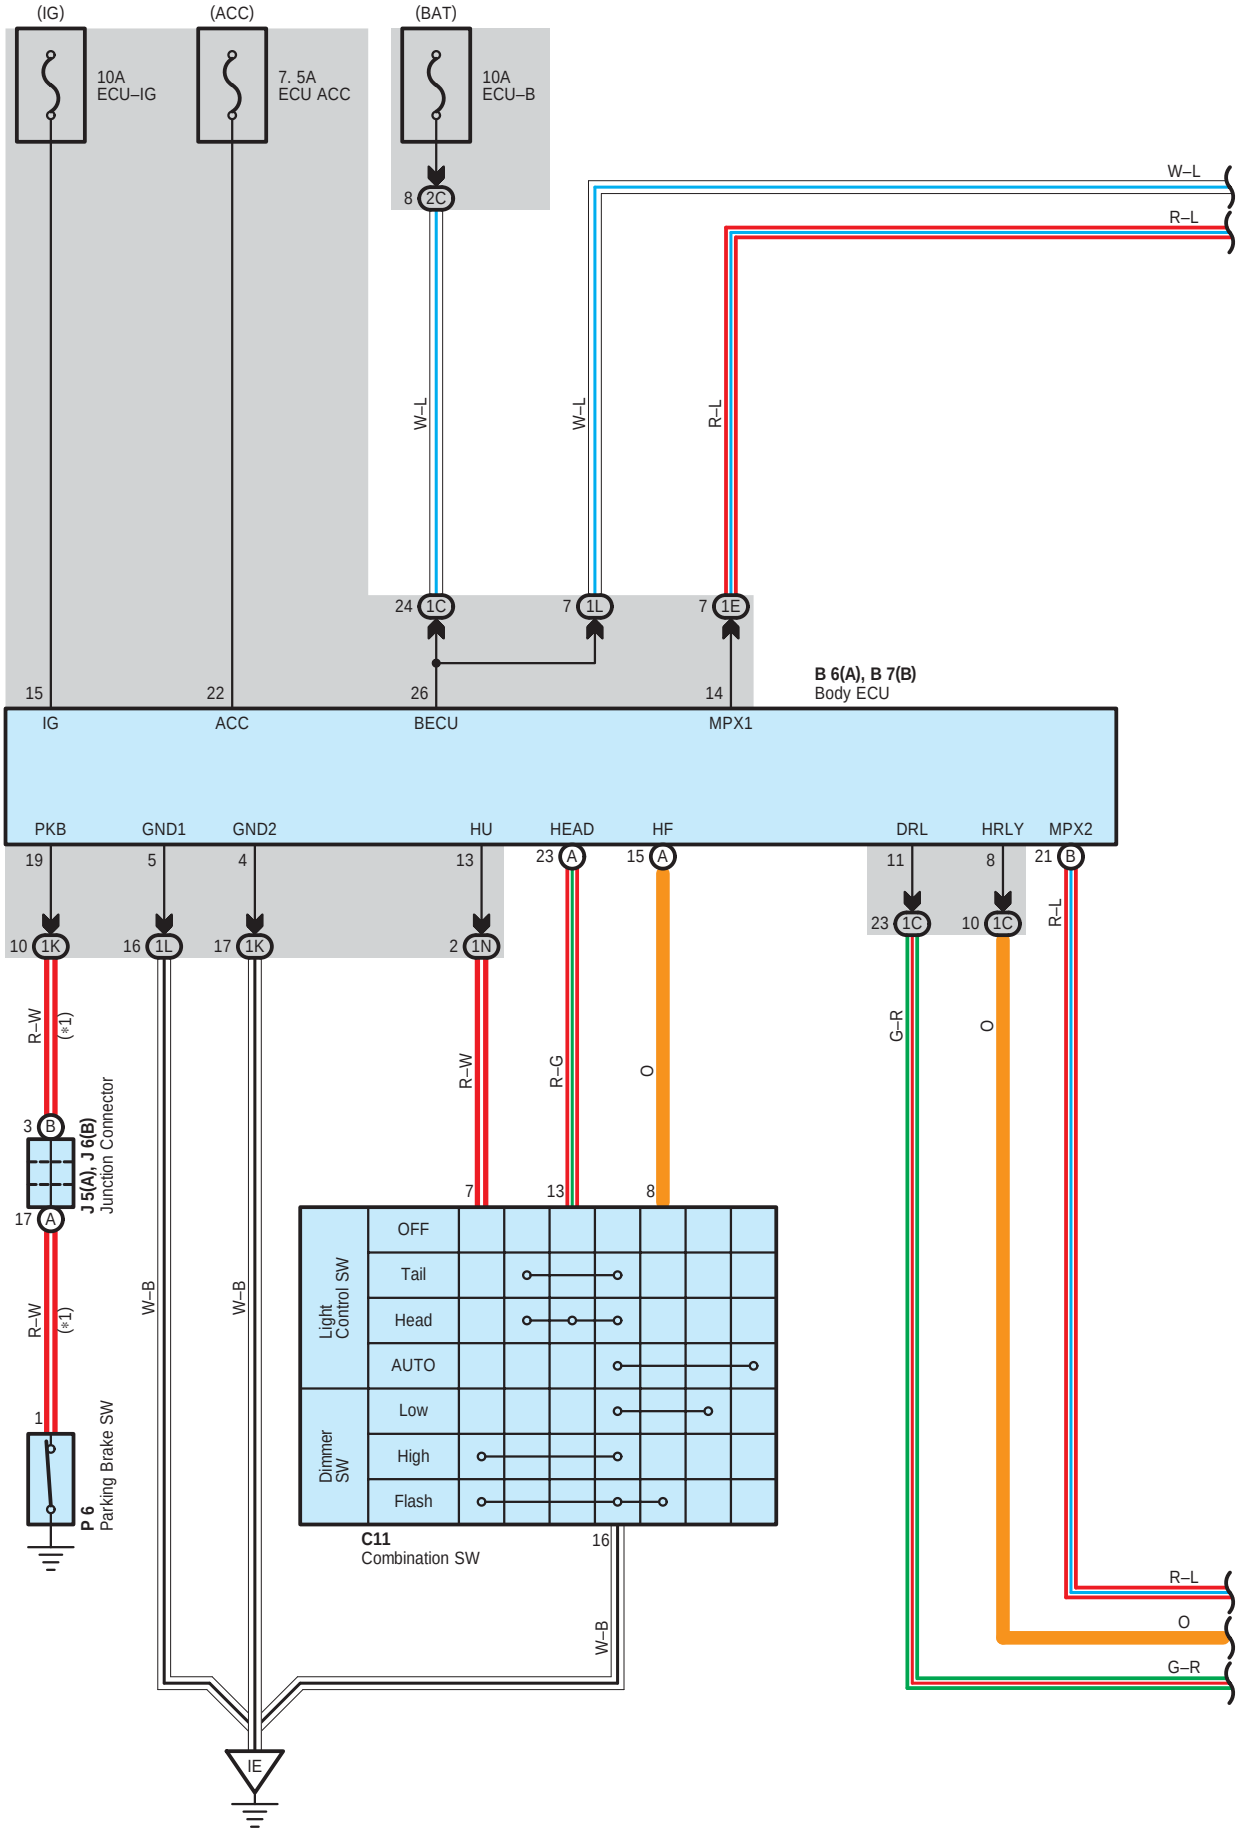
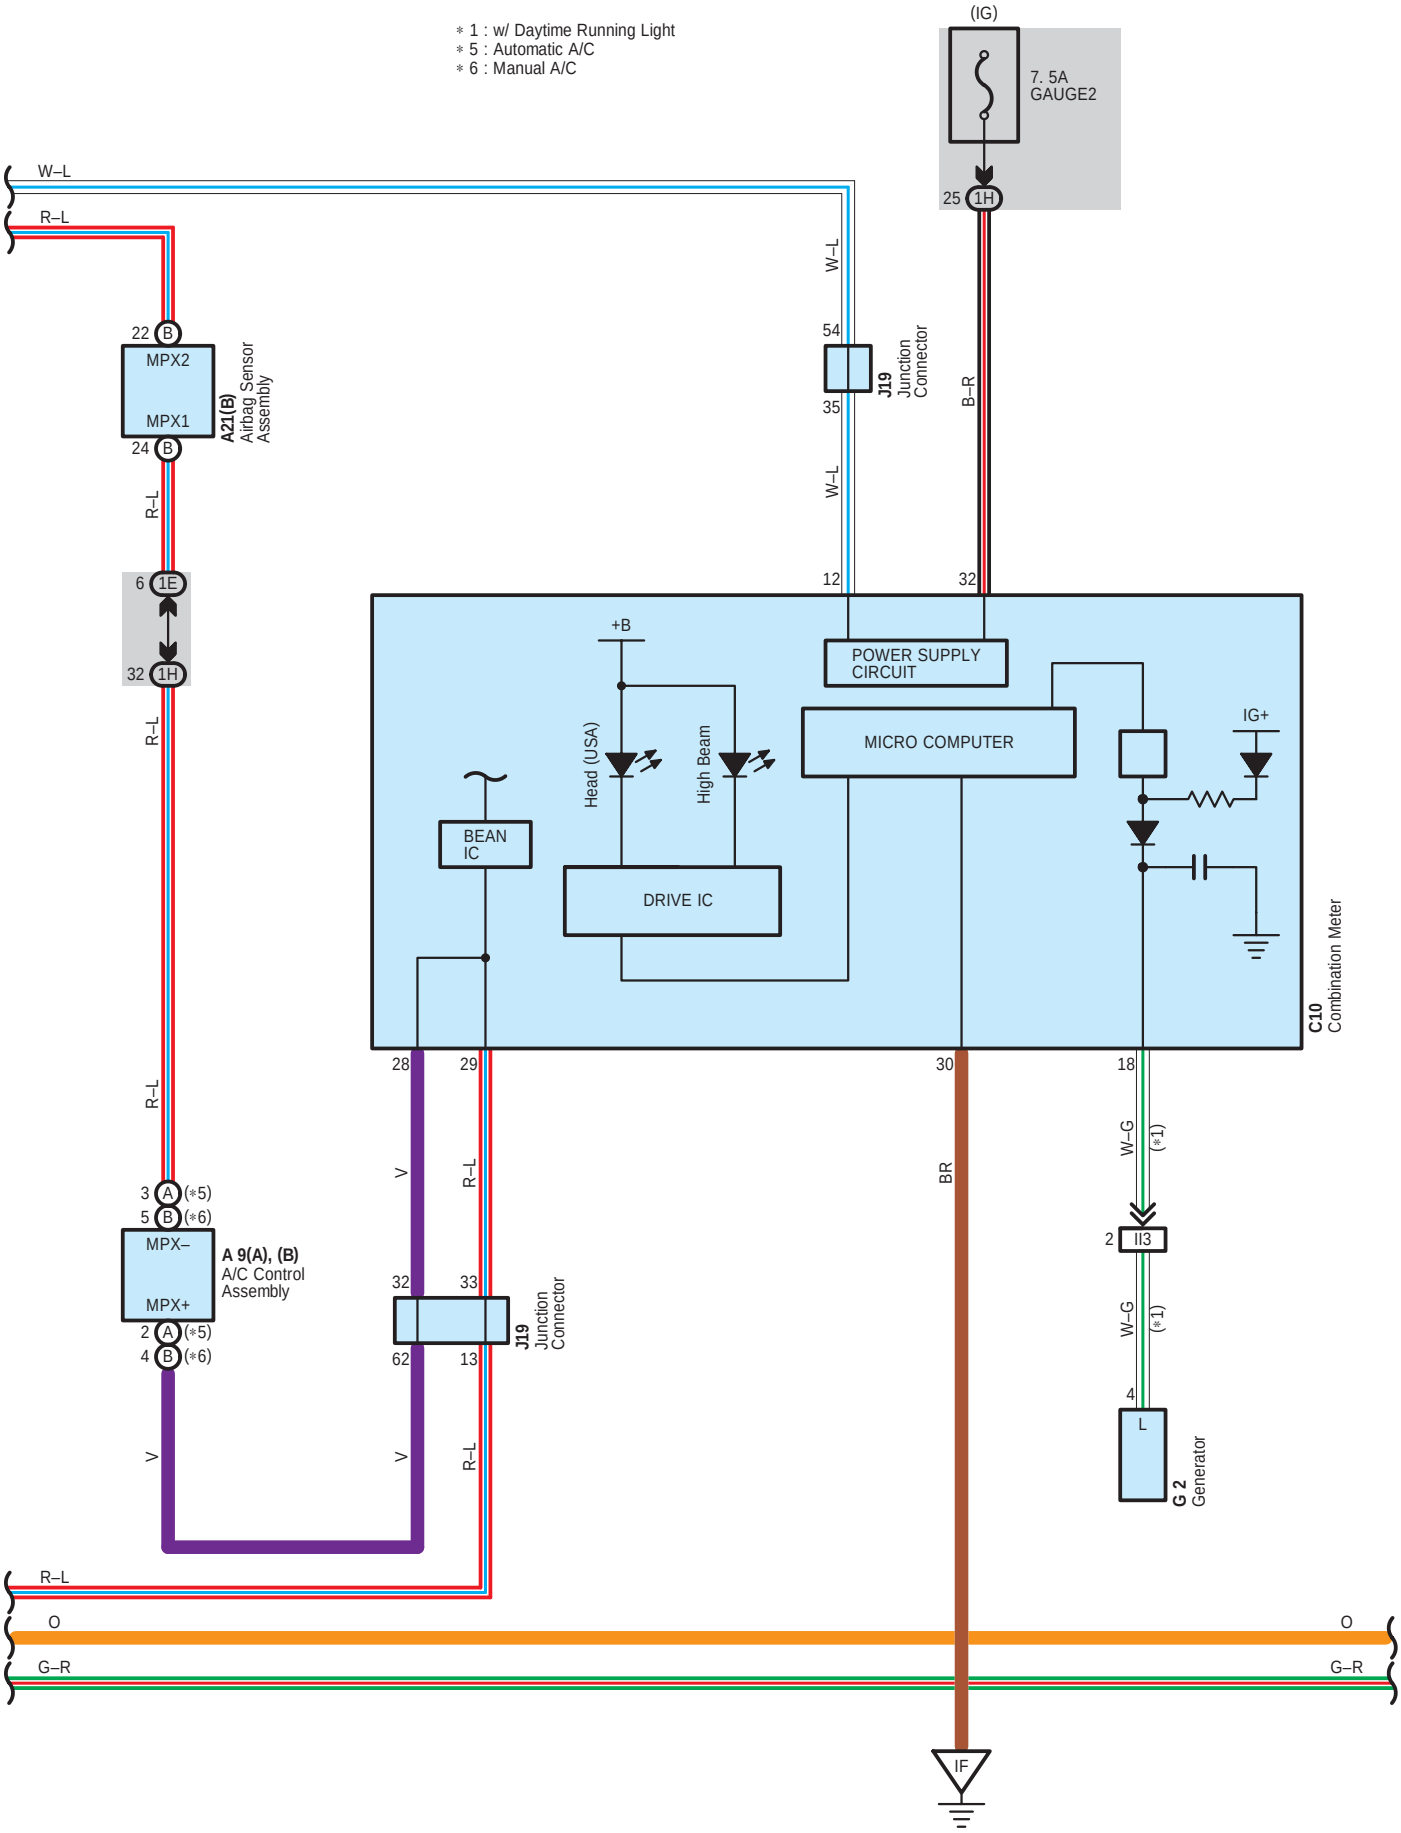
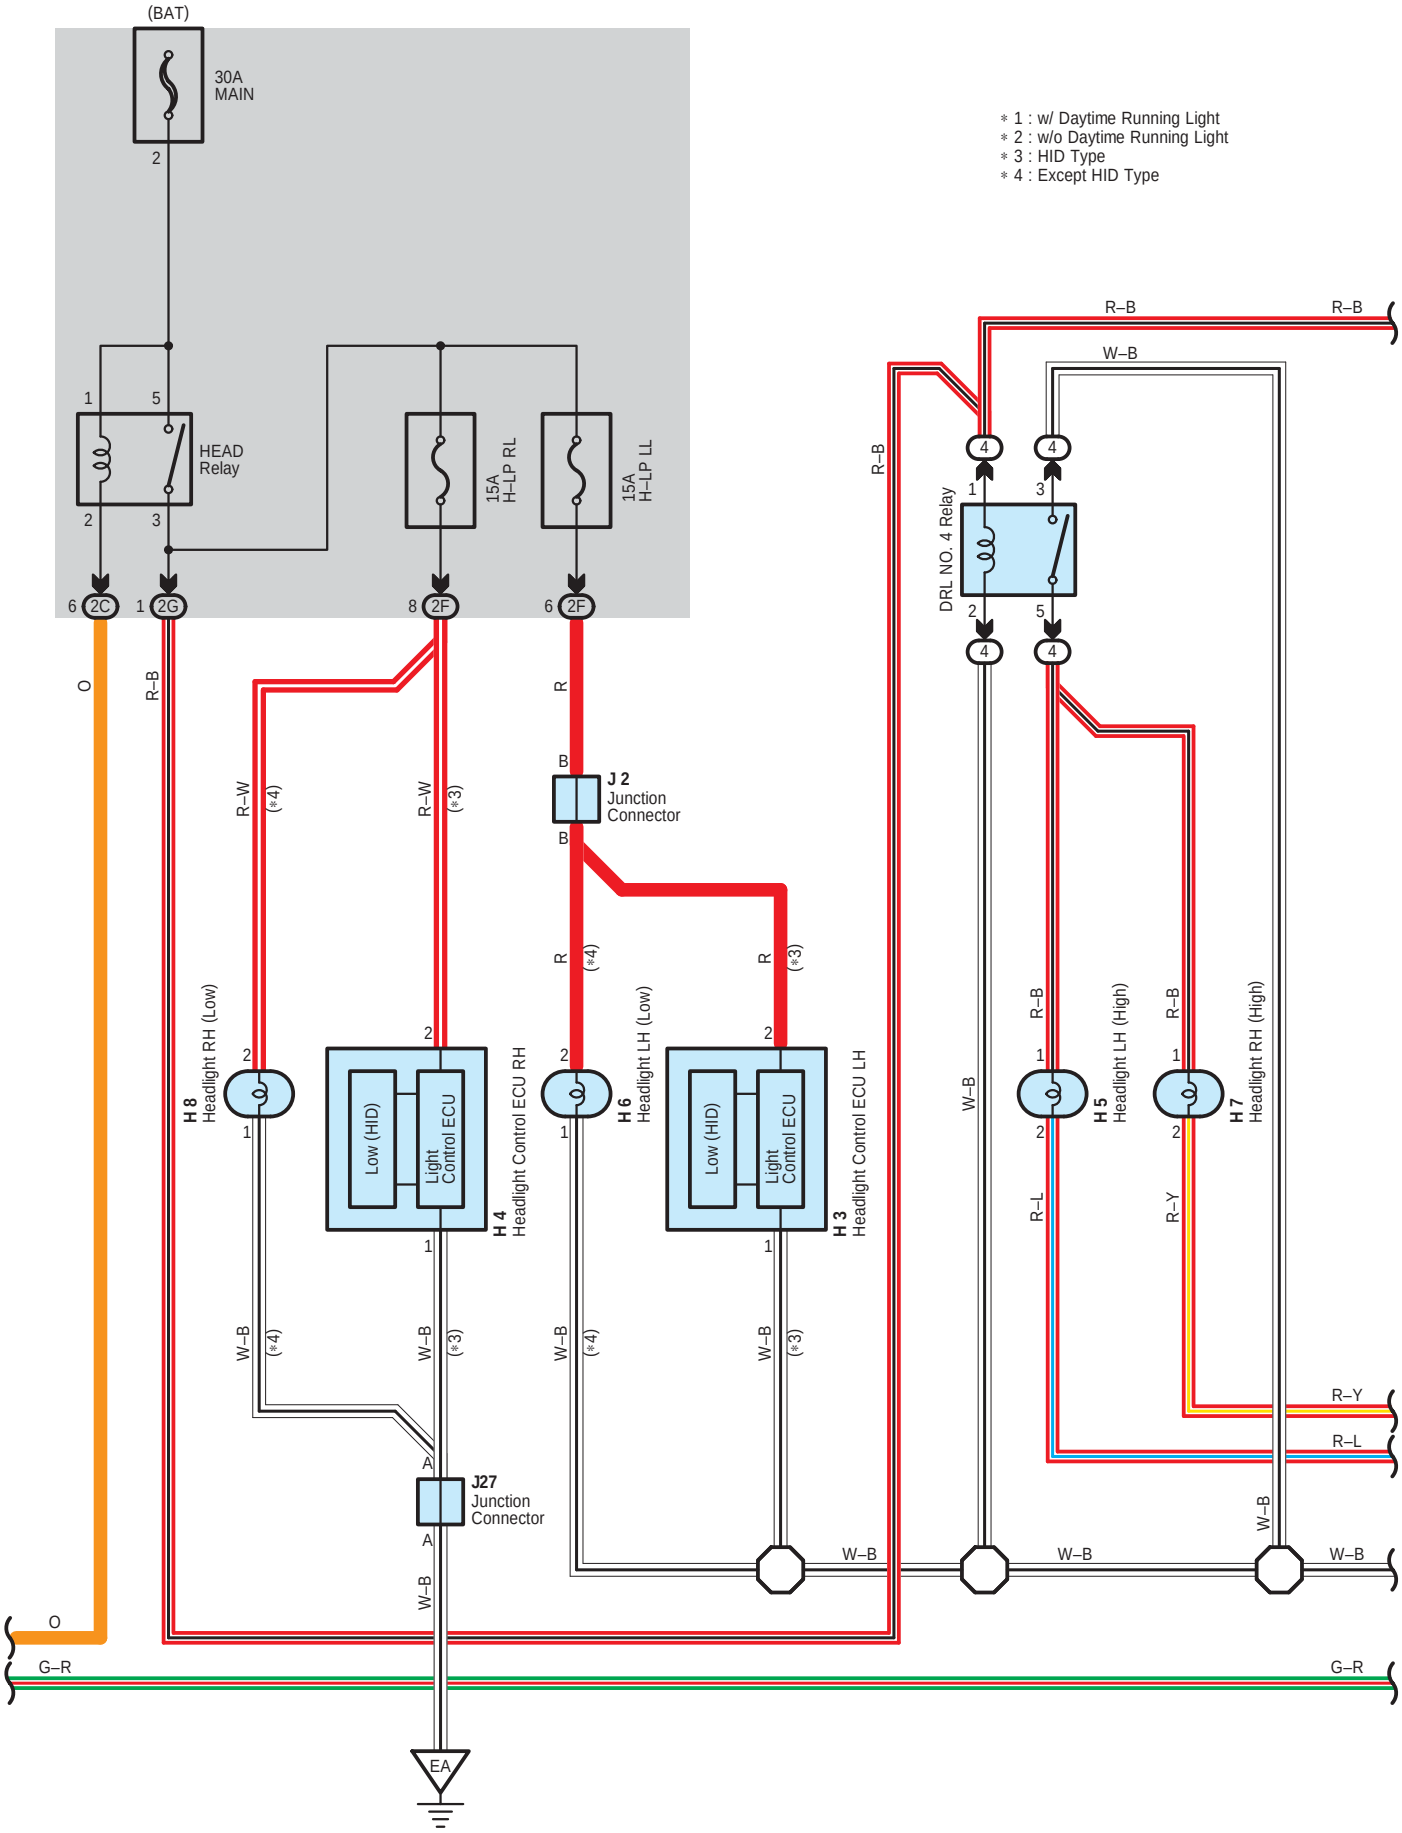
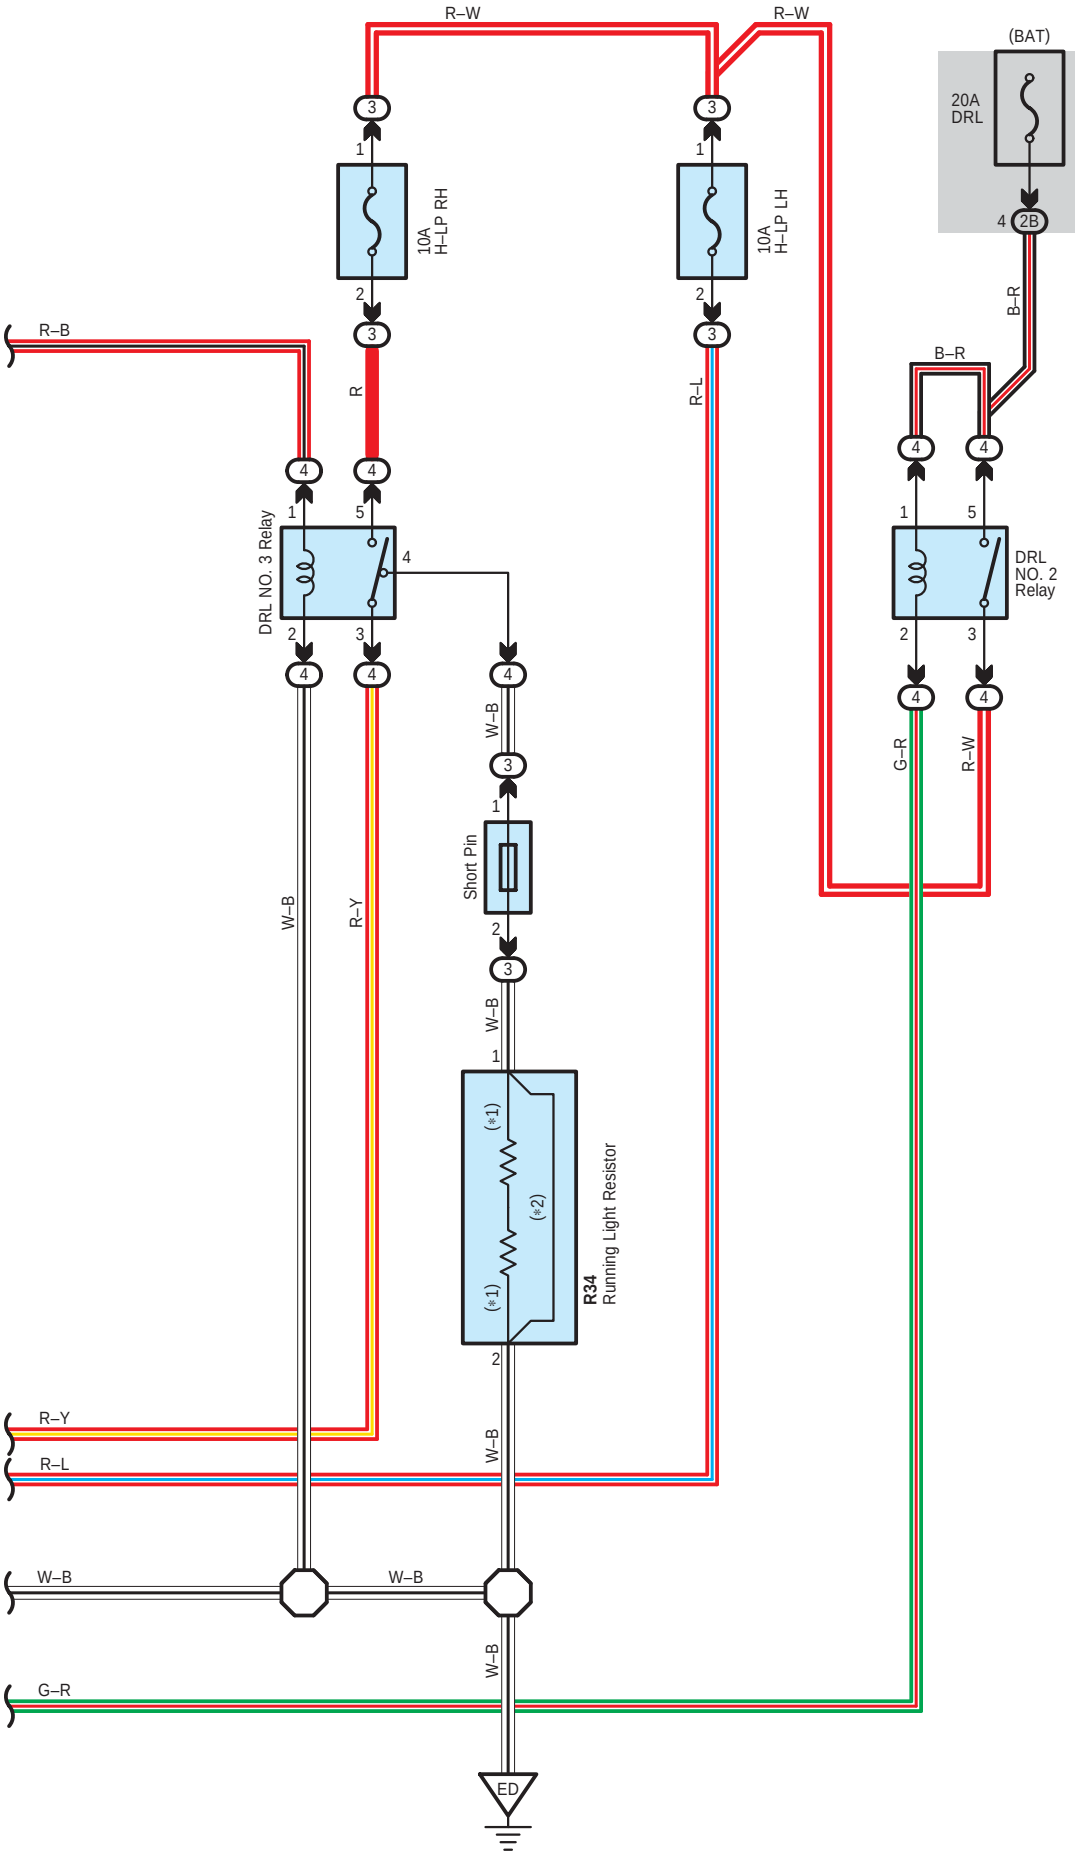

(IG)
(ACC)
(BAT)
10A
ECU–IG
7. 5A
ECU ACC
10A
ECU–B
8 2C
W–L
R–L
W–L
R–L
24 1C
7 1L
7 1E
15
22
26
14
IG
ACC
BECU
MPX1
B 6(A), B 7(B)
Body ECU
PKB
GND1
GND2
HU
HEAD
HF
DRL
HRLY
MPX2
19
5
4
13
23 A
15 A
11
8
21 B
10 1K
16 1L
17 1K
2 1N
23 1C
10 1C
R–W
(*1)
R–W
R–G
O
G–R
O
R–L
3 B
17 A
J 5(A), J 6(B)
Junction Connector
7
13
8
R–W
(*1)
W–B
W–B
1
P 6
Parking Brake SW
Light Control SW
Dimmer SW
OFF
Tail
Head
AUTO
Low
High
Flash
C11
Combination SW
16
W–B
R–L
O
G–R
IE


∗ 1 : w/ Daytime Running Light
∗ 5 : Automatic A/C
∗ 6 : Manual A/C
(IG)
7. 5A
GAUGE2
25 1H
W–L
R–L
W–L
54
J19
Junction
Connector
35
W–L
B–R
12
32
22 B
MPX2
MPX1
24 B
A21(B)
Airbag Sensor
Assembly
R–L
6 1E
32 1H
R–L
+B
POWER SUPPLY
CIRCUIT
MICRO COMPUTER
IG+
Head (USA)
High Beam
BEAN
IC
DRIVE IC
C10
Combination Meter
28
29
30
18
R–L
V
R–L
BR
W–G
(∗1)
3 A (∗5)
5 B (∗6)
MPX–
MPX+
2 A (∗5)
4 B (∗6)
A 9(A), (B)
A/C Control
Assembly
32
33
62
13
J19
Junction
Connector
2 II3
W–G
(∗1)
4
L
G 2
Generator
V
V
R–L
R–L
O
O
G–R
G–R
IF


(BAT)
30A
MAIN
2
1
5
HEAD
Relay
2
3
15A
H–LP RL
15A
H–LP LL
6
2C
1
2G
8
2F
6
2F
O
R–B
R
B
J 2
Junction
Connector
B
R–W
(*4)
R–W
(*3)
R
(*4)
R
(*3)
H 8
Headlight RH (Low)
H 4
Headlight Control ECU RH
Low (HID)
Light
Control ECU
H 6
Headlight LH (Low)
H 3
Headlight Control ECU LH
Low (HID)
Light
Control ECU
W–B
(*4)
W–B
(*3)
W–B
(*4)
W–B
(*3)
A
J27
Junction
Connector
A
W–B
O
G–R
EA
* 1 : w/ Daytime Running Light
* 2 : w/o Daytime Running Light
* 3 : HID Type
* 4 : Except HID Type
R–B
R–B
W–B
R–B
4
4
1
3
DRL NO. 4 Relay
2
5
4
4
W–B
R–B
R–B
H 5
Headlight LH (High)
H 7
Headlight RH (High)
R–L
R–Y
R–Y
R–L
W–B
W–B
W–B
W–B
G–R


R–W
R–W
(BAT)
20A
DRL
10A
H–LP RH
10A
H–LP LH
B–R
B–R
R–B
R
R–L
DRL NO. 3 Relay
DRL
NO. 2
Relay
W–B
R–Y
Short Pin
G–R
R–W
(*1)
(*2)
(*1)
R34
Running Light Resistor
R–Y
R–L
W–B
W–B
W–B
G–R
ED

Headlight

: Parts Location

Code		See Page	Code	See Page	Code		See Page
A9	A	38	G2	36	J2		37
	B	38	H3	36	J5	A	40
A21	B	38	H4	36	J6	B	40
B6	A	38	H5	36	J19		40
B7	B	38	H6	36	J27		40
C10		39	H7	36	P6		41
C11		39	H8	36	R34		37

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	26	R/B No.3 (Engine Compartment Left)
4	27	R/B No.4 (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	31	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1E	31	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1H	30	
1K	31	
1L		
1N		
2B	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2C		
2F		
2G		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
II3	53	Engine Wire and Instrument Panel Wire (Right Kick Panel)

: Ground Points

Code	See Page	Ground Points Location
EA	50	Front Side of the Right Fender Apron
ED	50	Front Side of the Left Fender Apron
IE	52	Left Kick Panel
IF	52	Instrument Panel Brace LH