
Headlight Beam Level Control

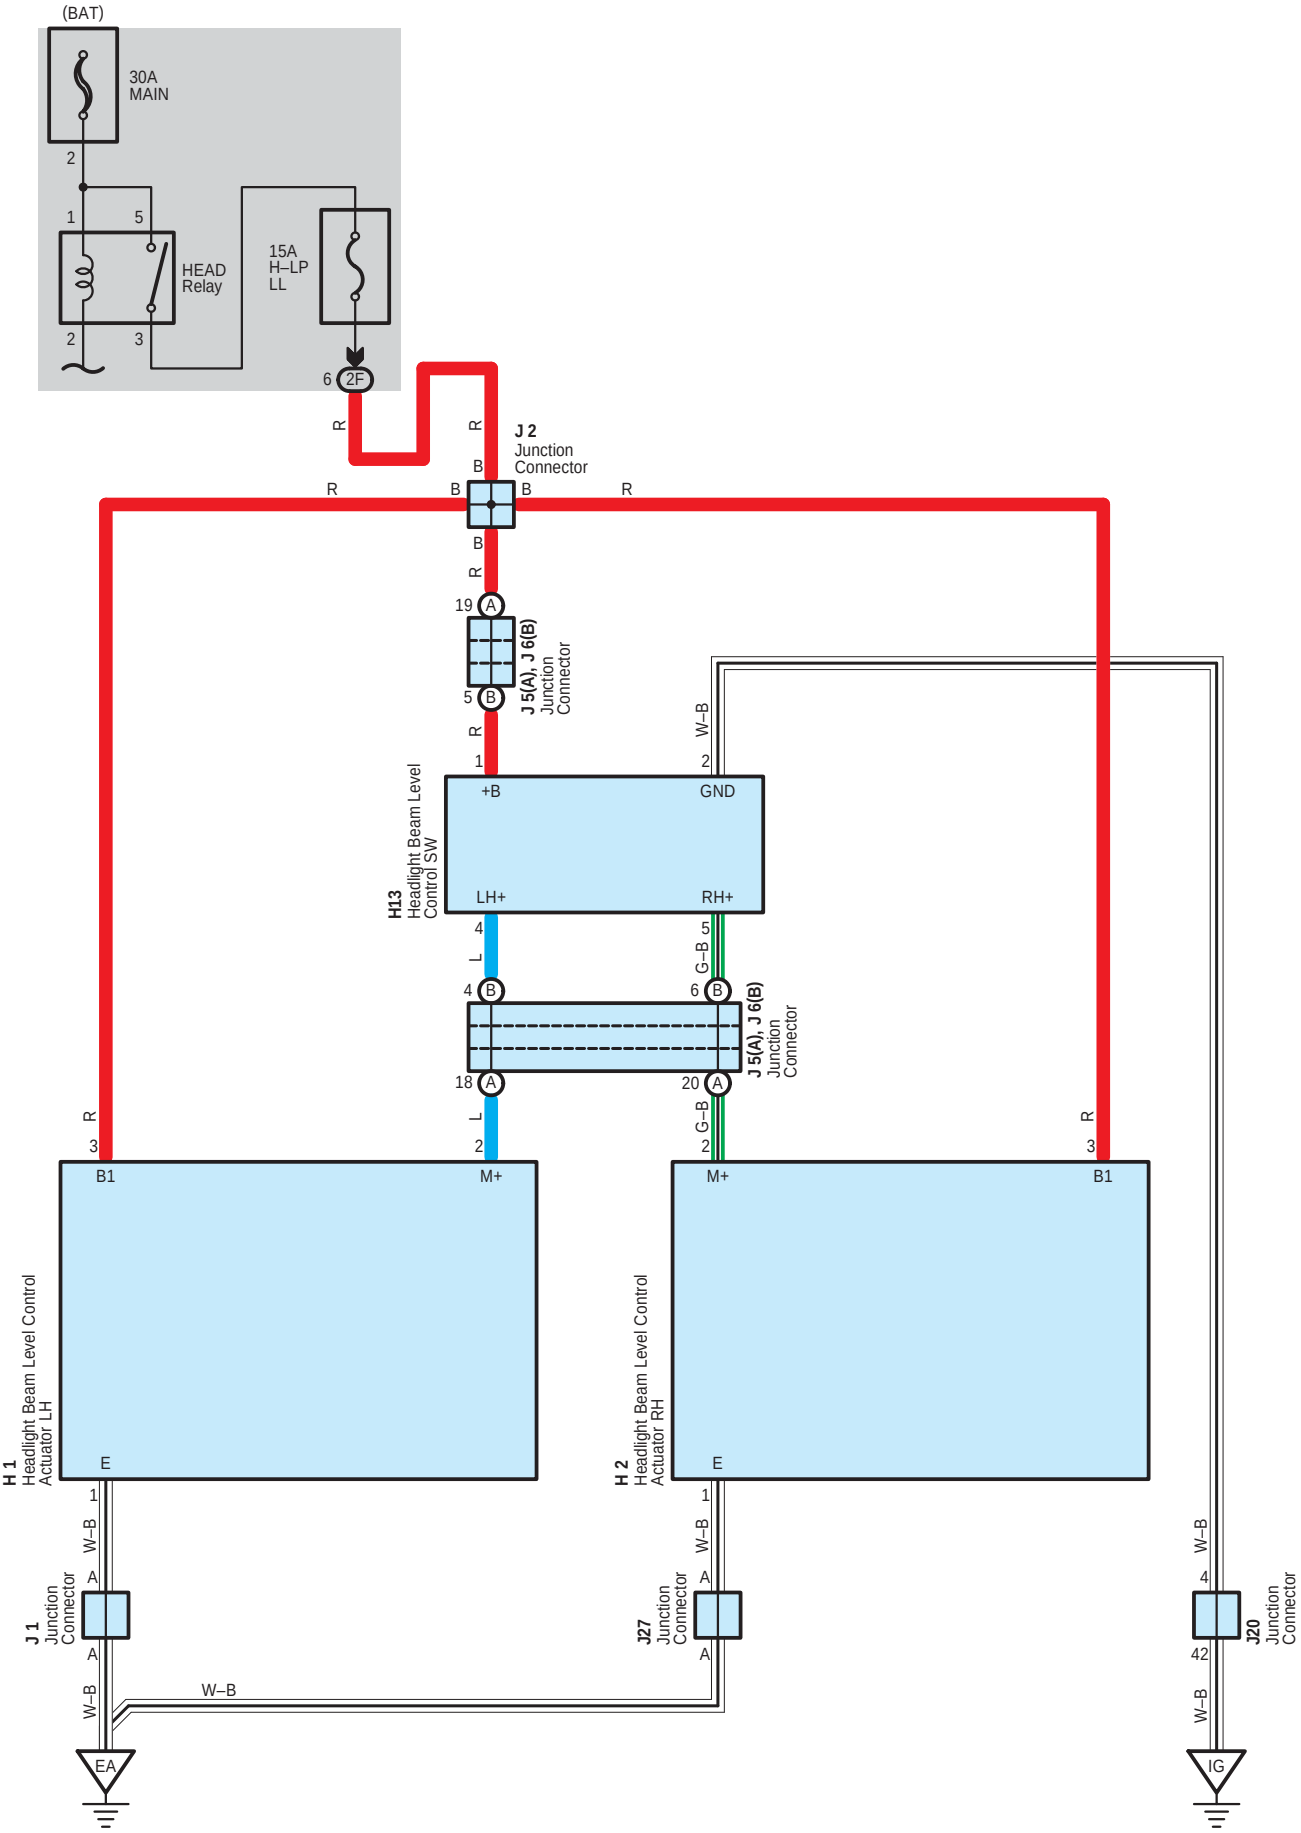

○ : **Parts Location**

Code	See Page	Code	See Page	Code	See Page
H1	36	J1	37	J6 B	40
H2	36	J2	37	J20	40
H13	39	J5 A	40	J27	40

 : **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
2F	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)

▽ : **Ground Points**

Code	See Page	Ground Points Location
EA	50	Front Side of the Right Fender Apron
IG	52	Right Kick Panel