
ECM

COMPONENTS

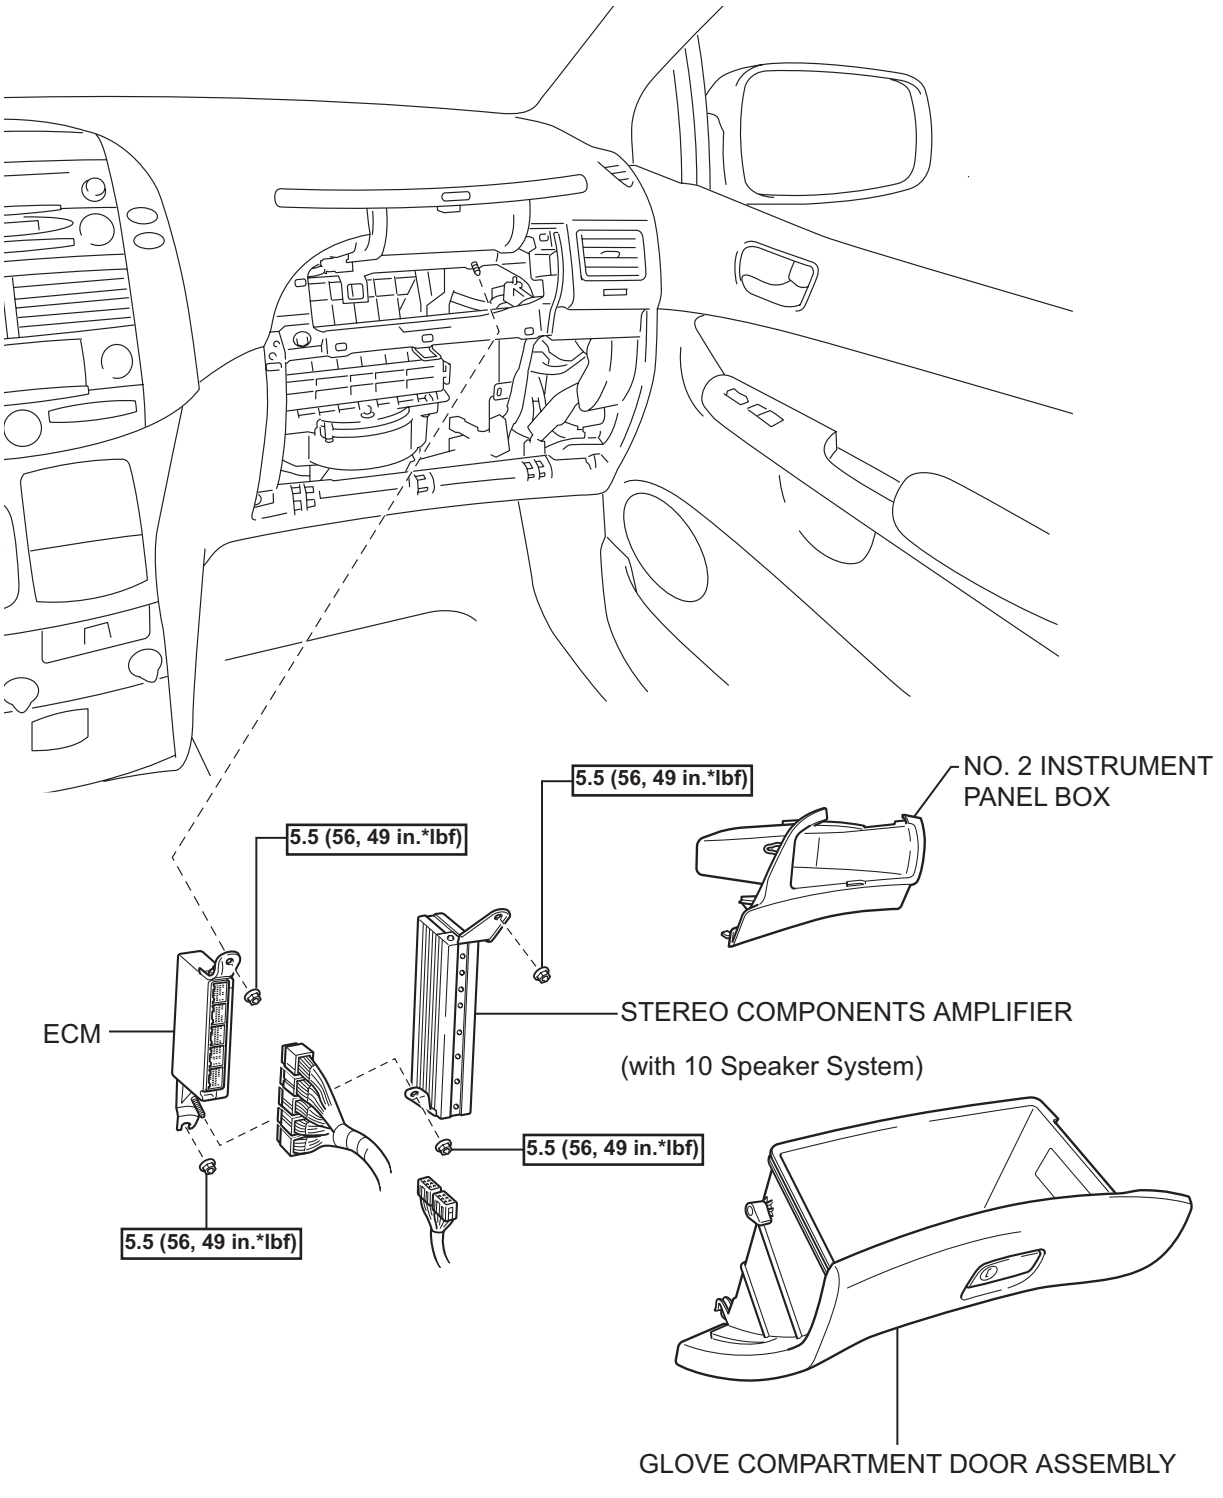


N*m (kgf*cm, ft.*lbf): Specified torque

N

A162198E01


ES

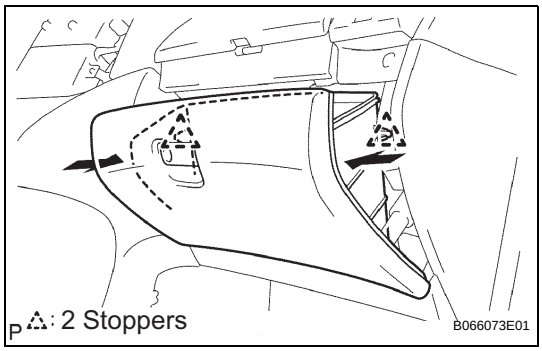


REMOVAL

1. REMOVE GLOVE COMPARTMENT DOOR ASSEMBLY

(a) Push the right side wall and then push the left wall to release the stoppers.

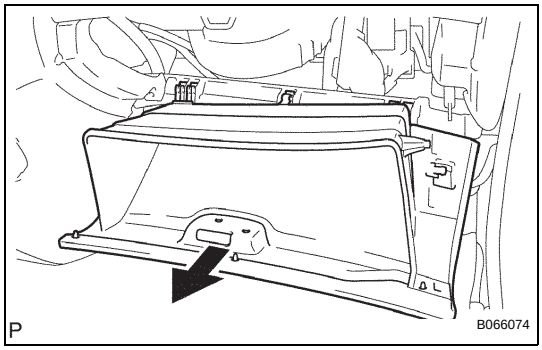


(b) Pull the glove compartment door sub-assembly rearward to remove it.

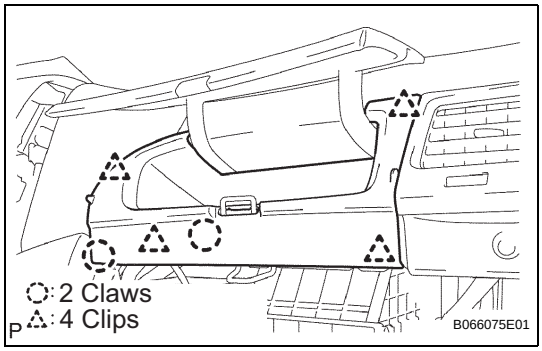

2. REMOVE NO. 2 INSTRUMENT PANEL BOX

(a) Disengage the 2 claws and 4 clips, and remove the No. 2 instrument panel box.

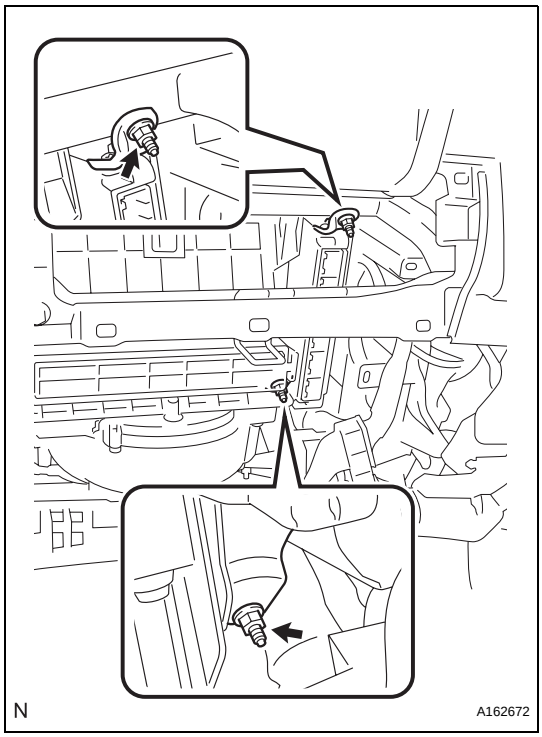

3. REMOVE ECM

(a) Disconnect the 5 ECM connectors.

(b) Remove the 2 nuts and ECM.