
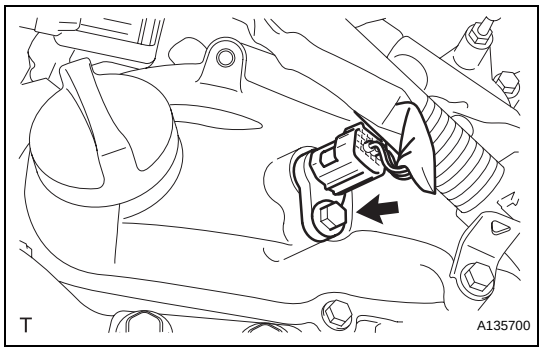



12. REMOVE VVT SENSOR (for Bank 2 Intake Side)
(a) Disconnect the VVT sensor connector.
(b) Remove the bolt and VVT sensor.

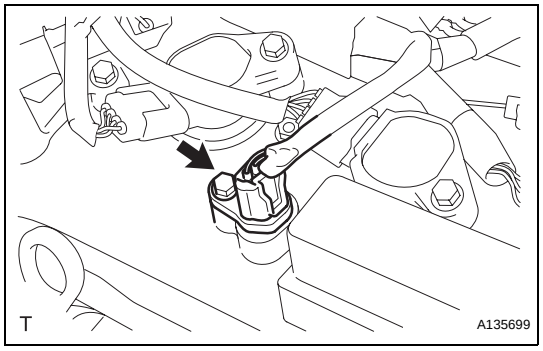


13. REMOVE VVT SENSOR (for Bank 2 Exhaust Side)
(a) Disconnect the VVT sensor connector.
(b) Remove the bolt and VVT sensor.

ES


INSTALLATION

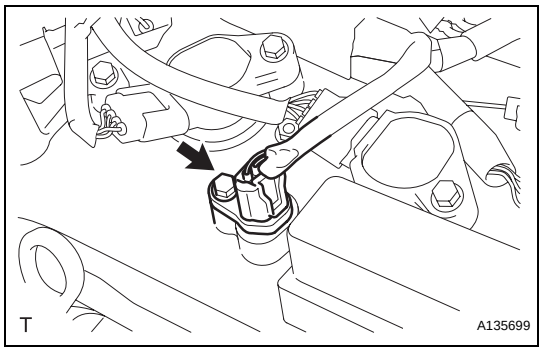


1. INSTALL VVT SENSOR (for Bank 2 Exhaust Side)
(a) Install the VVT sensor with the bolt.
Torque: 10 N*m (102 kgf*cm, 7 ft.*lbf)
(b) Connect the VVT sensor connector.

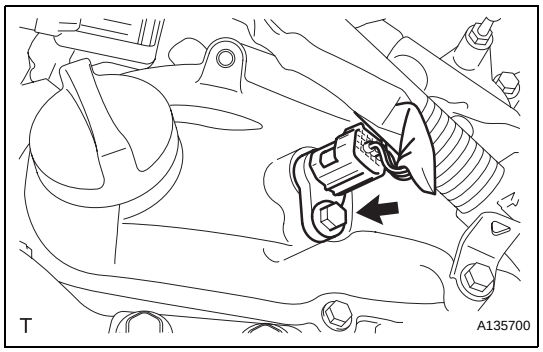

2. INSTALL VVT SENSOR (for Bank 2 Intake Side)
(a) Install the VVT sensor with the bolt.
Torque: 10 N*m (102 kgf*cm, 7 ft.*lbf)
(b) Connect the VVT sensor connector.

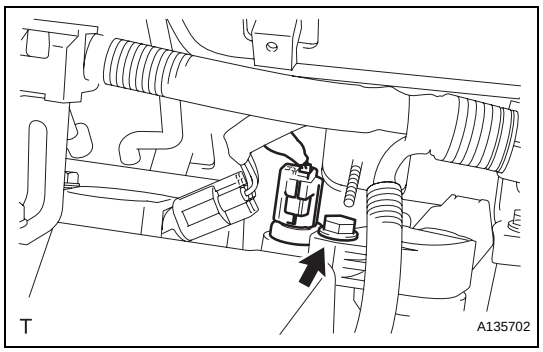

3. INSTALL VVT SENSOR (for Bank 1 Exhaust Side)
(a) Install the VVT sensor with the bolt.
Torque: 10 N*m (102 kgf*cm, 7 ft.*lbf)
(b) Connect the VVT sensor connector.

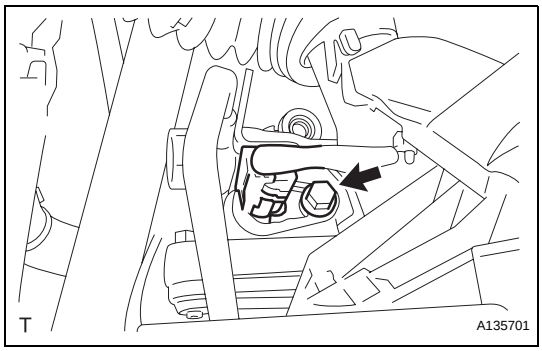

4. **INSTALL VVT SENSOR (for Bank 1 Intake Side)**
   (a) Install the VVT sensor with the bolt.
   Torque: 10 N*m (102 kgf*cm, 7 ft.*lbf)
   (b) Connect the VVT sensor connector.
5. **INSTALL INTAKE AIR SURGE TANK ASSEMBLY (See page ES-522)**
6. **INSTALL AIR CLEANER CASE SUB-ASSEMBLY (See page EM-59)**
7. **INSTALL AIR CLEANER CAP SUB-ASSEMBLY (See page ES-496)**
8. **INSTALL NO. 1 AIR CLEANER INLET (See page EM-59)**
9. **INSTALL NO. 2 AIR CLEANER INLET (See page EM-60)**
10. **ADD ENGINE COOLANT (See page CO-7)**
11. **INSPECT FOR ENGINE COOLANT LEAK (See page CO-1)**
12. **INSPECT FOR ENGINE OIL LEAK (See page LU-6)**
13. **INSTALL V-BANK COVER SUB-ASSEMBLY (See page EM-63)**
14. **INSTALL FRONT OUTER COWL TOP PANEL SUB-ASSEMBLY (See page EM-61)**
15. **INSTALL WINDSHIELD WIPER MOTOR ASSEMBLY**
    HINT:
    (See page WW-5)