
INSTALLATION

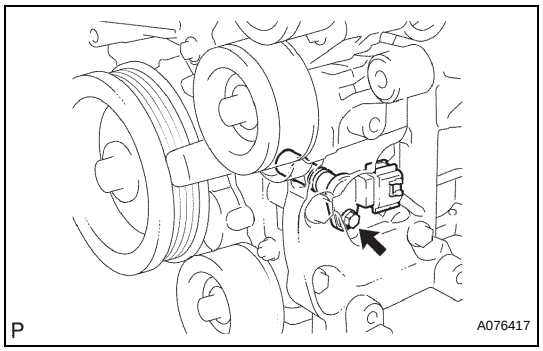

1. INSTALL CRANKSHAFT POSITION SENSOR

(a) Apply a light coat of engine oil to the O-ring on the crankshaft position sensor.

(b) Install the crankshaft position sensor with the bolt.
Torque: 9.0 N*m (92 kgf*cm, 80 in.*lbf)

(c) Connect the crankshaft position sensor connector.

2. INSTALL COMPRESSOR AND MAGNETIC CLUTCH

HINT:
(See page AC-231)

ES